



VISTAQUEST
— a clearer vision —TM

VQ7228




User's Manual

For customers in North and South America

For customers in USA

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions:

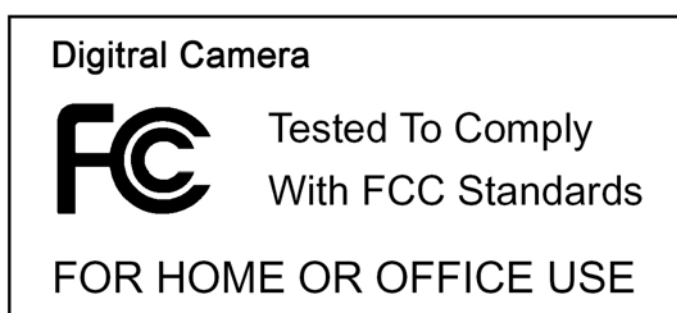

- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received, including interference that may cause undesired operation.

For customers in Canada

This Class B digital apparatus meets all requirements of the Canadian Interference-Causing Equipment Regulations.

For customers in Europe



“CE” mark indicates that this product complies with the European requirements for safety, health, environment and customer protection.
“CE” mark cameras are intended for sales in Europe.

1. System Requirements -----	1
2. Package Contents -----	1
3. Quick Start -----	2
4. Name of Parts -----	4
5. Display Information -----	6
6. Getting Started -----	8
• Installing Camera Batteries -----	8
• Inserting SD Card (optional) -----	8
• Turning On the Camera -----	9
• Setting Time and Date -----	9
• Use the Date Stamp setting to imprint the date on your pictures-----	9
• Power Saving -----	10
7. Taking Pictures -----	10
• Taking a Picture -----	10
• Taking Continuous Pictures -----	10
• Using Digital Zoom -----	11
• Using Flash Light -----	12
• Setting Picture Size -----	12
• Putting Yourself in the Picture -----	13
8. Taking Videos -----	13
9 Voice Pen -----	14
10. Reviewing files -----	14
• Reviewing Pictures, Videos and voice pen -----	14
• Viewing nine Pictures -----	15
• Using Slide Show -----	15
• Magnifying Pictures -----	16

Table of Contents**Page**


11. Deleting Files -----	17
12. Customizing Your Camera Settings -----	19
* Capture Status Menu -----	19
* Playback Function Menu -----	24
13. Installing Your Camera Driver and Software -----	26
14. Uninstalling Software -----	27
• Uninstalling Software -----	27
• Uninstall Camera's Driver -----	27
15. Downing Images to Your Computer -----	28
16. Direct Print the pictures -----	29
17. Internet Video Conference -----	30
18. Appendix -----	31
Specifications -----	31
FAQ -----	32
Troubleshooting -----	33

1. System Requirements

- Personal computer, laptop, desktop, or IBM compatible with Pentium 166 MHz minimum, and with an active USB (Universal Serial Bus) port.
- Windows 98 SE / ME / 2000 / XP, CD ROM drive, colour monitor, mouse and keyboard.
- Colour printer for printing colour pictures.
- For transferring still images via the Internet, or for video conferencing, your computer must have modem and communication software for Internet connection.

2. Package Contents

Make sure that all of the items shown below are included with your camera.

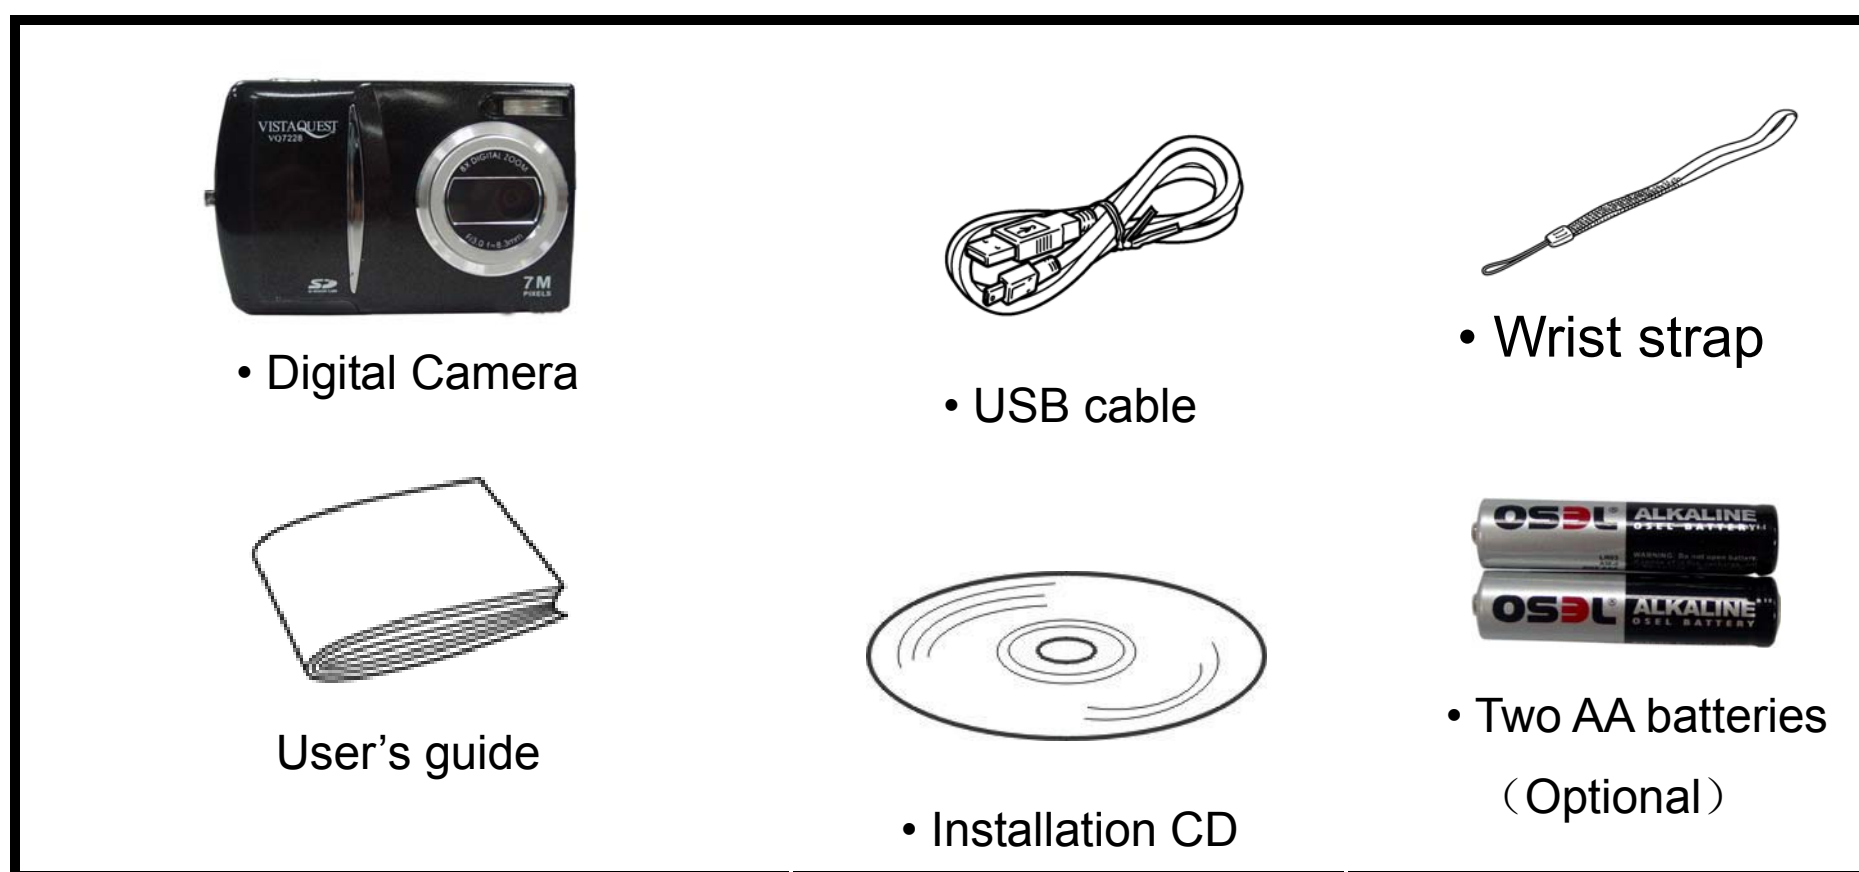

3. Quick Start

CAUTION

- Please install the camera driver before using your camera with a PC.
- Best way to transfer picture to PC is using the Mass Storage mode to copy all your pictures.

• Getting Ready

1. Slide to open the battery compartment cover
2. Load the batteries into the camera
3. Slide to close the battery compartment cover.

• Taking a Picture

1. Turn on the camera.
2. Point the camera at the subject, use monitor screen to compose the picture.
3. Holding the camera still, gently press the shutter button to take a picture.




• Reviewing a Picture

1. Turn on the camera.
2. Slide the **Function** switch to  (playback status).
3. To scroll through the pictures or videos on the monitor screen.





- **Deleting a Picture**

1. Turn on the camera.
2. Slide the **Function** switch to  (playback status).
3. Push the joystick Left or right to display the picture you want to delete.
4. Press the **Mode** button to turn on the menu and then push the joystick up or down to select [**Single**] on the screen. Press the **OK** button.

4. Name of Parts

The following illustrations show the names of each component, button, and switch on the camera.

1. Shutter Button
2. Power Button
- 3..Play Mode Button
4. Self Timer Lamp
5. Flash
6. Lens
7. Focus Switch
8. USB Port Terminal
9. Zoom W Button(Thumbnail)
- 10.Zoom T Button(Digital zoom)
11. Joystick/OK Button
 - ▶ :MODE
 - ◀ /  :SELF-TIME
 - ▲ /  Flash
 - ▼ /  Delete
12. Strap Eyelet
13. MENU Botton
14. TFT Panel
15. Mode Button
16. SD Card Socket
17. Battery Compartment Cover/A/V OUT



Indicators

1. Indicator Lamp (Green)
2. Self-Timer Lamp (Red)
3. Power Lamp



Digital Interface:

USB 1.1

Video Output:

TV out in NTSC / PAL


Focus Switch

-  Landscape/ Portrait
-  Macro

DIGITAL ZOOM

During shooting, user can push **W** or **T** to zoom in and zoom out.

Display Button

Push  Button and the current information on the TFT panel will be displayed or covered.




Menu Button


You can turn the menu ON or OFF by pressing the **Menu** button. As menu turn on, the items appear, push the joystick up or down to select the item and then push the **ok** button to enter each menu item.



5. Display Information


Capture Status

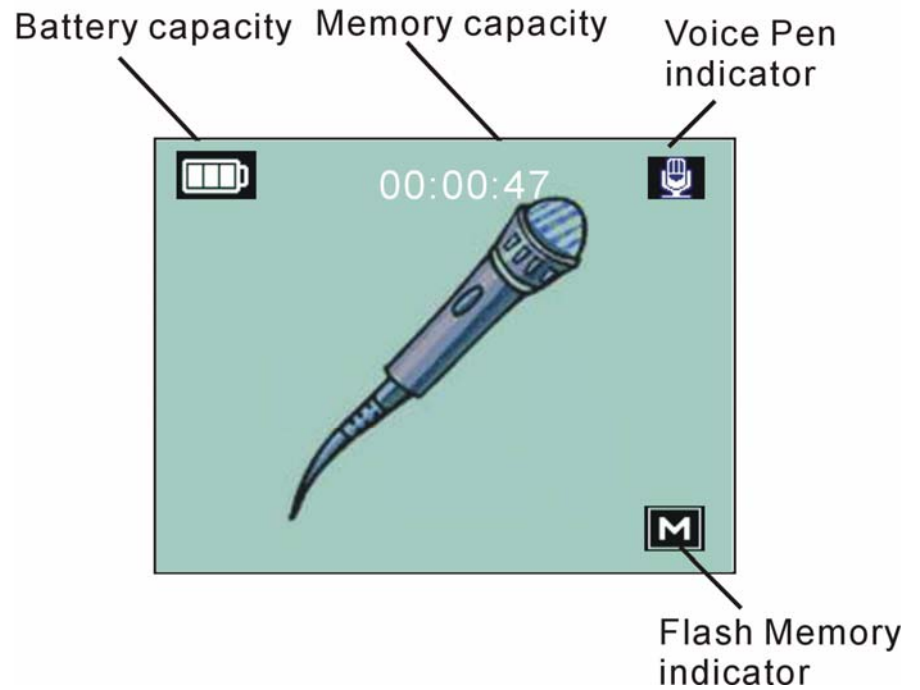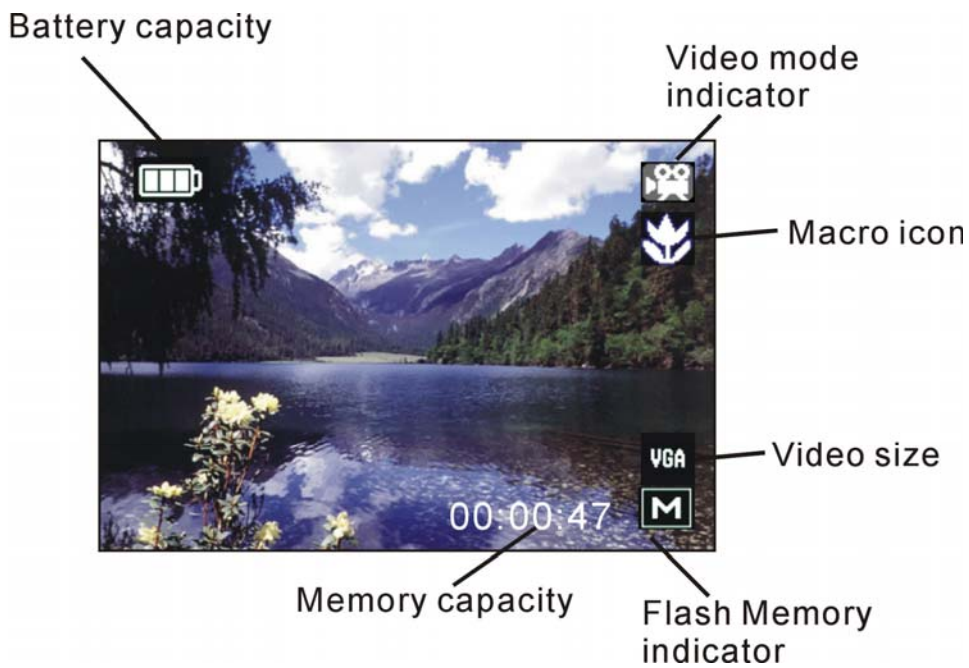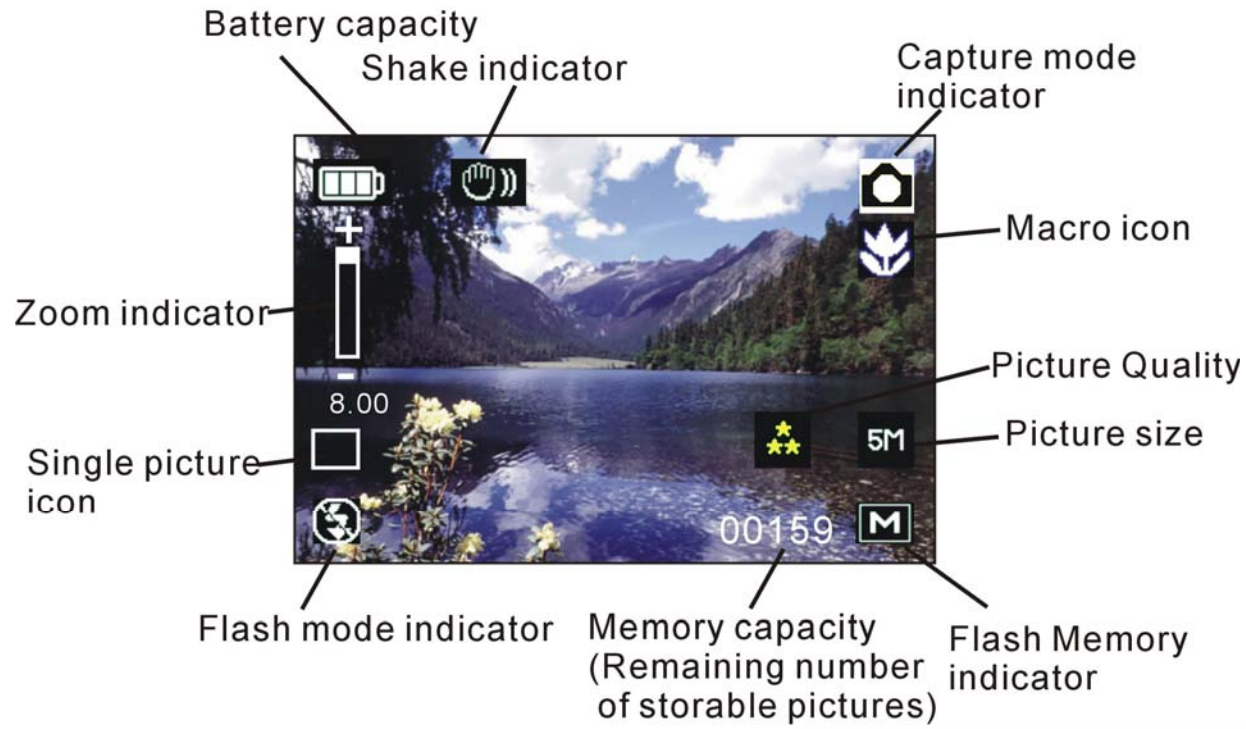

Note:
 If the  icon appears on the TFT panel when you take pictures in dark conditions, please keep your hands steady. Otherwise you may capture a blur picture.

Playback Status

Battery capacity

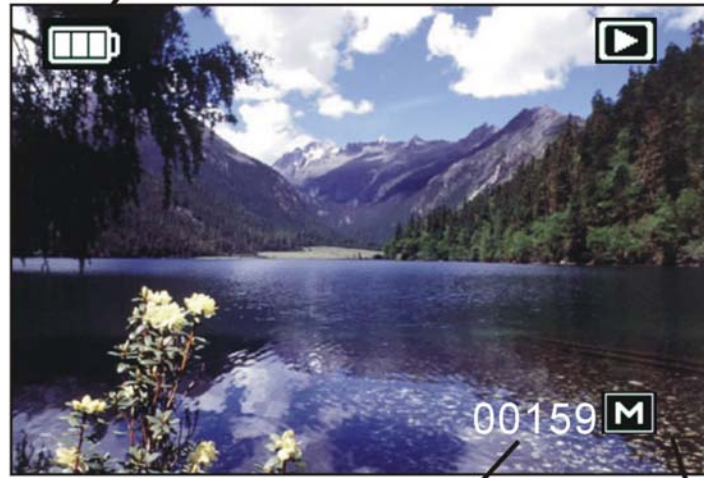


Sequence number

Flash Memory indicator

Battery capacity

Recording time

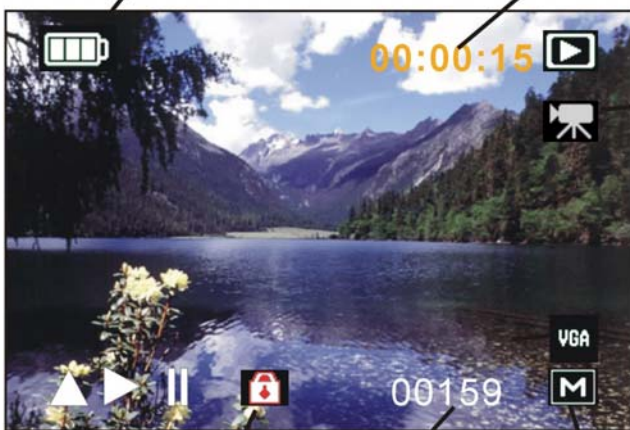

Video indicator

Video size


Protect icon

Sequence number

Flash Memory indicator

Battery capacity

Memory capacity

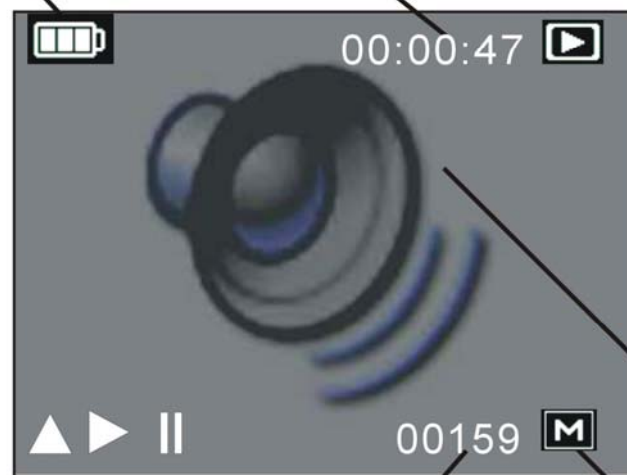

Sequence number

Flash Memory indicator

Voice Pen indicator

6. Getting Started

• Installing Camera Batteries:

1. Slide to open the battery compartment cover.
2. Insert batteries. Be sure to load batteries with + and – terminals as shown on the camera.
3. Slide to close the battery compartment cover.



• Inserting SD Card (Optional):

The camera offers two options for storing pictures and videos:

Internal Memory - Store pictures and videos in the 32 MB internal memory.

SD Card – The SD cards provide removable, reusable storage for pictures and videos. Store as many pictures as you like, depending on the size of the card.

CAUTION:

The card can only be inserted one way; forcing it may damage the camera or card.
Do not insert or remove a card when power is on.
Please note that not all SD cards may work in this camera. If one brand fails to operate even after reformatting then another brand of SD card must be used.

To insert an SD card:

1. Turn off the camera and open the battery compartment cover.
2. Orient the card as shown. Push the card into the slot to the connector.
3. Firmly to remove the card, push it in, and then release it.

When the card is partially ejected, pull it out.

4. Close the battery compartment cover.



Note: 1. If the SD card is present in the camera, and then the picture/ video will save in the SD card. If no card is installed, the camera uses internal memory.

2. If the “MEMORY FULL” warning message appears on the TFT panel, it means the SD card or internal memory is full. Please remove the memory and insert a new one or move/store all picture/video in memory to your computer.


• **Turning On the Camera:**


1. Press the Power button on as shown in the illustration.
2. Buzzer will beep and indicator lamp will light. The TFT panel will be turned on.
3. Press the Power button again to shut down the camera.



• **Setting Time and Date:**


Use the following procedure to change the date and time setting.

1. Press the Power button open the camera, the TFT Panel will display 
2. Press the **Menu** button to turn on function menu.
3. Push the joystick to enter [Setup] menu, then push the joystick up or down to select [Date Input]. Press the **OK** button to and you will see the menu" Off/Set". Push the joystick down to select [Set] and then press the **OK** button to enter the menu.
4. Push the joystick up or down to adjust the date format to MM/DD/YYYY, DD/MM/YYYY or YYYY/MM/DD. Push the joystick left or right to advance to the next setting and then push the joystick up or down to adjust the date and time.
5. When finished, press the **OK** button to confirm the setting and return to main menu.

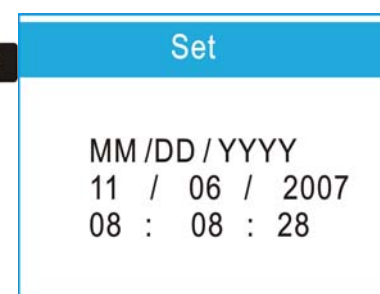

Use the Date Stamp setting to imprint the date on your pictures.

In the Date Time Setting menu. Make sure the camera clock is set to the correct date.

1. Press the Power button open the camera,  show on the TFT Panel
2. Press the Menu button and then push the joystick up or down to select [Time Stamp] option.
3. Press the OK button to activate the submenu.
4. Push the joystick up or down to select [Date Only] or [Date&Time], press the OK button to confirm the setting.
5. Push the joystick left button to exit the menu.

- **Power Saving:**


The camera will automatically power off approximately 3MIN after you do not perform any operation.

7. Taking Pictures

- **Taking a Picture**

1. Turn on the camera.

2. The TFT panel will display  (Snapshot Mode).

3. Point the camera at the subject; use the monitor screen to compose the image. (If turn the **Macro** switch to  , you can take picture as close as 20cm.)


6. Holding the camera still, gently press the **Shutter** button to take the picture.

Note: How to take a good shot? After gently pressing down shutter button, keep your hand steady for 2 seconds to get best result.




- **Taking Continuous Pictures**

1. Make sure the TFT Panel display  . (Capture Function)

2. Press the **Menu** button and then push the joystick down to select [Burst]. Push the joystick down to select [on] and then press the OK button to confirm the setting. Push the joystick left continuously to return to view mode and the icon  will appear on the TFT panel.

3. Point the camera at the subject; use the monitor screen to compose the image.


4. Holding the camera still, gently press the shutter button to take the picture.

Note: Flash is deactivated at this mode. You will see the icon  on the TFT

• Using Digital Zoom

The Digital Zoom provides up to 7X magnification of your pictures. You may notice a decrease in printed image quality when using Digital Zoom.

Note: Please note that the quality of the shot will reduce when Zoom is used. So only use it when normal shots are not available.

1. Make sure the TFT Panel display  Use the TFT panel to frame your subject.

2. **T** Button: The subject will be enlarged.

W Button: The subject will be reduced.

Push the joystick up to zoom in. Push the joystick up or down repeatedly for continuous magnification. The TFT panel displays the zoomed image and the magnification level.

3. Push the joystick down to zoom out.

4. Press the **Shutter** button to take the picture.

Note: 1. The image will appear grainier as the image is digitally zoomed.

2. Digital Zoom is automatically turned off when the camera is turned off.

3. You cannot view the zoomed subject through the viewfinder.



• Using Flash Light

When you take pictures at night, indoors, or outdoors in heavy shadows, please use the flash. Push the joystick left repeatedly to scroll through the flash options.

The flash icon that is displayed on the TFT panel is the active option.



Off—flash never fires. (Default)



Auto Flash—flash fires when the lighting conditions require it.




Force Flash—flash fires every time you take a picture, regardless of the lighting conditions.

Note: Flash is deactivated at Macro mode and you will see the icon  on the TFT



• Setting Picture size

Use the Quality setting to select a picture resolution:

1. Make sure the TFT Panel display , and then press the **Menu** button.
2. You will see the [Size] option is selected (default), press the OK button to activate the submenu; push the joystick up or down to select the picture size.
 - 7M** (3072 x 2304) —for enlarged picture size; produces higher picture resolution and larger file size.
 - 5M** (2560x1924) —for bigger picture size; produces normal picture resolution and large file size.
 - 3M** (2048x1536) —for big picture size; produces normal picture resolution and large file size.
 - 2M** (1600x1200) — for small picture size; pictures are of lower resolution and file size is smaller.




3. Press the **Menu** button to confirm to return to capture status and you will see the icon **7M/5M/ 3M/2M** on the TFT panel.

Note: 1. This setting remains until you change it.

2. Movies can be shot with the CIF (320 x 240) or VGA (640 x 480) resolution.

• Putting Yourself in the Picture



The Self Timer creates a default delay between the time you press the **Shutter** button and the time the picture is taken. This setting is ideal when you want to include yourself in the picture.

1. Make sure the TFT Panel display .
2. Press the  button and the icon  will appear on the TFT panel.
3. Place the camera on a flat surface or use a tripod.
4. Compose the picture, and then press the Shutter button all the way down.
5. The red Self Timer light, located on the front of the camera, blinks for 2,10 seconds (selectable) and you will see the counter on the TFT panel before the picture is taken.



8. Taking Videos



• Taking a Video

1. Turn on the camera.
2. The TFT will display  (Capture Function).
3. Push the joystick right, then the icon  appears on the TFT panel. (Video Mode)
4. Frame your subject on the TFT panel, then press the **Shutter** button to take the video.
5. Press the **Shutter** button again to stop recording.



- Note:**
1. During recording, push the **T** button or **W** button to zoom in/out.
 2. The video resolution is QVGA (320 x240) or VGA (640 X 480). It's will show icon "QVGA" or "VGA" on TFT panel in Video mode.
 3. You can select video size by using the [Video size].




9. Voice pen

1. Turn on the camera.
2. The TFT Panel will display  (Capture Function)
3. Press the **Mode** button twice, then the icon  appears on the TFT panel. (Video Mode)
5. Press the **Shutter** button to record the voice.
6. Press the **Shutter** button again to stop recording.



10. Reviewing files

• Reviewing Pictures/Videos/Voice pen

1. Turn on the camera.
2. Press the play mode button  (playback status).
The last picture or video is displayed.
3. Push the joystick left or right to select the file.
(If the icon  /  appears on the TFT panel) you want to review.
4. Push the joystick up to start playback of the video/voice.
5. During playback, push the joystick up to pause /resume/forward the video playing;
push the joystick down to stop the video playing.
6. During playback, press OK button to adjust the play speed and you will see FW 1X/FW 2X/
FW 4X/FW 8X on the TFT panel.




Note: 1. You can push the joystick up or down to enlarge or reduce picture, and then press **OK** button. Now you can push the joystick left or right and up or down to see different parts of the picture. Press the OK button again to see the zoomed parts.

2. Video cannot be zoomed.


• Viewing nine Pictures

View nine pictures at once on the TFT panel (Index View) so that you can search the picture quickly.

1. Press the  button and then press the **menu** button.
2. Push the joystick up or down to select [Thumbnail] option.
2. Press the OK button to enter nine pictures mode.
3. Push the joystick left or right and up or down to select the picture. A yellow-frame indicates the current picture selected. Press the **OK** button for the picture you want to see in the whole screen.

• Using Slide Show

Use the Slide Show feature to sequentially display your pictures and videos on the camera TFT panel.

1. Press the  button and then press the **Menu** button.
2. Push the joystick up or down to select [Slide Show] on the screen and then press the **OK** button to activate the submenu.
3. Push the joystick up or down to select the slide show time: 3 sec, 5 sec, 10 sec. Press the OK button to confirm the setting.
3. Each picture and video thumbnails is displayed in the order in which you took them.
4. Press the **OK** button again to stop the slide show.

- Note:**
1. Once the user selects the Slide Show Mode, camera will automatically play all the pictures. Press the OK button to stop the slide show.
 2. Video is played like the way of playing option.

• Magnifying Pictures

Use the Magnify feature to zoom in to different areas of the picture.

1. Press the power button

2. Press the  button

3. Push the joystick left or right to select the picture you want to enlarge, and then Press **T** button to zoom in the picture; push the **W** button to zoom out the picture.

4. Press the **OK** button. You will see **▲ ▼ ◀ ▶** appears on the TFT panel. Push the joystick up/down/left/right to select location of the magnified area and press the **OK** button to see the zoomed area in the whole screen.


4. Press the menu button twice to return to redisplay the picture at the original size.

Note: Video and audio cannot be enlarged.

11. Deleting files

Delete item allow user to delete current or all the stored images from the internal memory or SD card.

• Deleting files

1. Turn on the camera.
2. Press the  button (playback status).
3. Push the joystick left or right display the picture you want to delete.
4. Press the menu button and you will see [delete] option is selected (default). Press the OK button to enter the submenu, then push the joystick up or down to select single/all/select.
 - * If you select [single] and press the OK button, the picture on the LCD screen will be deleted directly.
 - * If you select [all] and press the OK button, you will see two options: Cancel/Execute (Cancel means not delete all the files; Execute means delete all the files.)
 - * If you select [Select] and press the OK button, the files will show on the LCD screen as thumbnail. Press up/down/left/right button to select the file you want to delete and then press the OK button to confirm the setting.

Note: 1. Files that are erased cannot be recovered. Make sure you have selected the images you want to erase.
2. Files that have been protected (see the following section) cannot be erased even if "Delete All" is selected.

- **Formatting Internal Memory or SD Card**

1. Press the power button

2. Press the  button

2. Press the **Menu** button to turn on the menu and you will see two tabs: Play and Setup. Push the joystick right to enter [Setup] menu and you will see [Format] option is selected (default).


3. Press the OK button to enter the submenu and push the joystick up or down to select cancel/ execute option. Press OK button to confirm the setting.

4. If all files (Photos and video clips) are formatted, the message “No Image” appears on the on the TFT.

5. Files that have been protected (see the following section) can be erased even though “Format Storage” is selected.

12. Customizing Your Camera Settings

* Capture Status Menu

[MENU BUTTON] Open the camera, and the TFT Panel will display  Press the **Menu** button can turn ON/OFF function menu.

There are 2 tabs for you to choose in the capture status. When you press the menu Button. Push the joystick right to enter [Setup] menu; push the joystick left to enter [capture] menu. Press the OK button to enter the submenu. Push the joystick left continuously to exit the menu and return to view mode. Push the joystick up or down to select the option and then press the OK button to confirm the setting.

* [Capture] menu

[Size]

You can change the picture size (excluding videos) settings to suit your purpose.

7M (Large)	3072 x 2304 pixels	for enlarged picture size; produces higher picture resolution and larger file size.
5M (Medium)	2560 x 1924 pixels	for standard picture size; produces normal picture resolution and large file size.
3M (Small)	2048 x 1536 pixels	for small picture size; produces lower picture resolution and smaller file size.
2M (Smaller)	1600 x 1200 pixels	for smaller picture size; produces lower picture resolution and smaller file size.
VGA (big) for Video	640 x 480 Pixels	for big video size; produces big video resolution and big video size.
QVGA (Small) for Video	320 x 2400 Pixels	for small video size; produces small video resolution and small video size.

[Quality]

Fine	Setting the picture quality to fine with big picture size.
Standard	Setting the picture quality to standard with small picture size.
Economy	Setting the picture quality to economy with smaller picture size.

[Scene Mode]

Auto	Setting the scene mode to auto.
Sport	Setting the scene mode to Sport.
Night	Setting the scene mode to night.

[EV]

Exposure compensation lets you change the exposure setting manually to adjust for the lighting of your subject. This feature helps to achieve better results when recording a backlit subject, a strongly lit subject indoors, or a subject that is against a dark background.

1. Push the joystick up and down to adjust the compensation.
2. Press the **OK** button to confirm and press menu button or push the joystick left to return to view mode.

[White Balance]

When the white balance is set to match the light source, the camera can take picture more accurately. You can check the result of the white balance by viewing the image on the TFT panel.

Auto	The camera sets the white balance automatically according to shooting conditions.
Daylight	Use when shooting at outdoors in sunlight on a clear day.
Cloudy	Use when shooting at outdoors and the sunlight is not enough such as under cloudy skies, in shade or at dusk.
Tungsten	For recording under tungsten fluorescent lighting.
Fluorescent	For recording under fluorescent lighting.

[ISO]

Auto	Setting the ISO to auto.
100	Setting the ISO to 100.
200	Setting the ISO to 200.

[Color]

Standard	Setting the color to standard.
Vivid	Setting the color to vivid.
Sepia	Setting the color to sepia.
Monochrome	Setting the color to monochrome.

[Saturation]

High	Setting the saturation to high.
Normal	Setting the ISO to normal.
Low	Setting the ISO to low.

[Preview]

ON	Setting the preview to on. You can view the Picture within 1 second after you captured the picture.
OFF	Setting the preview to off.

[Time Stamp]

OFF	Do not print the time on the file.
Date only	Print date on the file.
Date&Time	Print date and time on the file.

[Burst]

On	Taking single picture.
Off	Taking three pictures once.

[Self timer]

OFF	Setting the timer off.
10S	Setting the timer in self-timer to 10 second.
2S	Setting the timer in self-timer to 2 second.

*** [Setup] menu****[Format]**

Cancel	Do not format the flash memory or SD card.
Execute	Format the flash memory or SD card.

[Beep]

ON	Setting the beep sound to on.
OFF	Setting the beep sound to off. (*)

[Language]

English	Setting the language to English. (*)
Français	Setting the language to French.
Deutsch	Setting the language to German.
Italiano	Setting the language to Italian.
Español	Setting the language to Spanish.
Portugués	Setting the language to Portuguese.
繁体中文	Setting the language to Traditional Chinese.
简体中文	Setting the language to Simplify Chinese.
日本語	Setting the language to Simplify Japanese.

[Auto Off]

1MIN	Setting the camera automatically powers off approximately 1 minute.
3MIN	Setting the camera automatically powers off approximately 3 minutes.
5MIN	Setting the camera automatically powers off approximately 5 minutes.
Off	Setting the camera always on.

[Sys. Reset]

Cancel	Do not recover to system reset.
Execute	Recover to system reset.

[Light Freq.]

60Hz	Setting the flicker frequency to 60 Hz.
50Hz	Setting the flicker frequency to 50 Hz.

[TV Output]

NTSC	Setting the TV Output to NTSC.
PAI	Setting the TV Output to PAL.


[Date Input]

Off	Do not input the time on the file.
Set	Input the time on the file.

[MODE BUTTON]

In Capture status, press the mode button once to enter video status; press mode button twice to enter voice pen status and the captures succeed the voice pen mode.

*** Playback Status Menu**

[MENU BUTTON] When press the  (Playback status). Press the **Menu** button can turn ON/OFF function menu.

There are 2 tabs for you to choose in the capture status. When you press the menu Button, push the joystick right to enter [Setup] menu; push the joystick left to enter [Play] menu. Press the OK button to enter the submenu. Push the joystick left continuously to exit the menu and return to view mode. Push the joystick up and down to select the option and then press the OK button to confirm the setting.

*** [Play] menu**

[Delete]

Single	to delete (erase) current file.
All	to delete (erase) all files.
Select	to delete (erase) the selected file by viewing the file as a thumbnail.

[Copy to Card]

Cancel	Do not copy the files in the flash memory to SD card.
Execute	Copy the files in the flash memory to SD card.

[Slide Show]

3 Sec	Setting the slide show time to three seconds.
5 Sec	Setting the slide show time to five seconds.
10 Sec	Setting the slide show time to ten seconds.

[Protect]

If you want to unprotect the file, please choose cancel and then press the OK button to confirm the setting.

Single	To protect the current file.
All	To protect all files.
Select	To protect the selected file by viewing the file as a thumbnail. Press the menu button to return to view mode.

[Thumbnail]

Press the OK button to see the files in the thumbnail mode and then press the OK button to view the file in the whole LCD panel.

*** [Volume]**

Adjust the volume from 1 to 8.

***[Setup] menu**

Please refer to page 22.


***[MODE BUTTON]**

In playback status, press the mode button to open delete menu, push the joystick left not to delete the file and return to view mode. Press up or down button to select the item and then press the OK button to confirm the setting.

13. Installing Your Camera Driver and Software

• Installing Driver

1. Turn on the computer.
2. Insert installation CD into the CD-ROM drive and the installation CD menu will appear.
3. When you see the following screen, choose **“Windows 98 Driver”**.
4. Follow the on-screen instructions.
5. Restart the computer.

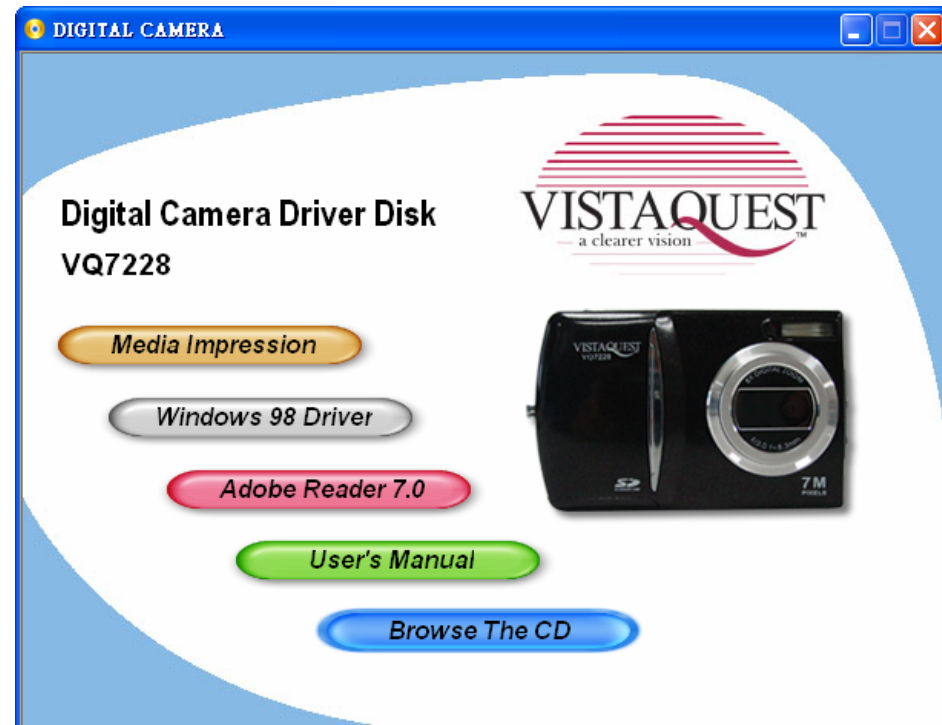

• Installing Software

1. Insert installation CD into the CD-ROM drive and the installation CD menu should appear.
2. When you see the following screen, choose **“Media Impression”** to install the software.
3. Follow the instructions on screen.
4. Installed software will automatically create “Media Impression™ 2.0” logo on your desktop.

14. Uninstalling Software

Following instruction will guide you to uninstall (remove) software from computer.

• Uninstalling Software

1. Click "Start" from the task bar and choose "Settings" -> "Control Panel". (For Windows XP: "Start" -> "Control Panels")
2. Double click "Add/Remove Programs".
3. Select the program to be uninstalled: "Arcsoft Software Suite".
4. Click on "Remove Program" (For Windows 2000/XP: "Change/Remove") and then "OK".


• Uninstall Camera's Driver

1. Click "Start" from the task bar and choose "Settings" -> "Control Panel". (For Windows XP: "Start" -> "Control Panels").
2. Double click "Add/Remove Programs".
3. Select the program to be uninstalled " STK02N 2.0".
4. Click on "Remove Program" (For Windows 2000/XP: "Change/Remove") and then "OK".

15. Downloading Images to You Computer

For Windows 98/ME customers:

Please install camera drive before connecting.

1. Open the camera.
2. Press the  button(Playback Function).
3. Then connect the camera to the computer with the included USB cable.
- 4.“USB Mass Storage drive” appears on the computer screen.

For Windows XP:

A dialogue box with options appears as shown on the Right side.

The options are Play, Find/Fix/Share Images.

Open folders to view files, take no action,

Copy images to a folder on my computer,

View a slide show of images, and etc.

Please select one of them and click on “OK”.




For Windows 2000/ME/98:

Double click on “My computer”, and then double click on Removable Disk (i:) in the DCIM files.
(All the photos and videos are stored here).


4. Press “Ctrl+A” on the keyboard to choose all the photos/videos, then press “Ctrl+C” to copy photos, and then open a file in the computer, press “Ctrl+V” to paste the photos.

16. Direct print the pictures

1. Turn the camera power on and the TFT panel will display (Capture Status).
2. Power on the printer.
4. Connect the camera and the printer via the USB cable. Push the joystick down to select [printer] and you will see the dialogue as below:

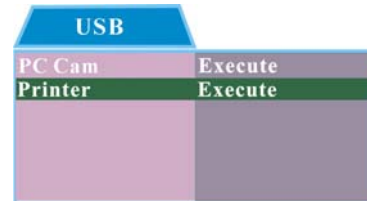

4. Press OK button to enter to printer mode.

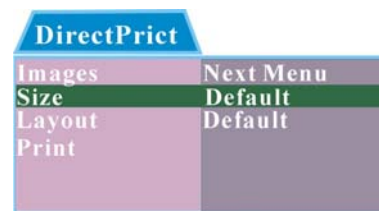

Press the OK button to enter the submenu. Push the joystick up or down to select the item. Push the joystick left to return to the mainmenu.

[Images]

Select	Select one picture to print by push the joystick left or right. Push the joystick up or down to set the print quantity, then press the OK button to exit.
All	Push the joystick up or down to set the print quantity, then press the OK button to exit.

[Size]

Default	Print whole size picture.
4 x 6	Print 4 x 6 size picture.

[Layout]

Default	Print one picture in the whole paper border.
2UP	Print two same pictures in one paper .
Index	Print one picture in the whole paper with border.
Borderless	Print one picture in the whole paper without border.

[Print]

Press OK button to print picture.

4. Disconnect the camera and the printer.

17. Internet Video Conferencing

To run a video conference with another person, you and the other person must have the computer station configured with web camera, microphone, speakers, modem and have access to the Internet.

You have to download video conference software, purchased or free, such as basic software like I-phone or Microsoft NetMeeting, or Yahoo Messenger.

As an example: to download Windows NetMeeting, go to www.microsoft.com search for NetMeeting and follow the download procedure.

Starting NetMeeting, you have to follow the simple set up procedure on the computer screen, enter your personal information and adjust the microphone volume. Here's how video conferencing works:

To receive video:

1. Call someone you want to see/hear.
2. On the **Tools** menu, point to **Video**, and then click **Receive**.

If you have a video camera, you can send video to the person you are calling.

To send video

1. Call someone you want to see/hear.
2. Click the **Start Video** button.

Note: 1. You can also send video by clicking the **Tools** menu, pointing to **Video**, and then clicking **Send**. After starting the video, the button changes to **Stop Video**. To stop the video, click the **Stop Video** button again.

2. For software support, or detailed information how to work with PhotoImpression 5 or VideoImpression 2 – contact www.ArcSoft.com.

21. Appendix:

Specifications	
Image Sensor	CMOS Sensor, 1/2-inch
Lens Specification	F 3.0, f = 8.3 mm
Focus Range	Landscape: 2m~infinity , Macro: 20cm
O / S	Microsoft Windows 98 SE / 2000 / ME / XP
Flash Strobe	Yes, (Force On, Force Off, Auto and Distance 1M ~ 2M)
White Balance	Automatic / Daylight / Cloudy / Fluorescent Lamp / Tungsten Lamp
Exposure Control	Automatic / Manual (-2EV ~ 2EV)
Capacity – Still Mode	7M ---3072 x 2304 Pixels 5M ---2560 x 1924 Pixels 3M --- 2048 x 1536 Pixels 2M --- 1600 x 1200 Pixel
Movie Mode	Video : VGA 640 x 480 pixels 20fps QVGA 320 x 240 pixels 30fps
Compression	JPEG file (still), AVI file (video)
Digital zoom	8 x Digital Zoom for Preview & Playback
RTC (Real-Time Clock)	Built-in (Date and Time)
Display	2.8" LTPS panel
Continuous Capture	3 Images
PC Interface	USB 1.1
Video Output	NTSC/PAL with Audio
Self Timer	YES
Storage Type	SD card
Power	AA 1.5V x 2 Alkaline/ Re-chargeable Batteries
Dimension (WxHxD)	95 x 61 x 21.5mm
Bundled Software	Media Impression™ 2.0

FAQ

Q1: If I do not use batteries, can I use an USB cord and Adaptor and still take pictures with my digital camera?

A1: No, when taking pictures, it is important that you use batteries. Also, you have to remember to charge the batteries before operating your camera. (If using rechargeable batteries)

Q2: I am not very familiar with digital cameras and usually my pictures turn out blurred. Is there any way I can better focus my camera?

A2: Yes, please locate the Macro Switch on the camera lens. Switch it to the Landscape (▲) setting unless taking close-up pictures in which case, you must switch to the Macro (🌸) setting.

Note: If the pointer is found anywhere in between these two symbols, it will adversely affect the focus. Also, ensuring there is enough lighting and that your hands are steady for one second after you press the Shutter Button will help with the focus.

Q3: I have noticed that the pictures I have taken are all very dark. How can I make these pictures lighter? Should I use the flash often?

A3: Avoid taking pictures in places with little lighting. When it is cloudy, please use other means to create more light before taking pictures. We recommend using the flash function during night time. During the day, the flash may be too strong and the picture may come out too bright, thus use it only during the night.

Q4: After I am done taking a picture, it takes a while for the picture to come up on the TFT panel. Is there something wrong with my camera?

A4: No, with the camera, if you select a larger picture size, it will take longer for it to come up on the TFT panel. So if you want to speed things up, please select a smaller picture size. (S picture size is recommended)

Troubleshooting

Problem	Source	Solution
The camera is not running	The power is not on	<ul style="list-style-type: none"> • Press the ON/OFF button to turn the camera on.
	The batteries were not inserted properly	<ul style="list-style-type: none"> • The correct direction to insert the AAA batteries is indicated on the camera.
	Batteries are depleted	<ul style="list-style-type: none"> • Replace with unused alkaline or fully recharged batteries (two AAA-size batteries).
	The SD card slot/battery cover is not closed properly	<ul style="list-style-type: none"> • Close the cover correctly and securely.
The camera is not taking pictures.	The camera is in the Playback Function mode	<ul style="list-style-type: none"> • Slide the function switch to Capture status.
	The flash is charging	<ul style="list-style-type: none"> • Wait until the flash charges. You can press the shutter button when the indicator glows a steady green.
	The SD card or internal memory is already full	<ul style="list-style-type: none"> • Obtain a new SD card and insert it. • Download images to your computer, and then erase them from the card to free up more space.
	The SD card is not formatted correctly	<ul style="list-style-type: none"> • Reformat the card using the format function in the camera.

Problem	Source	Solution
Picture is not clear	The lens is dirty	<ul style="list-style-type: none"> • Clean the lens.
The pictures are blurred	Hands were not steady when taking the picture	<ul style="list-style-type: none"> • Ensure hands are steady when taking picture and remain steady one minute after clicking the Shutter button.
	The picture subject was not in the focus range of the camera	<ul style="list-style-type: none"> • Keep a minimum distance of 60 inches between the picture subject and the camera lens to stay in the focus range of the camera.
The flash doesn't fire	The flash mode is set to Off	<ul style="list-style-type: none"> • Set the flash to any other mode except Off.
The computer cannot communicate with the camera	Camera power is off	<ul style="list-style-type: none"> • Turn on the camera.
	USB cable is not securely connected	<ul style="list-style-type: none"> • Connect cable to camera and computer port.
	Driver is not installed (for Windows 98 user)	<ul style="list-style-type: none"> • Install the camera driver.
The PC Camera doesn't work	Camera power is off	<ul style="list-style-type: none"> • Turn on the camera.
	USB cable is not securely connected	<ul style="list-style-type: none"> • Connect cable to camera and computer port.
	Driver is not installed	<ul style="list-style-type: none"> • Install the camera driver.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>