

User manual

Dishwasher



ZDT 6454

## Thank you for selecting our appliance

We wish you lots of enjoyment with your new appliance and we hope that you will consider our brand again when purchasing household appliances.

Please read this user manual carefully and keep it throughout the product life cycle as a reference document. The user manual should be passed on to any future owner of the appliance.

## Contents

---

Safety information _____	3	Use of detergent _____	16
Control panel _____	4	Unloading the dishwasher _____	17
Audible signals _____	5	Care and cleaning _____	17
Select and start a washing programme _____	6	Environmental concerns _____	19
Washing programmes _____	8	Something not working _____	19
First use _____	8	Consumption values _____	21
Set the water softener _____	9	Technical data _____	22
Filling with dishwasher salt _____	11	Hints for test institutes _____	22
Filling with rinse aid _____	12	Installation _____	23
Adjusting the dosage of rinse aid _____	13	Guarantee conditions _____	26
Loading cutlery and dishes _____	13		

## Safety information

---

In the interest of your safety and to ensure the correct use, before installing and first using the appliance, read this user manual carefully, including its hints and warnings. To avoid unnecessary mistakes and accidents, it is important to ensure that all people using the appliance are thoroughly familiar with its operation and safety features. Save these instructions and make sure that they remain with the appliance if it is moved or sold, so that everyone using it through its life will be properly informed on appliance use and safety.

### Correct use

- This dishwasher is only intended for washing household utensils suitable for machine washing.
- Do not put any solvents in the dishwasher. This could cause an explosion.
- Knives and other items with sharp points must be loaded in the cutlery basket with their points down or placed in a horizontal position in the upper basket.
- Only use products (detergent, salt and rinse aid) suitable for dishwashers.
- Avoid opening the door whilst the appliance is in operation, hot steam may escape.
- Do not take any dishes out of the dishwasher before the end of the dishwashing cycle.
- After use, isolate the appliance from the power supply and turn off the water supply.
- This product should be serviced only by an authorised service engineer, and only genuine spare parts should be used.

- Under no circumstances should you attempt to repair the machine yourself. Repairs carried out by inexperienced persons will cause injury or serious malfunctioning. Contact your local Service Force Centre. Always insist on genuine spare parts.

### General safety

- Dishwasher detergents can cause chemical burns to eyes, mouth and throat. Could endanger life! Comply with the safety instructions of the dishwasher detergent manufacturer.
- The water in your dishwasher is not for drinking. Detergent residues may still be present in your machine.
- Ensure that the door of the dishwasher is always closed when it is not being loaded or unloaded. In this way you will avoid anybody tripping over the open door and hurting themselves.
- Do not sit or stand on the open door.

### Child safety

- This appliance is designed to be operated by adults. Don't allow children to use the dishwasher unsupervised.
- Keep all packaging well away from children. There is risk of suffocation.
- Keep all detergents in a safe place out of children's reach.
- Keep children well away from the dishwasher when the door is open.

## Installation

- Check your dishwasher for any transport damage. Never connect a damaged machine. If your dishwasher is damaged contact your supplier.
- All packaging must be removed before use.
- Any electrical and plumbing work required to install this appliance must be carried out by a qualified and competent person.
- For safety reasons it is dangerous to alter the specifications or attempt to modify this product in any way.
- Never use the dishwasher if the electrical supply cable and water hoses are damaged;


or if the control panel, work top or plinth area are damaged such that the inside of the appliance is freely accessible. Contact your local Service Force centre, in order to avoid hazard.

- All sides of the dishwasher must never be drilled to prevent damage to hydraulic and electric components.

### **CAUTION!**

For electrical and water connection carefully follow the instructions given in specific paragraphs.

## Control panel

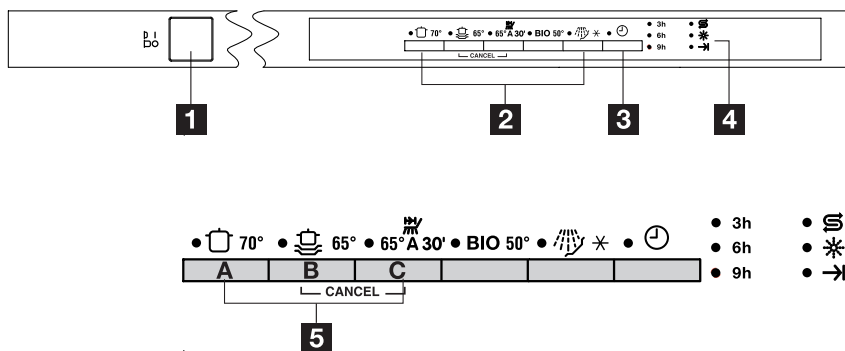

- 1** On/Off button
- 2** Programme selection buttons
- 3** Delay start button
- 4** Indicator lights
- 5** Function buttons

### Functions buttons

In addition to the dishwashing programme selection, the following functions can also be set with the help of these buttons:

- the setting of the water softener,
- deactivation/activation of the audible signals.

## **IMPORTANT!**

### Setting mode

Always remember that when:

- setting the water softener,
- deactivation/activation of the audible signals,

the appliance **MUST** be in setting mode:




- Press On/Off button, All programme light are illuminated = the appliance is in setting mode.

- Press On/Off button, **ONLY** a programme button is illuminated = last performed or selected programme still set.


In this case, to return to setting mode, the programme has to be cancelled.

To cancel a set programme or a programme in progress; simultaneously press function buttons B and C, until ALL programme button lights are illuminated. The programme has been cancelled and the machine is now in setting mode.

### Indicator lights

Salt 	Illuminates when the special salt has run out. Is never illuminated while a washing programme is running.
Rinse aid 	Illuminates when the rinse aid has run out. Is never illuminated while a washing programme is running.
End of programme 	Illuminates when the washing programme has ended. It also has added functions of visual signalling as: <ul style="list-style-type: none"> <li>– the setting of the water softener,</li> <li>– deactivation/activation of the audible signals,</li> <li>– intervention of an alarm due to the malfunction of the machine.</li> </ul>

## Audible signals

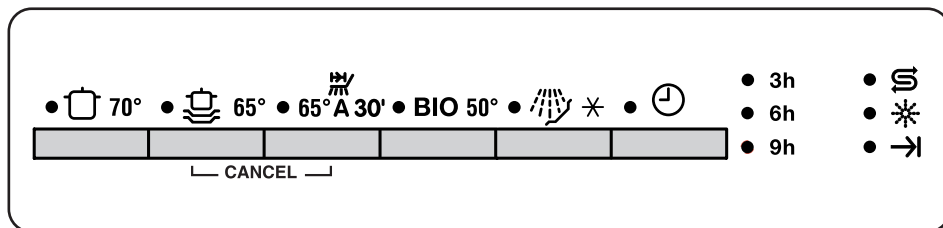

Audible signals have been introduced to help indicate which operations the dishwasher is performing:

- setting the water softener,
- end of the programme,
- intervention of an alarm due to malfunction.

### **IMPORTANT!**

Factory setting: audible signals activated.

Deactivation/activation of the audible signals

1. Press On/Off button. The dishwasher must be in setting mode.
2. Simultaneously press and hold function buttons B and C until the lights of function buttons A, B and C start flashing.

3. Press function button C, the lights of function buttons A and B turn off while the light of function button C goes on flashing. At the same time the end of programme indicator light illuminates indicating that the audible signals are active.
4. To deactivate the audible signals press again function button C, the end of programme indicator light turns off, indicating that the audible signals have been deactivated.
5. To memorise the operation switch off the dishwasher by pressing the On/Off button.

To activate again the audible signals simply follow the above operations until the end of programme indicator light illuminates.

## Select and start a washing programme

### **IMPORTANT!**

Select the washing programme and delay start with the door slightly opened. The start of the programme or the countdown of the delay start will occur only after the closure of the door. Until then it is possible to modify the set made.

1. Check that the baskets have been loaded correctly and that the spray arms are free to rotate
2. Check that the water tap is opened
3. Press the On/Off button. The dishwasher must be in setting mode.

4. Press the button corresponding to the required programme (see "Washing programmes" chart).  
When a programme has been selected the corresponding light will illuminate.
5. Close the dishwasher door, the programme starts automatically.

## Setting and starting the programme with "delay start"

1. After having selected the washing programme, press the delay start button until the light corresponding to the chosen hours flashes (3h, 6h, 9h).
2. Close the dishwasher door, the countdown starts automatically.
3. The countdown will decrease with steps of 3 hours.
4. The opening of the door will interrupt the countdown. Close the door; the countdown will continue from the point at which it was interrupted.
5. Once the delay start has elapsed the programme will start automatically.

### Cancelling the delay start

To cancel a delay start in progress you have to reset the dishwasher.

Press simultaneously and keep pressed function buttons B and C until all programme button light are illuminated.

Cancelling a delay start involves also the cancelling of the washing programme set. In this case you have to set the washing programme again.



### **CAUTION!**

Interrupt or cancel a washing programme in progress **ONLY** if it's absolutely necessary.

Attention! Hot steam may escape when the door is opened. Open the door carefully.

Interrupt a washing programme in progress:

- Open the dishwasher door; the programme will stop. Close the door; the programme will start from the point at which it was interrupted.

Cancel a washing programme in progress

- Open the dishwasher door; press simultaneously and keep pressed function buttons B and C until all programme button is illuminated. The washing programme has been cancelled. .
- If a new washing programme is to be selected, check that there is detergent in the detergent dispenser.

Cancelling the "delay start"

- To cancel a delay start in progress, open the door and press the delay start button, the corresponding light turns off.
- close the door, the set washing programme will start automatically.

End of the washing programme





- The dishwasher will automatically stop and an audible signal informs you of the end of the washing programme.
- Open the dishwasher door.
- The end of programme indicator light is illuminated.
- The indicator light of the programme just ended will remain on.
- Switch off the dishwasher by pressing the On/Off button.

## **IMPORTANT!**

plugged and the water tap turned off.

When the washing programme has finished, it is recommended that the dishwasher is un-

## Washing programmes

Programme	Degree of soil	Type of load	Programme description
Intensive 70° 	Heavy soil	Crockery, cutlery, pots and pans	Prewash Main wash 2 intermediate rinses Final rinse Drying
Normal 65° 	Normal soil	Crockery, cutlery, pots and pans	Prewash Main wash 1 intermediate rinses Final rinse Drying
 65° A 30' 1)	Light soil	Crockery and cutlery	Main wash Final rinse
BIO 50° 2)	Normal soil	Crockery and cutlery	Prewash Main wash 1 intermediate rinse Final rinse Drying
Rinse and Hold 	Any. Partial load (to be completed later in the day).		1 cold rinse (to avoid food scraps from sticking together). This programme does not require the use of detergent.

1) Ideal for washing a partially loaded dishwasher. This is perfect daily programme, made to meet the needs of a family of 4 persons who only wish to load breakfast and dinner crockery and cutlery.

2) Test programme for test institutes.



## First use

---

Before using your dishwasher for the first time:

- Ensure that the electrical and water connections comply with the installation instructions
- Remove all packaging from inside the appliance
- Set the water softener
- Pour 1 litre of water inside the salt container and then fill with dishwasher salt
- Fill the rinse aid dispenser

### When using tablets that integrate rinse aid and detergent:

there is no need to fill up with rinse aid

- set the water softener
- add special (dishwasher) salt

### When using tablets that integrate rinse aid, detergent, salt function and other additives:

there is no need to fill up with special salt or rinse aid.

## Set the water softener

---

The dishwasher is equipped with a water softener designed to remove minerals and salts from the water supply, which would have a detrimental or adverse effect on the operation of the appliance.

Check whether these detergents are suitable for your water hardness. Follow the manufacturers instructions.

- Set the water hardness to level 1.

### IMPORTANT!

If the drying results are not satisfactory we recommend that you:

1. Fill up the rinse aid dispenser with rinse aid.
2. Set the rinse aid dosage to position 2.

If you decide in future to use separated detergents, we advise that you:

- Fill up the salt and rinse aid container.
- Adjust the water hardness setting to the highest level and perform 1 normal washing programme without loading any dishes.
- Adjust the water hardness setting according to the hardness of the water in your area.
- Adjust the rinse aid dosage

The higher the content of these minerals and salts, the harder your water is. Water hardness is measured in equivalent scales, German degrees (°dH), French degrees (°TH) and mmol/l (millimol per litre - international unit for the hardness of water).



The softener should be adjusted according to the hardness of the water in your area. Your

local Water Authority can advise you on the hardness of the water in your area.

Water hardness			Adjusting the water hardness setting		Use of salt
°dH	°TH	mmol/l	manually	electronically	
51 - 70	91 - 125	9,1 - 12,5	2	level 10	yes
43 - 50	76 - 90	7,6 - 8,9	2	level 9	yes
37 - 42	65 - 75	6,51 - 7,5	2	level 8	yes
29 - 36	51 - 64	5,1 - 6,4	2	level 7	yes
23 - 28	40 - 50	4,0 - 5,0	2	level 6	yes
19 - 22	33 - 39	3,3 - 3,9	2	level 5	yes
15 - 18	26 - 32	2,61 - 3,2	1	level 4	yes
11 - 14	19 - 25	1,9 - 2,5	1	level 3	yes
4 - 10	7 - 18	0,71 - 1,8	1	level 2	yes
< 4	< 7	< 0,7	1	level 1	no

The water softener must be set in both ways: manually, using the water hardness dial and electronically.

## Setting the water softener manually (see table)

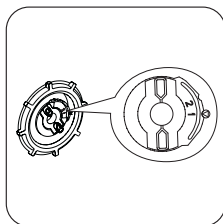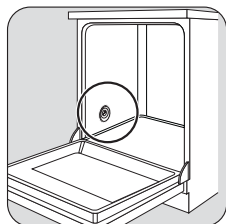


The water softener is factory set at position 2.

Set switch to position 1 or 2

## Setting the water softener electronically (see table)

The dishwasher is factory set at level 5.


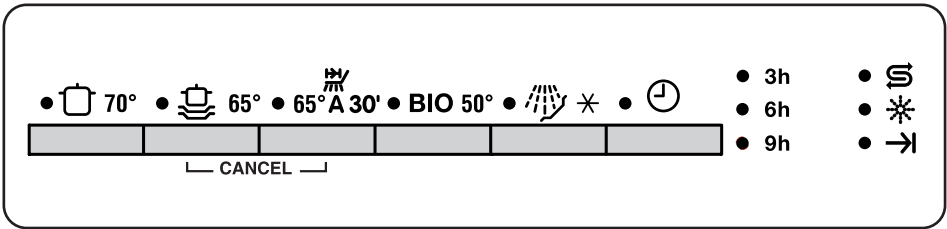


1. Press the On/Off button. The dishwasher must be in setting mode.
2. Simultaneously press and hold function buttons B and C until the lights of the function buttons A, B and C start flashing.
3. Press function button A, the lights function buttons B and C turn off while the light of function button A goes flashing, at the same time the end of programme indicator light starts to flash, along with a sequence of intermittent audible signals. The current level is indicated by the number of flashes of the end of programme indicator light with a sequence of intermittent audible signals and a pause of a few seconds.  
Examples:  
5 flashes / 5 intermittent audible signals, pause,
- 5 flashes / 5 intermittent audible signals, pause, etc...= level 5
- 6 flashes / 6 intermittent audible signals, pause,  
6 flashes / 6 intermittent audible signals, pause, etc...= level 6
4. To change the level press the function button A. Each time button is pressed the level changes (For the selection of a new level see the chart).  
Examples:  
If the current level is 5, by pressing function button A once, level 6 is selected. If the current level is 10, by pressing button A once, level 1 is selected.
5. To memorise the operation, switch off the dishwasher by pressing the On/Off button.

## Filling with dishwasher salt

### CAUTION!


Use only special salt suitable for dishwashers.

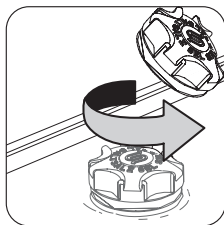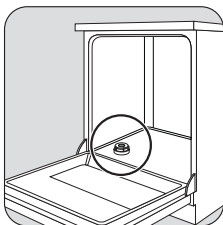


Unscrew the cap.




Only before filling with salt for the first time, fill the salt container with water.

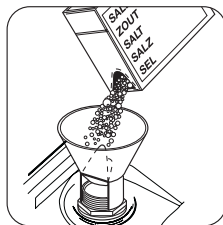

Using the funnel provided, pour in the salt until the container is filled with salt.

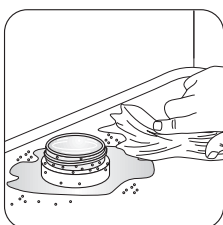

Remove any trace of salt.

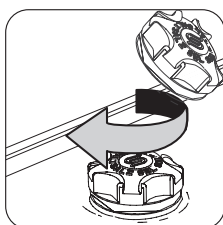

Replace the cap tightly turning it clockwise until it stops with a click.

**IMPORTANT!**

Immediately start a complete programme.


**IMPORTANT!**

Water will overflow from the container as salt is added.


**IMPORTANT!**

Top up the special salt when the light on the control panel illuminates.

## Filling with rinse aid

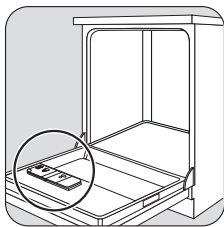

Open the lid.

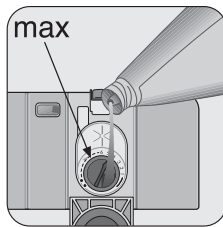

Fill up with rinse aid. The maximum level for filling is indicated by "max"



Clean up any rinse aid which overflows. Close the lid and press until it locks.

### **! CAUTION!**

Never fill the rinse aid dispenser with any other substances (e.g. dishwasher cleaning agent, liquid detergent). This would damage the appliance.


### **IMPORTANT!**

Top up the rinse aid when the light on the control panel illuminates.


## Adjusting the dosage of rinse aid

Increase the dose if there are drops of water or lime spots on the dishes after washing.


Reduce the dose if there are whitish streaks on the dishes or a bluish film on glassware or knife blades.

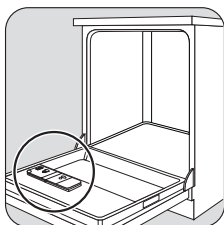

Open the lid.

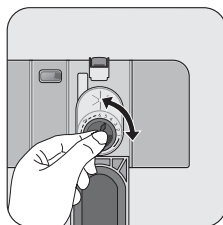

Set the dosage level. (The dose is factory set in position 4).

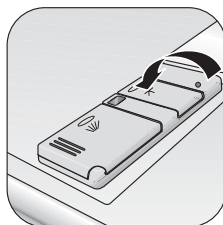

Close the lid and press until it locks.

# Loading cutlery and dishes

Sponges, household cloths and any object that can absorb water may not be washed in the dishwasher.

- Before loading the dishes, you should:
  - Remove all left over food and debris.
  - Soften remnants of burnt food in pans
- When loading the dishes and cutlery, please note:
  - Dishes and cutlery must not impede the rotation of the spray arms.
  - Load hollow items such as cups, glasses, pans, etc. with the opening downwards so that water cannot collect in the container or a deep base.
- Dishes and items of cutlery must not lie inside one another, or cover each other.
- To avoid damage to glasses, they must not touch.
- Lay small objects in the cutlery basket.
- Plastic items and pans with non stick coatings have a tendency to retain water drops; these items will not dry as well as porcelain and steel items.
- Light items (plastic bowls etc.) must be loaded in the upper basket and arranged so they do not move.


## For washing in the dishwasher the following cutlery and dishes

### are not suitable:


- Cutlery with wooden, horn, china or mother-of-pearls handles.
- Plastic items that are not heat resistant.
- Older cutlery with glued parts that are not temperature resistant.
- Bonded cutlery items or dishes.
- Pewter or copper items.
- Lead crystal glass.
- Steel items prone to rusting.
- Wooden platters.
- Items made from synthetics fibres.

### are of limited suitability:


- Only wash stoneware in the dishwasher if it is specially marked as being dishwasher-safe by the manufacturer.
- Glazed patterns may fade if machine washed frequently.
- Silver and aluminium parts have a tendency to discolour during washing: Residues, e.g. egg white, egg yolk and mustard often cause discolouring and staining on silver. Therefore always clean left-overs from silver immediately, if it is not to be washed straight after use.

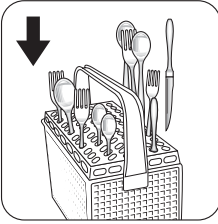



Load cutlery. For best results we recommend you to use the cutlery grid provided (if the size and dimensions of the cutlery allow it)

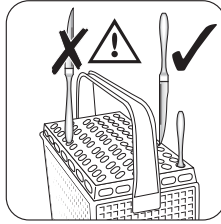


Place knives and other items of cutlery with sharp points or edges facing upwards. Risk of injury!

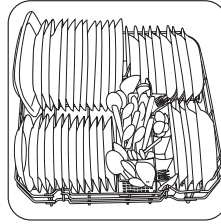


Load the lower basket. Arrange serving dishes and large lids around the edge of the basket.

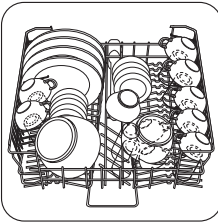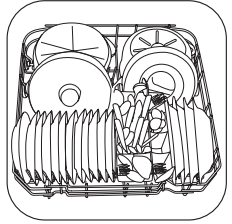

Load upper basket. Light items (plastic bowls etc.) must be loaded in the upper basket and arranged so they do not move.

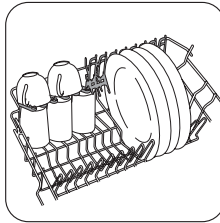

For taller items, the cup racks can be folded upwards.

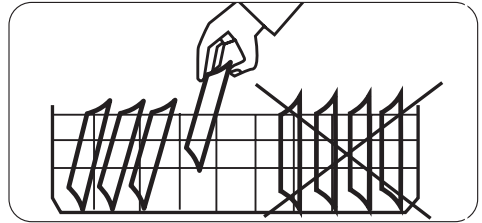


If plates are to be loaded in the upper basket: load them starting from the rear positions; tilting them slightly forwards and avoiding the front positions near the door.


## Adjusting the height of the upper basket

If washing very large plates you can load them in the lower basket after moving the upper basket to the higher position.

	Maximum height of the dishes in:	
	upper basket	lower basket
With upper basket raised	20 cm	31 cm
With upper basket lowered	24 cm	27 cm

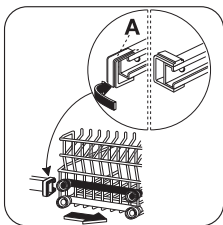

Move the front runner stops (A) of the upper basket outwards and slide the basket out.

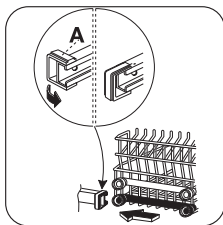

Refit the basket in the higher position and replace the stops (A) in their original position.

### **IMPORTANT!**



When the basket is in the higher position you will not be able to use the cup racks.

## Use of detergent


### **IMPORTANT!**

Only use detergents suitable for dishwashers.


Observe the manufacturer's dosing and storage recommendations.

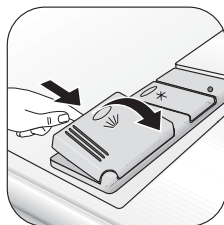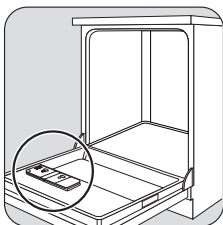

Open the lid.

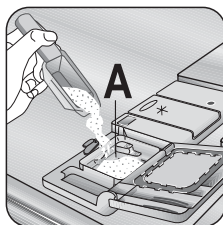


Fill in the detergent in compartment A.

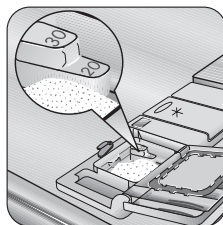


Observe the dosing levels.



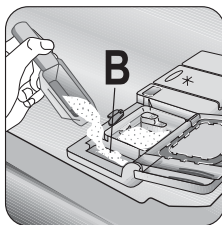

For programmes with prewash add an additional detergent dose in compartment B.

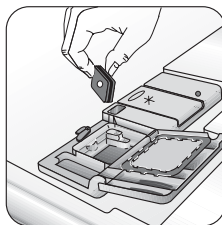

When using detergent tablets: place detergent tablets in compartment A.



Close the lid.

## Unloading the dishwasher

- Hot dishes are sensitive to knocks. The dishes should therefore be allowed to cool down before removing from the appliance.
- Empty the lower basket first and then the upper one; this will avoid water dripping from the upper basket onto the dishes in the lower one.
- Water may appear on the sides and the door of the dishwasher as the stainless steel will eventually become cooler than the dishes.

### CAUTION!



When the washing programme has finished, it is recommended that the dishwasher is unplugged and the water tap turned off.

## Care and cleaning


### Cleaning the filters

#### **IMPORTANT!**


NEVER use the dishwasher without filters. Incorrect repositioning and fitting of the filters will produce poor washing results.

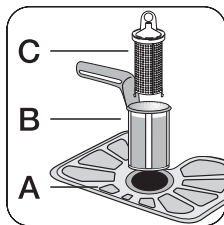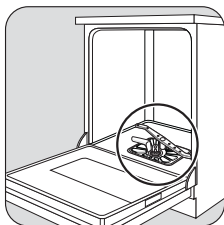


Clean filters A, B and C thoroughly under running water.

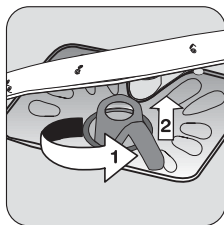


Turn the handle about 1/4 turn anticlockwise and remove filters B and C.

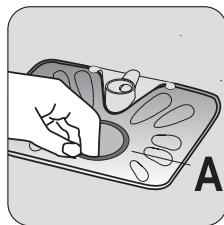

Remove filter A from the base of the washing compartment.

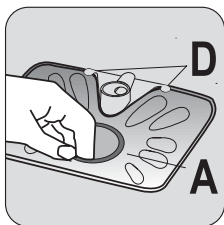

Put the flat filter A back in the base of the washing compartment and ensure that it fits perfectly under the two guides D.

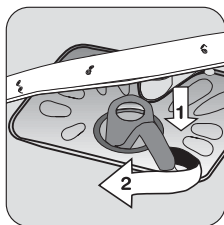

Replace the filters and lock by turning the handle clockwise to the stop.

## Cleaning the spray arms

NEVER try to remove the spray arms.

If residues of soil have clogged the holes in the spray arms, remove them with a cocktail stick.

## External cleaning

Clean the external surfaces of the machine and control panel with a damp soft cloth. If necessary use only neutral detergents. Never use abrasive products, scouring pads or solvent (acetone, trichloroethylene etc....).

## Internal cleaning

Ensure that the seals around the door, the detergent and rinse aid dispensers are cleaned regularly with a damp cloth.

We recommend every 3 months to run the wash programme for heavy soiled dishes using detergent but without dishes.

## Prolonged periods of non-operation

If you are not using the machine for any prolonged period of time you are advised to:

1. Unplug the appliance and then turn off the water.

2. Leave the door ajar to prevent the formation of any unpleasant smells.
3. Leave the inside of the machine clean.

## Frost precautions

Avoid placing the machine in a location where the temperature is below 0°C. If this is unavoidable, empty the machine, close the appliance door, disconnect the water inlet pipe and empty it.

## Moving the machine

If you have to move the machine (moving house etc....):

1. Unplug it.
2. Turn the water tap off.
3. Remove the water inlet and discharge hoses.
4. Pull the machine out together with the hoses.

Avoid over tilting the machine during transportation.

## Environmental concerns


### Packaging material

The packaging materials are environmentally friendly and can be recycled. The plastic components are identified by markings, e.g. >PE<, >PS<, etc. Please dispose of the packaging materials in the appropriate container at the community waste disposal facilities.

#### **CAUTION!**

When a unit is no longer being used:

- Pull the plug out of the socket.
- Cut off the cable and plug and dispose of them.
- Dispose of the door catch. This prevents children from trapping themselves inside and endangering their lives.

The symbol  on the product or on its packaging indicates that this product may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

# Something not working

The dishwasher will not start or stops during operation. Certain problems are due to the lack of simple maintenance or oversights, which can be

solved with the help of the indications described in the chart, without calling out an engineer. Switch off the dishwasher and carry out the following suggested corrective actions.

Fault code and malfunction	Possible cause and solution
<ul style="list-style-type: none"> <li>• 1 intermittent audible signal</li> <li>• continuous flashing of the light of the running programme</li> <li>• 1 flash of the "end of programme " indicator light</li> </ul> <p>The dishwasher does not fill with water.</p>	<ul style="list-style-type: none"> <li>• The water tap is blocked or furred with limescale. Clean the water tap.</li> <li>• The water tap is turned off. Turn the water tap on.</li> <li>• The filter (where present) in the threaded hose fitting at the water inlet valve is blocked. Clean the filter in the threaded hose fitting.</li> <li>• The water inlet hose has not been correctly laid or it is bent or squashed. Check the water inlet hose connection.</li> </ul>
<ul style="list-style-type: none"> <li>• 2 intermittent audible signals</li> <li>• continuous flashing of the light of the running programme</li> <li>• 2 flashes of the "end of programme " indicator light</li> </ul> <p>The dishwasher will not drain.</p>	<ul style="list-style-type: none"> <li>• The sink spigot is blocked. Clean out the sink spigot.</li> <li>• The water drain hose has not been correctly laid or it is bent or squashed. Check the water drain hose connection.</li> </ul>
<ul style="list-style-type: none"> <li>• 3 intermittent audible signals</li> <li>• continuous flashing of the light of the running programme</li> <li>• 3 flashes of the "end of programme" indicator light</li> </ul> <p>Anti-flood device is activated</p>	<p>Close the water tap and contact your local Service Force Centre.</p>
<p>The programme does not start.</p>	<ul style="list-style-type: none"> <li>• The dishwasher door has not been properly closed. Close the door.</li> <li>• The main plug is not plugged in. Insert the mains plug.</li> <li>• The fuse has blown in the household fuse box. Replace the fuse.</li> </ul>

Once these checks have been carried out; switch on the dishwasher. The programme will

continue from the point at which it was interrupted.

If the malfunction or fault code reappears contact the Service Force Centre.

For other fault codes not described in the above chart, please contact your Service Force Centre.

The wash results are not satisfactory	
The dishes are not clean	<ul style="list-style-type: none"> <li>• The wrong washing programme has been selected.</li> <li>• The dishes are arranged in such a way as to stop water reaching all parts of the surface. The baskets must not be overloaded.</li> <li>• The spray arms do not rotate freely due to incorrect arrangement of the load.</li> <li>• The filters in the base of the washing compartment are dirty or incorrectly positioned.</li> <li>• Too little or no detergent has been used.</li> <li>• Where there are limescales deposits on the dishes; the salt container is empty or the incorrect level of the water softener has been set.</li> <li>• The drain hose connection is not correct.</li> <li>• The salt container cap is not properly closed.</li> </ul>
The dishes are wet and dull	<ul style="list-style-type: none"> <li>• Rinse aid was not used.</li> <li>• The rinse aid dispenser is empty.</li> </ul>
There are streaks, milky spots or a bluish coating on glasses and dishes	<ul style="list-style-type: none"> <li>• Decrease rinse aid dosing.</li> </ul>
Water drops have dried onto glasses and dishes	<ul style="list-style-type: none"> <li>• Increase rinse aid dosing.</li> <li>• The detergent may be the cause. Contact the detergent manufacturer's consumer care line.</li> </ul>

If after all these checks, the problem persists, contact your local Service Force Centre. Contact your local Service Force Centre, quoting the model (Mod.), product number (PNC) and serial number (S.N.). This information can

be found on the rating plate located on the side of the dishwasher door.. So that you always have these numbers at hand, we recommend you to make a note of them here:

Mod. : .....  
 PNC : .....  
 S.N. : .....

## Consumption values

The consumption values are intended as a guide and depends on the pressure and the temperature of the water and also by the var-

iations of the power supply and the amount of dishes.

Consumption values			
Programme	Programme duration (in minutes)	Energy consumption (in kWh)	Water (litres)
Intensive 70°	80-90	1,6-1,8	22-24
Normal 65°	95-105	1,5-1,7	21-23
65°A30'	30	0,9	9
BIO 50° (Test programme for Test Institutes)	170	1,05	16
Rinse and Hold	12	0,1	4

## Technical data

Dimensions	Width x Height x Depth (cm)	59,6 x 81,8-87,8 x 55,5
Electrical connection Voltage - Overall power - Fuse	Information on the electrical connection is given on the rating plate on the inner edge of the dishwasher's door.	
Water supply pressure	Minimum - Maximum (MPa)	0,05 - 0,8
Capacity	place settings	12
Max. weight	kg	37
Noise level	dB(A)	49

## Hints for test institutes


Testing in accordance with EN 60704 must be carried out with appliance fully loaded and using the test programme (see "Consumption values").

Test in accordance with EN 50242 must be carried out when the salt container and rinse aid dispenser have been filled with salt and


rinse aid respectively and using the test programme (see "Consumption values").

### Full load: 12 standard place settings


Amount of detergent required	5 g + 25 g (Type B)
Rinse aid setting	position 4 (Type III)

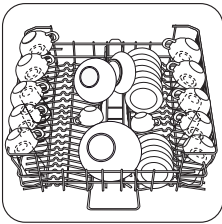


Upper basket

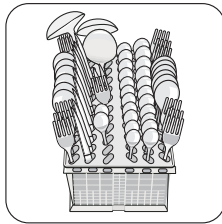

Cutlery basket

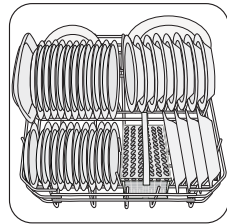

Lower basket

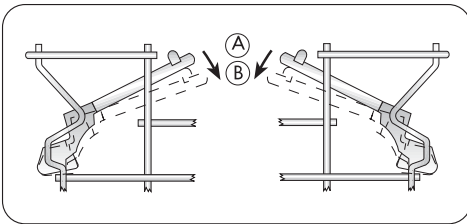

cup racks: position A

## Installation

### **⚠ WARNING!**

Any electrical and/or plumbing work required to install this appliance should be carried out by a qualified electrician and/or plumber or competent person.

### Water connection

### **⚠ WARNING!**

The dishwasher must not be connected to open water appliances or instantaneous water heaters. This dishwasher may be fed with either hot (max. 60°) or cold water. Nevertheless we advise you a cold water supply.

**! WARNING!**

Only use, for connection to the water mains, new hose-set; old hose-set must not be reused.

**! CAUTION!**


If the machine is connected to new pipes or pipes which have not been used for a long time, you should run the water for a few minutes before connecting the inlet hose.

## Water inlet hose with safety valve

Connect the inlet hose to a water tap with an external thread of 3/4".

After connecting the double-walled water inlet hose, the safety valve is next to the tap.

If the water inlet hose leaks, the safety valve cuts off the water supply.

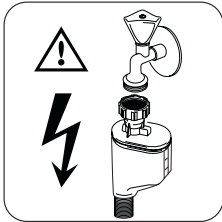

**! WARNING!**

The electrical cable for the safety valve is in the double-walled water inlet hose and is live.

Therefore do not immerse the water inlet hose or the safety valve in water.

Take care when installing the water inlet hose. Place the water inlet hose in such a way that it is always lower than the bottom edge of the safety valve.


If the water inlet hose or the safety valve is damaged, remove the mains plug immediately.

**! CAUTION!**


A water inlet hose with safety valve **MUST** only be replaced by your local Service Force Centre.




## Drain hose

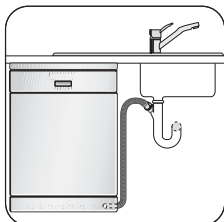


Connect drain hose to the sink. Secure it with the supplied hose clamp.

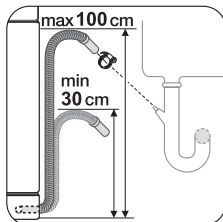

Required height: 30 to 100 cm above bottom of the dishwasher.

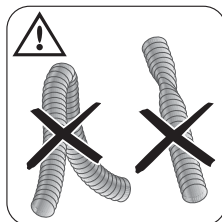

Ensure that the hoses are not kinked, crushed or entangled.

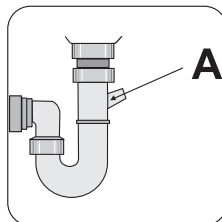

When connecting the drain hose to an under sink trap spigot, the entire plastic membrane (A) must be removed. Failure to remove all the membrane will result in food particles building up over time eventually blocking the dishwasher drain hose spigot.

If you use a drain hose extension the total length should not be longer than 4 metres. Likewise the internal diameter of the couplings used for connections to the waste outlet must be no smaller than the diameter of the hose provided.

## Electrical connection

### CAUTION!

Safety standards require the appliance to be earthed.

Prior to using the appliance for the first time, ensure that the rated voltage and type of supply on the rating plate match that of the supply where the appliance is to be installed.

The fuse rating is also to be found on the rating plate.

Always plug the mains plug into a correctly installed shockproof socket. Multi-way plugs, connectors and extension cables must not be used.

This could constitute a fire hazard through overheating.

If necessary, have the domestic wiring system socket replaced. In case that the electrical cable has to be replaced, contact your local Service Force centre.

The plug must be accessible after the appliance has been installed.

Never unplug the appliance by pulling on the cable. Always pull the plug.

The manufacturer accepts no liability for failure to observe the above safety precautions.

## Fitting under a counter

### **IMPORTANT!**

Carefully follow the instructions on the enclosed template for building in the dishwasher and fitting the furniture panel.



### **WARNING!**

The dishwasher must be secured against tilting. Therefore make sure that the counter it is fixed under, is suitably secured to a fixed structure (adjacent kitchen units cabinets, wall).

This dishwasher is designed to be fitted under a kitchen counter or work surface.

No further openings for the venting of the dishwasher are required, but only to let the water fill and drain hose and power supply cable pass through.

The dishwasher incorporates adjustable feet to allow the adjustment of the height.

During all operations that involve accessibility to internal components the dishwasher has to be unplugged.

Be sure that once the appliance has been installed, it is easily accessible for the service engineer in the event that a repair is required.

## Levelling

Good levelling is essential for correct closure and sealing of the door.

When the appliance is correctly levelled, the door will not catch on either side of the cabinet. If the door does not close correctly, loosen or tighten the adjustable feet until the machine is perfectly level. (See enclosed template).

## Guarantee conditions

### European Guarantee

This appliance is guaranteed by Electrolux in each of the countries listed at the back of this user manual, for the period specified in the appliance guarantee or otherwise by law. If you move from one of these countries to another of the countries listed, the appliance guarantee will move with you subject to the following qualifications:-




- The appliance guarantee starts from the date you first purchased the appliance which will be evidenced by production of a valid purchase document issued by the seller of the appliance.
- The appliance guarantee is for the same period and to the same extent for labour and

parts as exists in your new country of residence for this particular model or range of appliances.

- The appliance guarantee is personal to the original purchaser of the appliance and cannot be transferred to another user.
- The appliance is installed and used in accordance with instructions issued by Electrolux and is only used within the home, i.e. is not used for commercial purposes.
- The appliance is installed in accordance with all relevant regulations in force within your new country of residence.

The provisions of this European Guarantee do not affect any of the rights granted to you by law.

www.electrolux.com

		
Albania	+35 5 4 261 450	Rr. Pjeter Bogdani Nr. 7 Tirane
Belgique/België/Belgien	+32 2 363 04 44	Bergensesteenweg 719, 1502 Lembeek
Česká republika	+420 2 61 12 61 12	Budějovická 3, Praha 4, 140 21
Danmark	+45 70 11 74 00	Sjællandsgade 2, 7000 Fredericia
Deutschland	+49 180 32 26 622	Muggenhofer Str. 135, 90429 Nürnberg
Eesti	+37 2 66 50 030	Mustamäe tee 24, 10621 Tallinn
España	+34 902 11 63 88	Carretera M-300, Km. 29,900 Alcalá de Henares Madrid
France	www.electrolux.fr	
Great Britain	+44 8705 929 929	Addington Way, Luton, Bedfordshire LU4 9QQ
Hellas	+30 23 10 56 19 70	4, Limnou Str., 54627 Thessaloniki
Hrvatska	+385 1 63 23 338	Slavonska avenija 3, 10000 Zagreb
Ireland	+353 1 40 90 753	Long Mile Road Dublin 12
Latvija	+37 17 84 59 34	Kr. Barona iela 130/2, LV-1012, Riga
Lietuva	+370 5 2780609	Verkių 29, LT-09108 Vilnius
Luxembourg	+352 42 431 301	Rue de Bitbourg, 7, L-1273 Hamm
Magyarország	+36 1 252 1773	H-1142 Budapest XIV, Erzsébet királyné útja 87
Nederland	+31 17 24 68 300	Vennootsweg 1, 2404 CG - Alphen aan den Rijn
Norge	+47 81 5 30 222	Risløkkvn. 2 , 0508 Oslo
Österreich	+43 18 66 400	Herziggasse 9, 1230 Wien
Polska	+48 22 43 47 300	ul. Kolejowa 5/7, Warsaw

		
Portugal	+35 12 14 40 39 39	Quinta da Fonte - Edificio Gonçalves Zarco - Q 35 -2774-518 Paço de Arcos
Romania	+40 21 451 20 30	Str. Garii Progresului 2, S4, 040671 RO
Schweiz - Suisse - Svizzera	+41 62 88 99 111	Industriestrasse 10, CH-5506 Mägenwil
Slovenija	+38 61 24 25 731	Electrolux Ljubljana d.o.o. Gerbičeva 98, 1000 Ljubljana
Slovensko	+421 2 43 33 43 22	Electrolux Slovakia s.r.o., Electrolux Domáce spotrebiče SK, Seberíniho 1, 821 03 Bratislava
Suomi	www.electrolux.fi	
Sverige	+46 (0)771 76 76 76	Electrolux Service, S:t Göransgatan 143, S-105 45 Stockholm
Türkiye	+90 21 22 93 10 25	Tarlabaşı caddesi no : 35 Taksim İstanbul
Россия	+7 095 937 7837	129090 Москва, Олимпийский проспект, 16, БЦ "Олимпик"





---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---



[www.electrolux.com](http://www.electrolux.com)



## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>