



## Rumor Touch

## USER GUIDE

Please read this manual carefully before operating your mobile phone. Retain it for future reference.

*Copyright ©2010 LG Electronics, Inc. **All rights reserved.***

*LG and the LG logo are registered trademarks of LG Group and its related entities. All other trademarks are the property of their respective owners.*

# Important Safety Precautions

Read these instructions. Breaking the rules may be dangerous or illegal. Further detailed information is given in this user guide.

**WARNING!** *Violation of the instructions may cause serious injury or death.*



1. Never use an unapproved battery since this could damage the phone and/or battery and could cause the battery to explode.



2. Never place your phone in a microwave oven as it will cause the battery to explode.

3. Never store your phone in temperatures less than -4°F or greater than 122°F.

4. Do not dispose of your battery by fire or with hazardous or flammable materials.



5. When riding in a car, do not leave your phone or set up the hands-free kit near to the air bag. If wireless equipment is improperly installed and the air bag is deployed, you may be seriously injured.



6. Do not use a hand-held phone while driving.

7. Do not use the phone in areas where its use is prohibited. (For example: aircraft)

# Important Safety Precautions



1. Do not expose the battery charger or adapter to direct sunlight or use it in places with high humidity, such as a bathroom.



2. Do not use harsh chemicals (such as alcohol, benzene, thinners, etc.) or detergents to clean your phone. This could cause a fire.



3. Do not drop, strike, or shake your phone severely. It may harm the internal circuit boards of the phone.



4. Do not use your phone in high explosive areas as the phone may generate sparks.



5. Do not damage the power cord by bending, twisting, pulling, or heating. Do not use the plug if it is loose as it may cause a fire or electric shock.



6. Do not place any heavy items on the power cord. Do not allow the power cord to be crimped as it may cause electric shock or fire.

7. Do not handle the phone with wet hands while it is being charged. It may cause an electric shock or seriously damage your phone.

8. Do not disassemble the phone.



1. Do not place or answer calls while charging the phone as it may short-circuit the phone and/or cause electric shock or fire.

2. Do not hold or let the antenna come in contact with your body during a call.



3. Make sure that no sharp-edged items such as animal's teeth or nails, come into contact with the battery. This could cause a fire.



4. Store the battery out of reach of children.

5. Be careful that children do not swallow any parts (such as rubber plugs, earphone, connection parts of the phone, etc.) This could cause asphyxiation or suffocation resulting in serious injury or death.



6. Unplug the power cord and charger during lightning storms to avoid electric shock or fire.

7. Only use the batteries and chargers provided by LG. The warranty will not be applied to products provided by other suppliers.



8. Only authorized personnel should service the phone and its accessories. Faulty installation or service may result in accidents and consequently invalidate the warranty.



9. Virgin Mobile programs one or more emergency phone numbers, such as 911, that you can call under any circumstances, even when your phone is locked. Your phone's preprogrammed emergency number(s) may not work in all locations, and sometimes an emergency call cannot be placed due to network, environmental, or interference issues.

# Table of Contents

---

<b>Important Safety Precautions</b>	<b>1</b>
-------------------------------------	----------

---

<b>Table of Contents</b>	<b>4</b>
--------------------------	----------

---

<b>Technical Details</b>	<b>9</b>
--------------------------	----------

FCC RF Exposure Information	10
Bodily Contact During Operation the Vehicle-Mounted External Antenna	11
FCC Notice and Cautions	11
Caution	12
Part 15.21 statement	12
Part 15.19 statement	12
Part 15.105 statement	13

---

<b>Phone Overview</b>	<b>14</b>
-----------------------	-----------

Touch Sensitive Soft Keys	15
How to Unlock	15

---

<b>Menus Overview</b>	<b>18</b>
-----------------------	-----------

---

<b>Getting Started with Your Phone</b>	<b>20</b>
--	-----------

The Battery	20
Installing the Battery	20
Removing the Battery	20
Charging the Battery	20
Battery Charge Level	21
Turning the Phone On and Off	21

Turning the Phone On	21
Turning the Phone Off	21
Signal Strength	21
Screen Icons	21
Making Calls	22
Correcting Dialing Mistakes	23
Redialing Calls	23
Receiving Calls	23
Lock Mode	24
Volume Quick Adjustment	24
Call Waiting	24

---

<b>Quick Access to Convenient Features</b>	<b>24</b>
--	-----------

Caller ID	25
Speed Dialing	25

---

<b>Entering and Editing Information</b>	<b>26</b>
---	-----------

Text Input	26
------------	----

---

<b>Contacts in Your Phone's Memory</b>	<b>27</b>
--	-----------

The Basics of Storing Contacts Entries	27
--	----

---

<b>Using Phone Menus</b>	<b>28</b>
--------------------------	-----------

---

<b>Messaging</b>	<b>28</b>
------------------	-----------

<b>1. Voicemail</b>	<b>28</b>
---------------------	-----------

2. Send Message	28	1.3 Stopwatch	43
3. Messages	30	2. Calendar	43
4. Virgin Alerts	30	3. Bluetooth	45
5. Email + IM	30	Turning Bluetooth On and Off	45
6. Settings	31	Bluetooth Settings	46
<b>Maps</b>	<b>32</b>	Pairing Bluetooth Devices	46
<b>Photos + Videos</b>	<b>32</b>	Sending Items via Bluetooth	47
1. Camera	32	4. Mass Storage	47
2. Camcorder	34	4.1 Connect to PC	47
3. My Photos + Videos	35	4.2 File Manager	47
4. Other Settings	36	4.3 Format Memory Card	49
<b>My Stuff</b>	<b>37</b>	4.4 Memory Info	49
<b>Social Networking</b>	<b>37</b>	5. Voice Services	49
<b>Web</b>	<b>38</b>	5.1 Voice Command	49
Downloads	38	5.1.1 Call [Name][Type]/ [Number]	49
<b>My Account</b>	<b>39</b>	5.1.2 Send Msg to [Name][Type]/ [Number]	49
<b>Media Player</b>	<b>41</b>	5.1.3 Find [Name][Type]	50
<b>Tools</b>	<b>42</b>	5.1.4 Go to [menu]	50
1. Clock	42	5.1.5 Check [Item]	50
1.1 Alarm	42	5.1.6 Voice Command Training	50
1.2 World Clock	43	5.1.7 Exit Voice Command	50
		5.2 Voice Reader	50
		5.3 Voice Memo	50
		5.4 Settings + Info	52
		6. Calculator	52
		6.1 Calculator	52

# Table of Contents

6.2 Ez Tip Calculator	52	6.1 Phone Number	59
6.3 Unit Converter	52	6.2 Activation	59
<b>7. Notepad</b>	<b>53</b>	6.3 Icon Glossary	59
<b>8. Document Viewer</b>	<b>53</b>	6.4 Memory Info	60
<b>9. Quick Guide</b>	<b>54</b>	6.5 Battery Status	60
<b>Settings</b>	<b>54</b>	6.6 Version	60
<b>1. Display</b>	<b>54</b>	6.7 Advanced	60
1.1 Wallpaper	54	<b>7. Lock Phone</b>	<b>60</b>
1.2 Brightness	55	7.1 Lock Now	60
1.3 Backlight	55	7.2 Change Lock Code	60
1.4 Picture ID	55	<b>8. Parental Controls</b>	<b>61</b>
1.5 Font Size	55	<b>9. Call Setup</b>	<b>62</b>
1.6 Power Save Mode	55	9.1 Auto-Answer	62
1.7 Whisper Notification	55	9.2 Abbreviated Dialing	62
1.8 Touch Calibration	56	9.3 Contacts Match	63
<b>2. Volume</b>	<b>56</b>	<b>10. TTY</b>	<b>63</b>
<b>3. Ringers</b>	<b>57</b>	<b>11. Airplane/Music Mode</b>	<b>64</b>
3.1 Incoming Calls	57	<b>12. Headset Mode</b>	<b>64</b>
3.2 Call Alerts	57	<b>13. Language (Idioma)</b>	<b>64</b>
3.3 Voicemail	57	<b>14. Location</b>	<b>65</b>
3.4 Messages	57	<b>15. Reset/Delete</b>	<b>65</b>
3.5 Alarm/Calendar	57	15.1 Reset Settings	65
<b>4. Vibration</b>	<b>58</b>	15.2 Reset Phone	66
<b>5. Text Entry</b>	<b>58</b>	15.3 Delete Stuff	66
<b>6. Phone Info</b>	<b>59</b>	15.4 Change Lock Code	67



<b>Safety</b>	<b>68</b>		
<b>TIA Safety Information</b>	<b>68</b>		
Exposure to Radio Frequency Signal	68		
Antenna Care	68		
Phone Operation	68		
Tips on Efficient Operation	68		
Driving	69		
Electronic Devices	69		
Pacemakers	69		
Persons with pacemakers	69		
Hearing Aids	70		
Other Medical Devices	70		
Health Care Facilities	70		
Vehicles	70		
Posted Facilities	70		
Aircraft	70		
Blasting Areas	70		
Potentially Explosive Atmosphere	70		
For Vehicles Equipped with an Air Bag	71		
<b>Safety Information</b>	<b>71</b>		
Charger and Adapter Safety	71		
Battery Information and Care	72		
Explosion, Shock, and Fire Hazards	72		
General Notice	73		
<b>Warning! Important safety information</b>	<b>74</b>		
Avoiding hearing damage	74		
		Using your phone safely	75
		Using headsets safely	75
		<b>FDA Consumer Update</b>	<b>75</b>
		<b>10 Driver Safety Tips</b>	<b>83</b>
		<b>Consumer Information on SAR</b>	<b>85</b>
		<b>FCC Hearing-Aid Compatibility (HAC) Regulations for Wireless Devices</b>	<b>87</b>
		<b>Accessories</b>	<b>91</b>
		<b>Limited Warranty Statement</b>	<b>92</b>
		<b>Index</b>	<b>95</b>

Some content in this user guide may differ from your phone depending on the phone software. Features and specifications are subject to change without prior notice.

# Welcome

Thank you for choosing the **Rumor Touch** mobile phone designed to operate with the latest digital mobile communication technology, Code Division Multiple Access (CDMA). Along with the many advanced features of the CDMA system, such as greatly enhanced voice clarity, this compact phone offers:

- Music capability and microSD™ card slot.
- Significantly enhanced voice clarity.
- Slim and sleek design with internal antenna (Internal antenna described as antenna throughout this user guide).
- Large, easy-to-read, 9-line backlit LCD with status icons.
- Paging, messaging, voicemail, and caller ID.
- 8 physical keys, a Touch Screen and a full QWERTY keypad.
- Speakerphone feature.
- 2.0 Megapixel camera.

- Menu-driven interface with prompts for easy operation and configuration.
- Any key answer, auto answer, auto retry, one-touch and speed dialing with 99 memory locations.
- Bilingual (English and Spanish) capabilities.
- Bluetooth® wireless technology.

## Note

The Bluetooth® word mark and logos are owned by Bluetooth SIG, Inc. and any use of such marks by LG Electronics is under license. Other trademarks and trade names are those of their respective owners.

# Technical Details

## Important Information

This user's guide provides important information on the use and operation of your phone. Please read all the information

carefully prior to using the phone for the best performance and to prevent any damage to or misuse of the phone. Any unapproved changes or modifications will void your warranty.

CDMA Standard	Designator	Description
<b>Basic Air Interface</b>	TIA/EIA-95A TSB-74 ANSI J-STD-008 TIA/EIA-IS2000	CDMA Dual-Mode Air Interface 14.4kbps radio link protocol and inter-band operations IS-95 adapted for PCS frequency band CDMA2000 1xRTT Air Interface
<b>Network</b>	TIA/EIA/IS-634 TIA/EIA/IS/651 TIA/EIA/IS-41 -C TIA/EIA/IS-124	MAS-BS PCSC-RS Intersystem operations Non-signaling data comm.
<b>Service</b>	TIA/EIA/IS-96-B TIA/EIA/IS-637 TIA/EIA/IS-657 IS-801 TIA/EIA/IS-707-A	Speech CODEC Short Message Service Packet Data Position Determination Service (gpsOne) High Speed Packet Data
<b>1x EV-DO Related interface</b>	TIA/EIA/IS-856 TIA/EIA/IS-878  TIA/EIA/IS-866  TIA/EIA/IS-890	CDMA2000 High Rate Packet Data Air Interface 1xEV-DO Inter-Operability Specification for CDMA2000 Access Network Interfaces  Recommended Minimum Performance Standards for CDMA2000 High Rate Packet Data Access Terminal Test Application Specification (TAS) for High Rate Packet Data Air Interface

# Technical Details

## FCC Part 15 Class B Compliance

This device and its accessories comply with part 15 of FCC rules. Operation is subject to the following two conditions: (1) This device and its accessories may not cause harmful interference, and (2) this device and its accessories must accept any interference received, including interference that causes undesired operation.

## Technical Details

The **Rumor Touch** is an all digital phone that operates on both Code Division Multiple Access (CDMA) frequencies: Cellular services at 800 MHz and Personal Communication Services (PCS) at 1.9 GHz.

CDMA technology uses a feature called DSSS (Direct Sequence Spread Spectrum) that enables the phone to keep communication from being crossed and to use one frequency channel by multiple users in the same specific area. This results in a 10-fold capacity increase when compared with analog mode. In addition, features such as soft / softer handoff, hard handoff, and dynamic RF power control technologies combine to reduce call interruptions.

The Cellular and PCS CDMA networks consist of MSO (Mobile Switching Office), BSC (Base Station Controller), BTS (Base Station Transmission System), and MS (Mobile Station).

\* TSB-74: Protocol between an IS-95A system and ANSI J-STD-008

Its battery life is twice as long as IS-95. High-speed data transmission is also possible.

The following tab lists some major CDMA standards.

## FCC RF Exposure Information

**WARNING! Read this information before operating the phone.**

In August 1996, the Federal Communications Commission (FCC) of the United States, with its action in Report and Order FCC 96-326, adopted an updated safety standard for human exposure to Radio Frequency (RF) electromagnetic energy emitted by FCC regulated transmitters. Those guidelines are consistent with the safety standard previously set by both U.S. and

international standards bodies. The design of this phone complies with the FCC guidelines and these international standards.

### **Bodily Contact During Operation**

This device was tested for typical use with the back of the phone kept 0.79 inches (2.0 cm) from the body. To comply with FCC RF exposure requirements, a minimum separation distance of 0.79 inches (2.0 cm) must be maintained between the user's body and the back of the phone, including the antenna, whether extended or retracted. Third-party belt-clips, holsters, and similar accessories containing metallic components should not be used. Avoid the use of accessories that cannot maintain 0.79 inches (2.0 cm) distance between the user's body and the back of the phone and have not been tested for compliance with FCC RF exposure limits.

### **the Vehicle-Mounted External Antenna (Optional, if available.)**

To satisfy FCC RF exposure requirements, keep 8 inches (20 cm) between the user / bystander and the Vehicle-Mounted External Antenna. For more information about RF exposure, visit the FCC website at [www.fcc.gov](http://www.fcc.gov).

### **FCC Notice and Cautions**

This device and its accessories comply with part 15 of FCC rules. Operation is subject to the following two conditions: (1) This device and its accessories may not cause harmful interference, and (2) this device and its accessories must accept any interference received, including interference that causes undesired operation.

Any changes or modifications not expressly approved in this user guide could void your warranty for this equipment. Use only the supplied antenna. Use of unauthorized antennas (or modifications to the antenna) could impair call quality, damage the phone, void your warranty and/or violate FCC regulations.

# Technical Details

Don't use the phone with a damaged antenna. A damaged antenna could cause a minor skin burn. Contact your local dealer for a replacement antenna.

## Caution

Use only the supplied and approved antenna. Use of unauthorized antennas or modifications could impair call quality, damage the phone, void your warranty and/or result in violation of FCC regulations. Do not use the phone with a damaged antenna. If a damaged antenna comes into contact with the skin a minor burn may result. Contact your local dealer for a replacement antenna.

## Part 15.21 statement

Change or Modifications that are not expressly approved by the manufacturer could void the user's authority to operate the equipment.

## Part 15.19 statement

This device and its accessories comply with part 15 of FCC rules. Operation is subject to the following two conditions:


- (1) This device & its accessories may not cause harmful interference.
- (2) This device & its accessories must accept any interference received, including interference that may cause undesired operation.

**Part 15.105 statement**

This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:


- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

# Phone Overview




- 1. Status Light** Indicates incoming calls, new messages, or other events by blinking. It is red while charging and turns green when charging is completed.
- 2. Earpiece** Lets you hear the caller and automated prompts.
- 3. Slide** Slide open to access the QWERTY keyboard.
- 4. Touch Screen** Displays all the information needed to operate your phone, such as the call status, the Contacts list, the date and time, and the signal and battery strength.
- 5. Back Key** Returns you to the previous menu when in a sub-menu. This key also allows you to return to the previous screen in a data session.
- 6. Home Key** Lets you go back to Home screen in any menu display. To go back to standby mode, press this key again.
- 7. Talk Key** Brings the dial pad on the screen. Hold down to activate Voice Command while in standby mode.
- 8. Charger Port** Connects the phone to the battery charger or other available accessories.
- 9. QWERTY Keyboard** Lets you enter numbers, letters, and characters. Press number keys for speed dialing.
- 10. Microphone** Allows other callers to hear you clearly when you are speaking to them.
- 11. Speaker** lets you hear the different ringers and sounds. You can mute the ringer when receiving incoming calls by touching. The speaker also lets you hear the caller's voice when in speakerphone mode.
- 12. Camera Lens** Used for picture taking and video recording. Keep clean for optimal performance.



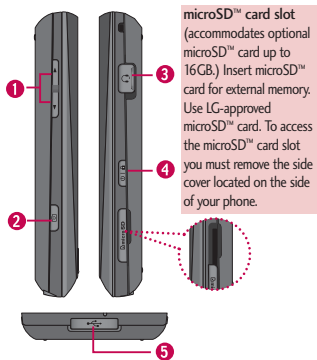

1. **Volume Button** allows you to adjust the ringer volume or adjust the voice volume during a call.
2. **Camera Button** lets you activate the camera and camcorder and take pictures and videos.
3. **Headset Jack** allows you to plug in either a stereo headset or an optional headset for convenient, hands-free conversations. **CAUTION!** Inserting an accessory into the incorrect jack may damage the phone.
4. **Power Button** lets you lock the phone. You can only unlock the phone from the main interface by moving the toggle left or right.
5. **Charger/Accessory Jack** allows you to connect the phone charger or an optional USB cable. **CAUTION!** Inserting an accessory into the incorrect jack may damage the phone.

## How to Unlock

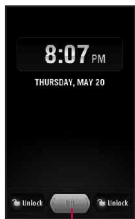


Slide the toggle either right or left to unlock.

## Touch Sensitive Soft Keys



1. Make sure your hands are clean and dry. Remove moisture from the surface of your hands. Don't use the touch keys in a humid environment.
2. Touch key sensors are sensitive to your light touch. You don't need to press them forcefully to use them. Protect your phone from severe impact because touch key sensors may become damaged from harsh use.

# Phone Overview

3. Use the tip of your finger to touch the center of a touch key. If you touch off-center it may activate the nearby function instead.
4. The touch feedback level can be adjusted to your preference.
5. When the LCD screen is off, touch keys are deactivated. Press the Unlock Key (  ) to turn on the Touch Screen and touch keys.
6. The Screen Lock feature protects against accidental key presses during phone calls with the flip closed.
7. Keep metal and other conductive material away from the surface of touch keys because contact may cause electronic interference.

## WARNING

- Do not put heavy objects on the Touch Screen.
- Do not sit on your phone because it may damage the Touch Screen.
- Do not drag or scratch your phone with any sharp materials.
- Do not keep your phone in extreme conditions (places that are too humid, hot, or cold).
- Keep chemicals away from your phone because they may change the cosmetic or functional features of your phone.

The Touch Screen is a great way to interact with the **Rumor Touch's** software. Take a little time to become accustomed to using it. If it doesn't react as you expect, you can adjust the Touch Screen calibration.

**TIP** Keep in mind that the smaller the text appears on the screen, the smaller the area of touch activation. Try zooming the screen in, if available, to increase the touch area.

## Standby Mode Home Screens

Customize your Touch Screen to have instant access to features you want to keep as close as a single finger touch.


The **Rumor Touch** has four Standby Mode Home Screens for quick, direct access to several frequently used device features.

**Main:** Displays your Clock and/or Calendar. Customize your preferences through the Display Settings menu.

**Contacts:** Displays favorite Contacts. Touch the contact and make call, send message, view contact or to delete it.

**Multimedia:** Displays favorite images, music and videos so you can show them off at a moment's notice without having to search.

Set the features and items you want on each home screen and even display different backgrounds for each one.

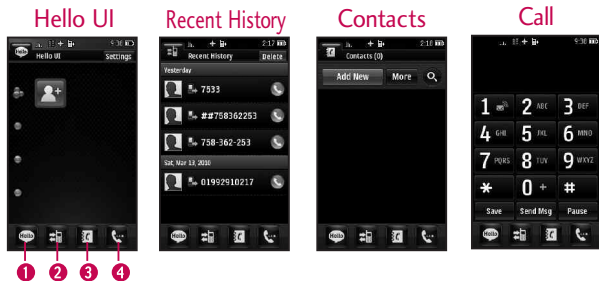

1. **Hello** Add your favorite contacts to groups that you can access quickly with a few keystrokes.
2. **Recent History** Displays the recent call histories.
3. **Contacts** Displays your Contact List.
4. **Call** Displays the Dialing Touchpad.

# Menus Overview

## Messaging

Voice mail  
Send Message  
Messages  
Virgin Alerts  
Email + IM  
Settings

## Maps

## Photos + Videos

Camera  
Camcorder  
My Photos + Videos  
Other Settings

## My Stuff

Application Manager  
Games  
Ringers  
Wallpapers  
Applications  
Ringbacktones

## Social Networking

Connect  
Facebook  
MySpace  
Twitter

## Web

Downloads  
Surf the Web  
Search  
MyPix Web Album

## My Account


Top-Up  
Balance + Usage  
Virgin Alerts  
Service Settings

## Media Player

Playlist  
Artists  
All Songs  
Albums  
Genres

## Tools

Clock  
Alarm  
World Clock  
Stopwatch  
Calendar  
Bluetooth  
Bluetooth  
Visibility  
Add New  
Trusted Devices  
My Bluetooth Info  
Help  
Mass Storage  
Connect To PC  
File Manager  
Format Memory Card  
Memory Info  
Voice Service  
Voice Command  
Voice Reader  
Voice Memo  
Settings + Info  
Calculator  
Calculator

Ez Tip Calculator
Unit Converter
Notepad
Document Viewer
Quick Guide
 <b>Settings</b>
Display
Wallpaper
Brightness
Backlight
Picture ID
Font Size
Power Save Mode
Whisper Notification
Touch Calibration
Volume
Incoming Ringer
Playback Volume
Power Up/Down
Key Beeps
Ringers
Incoming Calls
Call Alerts
Voicemail

Messages
Alarm/Calendar
Vibration
Incoming Calls
Voicemail
Messages
Alarm/Calendar
Touch Vibration
Text Entry
Word Complete
Next Word Complete
Word Scan
Phone Info
Phone Number
Activation
Icon Glossary
Memory Info
Battery Status
Version
Advanced
Lock Phone
Lock Now
Change Lock Code
Parental Controls
On/Off

Change Parental Control Code
Restriction
Call Setup
Auto-Answer
Abbreviated Dialing
Contacts Match
TTY
Airplane/Music Mode
Headset Mode
Language (Idioma)
Location
Reset/Delete
Reset Settings
Reset Phone
Delete Stuff
Change Lock Code

# Getting Started with Your Phone

## The Battery

### Note

It is important to fully charge the battery before initial use of the phone.

The phone comes with a rechargeable battery. Keep the battery charged while not in use in order to maximize talk and standby time. The battery charge level is shown at the top of the LCD screen.

## Installing the Battery

Insert the bottom of the battery into the opening on the back of the phone, then push the battery down until it snaps into place.


## Removing the Battery

Turn power off. Slide the battery cover up, then pull the bottom side of the battery up to remove it.

## Charging the Battery

To use the charger provided with your phone:

**Warning!** Use only the charger provided with the phone. Using any charger other than the one included with the **Rumor Touch** may damage your phone or battery.

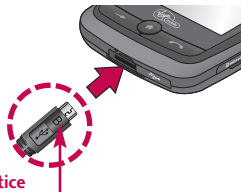

### Notice

Please make sure that the 'B' Side faces up before inserting a charger or data cable into the charger port of your phone.


1. Plug the end of the adapter into the phone's charger port and the other end into an electrical outlet.
2. The charge time varies depending upon the battery level.

## Battery Charge Level

The battery charge level is shown at the top right of the LCD screen. When the battery charge level becomes low, the low battery sensor alerts you in three ways: sounding an audible tone, blinking the battery icon, and displaying a warning message. If the battery charge level becomes exceedingly low, the phone automatically switches off and any function in progress is not saved.

## Turning the Phone On and Off


### Turning the Phone On

1. Install a charged battery or connect the phone to an external power source.
2. Press  for about 3 seconds until the LCD screen lights up.





### Turning the Phone Off

1. Press and hold  until the display turns off.

## Signal Strength

Call quality depends on the signal strength in your area. The signal strength is indicated on the screen as the number of bars next to the signal strength icon . The more bars, the better the signal strength. If the signal quality is poor, move to an open area. If you are in a building, the reception may be better near a window.

## Screen Icons

To see the icon glossary, touch  Home->  Menu->  Settings->  Phone Info-> Icon Glossary on your phone.

# Getting Started with Your Phone

## Making Calls

Press the Talk Key  to access dialing options.







Calling Options Screen






Calling Options Screen  
(with QWERTY Open)










1. Press  and enter a phone number using the dialpad or the Qwerty keypad. (If you make a mistake while dialing, touch  or press  to erase the numbers.)
2. Touch  or press  to call the entered number.
3. To end the call, touch and drag the toggle key  to the left.

**Note:** To redial other recent numbers, press , and touch , the desired number, and .


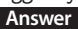
## Correcting Dialing Mistakes

If you make a mistake while dialing a number, press  or touch  once to erase the last digit entered, or hold down  or touch and hold  for at least 2 seconds to go to standby mode.

## Redialing Calls

1. Press  twice to redial the last number you dialed. The last 150 numbers (received, dialed and missed) are stored in the call history list and you can also select any of these to redial.


## Receiving Calls

1. Make sure your phone is on. (If your phone is off, incoming calls go to voicemail.)
2. Touch and drag the toggle key  to the left or touch .

# Quick Access to Convenient Features

## Lock Mode

When your phone is locked, you can only receive incoming calls or make calls to 911.


1. Touch  > **Main Menu** > (slide the screen up) > **Settings** > **Lock Phone** and enter your lock code.

Please note that you will be asked if you want to change or keep the default lock code the first time you access this menu.

2. Touch **Lock Now**.

## Volume Quick Adjustment

Adjust your phone's volume settings to suit your needs and your environment.

1. Touch  > **Main Menu** > (slide the screen up) > **Settings** > **Volume**.
2. Select **Incoming Ringer**, **Playback Volume**, or **Key Beeps**.
3. Touch a level bar to set the volume, or select one of the other options (if they are available).



4. For **Incoming Ringer**, you have the option of the **Vibrate** setting. Toggle **On** or **Off**, according to your preference.

5. Touch **Done**.

**Tip:** You can adjust the ringtone volume in any screen (or the earpiece volume during a call) by using the volume keys on the left side of your phone.

## Call Waiting

Your cellular service may offer call waiting. While a call is in progress, a beep indicates another incoming call. When call waiting is enabled, you may put the active call on hold while you answer the other incoming call. Check with your cellular service provider for information about this function.

1. Press  to receive a waiting call.
2. Press  again to switch between calls.

## Caller ID

Caller ID displays the phone number or name of the incoming call. If the caller's identity is stored in Contacts, the name will appear along with the phone number. Check with Virgin Mobile to ensure they offer this feature.

## Speed Dialing

Speed dialing is a convenient feature that allows you to make phone calls quickly. A number key can be assigned to a specific phone number. By pressing and holding down a number key, your phone will recall the phone number associated from the Contact List and display it briefly while simultaneously dialing that phone number for you. Speed Dial Number 1 is set to voicemailbox by default and is unchangeable.

## Dialing Single Digit Speed Dials (from 2 to 9)

Press and hold the Speed Dial number.

OR


Enter the Speed Dial number and press



## Dialing Double Digit Speed Dials (from 10 to 99)

Press the first digit and then press and hold the key of the second digit.

OR

Enter the first and second digits and press .

# Entering and Editing Information/ Contacts in Your Phone's Memory

## Text Input

Each time you touch a data entry field, the Touch Screen automatically displays Touch Keys allowing you to change the input. For example, in a name field, alphabet Touch Keys appear, but you can touch to select and enter numbers instead.



ENTER TEXT Options.  
Insert/ Text Format/ Save  
To/ Priority Level/ Callback  
Number/ Copy Text/ Paste

Touch to clear text.

Touch to change the text  
input, 123 or special  
characters.

Handwriting input  
mode Key.

Back key

## The Basics of Storing Contacts Entries

1. Open the slide to reveal the keypad and enter the phone number you want to save (up to 40 digits).
2. Touch **Save** and select either **New Entry** or **Existing Entry** on the pop-up screen.
3. Touch a Phone Label.




**Mobile, Home, Work, Pager, Fax, Other**

Note : Use Existing Entry to add another phone number to a contact already stored in memory.

4. Touch the Name field and enter a name for the phone number (up to 64 characters). Then touch **Done** and **Done**. A confirmation message is displayed briefly.

Add your favorite contacts to groups that you can access quickly with a few keystrokes. You can create up to four groups with six members in each group.

## Customizing Hello UI

1. From Idle mode, press  and touch .
2. Touch  to add a contact.
3. Touch each contact you want to assign to the group (multiple selections are supported).
4. After making your selections, touch **Done**.

### To change to a seasonal theme:

1. While in the Hello UI screen, touch **Settings** at the top right of the screen.
2. Slide the Theme button switch to On.
3. Touch **Done**.

### Hello UI Contacts Options:

- Touch a Contact on Hello UI.




# Using Phone Menus

## Messaging

The **Rumor Touch** can store up to 1000 messages and notifications (including a maximum 50 Inbox). The information stored in the message is determined by phone model and service capability. Other limits such as available characters per message may exist, please check with Virgin Mobile for system features and capabilities.

### 1. Voicemail

Your phone automatically transfers all unanswered calls to your voicemail, even if your phone is in use or turned off. You should set up your Sprint Voicemail and personal greeting as soon as your phone is activated. Always use a passcode to protect against unauthorized access.

1. From home screen, press  to display the dial pad.
2. Touch and hold .
3. Follow the system prompts to:
  - Create your passcode.
  - Record your name announcement.


### 2. Send Message

With your phone's messaging features, you can send and receive instant text messages (SMS), or multimedia messages (MMS) that can include video and audio, between your wireless phone and another messaging-ready phone. When you receive a new message, it will automatically display a notification on your phone's screen.

In addition, text messaging includes a variety of preset messages, such as "Call me" and "I have to work late" that make composing messages fast and easy. Use your phone to customize your own preset messages (up to 100 characters).

Note: See your service plan for applicable charges for text messaging.

#### Composing Text/Picture Messages

1. Slide the keyboard out and touch Send Message.
  - or –
  - Touch  > Send Message.

2. Select an entry method:
  - New Addr to use the keypad to enter a wireless phone number or email address of the recipient directly.
  - Go to Contacts to select a recipient from your Contacts. (Qualifying Contacts entries must contain a wireless phone number or an email address.)
3. Touch **Done** when you have finished entering recipients. (You may include up to 40 recipients per message.)
4. Enter a message or use the preset messages, symbols, smileys, or emoticons.
  - To type a message, use your keyboard or touch keypad to enter your message.
  - To use a preset message, touch Preset Msgs in the upper right corner, and then touch a message to enter.
  - To enter a symbol, an emoticon, or a smiley:
    - (On the touch keypad) touch **Abc** and select Symbols, Emoticons, or Smileys. Touch a desired symbol, emoticon, or smiley and **Done**.
    - or –
    - (On the keyboard) press **SYM** or , and touch a desired symbol or emoticon.
5. To attach attachments, touch **Add Attachment**.
6. Review your message and touch **Send** (You may select additional messaging options by touching **More** to add subject, set the message priority urgent, set the callback number, or save it as draft.

Note: If an attachment or subject is added to a text message, it will be automatically convert to Picture Message and you will be charged accordingly.

# Messaging

## 3. Messages

To read an SMS/MMS message:

When you receive a text/picture message, you will see a notify bubble on your phone's screen. Touch the bubble to see the entire message.

To reply to a text/picture message:

1. While the message is open, touch **Reply**.
2. Enter a message or use the preset messages, symbols, smileys, or emoticons.
  - To type a message, use your keyboard or touch keypad to enter your message.
  - To use a preset message, touch Preset Msgs in the upper right corner, and then touch a message to enter.
  - To enter a symbol, an emoticon, or a smiley:
  - On the touch keyboard touch **Abc** and select Symbols, Emoticons, or Smileys. Touch a desired symbol, emoticon and **Done**.

3. To attach attachments, touch

**Add Attachment**.

4. Review your message and touch

**Send**.




## 4. Virgin Alerts

Virgin Alerts are free system messages that provide information from time to time to let you know about your account.

1. Touch  >  Main Menu >  Messaging > Virgin Alerts.

## 5. Email + IM

Allows you to receive and send Email and IM messages from the most popular portals (Yahoo!, AOL, and Google). Please note that you may need to download a Mobile Email application first.

1. Touch  >  Main Menu >  Messaging > Email + IM.
2. Follow the directions on the screen to setup your Email or IM provider (Yahoo!, AOL/AIM, and Gmail).



## 6. Settings




Your phone's advanced messaging capabilities let you send and receive many different kinds of text messages without placing a voice call.

Messaging settings allow you to decide how you would like to be notified of new messages, to create a signature with each sent message, and to create your own preset messages.

### Managing Preset Messages

Your phone is loaded with 20 auto text to help make sending text messages easier. Customize or delete these messages, such as “Where are you?,” “Let’s get lunch,” and “Meet me at” to suit your needs, or add your own messages to the list.

To edit or delete a auto text:

1. Touch  >  Main Menu >   
Messaging > Settings > auto text. (You will see the list of auto text)
2. Touch a message you want to edit or delete.

3. Touch **Edit**, edit the message (see “Entering Text” on page 28), and touch **Save**.

– or –

- Touch **Delete** to delete the message. (Touch Cancel to cancel the deletion.)

Note: To delete multiple messages, touch **Delete** on the top right of the screen when the list of preset messages displays. Then select Delete Multiple or Delete All.

To add a new auto text:

1. Touch > Main Menu > Messaging > Settings > auto text. (You will see the list of preset messages.)
2. To add a new message, touch **Add New**.
3. Enter your message and touch **Save**. (Your new message will be added to the beginning of the list.)

### Adding a Customized Signature




Add a customized signature to each message you send.

# Messaging/ Maps/ Photos + Videos

1. Touch > Main Menu > Messaging > Settings > Signature.
2. Select Custom. (If you do not wish to attach a signature, select None.)
3. Enter a signature and touch **Save**.

## Maps




Download the latest applications at [www.virginmobileusa.com](http://www.virginmobileusa.com) or directly from your phone using Get More Apps.



1. Touch  >  Main Menu >  Maps.
2. Follow the directions on the screen to setup Mobile Navigator.

## Photos + Videos




### 1. Camera

Taking pictures with your phone's built-in camera is as simple as choosing a subject, pointing the lens, and pressing a button.

1. Touch  >  Main Menu >  Photos + Videos > Camera to activate camera mode. (Additional camera options are available through the camera mode options menu. See “Camera Mode Options” on page 83 for more information.)

Shortcut: To activate camera mode, you can also press the side camera button () twice, or press and hold the side camera button (). (See illustration on page 11.)

Camera options are:

-  Zoom
-  Brightness
-  Color Normal/ Black & White/ Negative/ Sepia

-  Self Timer Off/ 3 Seconds/ 5 Seconds/ 10 Seconds

-  More

**Color Tone** Normal/ Black & White/ Negative/ Sepia

**Image Controls** Brightness (Auto/ Manual)/ White Balance (Auto/ Tungsten/ Fluorescent/ Sunny/ Cloudy/ Manual)

## Fun Frames

**Settings** Resolution (2M/ High/ Med/ Low)  
Quality (Fine/ Normal/ Economy)  
shutter sound (Shutter/ Say Cheese/ Ready 123/ Smile/ Off)  
Status Bar (On/ Off)  
Night Mode (On/ Off)

**Self Timer** Off/ 5 Seconds/ 10 Seconds

**Zoom**

**Go to Album**

**Camcorder Mode** Video Mail/ Long Video

**Cancel**

- Using the phone's display screen as a viewfinder, aim the camera lens at your subject.
- Touch or press the side camera button until the shutter sounds. (Your phone automatically saves the picture to the default storage area.)
- To return to camera mode to take another picture, touch **Cancel**, or the side camera button.




4. Touch for more options:

- Send to send your picture in a message. (See page 89 for details.)
- Assign to assign the picture as a:
  - Screen Saver to use the picture as a screen saver.
  - Picture ID to display the picture for all incoming calls.
- Delete to delete the picture you just took.
- Go to Album to go to the In Phone folder or Memory Card folder (if available) to review your saved pictures.
- Print to print the pictures. Use a PictBridge-enabled printer (see page 91), or use a Bluetooth-enabled printer (see page 92).
- Take New Picture to return to camera mode to take another picture.

# Photos + Videos

## 2. Camcorder

In addition to taking pictures, you can record, view, and send videos with your phone's built-in video camera.

1. Touch  >  **Main Menu** >   
**Photos + Videos** > **Camcorder**. to activate video mode. (Additional video options are available through the video mode options menu. See “Video Mode Options” on page 86.)
2. Select Video Mail or Long Video.

Note: Video Mail can be at most 30 seconds in length or 600KB in size, otherwise, they cannot be uploaded, sent, or posted. but the length of a Long Video is dependent on both the quality settings and storage type used (phone or memory card).

Video camera options are:



**Zoom**



**Brightness**



**Color** Normal/ Black & White/  
Negative/ Sepia



**Self Timer** Off/ 5 Seconds/ 10  
Seconds



**More**

**Color Tone** Normal/ Black & White/  
Negative/ Sepia

**Image Controls** Brightness (Auto/  
Manual)/ White Balance (Auto/ Tungsten/  
Fluorescent/ Sunny/ Cloudy/ Manual)

**Settings** Resolution (QVGA/ Med/ Low)  
Quality (Fine/ Normal/ Economy)  
Cue Sound (Cue 1/ Cue 2/ Cue  
3/ Off)  
Status Bar (On/ Off)  
Video Length (Video mail/ Long  
Video)

**Self Timer** Off/ 5 Seconds/ 10 Seconds

**Zoom**

**Go to Album**

**Camera Mode**

**Cancel**

3. Using the phone's display screen as a viewfinder, aim the camera lens at your subject.
4. Touch **RECORD**, or press the side camera button.
  - To pause and then resume the

recording, press touch **PAUSE** or **RESUME**.

5. Touch **DONE**, or press the side camera button to stop recording. (Your phone automatically saves the video in your default storage area.)
6. Touch **More** for more options:
  - **Send** (only for Video Mail videos) to send the video. (See page 87 for details.)
  - Play to play the video that was just recorded.
  - Assign to assign the video as a ringer.
  - Take New Video to return to camcorder mode.
  - Delete to delete the video that was just recorded.
  - Review My Videos to go to the In Phone folder or Memory Card folder (if available) to review your saved videos.
  - Cancel to close the options menu.

### 3. My Photos + Videos




Your phone's picture and video storage area is called My Photos & Videos. There are two folders in My Photos & Videos:

- In Phone
- Memory Card

#### In Phone Folder

Your phone's internal storage area is called the In Phone folder. From the In Phone folder, you can view all the pictures and videos you have stored there, delete files, and access additional options.

To review your stored pictures and videos in the In Phone folder:




1. Touch  >  Main Menu >  Photos + Videos > My Photos + Videos > In Phone.
2. Scroll through the pictures and videos and touch a picture or video to view it.

# Photos + Videos

## microSD Picture and Video Folders

You can save pictures and videos directly to the microSD card using your phone's pictures and videos settings. You can store and manage a maximum of 1,000 pictures in each folder on the microSD card.




To review your stored pictures and videos on the microSD card:

1. Touch  >  Main Menu >   
Photos + Videos > My Photos + Videos > Memory Card.
2. Scroll through the pictures and videos and touch a picture or video to view it.

## 4. Other Settings

The Other Settings menu allows you to view and configure your account information.

To access the settings and info menu:

1. Touch  >  Main Menu >   
Photos + Videos > Other Settings.
2. Touch an option:

**Auto-Save to** to select where to save the pictures and videos. (Memory Card or In Phone)

**Status Bar** to choose whether to display the status bar in preview mode.



**Location** to choose whether to insert location info when you take a picture.

**Slideshow Interval** to select the time each picture will stay onscreen in a slideshow.

# My Stuff/ Social Networking

## My Stuff

Allows you to view images, videos, audio files and documents saved in the phone.

1. Touch  >  Main Menu >  My Stuff.
2. Touch Application Manager/ Games/ Ringers/ Wallpapers/ Applications/ Ringbacktones.

## Social Networking

Social network sites such as Facebook, twitter and LinkedIn are our main methods to share information interest, news, photos and video.

1. Touch  >  Main Menu >  Social Networking.

### Connect

Link to popular networking sites right from your Virgin Mobile phone. Connect with friends on Facebook, MySpace, YouTube, Flickr, Twitter, and more. Get updates, alerts, comments, and invites delivered to your phone. It's all of your social connections, all in one place.

### Facebook

Although the home page offers a broad and convenient array of sites and services for you to browse, not all sites are represented, and certain functions, such as going directly to specific websites, are not available. For these and other functions, you will need to use the browser menu. The browser menu offers additional options to expand your use of the Web on your phone.

### Twitter

### MySpace

Get MySpace on your mobile and never more than a click away from the site. The Myspace for mobile includes the following features:

- Get activities updates from your friends.
- Get activities updates from your friends.
- Alert all your friends at once.
- Get mobile text alerts when you receive messages, comments and friend requests.

# Social Networking/ Web

- Update your status with your phone.
- Share what you're up to with
- Blogs
- MySpace IM
- Messages
- Forums

## Twitter

Twitter is a social networking and microblogging service that allows you answer the question, "What are you doing?" by sending short text messages 140 characters in length, called "tweets", to your friends, or followers.

## Web

Access your favorite sites right from phone. Click on one of our featured links, do a quick search, or enter a URL of your own.

1. Touch  >  Main Menu >  Web.

## Downloads

Everything you need to know while you're on the go.

## Ending a Web Session

End a Web session by touching **CLOSE**.

## Navigating Through the Browser Links embedded in content

Select items or links by touching it on the screen.

## Scrolling / Fast Scrolling

Use your fingertip to scroll the screen contents in the direction you move your finger.



How quickly you move your finger determines the quickness of the scroll.





## Panning

Panning is when you move around the screen content by pressing down lightly and dragging the screen with your fingertip (or pen-like stylus) to the area you want to see.



## Returning to Home Page

Touch the Command bar icon  **TOOLBAR**, then touch the Home icon .

## Search

Touch the Command bar icon  **TOOLBAR**, then touch the Home icon .

## Browser Menu Options

Touch the Command bar icon  **TOOLBAR**, then touch the Home icon .

- Font size
- Send this page to...
- Clear private data
- Help

- Advanced (Icon Row/ Page info/ Images on/off / Reset browser/ Turn error logging o / Redirect prompt/ Reset browser setti/ About browser/ Java Scripting)



## My Account

The My Account menu allows you to manage your services. Check your balance and Top-Up here. Additional charges may apply for multiple balance checks in one day. See [www.virginmobileusa.com](http://www.virginmobileusa.com) for pricing details.



1. Touch  >  Main Menu >  My Account.

## Email + IM

Your phone's email application lets you access and manage multiple email accounts simultaneously in one convenient location.

1. Touch  >  Main Menu > Messaging > Email + IM. (The Email setup wizard will start.)

# My Account

2. Select an email provider (such as AOL® Mail, AIM® Mail, Hotmail, Yahoo!® Mail, or Gmail®) and press the right softkey.
  3. Follow the setup wizard instructions to enter the required sign-up information. Touch ACCEPT or CONTINUE if you are prompted to accept any license agreements or disclaimers.
  4. If applicable, read the notice regarding Mail Push. If you would like to enable Mail Push, touch Yes. If another notice appears, review it and touch Yes again to enable Mail Push.
- ## Accessing Email
- Using Email on your phone is even easier than using multiple email accounts on your computer. Launch the application for instant access to all your accounts.
1. Once you have set up your Email, touch  >  **Main Menu > Messaging > Email** to launch the application. (You will see your default account inbox.)
  2. Use your keyboard and touch the corresponding keys to read, manage, and reply to your email messages.
    - Touch **Menu** to select messaging options, such as **Delete**, **Check Mail**, **Reply to**, **Mark as**, or **Other**.
    - Touch **Menu > Other > Compose** to create new messages.
    - To view a different email account, touch the drop-down menu to the left of the **Inbox** tab at the top of the screen and then select an account. You can also touch the **Home** tab at the top of the screen and select an available account from there.
    - To add a new account, touch the **Home** tab at the top of the screen, and then select **Add Account**. You can also touch the drop-down menu to the left of the **Inbox** tab at the top of the screen and select **Add Account**.

## Media Player

This not only gives you access to great music, it also gives you a place to listen to and organize your music library.

### Accessing the Music Player




1. From the Sprint Music Store opening page, touch the Player tab.
2. From the Player display, select an option:
  - **Playlists** to select or create a customized playlist you've created to organize your music.
  - **Artists** to filter the list of available music by their Artist information.
  - **All Songs** to browse through all of your downloaded music, including music purchased from the Sprint Music Store and any additional songs you have loaded onto your microSD card from your computer.
3. Once you've displayed a list of songs, you can browse through your available titles by Song, Artist, or Genre to select a specific song.
  - To play a song, touch it and PLAY.
  - To listen to a playlist, touch it twice to open the playlist, and then touch a song and PLAY to begin playing from the selected song. (You can also highlight the playlist and use the softkey menu to begin listening.)

## Tools

### 1. Clock

#### 1.1 Alarm

Allows you to set up to ten alarms. At the alarm time, any set alarm will sound and/or vibrate the tone of your choice (depending on your sound settings), and a notification message will be displayed on your screen.

1. Touch  >  Main Menu >  Tool > Clock > Alarm.
2. Touch **Add New**.
3. Slide the alarm switch to On.
4. Touch the time to set a time for the alarm.
  - Touch the digital clock (above the dial) to adjust the clock.




– or –

- Touch and drag the hour and minute hands and then touch AM/PM to select a time, and then touch **Done**.
5. Touch **Repeat** to select a repetition type.
    - Touch **Daily**, **Once**, **Weekly**, **Mon - Fri**, or **Sat+Sun**.
  6. Touch **Sound/Vibration** to select **Always sound & Vibrate**, **Always Sound**, or **Always Vibrate**.
  7. Touch **Alarm Bell** to select a ringer type.
    - Select a ringer menu and touch a ringer.
  8. Touch **Volume** to select a ringer volume.
    - Touch the bar at the volume level you want and then touch **Done**.
  9. Touch **Vibration Type** to select a vibration type.
    - Touch the desired vibration type.
  10. Touch **Vibration Level** to select a vibration level.

- Touch the vibration bar at the level you want and then touch **Done**.
11. Touch **Snooze** to select a snooze interval time.
  - Select **Snooze 5mins**, **Snooze 10mins**, **Snooze 15mins**, **Snooze 20mins**, or **Snooze Off**.
  12. Touch **Save** to set the alarm.

## 1.2 World Clock

To view the time in over 50 different locations:




1. Touch  >  Main Menu >  Tool > Clock > World Clock > Add New.
2. Touch **New City** to display the map.
3. Touch **<** or **>** to scroll through continents and touch **Select** to select the continent. (Cities in the continent will be displayed.)
4. Touch **<** or **>** to scroll through cities and touch **Select**.

– or –

Touch and drag the map to find a city, and touch **Select**.




## 1.3 Stopwatch

Your phone comes with a built-in stopwatch.

1. Touch  >  Main Menu >  Tool > Clock > Stopwatch.
2. Touch **Start** to start stopwatch time.
- While measuring time, touch **Lap** to view lap times.
- Touch **Stop** to stop the stopwatch.

## 2. Calendar

Your Calendar helps organize your time and reminds you of important events.

1. Touch  >  Main Menu >  Tool > Calendar.
2. Touch the day to which you would like to add an event and touch **Add New**. (The current day is the default.)

# Tools

3. Touch **Time** to select a time for the event. Slide the hour, minute, and AM/PM wheel up or down. Touch **End** and then set the end time and touch **Done**.
  - For an all-day event, touch **All Day**.
4. Touch **Content** to enter a notes about the event.
  - Enter a note or memo and touch **Save**. (See “Entering Text” on page 28.)
5. Touch **Related person** to select contacts related to the event.
  - After selecting related persons in the Contacts list touch **Done**.
6. Touch **Alarm** to set an alarm time.
  - Select None, On time, 5 minutes, 10 minutes, 1 hour, 1 day, or 2 days and touch **Done**.
7. Touch **Alarm Bell** to select a ringer type.
  - Select a ringer menu and touch a ringer.
8. Touch **Volume** to select a ringer volume.
  - Touch the bar at the volume level you want and then touch **Done**.
9. Touch **Vibration Type** to select a vibration type.
  - Touch the desired vibration type and then touch **Done**.
10. Touch **Vibration Level** to select a vibration level.
  - Touch the vibration bar at the level you want and then touch **Done**.
11. Touch **Location** to enter a location.
  - Enter the event location and touch **Save**. (See “Entering Text” on page 28.)
12. Touch **Set Repeat** to select a repeating status.
  - Select None, Daily, Mon - Fri, Select Days, Weekly, Monthly, or Yearly and then touch **Done**.
13. Touch **Save** to save the event.




### 3. Bluetooth

Bluetooth is a short-range communications technology that allows you to connect wirelessly to a number of Bluetooth devices, such as headsets and hands-free car kits, and Bluetooth-enabled handhelds, computers, printers, and wireless phones. The Bluetooth communication range is usually up to approximately 30 feet.




#### Bluetooth QD ID B016018

#### Turning Bluetooth On and Off

By default, your device's Bluetooth feature is set to Off. Turning Bluetooth on makes your phone "discoverable" by other in-range Bluetooth devices.

1. Touch  >  Main Menu >  Tool > Bluetooth.
2. Slide the Bluetooth switch to On to enable Bluetooth.

To turn Bluetooth off:

1. Touch  >  Main Menu >  Tool > Bluetooth.
2. Slide the Bluetooth switch to Off to disable Bluetooth.

#### Bluetooth Status Indicators

The following icons show your Bluetooth connection status at a glance:




- Bluetooth is active (Hidden).
- Bluetooth is active (Visible).
- Bluetooth is connected.
- A Bluetooth mono or stereo headset is connected.
- A Bluetooth stereo speaker is connected.

## Bluetooth Settings

You can set up many of the characteristics of your phone's Bluetooth service, including:

- Entering or changing the name your phone uses for Bluetooth communication
- Setting your phone's visibility (or "discoverability") for other Bluetooth devices
- Displaying your phone's Bluetooth address

To access the Bluetooth Settings menu:

1. Touch  >  Main Menu >  Tool > Bluetooth.
2. Ensure that Bluetooth is turned on. (See "To turn Bluetooth on:" on page 94.)
3. Set your Bluetooth options.
  - Select Visibility > Hidden, Visible for 3 min, or Always Visible to set your Bluetooth visibility.
  - Select My Bluetooth Info to display your phone's Bluetooth profiles and address. Touch to rename your phone for Bluetooth.




## Pairing Bluetooth Devices

### Paired Devices

The Bluetooth pairing process allows you to establish trusted connections between your phone and another Bluetooth device. When you pair devices, they share a passkey, allowing for fast, secure connections while bypassing the discovery and authentication process.






## To pair your phone with another Bluetooth device:

1. Touch  >  Main Menu >  Tool > Bluetooth > Add New. (Your phone will display a list of discovered in-range Bluetooth devices.)
2. Touch a device, enter the passkey, and touch **OK**.

Note: Due to different specifications and features of other Bluetooth-compatible devices, display and operations may be different, and functions such as transfer or exchange may not be possible with all Bluetooth-compatible devices.

## Sending Items via Bluetooth

Depending on your paired devices' settings and capabilities, you may be able to send Contacts information using a Bluetooth connection.




1. Touch  >  Main Menu >  Tool > Bluetooth > Trusted Devices.
2. Touch a paired device to transfer to.
3. Touch an item and touch **Done**.

- To select Contacts, pictures, or videos, select the category, scroll through the available items, and touch items to send. When you are finished, touch **Continue** or **Done**.
4. Touch Send to send the item(s).

## 4. Mass Storage

### 4.1 Connect to PC

Allows you to select the PC connection mode for your device.

1. Touch  >  Main Menu >  Tool > Mass Storage > Connect to PC.
2. Touch a setting.  
On/ Off

### 4.2 File Manager




File Manager allows you to manage files such as pictures, videos, music, and applications stored on the microSD™ card.

# Tools

## Accessing File Manager

1. Touch  >  Main Menu >  Tool > Mass Storage > File Manager.

## Opening Files in File Manager

1. Touch  >  Main Menu >  Tool > Mass Storage > File Manager.
2. Touch a folder.
3. Touch a file to open it, if the format is supported.

## File Manager Options

When you open a folder, touch **More**. The following options are available.

**Create New Folder** to create a new folder. Enter a new folder name and touch **Save**. (See “Creating Folders in the microSD Card” on page 79.)

**Move Multiple** to move multiple files.

**Copy Multiple** to copy multiple files.

**Search** to search for a file.

**Assign** to select an image file to

assign it as screen saver or a picture ID, or to assign a music file as a ring tone.

**Rename** to change the name of a file.

**Rename Current Folder** to change the name of the current folder.

**Delete Current Folder** to delete the current folder.

**Delete Multiple** to delete selected multiple files.

**Delete All** to delete all files.

**Folder Info** to display information about the folder such as folder name, location, the number of files, and the number of sub folders.

**File Info** to display information about the file you select, such as file name, location, and the file size.

## 4.3 Format Memory Card


Formatting a microSD card permanently removes all files stored on the card.

1. With the microSD card inserted, touch > Main Menu > (slide the screen up) > Tools > Mass Storage > Format Memory Card. (A warning will be displayed.)
2. If you are sure you wish to remove all the files from your microSD card, touch Yes.

Note: The formatting procedure erases all the data on the microSD card, after which the files CANNOT be retrieved. To prevent the loss of important data, please check the contents before you format the card.

## 4.4 Memory Info

With the microSD card inserted.




1. Touch  >  Main Menu >  Tool > Mass Storage > Memory Info. (The used and available memory space will be displayed.)

## 5. Voice Services

### 5.1 Voice Command

Allows you to make phone calls quickly and easily by voice. Your phone recalls the number from your Contacts, displays it briefly, and then dials it. This menu also includes a feature for those who are driving or blind. It delivers time and date information by voice and allows you to check missed calls, messages and voicemails.




#### 5.1.1 Call [Name][Type]/ [Number]

1. Touch  >  Main Menu >  Tool > Voice Services > Voice Command > Call [Name][Type]/[Number].

#### 5.1.2 Send Msg to [Name][Type]/ [Number]

1. Touch  >  Main Menu >  Tool > Voice Services > Voice Command > Send Msg to [Name][Type]/[Number].




## 5.1.3 Find [Name][Type]

1. Touch  >  Main Menu >  Tool > Voice Services > Voice Command > Find [Name][Type].

## 5.1.4 Go to [menu]

1. Touch  >  Main Menu >  Tool > Voice Services > Voice Command > Go to [menu].

## 5.1.5 Check [Item]

1. Touch  >  Main Menu >  Tool > Voice Services > Voice Command > Check [Item].

## 5.1.6 Voice Command Training

1. Touch  >  Main Menu >  Tool > Voice Services > Voice Command > Voice Command Training.

## 5.1.7 Exit Voice Command

1. Touch  >  Main Menu >  Tool > Voice Services > Voice Command > Exit Voice Command.




## 5.2 Voice Reader

1. Touch  >  Main Menu >  Tool > Voice Services > Voice Reader.

## 5.3 Voice Memo

Use your phone's Voice Services to record brief memos to remind you of important events, phone numbers, or grocery list items.

### 5.3.1 Recording Voice Memos

1. Touch  >  Main Menu >  Tool > Voice Services > Voice Memo.
2. Begin recording after the prompt.

To end the recording of your memo:

Touch .

To record a conversation during a phone call:

During a call, touch more > Voice Memo. (A minute counter is displayed on the left top of the screen to indicate the amount of time recorded.)




To end the recording of your conversation:

Touch more > Stop Voice Memo to end the recording prior to the countdown completion.




Note: Your phone can store 30 voice memos with up to a total of 10 minutes for all memos.

### 5.3.2 Voice Memo Options

To play the voice memos you have recorded:

1. Touch  >  Main Menu >  Tool > Voice Services > Voice Memo.
2. Touch the voice memo you wish to hear.

To choose voice memo options:

1. Touch  >  Main Menu >  Tool > Voice Services > Voice Memo.
2. Find a voice memo and touch to choose from the voice memo options:

**Send Message** to send a message with the voice memo attached.

**Set As** to assign as a ringer to Contacts with Default Ringer, One Contact, Unsaved Numbers, Private/Unknown, Voicemail, Messages, or Alarm/Calendar.

**View Details** to view the selected voice memo information.

**Edit Title** to edit the selected voice memo title.

**Memory Info** to view the memory status for voice memo. The total memory for voice memo is 10 minutes.

**Cancel** to close the options menu.

### 5.3.3 Erasing Voice Memos

To delete voice memos:

1. Touch > Main Menu > (slide the screen up) > Tools > Voice Service > Voice Memo.
2. Touch at the top right of the screen and select Delete Multiple or Delete All.

# Tools

**Delete Multiple** to delete more than one selected memo at a time.

**Delete All** to delete all voice memos.

## 5.4 Settings + Info

1. Touch  >  **Main Menu** >  **Tool** > **Voice Services** > **Settings + Info**.

## 6. Calculator



### 6.1 Calculator

Your phone comes with a built-in calculator.

1. Touch  >  **Main Menu** >  **Tool** > **Calculator** > **Calculator**.

2. Enter numbers using your keypad.

Touch  to enter decimal points.

Touch  to change the value from positive to negative. After entering a negative number, touch .

Touch  **AC** to clear all numbers.

3. Touch  **=** for the total.

### 6.2 Ez Tip Calculator

Allows you to quickly and easily estimate the tip and total amount of a bill by inputting the bill amount before tip, the tip percentage, and divide it by the number of people paying.

1. Touch  >  **Main Menu** >  **Tool** > **Calculator** > **Ez Tip Calculator**.

2. Touch the **Total Bill** field and enter the amount of the total bill.
3. Touch the **Tip** field and enter a tip percentage. (EZ Tip instantly calculates the correct tip.)
4. If you're splitting the check, touch the **Split** field, and enter the number of people in your party. (EZ Tip calculates and displays the 'per person' amount.)

### 6.3 Unit Converter

Allows you to convert units of measurement.

1. Touch  >  **Main Menu** >  **Tool** > **Calculator** > **Unit Converter**.




2. Select **Length, Area, Mass, Volume, Temperature, or Velocity**.
3. Select the known unit type and enter the value. The conversion is displayed automatically.

Tip: While converting temperatures, touch the +/- key on the touch keypad to input negative temperatures.

## 7. Notepad

Your phone comes with a notepad that you can use to compose and store reminders and notes to help keep you organized.




**To compose a note:**

1. Touch  >  **Main Menu** >  **Tool** > **Notepad**.
2. Enter your note using the touch keypad or QWERTY keyboard and touch .

**To read a saved note:**

1. Touch  >  **Main Menu** >  **Tool** > **Notepad**.
2. Touch a note.

**To delete a saved note:**

1. Touch  >  **Main Menu** >  **Tool** > **Notepad**.
2. Touch a note.
3. Touch (A confirmation will be displayed.)
4. Touch **Delete**.

Note: To delete multiple or all notes, touch at the top right of the screen.

## 8. Document Viewer

You can view all various document types, such as: Word, PowerPoint, Excel and PDF. (Compatible file extensions are .doc, .docx, .ppt, .pptx, .xls, .xlsx, .pdf and .txt.)



**To transfer document files:**

1. Connect your phone and your computer using a compatible USB cable. (See “Connecting Your Phone to Your Computer” on page 80.)
2. Select **Connect To PC**.

# Tools/ Settings

3. Read the disclaimer and touch Yes.
4. Drag and drop document files from your computer into a folder.
5. When you are finished, disconnect the phone. (See “To remove the connection:” on page 80.)

## To view a document:

1. Touch  >  Main Menu >  Tool > Document Viewer.
2. Touch a document.

## 9. Quick Guide

1. Touch  >  Main Menu >  Tool > Quick Guide.


## Settings

### 1. Display

Options to customize your phone's display screen.

#### 1.1 Wallpaper

Choose what you see on the display screen when in standby mode.

1. Touch  >  Main Menu >  Settings > Display > Wallpaper.
2. Select No Image, Preloaded, My Photos, Assigned Media, Downloaded Images, or Take New Picture.
3. Touch an image to view it. (While viewing an image, you can flick the screen left or right to scroll through and view other available images.)
4. Touch Assign to assign an image.






## 1.2 Brightness

Adjust your screen's brightness to suit your surroundings.

1. Touch  >  Main Menu >   
Settings > Display > Brightness.
2. Touch a brightness level bar to select it.

## 1.3 Backlight

Select how long the display screen and keypad remain backlit after you press any key.

1. Touch  >  Main Menu >   
Settings > Display > Backlight.
2. Select Backlight Dim or Backlight Off.
3. Touch a time setting.




Note: Long backlight settings reduce the battery's talk and standby times.

## 1.4 Picture ID

1. Touch  >  Main Menu >   
Settings > Display > Picture ID.

## 1.5 Font Size

Adjust the font you see when you are entering text (for example, when using the notepad or when adding a Contacts entry).

1. Touch  >  Main Menu >   
Settings > Display > Font Size.
2. Select Messages, or Notepad.
3. Touch a size setting and .

## 1.6 Power Save Mode

1. Touch  >  Main Menu >   
Settings > Display > Power Save Mode.

## 1.7 Whisper Notification




1. Touch  >  Main Menu >   
Settings > Display > Whisper Notification.

# Settings

## 1.8 Touch Calibration




You can calibrate the touch screen for improved touch

accuracy based on your touch.

1. Touch  >  Main Menu >  Settings > Display > Touch Calibration.
2. Touch the screen to start touch calibration.
3. Touch the target each time it appears.
4. When the message “Complete Calibration?” appears, touch an option:
  - **Accept** to accept the calibration.
  - **Try Again** to restart touch calibration.

## 2. Volume

Adjust your phone's volume settings to suit your needs and your environment.

1. Touch  >  Main Menu >  Settings > Volume.
2. Select Incoming Ringer, Playback Volume, or Key Beeps.
3. Touch a level bar to set the volume, or select Silence All, Vibrate All, Ringer Off, or 1 Beep.
4. Toggle the VIBRATE setting. (Note: This toggle key is not available when Silence All or Vibrate All is selected.)
5. Touch .

## 3. Ringers




### 3.1 Incoming Calls

Your phone provides a variety of ringer options that allow you to customize your ring and volume settings. These options allow you to identify incoming calls by the ring.

1. Touch  >  Main Menu >   
Settings > Ringers > Incoming Calls.

### 3.2 Call Alerts

Set your phone to alert you with an audible tone when you change service areas, once a minute during a voice call, or when a call has been connected or dropped.

1. Touch  >  Main Menu >   
Settings > Ringers > Call Alerts.
2. Select Beep Each Minute, Out of Service, Connect, or Signal Fade/Call Drop.
3. Touch and hold ON or OFF and slide left to change a setting.

### 3.3 Voicemail

Your phone automatically transfers all unanswered calls to your voicemail, even if your phone is in use or turned off. You should set up your Sprint Voicemail and personal greeting as soon as your phone is activated. Always use a passcode to protect against unauthorized access.

1. Touch  >  Main Menu >   
Settings > Ringers > Voicemail.

### 3.4 Messages

1. Touch  >  Main Menu >   
Settings > Ringers > Messages.

### 3.5 Alarm/Calendar

1. Touch  >  Main Menu >   
Settings > Ringers > Alarm/Calendar.

# Settings

## 4. Vibration

To set your phone to vibrate instead of making any sounds:

Press the volume button down until you see “Vibrate All” on the screen.

To set your phone to vibrate in addition to any ringer settings:

1. Press the volume button up or down until a Volume Level appears on the screen.
2. Toggle the VIBRATE setting to ON. (Note: This toggle key is not activated when Silence All or Vibrate All is selected.)

To select the vibrate type:

1. Touch  >  Main Menu >  Settings > Vibration.

2. Select Incoming Calls, Voicemail, Messages, Alarm/ Calendar, or Touch Vibration. For Incoming Calls, you can assign different vibrate types to Contacts, Unsaved Numbers, and Private/Unknown.
3. Scroll through the available vibrate types. Touch to sample a vibrate type.
4. Touch the a vibrate type to select it.

## 5. Text Entry

You can specify more automated features in the predictive text entry mode. These options can help streamline the text entry process by expanding the word database and completing the most commonly used words for you.

1. Touch  >  Main Menu >  Settings > Text Entry.

2. Select Word Complete, Next Word Complete, or Word Scan.
3. Touch and hold On or Off and slide left or right to toggle each setting.

**Word Complete** to set the phone to complete a word after entering a preset number of characters.

**Next Word Complete** to set the phone to predict possible word candidates after you have entered a preset number of characters.

**Word Scan** to automatically update the word database with new words from incoming messages.

## 6. Phone Info

The Phone Information menu provides you with specific information pertaining to your phone model.

### 6.1 Phone Number

If you aren't sure what your user name is, you can easily find it on your phone.

1. Touch  >  Main Menu >   
Settings > Phone Info > Phone Number.

### 6.2 Activation

1. Touch  >  Main Menu >   
Settings > Phone Info > Activation.

### 6.3 Icon Glossary

Allows you to view all the icons and their meanings.

1. Touch  >  Main Menu >   
Settings > Phone Info > Icon Glossary.

# Settings

## 6.4 Memory Info

1. Touch  >  Main Menu >   
Settings > Phone Info > Memory Info.

## 6.5 Battery Status

1. Touch  >  Main Menu >   
Settings > Phone Info > Battery Status.

## 6.6 Version

Allows you to view the versions of various applications.

1. Touch  >  Main Menu >   
Settings > Phone Info > Version.

## 6.7 Advanced




1. Touch  >  Main Menu >   
Settings > Phone Info > Advanced.

## 7. Lock Phone

### 7.1 Lock Now




Keeps your phone from unauthorized use. Once the phone is locked, it is in restricted mode until the lock code is entered. You can still receive phone calls and make emergency calls.

You can modify the lock code by navigating to **Change Lock Code** within the Security menu.

1. Touch  >  Main Menu >   
Settings > Lock Phone.
2. Enter the four-digit lock code. The default lock code is commonly the last 4 digits of your phone number.
3. Touch Lock Now.

## 7.2 Change Lock Code




Allows you to enter a new four-digit lock code.

1. Touch  >  Main Menu >   
Settings > Lock Phone.
2. Enter the four-digit lock code.
3. Touch **Change Lock Code**.
4. Enter the New lock code.
5. For confirmation, it will ask you to enter the new lock code again.

## 8. Parental Controls

Parental Controls give you a convenient way to manage wireless usage and access for everyone on your account. Kids get stylish phones to keep connected with friends and family, while you can control Internet access, texting, content purchases, voice calls and camera use.

To activate the Parental Control feature:

1. Touch  >  Main Menu >   
Settings > Parental Controls.
2. Slide the Parental Control button to On and then enter and re-enter a new parental lock code.
3. Select Restriction. (You will see a disclaimer.)
4. Read the disclaimer and touch **Continue**.
5. Slide the button for each option you want to set below:

**Voice Call** to set call restrictions.

# Settings

**Messaging** to restrict messaging.

**Web** to restrict Web access, including other applications using data network.




**Camera/Camcorder** to restrict camera and camcorder usage.

**Force Location On** to force the phone not to turn off the location mode.

## 9. Call Setup

### 9.1 Auto-Answer

Set your phone to automatically pick up incoming calls when connected to an optional hands-free car kit.




1. Touch  >  **Main Menu** >   
**Settings** > **Call Setup** > **Auto-Answer**.
2. Touch an option.

**Off** to disable Auto-Answer.




**Headset** to answer calls automatically when the phone is connected to an optional headset. Remember, your phone will answer calls in Auto-Answer mode even if you are not present.

### 9.2 Abbreviated Dialing

To activate the **Contacts Match** feature:

1. Touch  >  **Main Menu** >   
**Settings** > **Call Setup** > **Abbreviated Dialing**.
2. Slide the **Contacts Match** button to **On**.

To activate the **Prefix** feature:

1. Touch  >  **Main Menu** >   
**Settings** > **Call Setup**.
2. Slide the **Abbreviated Dialing** button to **On**.
3. Enter the first five- or six-digit **prefix** in the **Prefix** field and then touch **OK**.

To deactivate this feature, select **Off** during step 2 above.

**Tip:** To make an **Abbreviated Dial** call, see “**Abbreviated Dialing**” on page 26.



Note: Abbreviated Dialing does not apply to 911 or Virgin Mobile 411.

### 9.3 Contacts Match

1. Touch  >  Main Menu >   
Settings > Call Setup > Contacts Match.

## 10. TTY




A TTY (also known as a TDD or Text Telephone) is a telecommunications device that allows people who are deaf, hard of hearing, or who have speech or language disabilities, to communicate by telephone.

Your phone is compatible with select TTY devices.

Please check with the manufacturer of your TTY device to ensure that it is compatible with digital cell phones. Your phone and TTY device will connect via a special cable that plugs into your phone's headset jack. If this cable was not provided with your TTY device, contact your TTY device manufacturer to purchase the connector cable.

When establishing your Virgin Mobile, please call virgin mobile Customer Service via the state Telecommunications Relay Service (TRS) by first dialing 7-1-1 . Then provide the state TRS with this number: 866-727-4889.

To turn TTY Mode on or off:

1. Touch  >  Main Menu >   
Settings > TTY.
2. Touch Continue.
3. Touch On to turn TTY mode on.  
– or –  
Touch Off to turn TTY mode off.




Note: In TTY Mode, your phone will display the TTY access icon when the TTY device is plugged into the phone.  
When enabled, TTY mode may impair the audio quality of non-TTY devices connected to the headset jack.

# Settings

**WARNING:** 911 Emergency Calling Sprint recommends that TTY users make emergency calls by other means, including Telecommunications Relay Services (TRS), analog cellular, and landline communications. Wireless TTY calls to 911 may be corrupted when received by public safety answering points (PSAPs), rendering some communications unintelligible. The problem encountered appears related to software used by PSAPs. This matter has been brought to the attention of the FCC, and the wireless industry and the PSAP community are currently working to resolve this.

## 11. Airplane/Music Mode

Airplane Mode allows you to use many of your phone's features such as Games, Notepad, Music and Voice Memos when you are in an airplane or in any other area where making or receiving calls or data is prohibited. When you set your phone to Airplane Mode, it cannot send or receive any calls or access online information.

1. Touch  >  Main Menu >  Settings > Airplane/Music Mode.
2. Read the disclaimer and touch Continue.
3. Select On, Off, or On Power Up.




While in Airplane Mode, your phone's standby screen will display "Phone off."

## 12. Headset Mode

1. Touch  >  Main Menu >  Settings > Headset Mode.

## 13. Language (Idioma)

You can choose to display your phone's onscreen menus in English or in Spanish.

1. Touch  >  Main Menu >  Settings > Language (Idioma).
2. Touch English or Español.




## 14. Location

Your phone is equipped with a Location feature for use in connection with location-based services.

The Location feature allows the network to detect your position. Turning Location off will hide your location from everyone except 911.

Note: Turning Location on will allow the network to detect your position using GPS technology, making some Sprint applications and services easier to use. Turning Location off will disable the GPS location function for all purposes except 911, but will not hide your general location based on the cell site serving your call. No application or service may use your location without your request or permission. GPS-enhanced 911 is not available in all areas.

To enable or disable your phone's Location feature:

1. Touch  >  Main Menu >  Settings > Location.
2. Read the disclaimer and touch Continue.
3. Touch On or Off to change the existing Location setting.




## 15. Reset/Delete

### 15.1 Reset Settings

Resetting the phone to default settings restores all the factory defaults, including the ringer types and display settings. The Contacts, Call History, Calendar, and Messaging are not affected.




# Settings

To reset default settings:

1. Touch  >  **Main Menu** >   
**Settings** > **Reset/Delete** and enter your lock code.
2. Select **Reset Settings**. (You will see a disclaimer.)
3. Read the disclaimer and if you are certain that you would like to restore all the factory settings, touch **Reset**.




## 15.2 Reset Phone

Resetting the phone restores all the factory defaults, including the ringer types and display settings. The Contacts, history, Scheduler, and Messaging items will be deleted.

1. Touch  >  **Main Menu** >   
**Settings** > **Reset/Delete** and enter your lock code.
2. Select **Reset Phone**.
3. If you are certain that you would like to restore all factory settings, touch **Reset**.

## 15.3 Delete Stuff

Use the Security menu to quickly erase all the content you have created or stored in your phone.

1. Touch  >  **Main Menu** >   
**Settings** > **Reset/Delete** and enter your lock code.
2. Select **Delete Stuff**.
3. Touch an option.

**Messages** to delete all messages.

**Call Logs** to delete all call logs.

**Downloaded Content** to delete all the content you have downloaded.




**Contacts** to delete all the contents of your Contacts list.

**My photos + Videos** to delete all pictures and videos in My Photos & Videos.

**Voice Memo** to delete all voice memos.

4. Touch **Delete** to confirm the deletion.

## 15.4 Change Lock Code

1. Touch  >  Main Menu >   
Settings > Reset/Delete and enter your lock code.
2. Touch Change Lock Code, and then enter and re-enter your new lock code.

Tip: To access Change Lock Code menu, you can also Touch > Main Menu > (slide the screen up) > Settings > Reset/Delete and enter your lock code. Then, select Change Lock Code.

# Safety

## TIA Safety Information

The following is the complete TIA Safety Information for wireless handheld phones.

### Exposure to Radio Frequency Signal

Your wireless handheld portable phone is a low power radio transmitter and receiver. When ON, it receives and sends out Radio Frequency (RF) signals.

In August, 1996, the Federal Communications Commissions (FCC) adopted RF exposure guidelines with safety levels for handheld wireless phones. Those guidelines are consistent with the safety standards previously set by both U.S. and international standards bodies:

ANSI C95.1 (1992) \*

NCRP Report 86 (1986)

ICNIRP (1996)

\* American National Standards Institute; National Council on Radiation Protection and Measurements; International Commission on Non-Ionizing Radiation Protection.

Those standards were based on comprehensive and periodic evaluations of the relevant scientific literature. For example, over 120 scientists, engineers, and physicians from universities, government health agencies, and industry reviewed the available body of research to develop the ANSI Standard (C95.1).

The design of your phone complies with the FCC guidelines (and those standards).

### Antenna Care

Use only the supplied internal antenna. Unauthorized antennas, modifications, or attachments could damage the phone and may violate FCC regulations.

### Phone Operation

**NORMAL POSITION:** Hold the phone as you would any other telephone with the antenna pointed up and over your shoulder.

### Tips on Efficient Operation

For your phone to operate most efficiently:

Don't touch the antenna unnecessarily when the phone is in use. Contact with the antenna affects call quality and may cause the phone to operate at a higher power level than otherwise needed.

### Driving

Check the laws and regulations on the use of wireless phones in the areas where you drive and always obey them. Also, if using your phone while driving, please observe the following:

- Give full attention to driving -- driving safely is your first responsibility.
- Use hands-free operation, if available.
- Pull off the road and park before making or answering a call if driving conditions or the law require it.

### Electronic Devices

Most modern electronic equipment is shielded from RF signals. However, certain electronic equipment may not be shielded against the RF signals from your wireless phone.

### Pacemakers

The Health Industry Manufacturers Association recommends that a minimum separation of six (6) inches be maintained between a handheld wireless phone and a pacemaker to avoid potential interference with the pacemaker. These recommendations are consistent with the independent research by and recommendations of Wireless Technology Research.

### Persons with pacemakers

- Should ALWAYS keep the phone more than six (6) inches from their pacemaker when the phone is turned ON.
- Should not carry the phone in a breast pocket.
- Should use the ear opposite the pacemaker to minimize the potential for interference.
- Should turn the phone OFF immediately if there is any reason to suspect that interference is taking place.

# Safety

## Hearing Aids

Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you may want to consult Virgin Mobile (or call the customer service line to discuss alternatives).

## Other Medical Devices

If you use any other personal medical device, consult the manufacturer of your device to determine if it is adequately shielded from external RF energy. Your physician may be able to assist you in obtaining this information.

## Health Care Facilities

Turn your phone OFF in health care facilities when any regulations posted in these areas instruct you to do so. Hospitals or health care facilities may use equipment that could be sensitive to external RF energy.

## Vehicles

RF signals may affect improperly installed

or inadequately shielded electronic systems in motor vehicles. Check with the manufacturer or its representative regarding your vehicle. You should also consult the manufacturer of any equipment that has been added to your vehicle.

## Posted Facilities

Turn your phone OFF in any facility where posted notices so require.

## Aircraft

FCC regulations prohibit using your phone while in the air. Switch OFF your phone before boarding an aircraft.

## Blasting Areas

To avoid interfering with blasting operations, turn your phone OFF when in a “blasting area” or in areas posted: “Turn off two-way radio”. Obey all signs and instructions.

## Potentially Explosive Atmosphere

Turn your phone OFF when in any area



with a potentially explosive atmosphere and obey all signs and instructions. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death.

Areas with a potentially explosive atmosphere are often, but not always marked clearly. Potential areas may include: fueling areas (such as gasoline stations); below deck on boats; fuel or chemical transfer or storage facilities; vehicles using liquefied petroleum gas (such as propane or butane); areas where the air contains chemicals or particles (such as grain, dust, or metal powders); and any other area where you would normally be advised to turn off your vehicle engine.

### For Vehicles Equipped with an Air Bag

An air bag inflates with great force. DO NOT place objects, including either installed or portable wireless equipment, in the area over the air bag or in the air bag deployment area. If in-vehicle wireless equipment is improperly installed and the air bag inflates, serious injury could result.

## Safety Information

Please read and observe the following information for safe and proper use of your phone and to prevent damage. Also, keep the user guide in an accessible place at all times after reading it.

**Caution!** *Violation of the instructions may cause minor or serious damage to the product.*

### Charger and Adapter Safety

- The charger and adapter are intended for indoor use only.
- Insert the battery pack charger vertically into the wall power socket.
- Use the correct adapter for your phone when using the battery pack charger abroad.
- Only use the approved battery charger. Otherwise, you may cause serious damage to your phone.

## Battery Information and Care

- Please dispose of your battery properly or take it to your local wireless carrier for recycling.
- The battery doesn't need to be empty before recharging.
- Use only LG-approved chargers specific to your phone model since they are designed to maximize battery life.
- Do not disassemble or short-circuit the battery.
- Keep the battery's metal contacts clean.
- Replace the battery when it no longer provides acceptable performance. The battery can be recharged several hundred times before replacement.
- Recharge the battery after long periods of non-use to maximize battery life.
- Battery life will vary due to usage patterns and environmental conditions.
- Use of extended backlighting, Browser, and data connectivity kits affect battery life and talk/standby times.

- The self-protection function of the battery cuts the power of the phone when its operation is in an abnormal state. In this case, remove the battery from the phone, reinstall it, and turn the phone on.

## Explosion, Shock, and Fire Hazards

- Do not put your phone in a place subject to excessive dust and keep the minimum required distance between the power cord and heat sources.
- Unplug the power cord prior to cleaning your phone, and clean the power plug pin when it's dirty.
- When using the power plug, ensure that it's firmly connected. If not, it may cause excessive heat or fire.
- If you put your phone in a pocket or bag without covering the receptacle of the phone (power plug pin), metallic articles (such as a coin, paperclip or pen) may short-circuit the phone. Always cover the receptacle when not in use.

- Don't short-circuit the battery. Metallic articles such as a coin, paperclip or pen in your pocket or bag may short-circuit the + and – terminals of the battery (metal strips on the battery) upon moving. Short-circuit of the terminal may damage the battery and cause an explosion.
- Do not disassemble or crush the battery. It may cause a fire.

### General Notice

- Using a damaged battery or placing a battery in your mouth may cause serious injury.
- Do not place items containing magnetic components such as a credit card, phone card, bank book, or subway ticket near your phone. The magnetism of the phone may damage the data stored in the magnetic strip.
- Talking on your phone for a long period of time may reduce call quality due to heat generated during use.
- When the phone is not used for a long period time, store it in a safe place with the power cord unplugged.
- Using the phone in proximity to receiving equipment (i.e., TV or radio) may cause interference to the phone.
- Do not use the phone if the antenna is damaged. If a damaged antenna contacts skin, it may cause a slight burn. Please contact an LG Authorized Service Center to replace the damaged antenna.
- Do not immerse your phone in water. If this happens, turn it off immediately and remove the battery. If the phone does not work, take it to an LG Authorized Service Center.
- Do not paint your phone.
- The data saved in your phone might be deleted due to careless use, repair of the phone, or upgrade of the software. Please backup your important phone numbers. (Ringtones, text messages, voice messages, pictures, and videos could also be deleted.) The manufacturer is not liable for damage due to the loss of data.

# Safety

- When you use the phone in public places, set the ringtone to vibration so you don't disturb others.
- Do not turn your phone on or off when putting it to your ear.
- Use accessories, such as earphones and headsets, with caution. Ensure that cables are tucked away safely and do not touch the antenna unnecessarily.

## Warning! Important safety information

### Avoiding hearing damage

Permanent hearing loss may occur if you use your phone and/or headset at a high volume. Set the volume to a safe level. You can adapt over time to a higher volume of sound that may sound normal but can be damaging to your hearing. If you experience ringing in your ears or muffled speech, stop listening and have your hearing checked. The louder the volume, the less time is required before your hearing could be affected. Hearing experts suggest that to protect your hearing:

- Limit the amount of time you use your phone and/or headset at high volume.
- Avoid turning up the volume to block out noisy surroundings.
- Turn the volume down if you can't hear people speaking near you.

For information about how to set a maximum volume limit on your phone, see the features guide for your phone.

## Using your phone safely

Use of your phone while operating a vehicle is not recommended and is illegal in some areas. Be careful and attentive while driving. Stop using your phone if you find it disruptive or distracting while operating any type of vehicle or performing any other activity that requires your full attention.

## Using headsets safely

Use of headsets to listen to music while operating a vehicle is not recommended and is illegal in some areas. Be careful and attentive while driving. Stop using this device if you find it disruptive or distracting while operating any type of vehicle or performing any other activity that requires your full attention.



## FDA Consumer Update

The U.S. Food and Drug Administration's Center for Devices and Radiological Health Consumer Update on Mobile Phones:

### 1. Do wireless phones pose a health hazard?

The available scientific evidence does not show that any health problems are associated with using wireless phones. There is no proof, however, that wireless phones are absolutely safe. Wireless phones emit low levels of Radio Frequency (RF) energy in the microwave range while being used. They also emit very low levels of RF when in standby mode. Whereas high levels of RF can produce health effects (by heating tissue), exposure to low level RF that does not produce heating effects causes no known adverse health effects. Many studies of low level RF exposures have not found any biological effects. Some studies have suggested that some biological effects may occur, but such findings have not been confirmed by additional research. In some cases, other

researchers have had difficulty in reproducing those studies, or in determining the reasons for inconsistent results.

## 2. What is the FDA's role concerning the safety of wireless phones?

Under the law, the FDA does not review the safety of radiation-emitting consumer products such as wireless phones before they can be sold, as it does with new drugs or medical devices. However, the agency has authority to take action if wireless phones are shown to emit Radio Frequency (RF) energy at a level that is hazardous to the user. In such a case, the FDA could require the manufacturers of wireless phones to notify users of the health hazard and to repair, replace, or recall the phones so that the hazard no longer exists.

Although the existing scientific data do not justify FDA regulatory actions, the FDA has urged the wireless phone industry to take a number of steps, including the following:

- Support needed research into possible biological effects of RF of the type emitted by wireless phones;
- Design wireless phones in a way that minimizes any RF exposure to the user that is not necessary for device function; and
- Cooperate in providing users of wireless phones with the best possible information on possible effects of wireless phone use on human health.

The FDA belongs to an interagency working group of the federal agencies that have responsibility for different aspects of RF safety to ensure coordinated efforts at the federal level. The following agencies belong to this working group:

- National Institute for Occupational Safety and Health
- Environmental Protection Agency
- Occupational Safety and Health Administration
- National Telecommunications and Information Administration

The National Institutes of Health participates in some interagency working group activities, as well.

The FDA shares regulatory responsibilities for wireless phones with the Federal Communications Commission (FCC). All phones that are sold in the United States must comply with FCC safety guidelines that limit RF exposure. The FCC relies on the FDA and other health agencies for safety questions about wireless phones.

The FCC also regulates the base stations that the wireless phone networks rely upon. While these base stations operate at higher power than do the wireless phones themselves, the RF exposures that people get from these base stations are typically thousands of times lower than those they can get from wireless phones. Base stations are thus not the subject of the safety questions discussed in this document.

### **3. What kinds of phones are the subject of this update?**

The term “wireless phone” refers here to handheld wireless phones with built-in antennas, often called “cell”, “mobile”, or “PCS” phones. These types of wireless phones can expose the user to measurable Radio Frequency (RF) energy because of

the short distance between the phone and the user’s head.

These RF exposures are limited by FCC safety guidelines that were developed with the advice of the FDA and other federal health and safety agencies. When the phone is located at greater distances from the user, the exposure to RF is drastically lower because a person’s RF exposure decreases rapidly with increasing distance from the source. The so-called “cordless phones,” which have a base unit connected to the telephone wiring in a house, typically operate at far lower power levels, and thus produce RF exposures far below the FCC safety limits.

### **4. What are the results of the research done already?**

The research done thus far has produced conflicting results, and many studies have suffered from flaws in their research methods. Animal experiments investigating the effects of Radio Frequency (RF) energy exposures characteristic of wireless phones have yielded conflicting results that often cannot be repeated in other laboratories. A

few animal studies, however, have suggested that low levels of RF could accelerate the development of cancer in laboratory animals. However, many of the studies that showed increased tumor development used animals that had been genetically engineered or treated with cancer-causing chemicals so as to be pre-disposed to develop cancer in the absence of RF exposure. Other studies exposed the animals to RF for up to 22 hours per day. These conditions are not similar to the conditions under which people use wireless phones, so we do not know with certainty what the results of such studies mean for human health. Three large epidemiology studies have been published since December 2000. Between them, the studies investigated any possible association between the use of wireless phones and primary brain cancer, glioma, meningioma, or acoustic neuroma, tumors of the brain or salivary gland, leukemia, or other cancers. None of the studies demonstrated the existence of any harmful health effects from wireless phone RF exposures. However, none of the studies

can answer questions about long-term exposures, since the average period of phone use in these studies was around three years.

## 5. What research is needed to decide whether RF exposure from wireless phones poses a health risk?

A combination of laboratory studies and epidemiological studies of people actually using wireless phones would provide some of the data that are needed. Lifetime animal exposure studies could be completed in a few years. However, very large numbers of animals would be needed to provide reliable proof of a cancer promoting effect if one exists. Epidemiological studies can provide data that is directly applicable to human populations, but ten or more years follow-up may be needed to provide answers about some health effects, such as cancer. This is because the interval between the time of exposure to a cancer-causing agent and the time tumors develop — if they do — may be many, many years. The interpretation of epidemiological studies is



hampered by difficulties in measuring actual RF exposure during day-to-day use of wireless phones. Many factors affect this measurement, such as the angle at which the phone is held, or which model of phone is used.

## **6. What is the FDA doing to find out more about the possible health effects of wireless phone RF?**

The FDA is working with the U.S. National Toxicology Program and with groups of investigators around the world to ensure that high priority animal studies are conducted to address important questions about the effects of exposure to Radio Frequency (RF) energy.

The FDA has been a leading participant in the World Health Organization International Electro Magnetic Fields (EMF) Project since its inception in 1996. An influential result of this work has been the development of a detailed agenda of research needs that has driven the establishment of new research programs around the world. The project has also helped develop a series of public

information documents on EMF issues.

The FDA and the Cellular Telecommunications & Internet Association (CTIA) have a formal Cooperative Research And Development Agreement (CRADA) to do research on wireless phone safety. The FDA provides the scientific oversight, obtaining input from experts in government, industry, and academic organizations. CTIA-funded research is conducted through contracts with independent investigators. The initial research will include both laboratory studies and studies of wireless phone users. The CRADA will also include a broad assessment of additional research needs in the context of the latest research developments around the world.

## **7. How can I find out how much Radio Frequency energy exposure I can get by using my wireless phone?**

All phones sold in the United States must comply with Federal Communications Commission (FCC) guidelines that limit Radio Frequency (RF) energy exposures. The FCC established these guidelines in

consultation with the FDA and the other federal health and safety agencies. The FCC limit for RF exposure from wireless phones is set at a Specific Absorption Rate (SAR) of 1.6 watts per kilogram (1.6 W/kg). The FCC limit is consistent with the safety standards developed by the Institute of Electrical and Electronic Engineering (IEEE) and the National Council on Radiation Protection and Measurement. The exposure limit takes into consideration the body's ability to remove heat from the tissues that absorb energy from the wireless phone and is set well below levels known to have effects. Manufacturers of wireless phones must report the RF exposure level for each model of phone to the FCC. The FCC website (<http://www.fcc.gov/oet/rfsafety>) gives directions for locating the FCC identification number on your phone so you can find your phone's RF exposure level in the online listing.

## **8. What has the FDA done to measure the Radio Frequency energy coming from wireless phones?**

The Institute of Electrical and Electronic

Engineers (IEEE) is developing a technical standard for measuring the Radio Frequency (RF) energy exposure from wireless phones and other wireless handsets with the participation and leadership of FDA scientists and engineers. The standard, "Recommended Practice for Determining the Spatial-Peak Specific Absorption Rate (SAR) in the Human Body Due to Wireless Communications Devices: Experimental Techniques", sets forth the first consistent test methodology for measuring the rate at which RF is deposited in the heads of wireless phone users. The test method uses a tissue-simulating model of the human head. Standardized SAR test methodology is expected to greatly improve the consistency of measurements made at different laboratories on the same phone. SAR is the measurement of the amount of energy absorbed in tissue, either by the whole body or a small part of the body. It is measured in watts/kg (or milliwatts/g) of matter. This measurement is used to determine whether a wireless phone complies with safety guidelines.

### 9. What steps can I take to reduce my exposure to Radio Frequency energy from my wireless phone?

If there is a risk from these products — and at this point we do not know that there is — it is probably very small. But if you are concerned about avoiding even potential risks, you can take a few simple steps to minimize your exposure to Radio Frequency (RF) energy. Since time is a key factor in how much exposure a person receives, reducing the amount of time spent using a wireless phone will reduce RF exposure. If you must conduct extended conversations by wireless phone every day, you could place more distance between your body and the source of the RF, since the exposure level drops off dramatically with distance. For example, you could use a headset and carry the wireless phone away from your body or use a wireless phone connected to a remote antenna. Again, the scientific data do not demonstrate that wireless phones are harmful. But if you are concerned about the RF exposure from these products, you can use measures like those described above to reduce your RF

exposure from wireless phone use.

### 10. What about children using wireless phones?

The scientific evidence does not show a danger to users of wireless phones, including children and teenagers. If you want to take steps to lower exposure to Radio Frequency (RF) energy, the measures described above would apply to children and teenagers using wireless phones. Reducing the time of wireless phone use and increasing the distance between the user and the RF source will reduce RF exposure.

Some groups sponsored by other national governments have advised that children be discouraged from using wireless phones at all. For example, the government in the United Kingdom distributed leaflets containing such a recommendation in December 2000. They noted that no evidence exists that using a wireless phone causes brain tumors or other ill effects. Their recommendation to limit wireless phone use by children was strictly precautionary; it was not based on

scientific evidence that any health hazard exists.

## 11. What about wireless phone interference with medical equipment?

Radio Frequency (RF) energy from wireless phones can interact with some electronic devices. For this reason, the FDA helped develop a detailed test method to measure Electro Magnetic Interference (EMI) of implanted cardiac pacemakers and defibrillators from wireless telephones. This test method is now part of a standard sponsored by the Association for the Advancement of Medical Instrumentation (AAMI). The final draft, a joint effort by the FDA, medical device manufacturers, and many other groups, was completed in late 2000. This standard will allow manufacturers to ensure that cardiac pacemakers and defibrillators are safe from wireless phone EMI.

The FDA has tested hearing aids for interference from handheld wireless phones and helped develop a voluntary standard

sponsored by the Institute of Electrical and Electronic Engineers (IEEE). This standard specifies test methods and performance requirements for hearing aids and wireless phones so that no interference occurs when a person uses a “compatible” phone and a “compatible” hearing aid at the same time. This standard was approved by the IEEE in 2000.

The FDA continues to monitor the use of wireless phones for possible interactions with other medical devices. Should harmful interference be found to occur, the FDA will conduct testing to assess the interference and work to resolve the problem.

## 12. Where can I find additional information?

For additional information, please refer to the following resources:

FDA web page on wireless phones  
(<http://www.fda.gov/cellphones/>)

Federal Communications Commission  
(FCC) RF Safety Program  
(<http://www.fcc.gov/oet/rfsafety>)

International Commission on Non-ionizing

Radiation Protection  
(<http://www.icnirp.de>)

World Health Organization (WHO)  
International EMF Project  
(<http://www.who.int/emf>)

National Radiological Protection Board  
(UK)  
(<http://www.hpa.org.uk/radiation/>)

## 10 Driver Safety Tips

Your wireless phone gives you the powerful ability to communicate by voice almost anywhere, anytime. An important responsibility accompanies the benefits of wireless phones, one that every user must uphold.

When operating a car, driving is your first responsibility. When using your wireless phone behind the wheel of a car, practice good common sense and remember the following tips:

1. Get to know your wireless phone and its features such as speed dial and redial. Carefully read your instruction manual and learn to take advantage of valuable features most phones offer, including automatic redial and memory. Also, work to memorize the phone keypad so you can use the speed dial function without taking your attention off the road.
2. When available, use a hands-free device. A number of hands-free wireless phone accessories are readily available today. Whether you choose an installed mounted device for your wireless phone or a speaker phone accessory, take advantage of these devices if available to you.
3. Make sure you place your wireless phone within easy reach and where you can reach it without removing your eyes from the road. If you get an incoming call at an inconvenient time, if possible, let your voicemail answer it for you.
4. Suspend conversations during hazardous driving conditions or situations. Let the person you are speaking with know you are driving; if necessary, suspend the call in heavy traffic or hazardous weather conditions. Rain, sleet, snow, and ice can

# Safety

be hazardous, but so is heavy traffic. As a driver, your first responsibility is to pay attention to the road.

5. Don't take notes or look up phone numbers while driving. If you are reading an address book or business card, or writing a "to-do" list while driving a car, you are not watching where you are going. It is common sense. Do not get caught in a dangerous situation because you are reading or writing and not paying attention to the road or nearby vehicles.
6. Dial sensibly and assess the traffic; if possible, place calls when you are not moving or before pulling into traffic. Try to plan your calls before you begin your trip or attempt to coincide your calls with times you may be stopped at a stop sign, red light, or otherwise stationary. But if you need to dial while driving, follow this simple tip -- dial only a few numbers, check the road and your mirrors, then continue.
7. Do not engage in stressful or emotional conversations that may be distracting.
- Stressful or emotional conversations and driving do not mix; they are distracting and even dangerous when you are behind the wheel of a car. Make people you are talking with aware you are driving and if necessary, suspend conversations which have the potential to divert your attention from the road.
8. Use your wireless phone to call for help. Your wireless phone is one of the greatest tools you can own to protect yourself and your family in dangerous situations -- with your phone at your side, help is only three numbers away. Dial 911 or other local emergency number in the case of fire, traffic accident, road hazard, or medical emergency. Remember, it's a free call on your wireless phone!
9. Use your wireless phone to help others in emergencies. Your wireless phone provides you a perfect opportunity to be a "Good Samaritan" in your community. If you see an auto accident, crime in progress or other serious emergency where lives are in danger, call 911 or other local emergency number, as

you would want others to do for you.

10. Call roadside assistance or a special wireless non-emergency assistance number when necessary. Certain situations you encounter while driving may require attention, but are not urgent enough to merit a call for emergency services. But you can still use your wireless phone to lend a hand. If you see a broken-down vehicle posing no serious hazard, a broken traffic signal, a minor traffic accident where no one appears injured or a vehicle you know to be stolen, call roadside assistance or other special non-emergency wireless number.

The above tips are meant as general guidelines. Before deciding to use your mobile device while operating a vehicle, it is recommended that you consult your applicable jurisdiction's local laws or other regulations regarding such use. Such laws or other regulations may prohibit or otherwise restrict the manner in which a driver may use his or her phone while operating a vehicle.

## Consumer Information on SAR (Specific Absorption Rate)

**This Model Phone Meets the Government's Requirements for Exposure to Radio Waves.** Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limits for exposure to radiofrequency (RF) energy set by the Federal Communications Commission (FCC) of the U.S. Government. These FCC exposure limits are derived from the recommendations of two expert organizations, the National Council on Radiation Protection and Measurement (NCRP) and the Institute of Electrical and Electronics Engineers (IEEE). In both cases, the recommendations were developed by scientific and engineering experts drawn from industry, government, and academia after extensive reviews of the scientific literature related to the biological effects of RF energy.

The exposure limit for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or

# Safety

SAR. The SAR is a measure of the rate of absorption of RF energy by the human body expressed in units of watts per kilogram (W/kg). The FCC requires wireless phones to comply with a safety limit of 1.6 watts per kilogram (1.6 W/kg). The FCC exposure limit incorporates a substantial margin of safety to give additional protection to the public and to account for any variations in measurements.

Tests for SAR are conducted using standard operating positions specified by the FCC with the phone transmitting at its highest certified power level in all tested frequency bands. Although SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. Because the phone is designed to operate at multiple power levels to use only the power required to reach the network, in general, the closer you are to a wireless base station antenna, the lower the power output.

Before a phone model is available for sale to the public, it must be tested and

certified to the FCC that it does not exceed the limit established by the government-adopted requirement for safe exposure. The tests are performed in positions and locations (e.g., at the ear and worn on the body) as required by the FCC for each model.

This device was tested for typical body-worn operations with the back of the phone kept 0.79 inches (2.0 cm) between the user's body and the back of the phone. To comply with FCC RF exposure requirements, a minimum separation distance of 0.79 inches (2.0 cm) must be maintained between the user's body and the back of the phone. Third-party belt-clips, holsters, and similar accessories containing metallic components should not be used. Body-worn accessories that cannot maintain 0.79 inches (2.0 cm) separation distance between the user's body and the back of the phone, and have not been tested for typical body-worn operations may not comply with FCC RF exposure limits and should be avoided.

The FCC has granted an Equipment



Authorization for this model phone with all reported SAR levels evaluated as in compliance with the FCC RF emission guidelines.

The highest SAR value for this model phone when tested for use at the ear is 0.891 W/kg and when worn on the body, as described in this user's manual, is 0.745 W/kg. While there may be differences between SAR levels of various phones and at various positions, they all meet the government requirement for safe exposure.

SAR information on this model phone is on file with the FCC and can be found under the Display Grant section of <http://www.fcc.gov/oet/fccid> after searching on FCC ID.

To find information that pertains to a particular model phone, this site uses the phone FCC ID number which is usually printed somewhere on the case of the phone. Sometimes it may be necessary to remove the battery pack to find the number. Once you have the FCC ID number for a particular phone, follow the instructions on the website and it should

provide values for typical or maximum SAR for a particular phone.

Additional information on Specific Absorption Rates (SAR) can be found on the Cellular Telecommunications Industry Association (CTIA) website at <http://www.ctia.org/>

\*In the United States and Canada, the SAR limit for mobile phones used by the public is 1.6 watts/kg (W/kg) averaged over one gram of tissue. The standard incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements.

## FCC Hearing-Aid Compatibility (HAC) Regulations for Wireless Devices

On July 10, 2003, the U.S. Federal Communications Commission (FCC) Report and Order in WT Docket 01-309 modified the exception of wireless phones under the Hearing Aid Compatibility Act of 1988 (HAC Act) to require digital wireless

# Safety

phones be compatible with hearing-aids. The intent of the HAC Act is to ensure reasonable access to telecommunications services for persons with hearing disabilities.

While some wireless phones are used near some hearing devices (hearing aids and cochlear implants), users may detect a buzzing, humming, or whining noise. Some hearing devices are more immune than others to this interference noise, and phones also vary in the amount of interference they generate.

The wireless telephone industry has developed a rating system for wireless phones, to assist hearing device users to find phones that may be compatible with their hearing devices. Not all phones have been rated. Phones that are rated have the rating on their box or a label located on the box.

The ratings are not guarantees. Results will vary depending on the user's hearing device and hearing loss. If your hearing device happens to be vulnerable to interference, you may not be able to use a

rated phone successfully. Trying out the phone with your hearing device is the best way to evaluate it for your personal needs.

**M-Ratings:** Phones rated M3 or M4 meet FCC requirements and are likely to generate less interference to hearing devices than phones that are not labeled. M4 is the better/higher of the two ratings.

Hearing devices may also be rated. Your hearing device manufacturer or hearing health professional may help you find this rating. Higher ratings mean that the hearing device is relatively immune to interference noise. The hearing aid and wireless phone rating values are then added together. A sum of 5 is considered acceptable for normal use. A sum of 6 is considered for best use.

In the above example, if a hearing aid meets the M2 level rating and the wireless phone meets the M3 level rating, the sum of the two values equal M5. This should provide the hearing aid user with "normal usage" while using their hearing aid with the particular wireless phone. "Normal usage" in this context is defined as a signal

quality that's acceptable for normal operation.

The M mark is intended to be synonymous with the U mark. The T mark is intended to be synonymous with the UT mark. The M and T marks are recommended by the Alliance for Telecommunications Industries Solutions (ATIS). The U and UT marks are referenced in Section 20.19 of the FCC Rules. The HAC rating and measurement procedure are described in the American National Standards Institute (ANSI) C63.19 standard.

When you're talking over the cell phone, it's recommended you'd turn the BT (Bluetooth®) mode off for HAC.

## **For information about hearing aids and digital wireless phones**

### **FCC Hearing Aid Compatibility and Volume Control**

<http://www.fcc.gov/cgb/dro/hearing.html>

### **Gallaudet University, RERC**

<http://tap.Gallaudet.edu/DigWireless.KS/DigWireless.htm>

### **Hearing Loss Association of America [HLAA]**

<http://www.hearingloss.org/learn/cellphonetech.asp>

### **The Hearing Aid Compatibility FCC Order**

[http://hraunfoss.fcc.gov/edocs\\_public/attachmatch/FCC-03-168A1.pdf](http://hraunfoss.fcc.gov/edocs_public/attachmatch/FCC-03-168A1.pdf)

There are a variety of accessories available for your mobile phone. Consult your local dealer for availability. Optional items are sold separately.

---

## Charger

The battery charger allows you to charge your phone.



---

## Battery

Standard battery is available.



---

## Vehicle Power Charger

The vehicle power charger allows you to operate the phone and trickle charge the phone's battery from your vehicle.



---

## USB Cable



# Limited Warranty Statement

## **1. WHAT THIS WARRANTY COVERS:**

LG offers you a limited warranty that the enclosed subscriber unit and its enclosed accessories will be free from defects in material and workmanship, according to the following terms and conditions:

- (1) The limited warranty for the product extends for TWELVE (12) MONTHS beginning on the date of purchase of the product with valid proof of purchase, or absent valid proof of purchase, FIFTEEN (15) MONTHS from date of manufacture as determined by the unit's manufacture date code.
- (2) The limited warranty extends only to the original purchaser of the product and is not assignable or transferable to any subsequent purchaser/end user.
- (3) This warranty is good only to the original purchaser of the product during the warranty period as long as it is in the U.S, including Alaska, Hawaii, U.S. Territories and Canada.
- (4) The external housing and cosmetic parts shall be free of defects at the time of shipment and, therefore, shall not be covered under these limited warranty terms.
- (5) Upon request from LG, the consumer must provide information to reasonably prove the date of purchase.
- (6) The customer shall bear the cost of shipping the product to the Customer Service Department of LG. LG shall bear the cost of shipping the product back to the consumer after the completion of service under this limited warranty.

## **2. WHAT THIS WARRANTY DOES NOT COVER:**

- (1) Defects or damages resulting from use of the product in other than its normal and customary manner.
- (2) Defects or damages from abnormal use, abnormal conditions, improper storage, exposure to moisture or dampness, unauthorized modifications,

- unauthorized connections, unauthorized repair, misuse, neglect, abuse, accident, alteration, improper installation, or other acts which are not the fault of LG, including damage caused by shipping, blown fuses, spills of food or liquid.
- (3) Breakage or damage to antennas unless caused directly by defects in material or workmanship.
  - (4) That the Customer Service Department at LG was not notified by consumer of the alleged defect or malfunction of the product during the applicable limited warranty period.
  - (5) Products which have had the serial number removed or made illegible.
  - (6) This limited warranty is in lieu of all other warranties, express or implied either in fact or by operations of law, statutory or otherwise, including, but not limited to any implied warranty of marketability or fitness for a particular use.
  - (7) Damage resulting from use of non-LG approved accessories.
  - (8) All plastic surfaces and all other externally exposed parts that are scratched or damaged due to normal customer use.
  - (9) Products operated outside published maximum ratings.
  - (10) Products used or obtained in a rental program.
  - (11) Consumables (such as fuses).

### **3. WHAT LG WILL DO:**

“LG will, at its sole option, either repair, replace or refund the purchase price of any unit that does not conform to this limited warranty. LG may choose at its option to use functionally equivalent re-conditioned, refurbished or new units or parts or any units. In addition, LG will not re-install or back-up any data, applications or software that you have added to your phone. It is therefore recommended that you back-up any such data or information prior to sending the unit to LG to avoid the

# Limited Warranty Statement

permanent loss of such information.”

#### **4. STATE LAW RIGHTS:**

No other express warranty is applicable to this product. THE DURATION OF ANY IMPLIED WARRANTIES, INCLUDING THE IMPLIED WARRANTY OF MARKETABILITY, IS LIMITED TO THE DURATION OF THE EXPRESS WARRANTY HEREIN. LG SHALL NOT BE LIABLE FOR THE LOSS OF THE USE OF THE PRODUCT, INCONVENIENCE, LOSS OR ANY OTHER DAMAGES, DIRECT OR CONSEQUENTIAL, ARISING OUT OF THE USE OF, OR INABILITY TO USE, THIS PRODUCT OR FOR ANY BREACH OF ANY EXPRESS OR IMPLIED WARRANTY, INCLUDING THE IMPLIED WARRANTY OF MARKETABILITY APPLICABLE TO THIS PRODUCT.

Some states do not allow the exclusive limitation of incidental or consequential damages or limitations on how long an implied warranty lasts; so these limitations or exclusions may not apply to you. This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

#### **5. HOW TO GET WARRANTY SERVICE:**

To obtain warranty service, please call or fax to the following telephone numbers from anywhere in the continental United States:

**Tel. 1-800-793-8896 or Fax. 1-800-448-4026**

Or visit <http://us.lgservice.com>.

Correspondence may also be mailed to:

LG Electronics Service- Mobile Handsets  
P.O. Box 240007, Huntsville, AL 35824

**DO NOT RETURN YOUR PRODUCT TO THE ABOVE ADDRESS.** Please call or write for the location of the LG authorized service center nearest you and for the procedures for obtaining warranty claims.



---

## 123

10 Driver Safety Tips 83

---

## A

Abbreviated Dialing 62  
Accessories 91  
Activation 59  
Advanced 60  
Airplane/Music Mode 64  
Alarm 42  
Alarm/Calendar 57  
Auto-Answer 62

---

## B

Backlight 55  
Battery Status 60  
Bluetooth 45  
Brightness 55

---

## C

Calculator 52  
Calendar 43

Call Alerts 57  
Call Setup 62  
Camcorder 34  
Camera 32  
Change Lock Code 60, 67  
Clock 42  
Connect to PC 47  
Consumer Information on SAR 85  
Contacts in Your Phone's Memory 27  
Contacts Match 63

---

## D

Delete Stuff 66  
Display 54  
Document Viewer 53

---

## E

Email + IM 30  
Entering and Editing Information 26  
Ez Tip Calculator 52

---

## F

FCC Hearing-Aid Compatibility (HAC) Regulations for Wireless Devices 87  
FDA Consumer Update 75  
File Manager 47  
Font Size 55  
Format Memory Card 49

---

## G

Getting Started with Your Phone 20

---

## H

Headset Mode 64

---

## I

Icon Glossary 59  
Important Safety Precautions 1  
Incoming Calls 57  
Index 95

---

## L

Language (Idioma) 64  
Limited Warranty Statement 92  
Location 65  
Lock Now 60  
Lock Phone 60

---

## M

Maps 32  
Mass Storage 47  
Media Player 41  
Memory Info 49, 60  
Menus Overview 18  
Messages 30, 57  
Messaging 28  
My Account 39  
My Photos + Videos 35  
My Stuff 37

---

## N

Notepad 53

# Index

---

## O

Other Settings 36

---

## P

Parental Controls 61

Phone Info 59

Phone Overview 14

Phone#/User ID 59

Photos + Videos 32

Picture 55

Power Save Mode 55

---

## Q

Quick Access to  
Convenient Features  
24

Quick Guide 54

---

## R

Reset Phone 66

Reset Settings 65

Reset/Delete 65

Ringers 57

---

## S

Safety 68

Safety Information 71

Send Message 28

Settings 31, 54

Settings & Info 52

Social Networking 37

Stopwatch 43

---

## T

Table of Contents 4

Technical Details 9

Text Entry 58

TIA Safety  
Information 68

Tools 42

Touch Calibration 56

TTY 63

---

## U

Unit Converter 52

Using Phone Menus  
28

---

## V

Version 60

Vibration 58

Virgin Alerts 30

Voice Command 49

Voice Memo 50

Voice Reader 50

Voice Services 49

Voicemail 28, 57

Volume 56

---

## W

Wallpaper 54

Warning! Important  
safety information 74

Web 38

Welcome 8

Whisper Notification  
55

World Clock 43

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>