



**MOTOROLA**

## **User's Guide**

**L702C / L703C / L704C / L705C / L706C**

**L702CM / L703CM / L704CM /**

**L705CM / L706CM**

**DECT 6.0 Cordless / Corded Phones  
with Answering System**

### ***Warning***

*Use only the adapter and telephone line cord  
provided in the box.*

# Welcome...

## *to your new Motorola Phone!*

Please retain your original dated sales receipt for your records. For warranty service of your Motorola product, you will need to provide a copy of your dated sales receipt to confirm warranty status. Registration is not required for warranty coverage.

For product-related questions, please call:

**US and Canada: 1-888-331-3383**

**On the Web: [www.motorola.com](http://www.motorola.com)**

---

- 30 name and number phonebook for cordless handset and corded base respectively.
- Answering machine with up to 15 minutes digital recording time.\*
- Caller ID shows you who is calling and includes details of the last 30 callers in a calls list for cordless handset, and 28 callers in a calls list for the corded base. \*\*
- Register up to 5 cordless handsets to the corded base.
- Make internal calls, transfer external calls, hold 3-way conversation between two internal callers and an external caller.

\*The recording time includes the pre-recorded voice menu and outgoing announcements.

\*\*You must subscribe to your network provider's Caller ID or Call Waiting service for these features to work.

Please note that only the corded phone operates during power outage (with limited functions).

***This User's Guide provides you with all the information you need to get the most from your phone.***

***Before you make your first call you will need to set up your phone. Follow the simple instructions in 'Getting Started', on the next few pages.***

#### **IMPORTANT**

Only use the telephone line cord supplied.

#### **Got everything?**

- Cordless handset
- Cordless charger
- NiMH rechargeable battery pack
- Power adapter for the cordless charger
- Corded base
- Corded handset
- Power adapter for the corded base
- Wall-mount bracket
- Telephone line cords (one for connecting the corded base and handset)
- Quick Start Guide
- User's Guide

**In multi-handset packs, you will find one or more additional cordless handsets, cordless chargers with power adapter units, additional rechargeable battery packs and battery doors.**



<b>1. Getting Started.....</b>	<b>6</b>	3.12 Caller ID.....	20
1.1 Installing and charging the cordless handset battery pack .....	7	3.12.1 Calls list .....	20
1.2 Assembling the rubber band of cordless handset (Not applicable for L70xCM models)....	7	3.12.2 Viewing the calls list .....	20
1.3 Installing the cordless charger .....	8	3.12.3 Saving a number for the calls list to the phonebook .....	21
1.4 Connecting the corded base.....	9	3.12.4 Deleting a calls list entry .....	21
1.5 Wall mounting on corded base .....	9	3.12.5 Deleting the entire calls list .....	21
1.6 Setting the display language .....	10	3.13 Personal Settings.....	22
1.7 Setting the date and time.....	10	3.14 Intercom.....	23
<b>2. Getting to know your phone .....</b>	<b>11</b>	3.14.1 Calling another cordless handset or all handsets .....	23
<b><i>Enjoy Your Corded Base Phone .....</i></b>	<b>18</b>	3.14.2 Transferring an external call to another cordless handset .....	23
<b>3. Using the phone.....</b>	<b>18</b>	3.14.3 Three- party conference call .....	23
3.1 Making a call.....	18	3.15 Setting the dial mode .....	24
3.2 Speed dialing.....	18	3.16 Setting the flash time .....	24
3.3 Answering a call .....	18	3.17 Setting the area code.....	24
3.4 Ending a call .....	18	3.18 Resetting all settings.....	25
3.5 Adjusting the volume .....	18	3.19 Using your answering machine.....	25
3.6 Dialing from the redial list .....	18	3.19.1 Turning on or off the answering machine .....	25
3.7 Dialing from the calls list.....	19	3.19.2 Setting the answer mode .....	25
3.8 Muting a call .....	19	3.19.3 Setting the number of rings .....	25
3.9 Adding an entry to the phonebook.....	19	3.19.4 Announcement .....	26
3.10 Storing a phonebook entry as a one touch number.....	19	3.19.5 Call screening on/off .....	26
3.11 Dialing from the phonebook.....	19	3.19.6 Deleting all old messages .....	27



---

3.19.7 Remote access .....	27	4.14.1 Calling another handset .....	33
3.19.8 Setting the security code .....	28	4.14.2 Transferring a call to another handset .....	33
<b>Enjoy Your Cordless Handset.....</b>	<b>29</b>	4.14.3 Three-party conference call .....	33
<b>4. Using the phone .....</b>	<b>29</b>	4.15 Setting the dial mode.....	34
4.1 Making a call .....	29	4.16 Setting the flash time.....	34
4.2 Speed dialing.....	29	4.17 Setting the area code .....	34
4.3 Answering a call .....	29	4.18 Registration .....	35
4.4 Ending a call.....	29	4.18.1 Registering a cordless handset ....	35
4.5 Adjusting volume.....	29	4.19 Resetting all settings .....	35
4.6 Muting a call .....	29	4.20 Using your answering machine .....	35
4.7 Dialing from the redial list.....	29	4.20.1 Playing messages .....	35
4.8 Dialing from the calls list.....	29	4.20.2 Turning on or off the answering machine .....	36
4.9 Adding an entry to the phonebook .....	29	4.20.3 Setting the announcement mode ..	36
4.10 Storing a phonebook entry as a one touch number.....	30	4.20.4 Setting the number of rings .....	36
4.11 Dialing from the phonebook .....	30	4.20.5 Announcement .....	37
4.12 Caller ID .....	30	4.20.6 Recording a memo .....	37
4.12.1 Calls list .....	30	4.20.7 Call screening on / off .....	38
4.12.2 Viewing the calls list .....	31	4.20.8 Deleting all old messages .....	38
4.12.3 Saving a number from the calls list to the phonebook .....	31	4.20.9 Remote access .....	38
4.12.4 Deleting a calls list entry .....	31	4.20.10 Setting the security code .....	39
4.12.5 Deleting the entire calls list .....	31	<b>5. Help.....</b>	<b>40</b>
4.13 Personal Settings .....	32	<b>6. General information .....</b>	<b>41</b>
4.14 Intercom .....	33		



## 1. Getting Started

### **WARNING**

- Do not place your phone in the bathroom or other humid areas.

### **Location**

When choosing a location for your new phone, here are some important guidelines you should consider:

- Avoid sources of noise and heat, such as motors, fluorescent lighting, microwave ovens, heating appliances and direct sunlight.
- Avoid areas of excessive dust, moisture and low temperature.
- Avoid other cordless telephones or personal computers.
- Never install telephone wiring during a lightning storm.
- Never install telephone jacks in wet locations unless the jack is specifically designed for wet locations.
- Never touch non-insulated telephone wires or terminals, unless the telephone line has been disconnected at the network interface.
- Use caution when installing or modifying telephone lines.

### **HANDSET RANGE**

Optimal range is reached when there are no other electrical appliances working within the range area. Any obstruction between the base and handset will also reduce the range significantly.

### **SIGNAL STRENGTH**

When out of range of the corded base, the screen shows **OUT OF RANGE**. If you are on a call, the line will hang up. Move back within in range. The cordless handset will automatically re-connect to the corded base.

### **Setting up**


#### **IMPORTANT**

The base must be plugged into an electrical outlet at all times. Do not connect the telephone line cord into the telephone wall jack until the handset is fully charged. Only use the adapter and telephone line cord supplied with the product.


#### **WHICH POWER ADAPTER?**

The power adapter with the smaller pin plug is for the corded base unit and the power adapter with the bigger pin plug is for the cordless charger unit.

## 1.1 Installing and charging the cordless handset battery pack

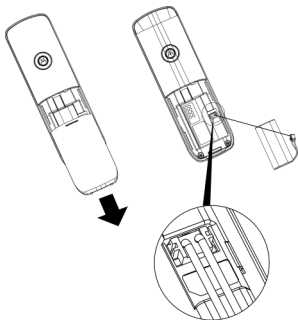

1. Slide off the battery compartment cover to remove it.
2. Place the supplied rechargeable battery pack in the battery compartment, with the battery connector plugged in, as shown.
3. Slide the battery compartment cover back on.

4. Put the handset on the charger to charge for at least 24 hours. Once charged, the  will indicate that the handset is fully charged.
5. Use only the rechargeable battery pack provided.


## 1.2 Assembling the rubber band of cordless handset (Not applicable for L70xCM models)

If you have purchased additional rubber band(s) of the cordless handset separately, refer to the following steps for replacement. To remove the originally installed rubber band, dig out the rubber band from handset bottom gap and then take it off from handset around.


1. To assemble the rubber band, align the protuberant pins of the rubber band with the holes around of the handset sides and click the rubber band into place. Respect the direction, side with gap should be attached to the handset bottom, as shown.



2. Press and smooth out the rubber band to enwrap the handset firmly.

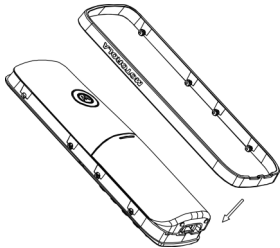


## 1.3 Installing the cordless charger

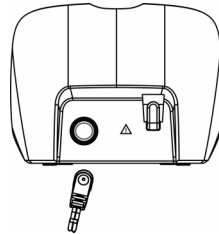

1. Plug the power adapter with the bigger pin plug into the cordless charger.
2. Plug the other end of the power adapter into the wall jack.
3. Use only the provided power adapter.



## 1.4 Connecting the corded base

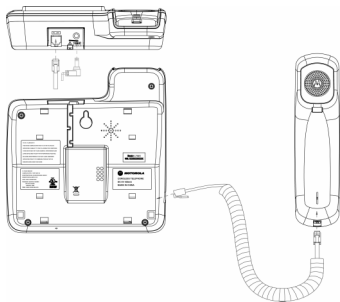


1. Connect the corded handset to the corded base with the provided coiled line cord.
2. Plug the power adapter with the smaller pin plug & telephone line cord into the corded base.
3. Plug the other end of the power adapter & telephone line cord into the wall jack.
4. Always use the telephone line cord provided in the box.
5. Use only the provided adapter.

## 1.5 Wall mounting on corded base

This phone can be mounted on any standard wall plate.

1. Plug the power adapter with the smaller pin plug & telephone line cord into the corded base.
2. Snap the wall-mount bracket into the notches on the corded base's back.

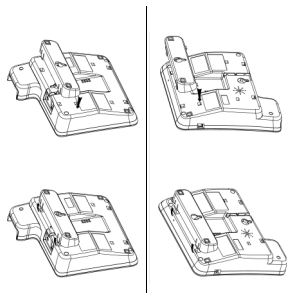

3. Plug the other end of the power adapter & telephone line cord into the wall jack.
4. Align the mounting slots on the corded base with the mounting posts on the wall. Then push in and down until the phone is firmly seated.



## 1.6 Setting the display language

On the corded base:

1. Press **MENU (Base)** and then **VOL+ (base)** or **VOL-** to select **SETTINGS**.
2. Press **MENU (Base)** and then **VOL+ (base)** or **VOL-** to select **LANGUAGE**.
3. Press **MENU (Base)** and then **VOL+ (base)** or **VOL-** to select a desired language.
4. Press **MENU (Base)** to save.

On the cordless handset:

1. Press **MENU** and then **VOL+** or **REDIAL/VOL-** to select **SETUP HS**.
2. Press **MENU** and then **VOL+** or **REDIAL/VOL-** to select **LANGUAGE**.
3. Press **MENU** and then **VOL+** or **REDIAL/VOL-** to select the desired language.
4. Press **MENU** to save.

## 1.7 Setting the date and time

On the corded base:

1. Press **MENU (Base)** and then **VOL+ (Base)** or **VOL-** to select **DATE & TIME**.
2. Press **MENU (Base)** and then **VOL+ (Base)** or **VOL-** to change the year setting.

3. Press **MENU (Base)** and then **VOL+ (Base)** or **VOL-** to change the date setting. Repeat to set the time continuously.

4. Press **MENU (Base)** to save the settings.

On the cordless handset:

1. Press **MENU** and then **VOL+** or **REDIAL/VOL-** to select **DATE & TIME**.
2. Press **MENU** and then use the keypad to enter the year and the date.  
Alternatively, press **VOL+** or **REDIAL/VOL-** to move the cursor to the target input field.
3. Press **MENU** and then use the keypad to edit the time in 12 HR format. Press **VOL+** or **REDIAL/VOL-** to toggle AM/PM settings.
4. Press **MENU** to save the settings.


### NOTE

If you have subscribed to your network's Caller ID service, the date and time is set automatically when a call is received.

**Your phone is now ready for use.**

## 2. Getting to know your phone

### Overview of your corded base

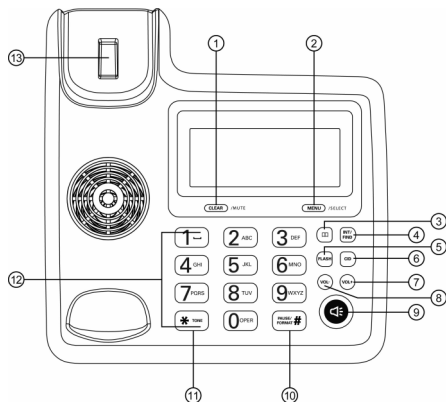

#### 1 CLEAR/MUTE/BACK

- a) **In menu/phonebook/redial list/calls list mode:** Press to return to previous level. Press and hold to return to standby mode.
- b) **In pre-dial/editing mode:** Press to delete one digit/character. Press and hold to delete all characters/digits.
- c) **During a call:** Press to mute/unmute the call.
- d) **In answering machine mode:** Press to delete the current message playback.

#### 2 MENU/SELECT

- a) **In idle mode:** Press to access menu list.
- b) **In menu/editing mode:** Press to confirm and save the settings.
- c) **During a call:** Press to transfer the call to another cordless handset.
- d) **In pre-dial:** Press to save the entry to the phonebook.
- e) **Calls list/redial list entry:** Press to access its sub-menu respectively.
- f) **During outgoing message playback:** Press to stop the current outgoing message playback.

#### 3 PHONEBOOK

- a) **In idle/pre-dial/during a call:** Press to access the phonebook list.

#### 4 INTERCOM/FIND

- a) **In idle mode:** Press to access intercom, press and hold to enter registration mode.
- b) **During a call:** Press to transfer the call to another cordless handset.



## 5 FLASH

a) **During a call:** Press to insert a flash.

## 6 CALLS LIST

a) **In idle mode/pre-dial/during a call:** Press to access calls list.

## 7 VOLUME+/UP

a) **In menu mode:** Press to scroll up.

b) **During a call:** Press to increase volume.

c) **Calls list/phonebook/redial list entry:** Press to scroll up the list.

d) **In answering machine mode:** Press to increase message playback volume.

## 8 VOLUME-/DOWN/REDIAL

a) **In menu mode:** Press to scroll down.

b) **In idle/pre-dial mode:** Press to access the redial list.

c) **During a call:** Press to decrease volume.

d) **Calls list/phonebook/redial list entry:** Press to scroll down the list.

e) **In answering machine mode:** Press to decrease message playback volume.

## 9 SPEAKER

a) **In idle/pre-dial/during a call:** Press to turn on/off the speakerphone.

b) **Calls list/phonebook/redial list entry:** Press to make a call with speakerphone.

c) **During ringing:** Press to answer a call with speakerphone.

## 10 #/PAUSE/FORMAT

a) **In idle/pre-dial/number editing mode/during a call:** Press to insert a #, press and hold to insert a pause (P).

b) **In calls list entry:** Press to toggle between 7, 8, 10 and 11 digit formats.

## 11 \*/TONE

a) **In idle/pre-dial/editing mode:** Press to insert a \*.

b) **During a call:** Press to switch from pulse to tone dialing temporarily if pulse mode was selected before. After the call has ended, the dial mode will change back to pulse.


## 12 ALPHANUMERIC KEYPAD

a) **In idle/pre-dial/editing mode/during a call:** Press to enter characters/numbers.

b) **In idle mode:** Press and hold to activate speed dial.

## 13 BASE CRADLE

## Corded Base LCD Display

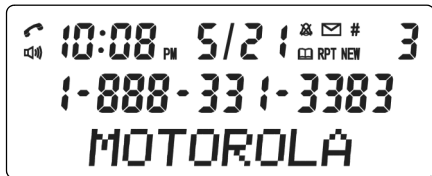

### Display icons



On when the line is in use.



On when speakerphone is turned on.



In idle mode, the current time is displayed.



In idle mode the current date is displayed.



On when the ringer volume is turned off.



On when there is new voice mail not yet listened to.  
Off when new voice mail has been listened to.



Indicates together with the sequential number of the calls list or redial list entry.



On when you are in the phonebook menu.




On when there are repeat calls from the same number.



Indicates when a new call has been received.  
Off when all new calls have been viewed.



## Overview of your cordless handset

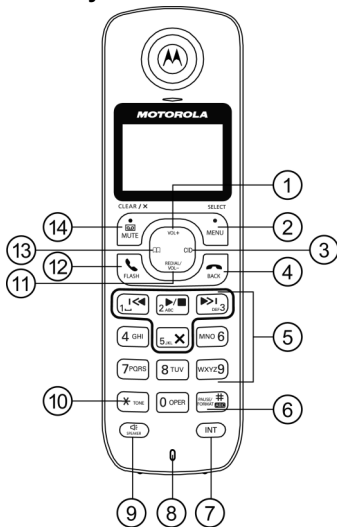

### 1 SCROLL UP/VOLUME UP

- a) **In menu mode:** Press to scroll up.
- b) **In editing mode:** Press to move the cursor to the left.
- c) **During a call:** Press to increase the volume.
- d) **Calls list/phonebook/redial list entry:** Press to scroll up the list.
- e) **In answering machine mode:** Press to increase volume.

### 2 MENU/SELECT

- a) **In idle mode:** Press to access menu list.
- b) **In menu/editing mode:** Press to confirm and save the settings.
- c) **During a call:** Press to transfer the call to another handset.
- d) **In calls list entry:** Press to save the entry to the phonebook.
- e) **In phonebook entry:** Press to access the sub-menu.

### 3 RIGHT/CALLS LIST

- a) **In idle mode/during a call:** Press to access calls list.
- b) **In editing mode:** Press to move the cursor to the right.

### 4 TALK OFF/BACK

- a) **In menu/editing mode:** Press to exit to previous level.
- b) **In pre-dial mode/phonebook/calls list/redial list entry/answering machine mode:** Press to exit to idle.
- c) **During ringing:** Press to silence the incoming ringer temporarily.
- d) **During a call:** Press to end a call.

**5 ALPHANUMERIC KEYPAD**

a) **In idle/pre-dial/editing mode/during a call:** Press to enter characters/numbers. Press and hold to activate speed dial.

**6 #/ PAUSE/ABC/FORMAT**

a) **In idle/pre-dial/number editing mode/during a call:** Press to insert a "#", press and hold to insert a pause (P).

b) **In name editing mode:** Toggle ABC/abc.

c) **In calls list entry:** Press to toggle Caller ID display format between 7, 8, 10 and 11 digits.

d) **In Phonebook list entry:** If the number is more than 16 digits, press to view the next page of remaining digits.

**7 INTERCOM**

a) **In idle mode/during a call:** Press to initiate an intercom call.

**8 MICROPHONE****9 SPEAKER**

a) **In idle/pre-dial mode:** Press to turn on/off the speakerphone.

b) **During a call:** Press to toggle between the speakerphone and the earpiece.

c) **Calls List/phonebook/redial list entry:** Press to make a call with the speakerphone.

d) **During ringing:** Press to answer a call with the speakerphone.

e) **In answering machine mode:** Press to toggle the message playback via earpiece/speakerphone.

**10 \*/ TONE**

a) **In idle/pre-dial/editing mode:** Press to insert a \*.

b) **During a call:** Press to switch from pulse to tone dialing temporarily if pulse mode was selected before. After the call has ended, the dial mode will change back to pulse.

c) **In Phonebook list entry:** If the number is more than 16 digits, press to view the previous page of remaining digits.

**11 SCROLL DOWN/VOLUME DOWN/REDIAL LIST**

a) **In idle mode:** Press to access the redial list.

b) **In menu mode:** Press to scroll down.

c) **In editing mode:** Press to move the cursor to the right.

d) **During a call:** Press to decrease volume.

e) **Calls list/phonebook/redial list entry:** Press to scroll down the list.

f) **In answering machine mode:** Press to decrease volume.

**12 TALK ON/ FLASH**

a) **In idle/pre-dial mode:** Press to make a call.

b) **Calls List/phonebook/redial list entry:** Press to make a call to the selected entry.

c) **During a call:** Press to switch another call.

d) **During an incoming call:** Press to answer a call.




## 13 LEFT/PHONEBOOK

- a) **In idle mode/during a call:** Press to access the phonebook.
- b) **In editing mode:** Press to move the cursor to the left.



## 14 ANSWERING MACHINE/MUTE/CLEAR/X

- a) **In idle mode:** Press to play the voice prompt of answering machine main menu.
- b) **In menu/phonebook entry mode:** Press to exit to the previous level.
- c) **In pre-dial/editing mode:** Press to delete one character/digit. Press and hold to delete all characters/digits.
- d) **During a call:** Press to mute/unmute the call.
- e) **In calls list entry:** Press to delete the entry. Press and hold to delete all call log entries.
- f) **In answering machine mode:** Press to delete the current message playback.
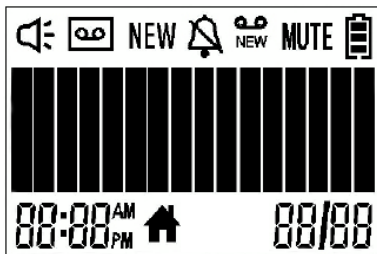
## Cordless Handset LCD display



### Display icons

-  On when speakerphone is turned on.
-  On when answering machine is turned on. Flashes when new answering machine message is received.
- NEW** Indicates when new call is received. Off when new call has been viewed.





On when ringer volume is turned off.



On when there is received new voice mail not yet listened to.

Off when new voice mail has been listened to.

## MUTE

On when a call is muted.



Full battery power level.



2/3 battery power level.



1/3 battery power level.



Flashes when low battery level is detected, needs charging.



Animation in cycle. Battery is charging.



In idle mode, the current time is displayed.

In Caller ID mode, the time of call is displayed.



On when the line is in use.

Off when the line is idle.



In idle mode the current date is displayed.


In Caller ID mode, the date of the call is displayed.




## Enjoy Your Corded Base Phone

### 3. Using the phone


#### 3.1 Making a call

1. Pick up the corded handset or press  on the corded base. Then enter the phone number.


OR

Enter the phone number and then pick up the corded handset or press  on the corded base.

#### 3.2 Speed dialing

1. In idle mode, press and hold a key from /1 to **WXYZ/9** until the number is displayed and dialed via speakerphone. Pick up the corded handset to toggle the speaker mode to earpiece mode.


#### 3.3 Answering a call

1. Pick up the corded handset or press  on the corded base to answer the incoming call.

#### 3.4 Ending a call

1. During a call, put the corded handset on the corded base cradle.


OR

If you are using the speakerphone, press  to end the call.

#### 3.5 Adjusting the volume


During a call, press **VOL+ (Base)** or **VOL-** to adjust the volume.

#### 3.6 Dialing from the redial list

1. Press **VOL-** and then scroll **VOL+ (Base)** or **VOL-** to the entry you want to redial.
2. Pick up the corded handset or press  on the corded base to dial the displayed number.



### 3.7 Dialing from the calls list

1. Press **CID (Base)** and then scroll **VOL+ (Base)** or **VOL-** to the entry you want to dial.
2. Toggle the **#/PAUSE/FORMAT** key to format the dialing number.
3. Pick up the corded base or press  on the corded base to dial the displayed number.

### 3.8 Muting a call

1. During a call, press **CLEAR** to mute the microphone, so that you can talk to someone else in the room without your caller hearing you.
2. Press **CLEAR** again to unmute.

### 3.9 Adding an entry to the phonebook

1. Press **MENU (Base)** and then **VOL+ (Base)** or **VOL-** to select **PHONEBOOK**.
2. Press **MENU (Base)** and then **VOL+ (Base)** or **VOL-** to select **ADD**.
3. Press **MENU (Base)** and then enter the name.
4. Press **MENU (Base)** and then enter the number.
5. Press **MENU (Base)** to save.



#### **NOTE**

Numbers can be up to 24 digits long and names up to 12 characters long. Entries are stored in alphabetical order.

### 3.10 Storing a phonebook entry as a one touch number

1. Press **MENU (Base)** and then **VOL+ (Base)** or **VOL-** to select **PHONEBOOK**.
2. Press **MENU (Base)** and then **VOL+ (Base)** or **VOL-** to select **SPEED DIAL**.
3. Press **MENU (Base)** and then **VOL+ (Base)** or **VOL-** to select speed dial key from **1/1** to **WXYZ/9**.
4. Press **MENU (Base)** and then **VOL+ (Base)** or **VOL-** to scroll to the entry you want.
5. Press **MENU (Base)** to save.

### 3.11 Dialing from the phonebook

1. Press  and then scroll **VOL+ (Base)** or **VOL-** to select the entry to dial. Or press **MENU (Base)** to access phonebook from menu options.
2. Pick up the corded handset or press  to dial the number.

#### **TIPS**

*Instead of scrolling to browse the phonebook entries, press the numeric key corresponding to the first letter of the entry you wish to locate. For example, pressing **ABC/2** will show the entries starting with A. Pressing **ABC/2** again will show the entries starting with B, etc.*



## 3.12 Caller ID

If you have subscribed to Caller ID, and provided the identity of the caller is not withheld, the number of the call (if provided by the network).

### NOTE

- If the telephone number is not available for incoming calls, the handset will display **UNAVAILABLE**.
- If the incoming call is from a withheld telephone number, the handset will display **PRIVATE**.
- Information about incoming calls will vary by country and network operator. Some operators may charge a subscription for their Caller ID service.

### 3.12.1 Calls list

The calls list contains details of missed and received calls. Details include the date and time of the call.

Entries are displayed in chronological order with the most recent call at the top of the list.

### NOTE

- When the calls list is full, a new call replaces the oldest one in the list.
- The received and missed calls log holds details of up to 28 calls.

- If you receive more than one call from the same number, only the most recent call is kept in the calls list. When you have missed calls (incoming calls that you haven't answered) the **NEW** icon will be displayed in the display on the corded base and all handsets registered to the base. If one handset is used to view the calls log, the icon on the other handsets remains on (for multi-pack use only).

### 3.12.2 Viewing the calls list

1. Press **CID (Base)** to enter the calls list.
2. Scroll **VOL+ (Base)** or **VOL-** to browse the calls list.

### NOTE

- When reviewing an entry from the calls list, press **#/PAUSE/FORMAT** repeatedly to display the number in a different format.

For example, if a caller number is displayed as 888-331-3383, the various formats will be:

331-3383

1-331-3383

888-331-3383

1-888-331-3383

User can choose the desired number format for local and long distance numbers before dialing or saving it into the phonebook.

- The **NEW** icon is removed once the new call has been viewed.

### 3.12.3 Saving a number for the calls list to the phonebook

1. Press **CID (Base)** to enter the calls list
2. Press **VOL+ (Base)** or **VOL-** to the entry you want.
3. Press **MENU (Base)** and then **VOL+ (Base)** or **VOL-** to select **SAVE TO PB**.
4. Press **MENU (Base)** and then enter the name.
5. Press **MENU (Base)** and then edit the number.
6. Press **MENU (Base)** to save.

### 3.12.4 Deleting a calls list entry

1. Press **CID (Base)** to enter the calls list.
2. Press **VOL+ (Base)** or **VOL-** to scroll to the entry you want.
3. Press **MENU (Base)** and then **VOL+ (Base)** or **VOL-** to select **DELETE**.
4. Press **MENU (Base)** to confirm and the entry is deleted.

### 3.12.5 Deleting the entire calls list

1. Press **CID (Base)** to enter the calls list.
2. Press **MENU (Base)** and then **VOL+ (Base)** or **VOL-** to select **DELETE ALL**.
3. Press **MENU (Base)** and then **DELETE ALL?** is displayed.
4. Press **MENU (Base)** to confirm. All entries will be deleted.

#### **NOTE**

You need to review the particular call before you delete the record from the call list.



## 3.13 Personal Settings

### Menu map

MAIN MENU	DATE & TIME	PHONEBOOK	RINGER SETUP	SETTINGS	ANS. MACHINE	RESET SETTINGS
SUB MENU	YEAR DATE TIME	ADD VIEW EDIT DELETE DELETE ALL PB CAPACITY SPEED DIAL	MELODY VOLUME KEY TONE	DIAL MODE FLASH TIME AREA CODE LANGUAGE	ANSWERER ON (if answering machine is off) Or ANSWERER OFF (if answering machine is on) ANSWER MODE RINGS TO ANS ANNOUNCEMENT BS SCREENING DEL ALL OLD REMOTE ACC. REMOTE CODE	CLEAR VMAIL ALL SETTINGS



1. Press **MENU (Base)**.
2. Press **VOL+ (Base)** or **VOL-** to scroll through the menu.
3. Press **MENU (Base)** to open a sub-menu or validate and option. Press **CLEAR** to go back to the previous menu level or cancel an action.

*If you do not press any button on the corded base for 30 seconds, the display will automatically return to standby.*

### 3.14 Intercom

This feature allows you to make internal calls, transfer external home calls between the corded base and cordless handset or other cordless handset extensions, and use the conference option.

#### 3.14.1 Calling another cordless handset or all handsets

1. Press **INT/FIND**.
2. Press **VOL+ (Base)** or **VOL-** to select the cordless handset you want to call or select **ALL HANDSETS**.
3. Press **MENU (Base)** to call the cordless handset or all handsets.




#### **NOTE**

If only one cordless handset registered, it will ring once pressing **INT/FIND** on the corded base.

If the cordless handset is not within the valid operation range, this function may not be available.

During an intercom call, you will hear an alert tone if there is an incoming external call. You need to hang up the intercom call before answering the incoming external call.


#### 3.14.2 Transferring an external call to another cordless handset

1. During an external call, press **INT/FIND**. Your caller is put on hold.
2. Press **VOL+ (Base)** or **VOL-** to select the cordless handset you want to call.
3. Press **MENU (Base)** to call the cordless handset.
4. When the other cordless handset answers by pressing /**FLASH** or , put the corded handset on the base cradle or press  on the corded base to transfer the call.


#### 3.14.3 Three-party conference call

1. During an external call, press **INT/FIND**. Your caller is put on hold.
2. Press **VOL+ (Base)** or **VOL-** to select the cordless handset you want to call.
3. Press **MENU (Base)** to call the cordless handset.
4. When the other cordless handset answers the intercom call. Press **MENU (Base)** on the corded base to join the conference call.



5. Press  on the corded base or put the corded handset on the base cradle to hang up and leave the cordless handset engaged with the caller.

### **NOTE**

*During an external call on any cordless handset, lifting up the corded handset or pressing  on the corded base will join in the call and set up a conference call.*

## **3.15 Setting the dial mode**

The default dialing mode is suitable for your country and network operator. It is unlikely that you should need to change this setting unless advised to do so.

1. Press **MENU (Base)** and then **VOL+ (Base)** or **VOL-** to select **SETTINGS**.
2. Press **MENU (Base)** and then **VOL+ (Base)** or **VOL-** to select **DIAL MODE**.
3. Press **MENU (Base)** and then **VOL+ (Base)** or **VOL-** to select **TONE** or **PULSE**.
4. Press **MENU (Base)** to save.

### **NOTE**

If pulse mode is selected, press **\*/TONE** to switch from pulse to tone dialing temporarily when dialing out. After the call is ended, the dial mode will change back to pulse.

## **3.16 Setting the flash time**

The default flash time is 600ms. It is unlikely that you should need to change this setting unless advised to do so.

1. Press **MENU (Base)** and then **VOL+ (Base)** or **VOL-** to select **SETTINGS**.
2. Press **MENU (Base)** and then **VOL+ (Base)** or **VOL-** to select **FLASH TIME**.
3. Press **MENU (Base)** and then **VOL+ (Base)** or **VOL-** to the flash time you want (8 options are available: 90MS, 100MS, 110MS, 250MS, 300MS, 400MS, 600MS, and 700MS.)
4. Press **MENU (Base)** to save.

## **3.17 Setting the area code**

1. Press **MENU (Base)** and then **VOL+ (Base)** or **VOL-** to select **SETTINGS**.
2. Press **MENU (Base)** and then **VOL+ (Base)** or **VOL-** to select **AREA CODE**.
3. Press **MENU (Base)** and then enter the area code.
4. Press **MENU (Base)** to save.



### 3.18 Resetting all settings

1. Press **MENU (Base)** and then **VOL+ (Base)** or **VOL-** to select **RESET**.
2. Press **MENU (Base)** and then **VOL+ (Base)** or **VOL-** to select **ALL SETTINGS**.
3. Press **MENU (Base)** and then select **YES** or **NO**.
4. Press **MENU (Base)** to save.

### 3.19 Using your answering machine

The answering machine records unanswered calls when it is activated.

#### 3.19.1 Turning on or off the answering machine

1. Press **MENU (Base)** and then **VOL+ (Base)** or **VOL-** to select **ANS. MACHINE**.
2. Press **MENU (Base)** and then **VOL+ (Base)** or **VOL-** to select **ANSWERER ON** or **ANSWERER OFF**. If the answering machine is turned on originally, **ANSWERER OFF** will be displayed. If the answering machine is turned off originally, **ANSWERER ON** will be displayed.
3. Press **MENU (Base)** to confirm.

#### 3.19.2 Setting the answer mode

1. Press **MENU (Base)** and then **VOL+ (Base)** or **VOL-** to select **ANS. MACHINE**.
2. Press **MENU (Base)** and then **VOL+ (Base)** or **VOL-** to select **ANSWER MODE**.
3. Press **MENU (Base)** and then **VOL+ (Base)** or **VOL-** to select the announcement modes:
  - **ANNC & REC** invites your callers to leave a message.
  - **ANNC ONLY** lets callers hear your announcement but they cannot leave a message.
4. Press **MENU (Base)** to save.

#### 3.19.3 Setting the number of rings

1. Press **MENU (Base)** and then **VOL+ (Base)** or **VOL-** to select **ANS. MACHINE**.
2. Press **MENU (Base)** and then **VOL+ (Base)** or **VOL-** to select **RINGS TO ANS**.
3. Press **MENU (Base)** and then **VOL+ (Base)** or **VOL-** to select the rings to answer (4 options are available: **TOLL SAVER**, **3 RINGS**, **4 RINGS**, and **5 RINGS**).
4. Press **MENU (Base)** to save.

#### **NOTE**

If Toll Saver setting is selected, the answering machine will pick up after two rings if there are new messages and after four rings if there are no messages.



### 3.19.4 Announcement

This is the message your callers hear on the answering machine. There are two pre-recorded outgoing messages, or you can record your own.

#### 3.19.4.1 Recording the announcement

1. Press **MENU (Base)** and then **VOL+ (Base)** or **VOL-** to select **ANS. MACHINE**.
2. Press **MENU (Base)** and then **VOL+ (Base)** or **VOL-** to select **ANNOUNCEMENT**.
3. Press **MENU (Base)** and then **VOL+ (Base)** or **VOL-** to select **RECORD**.
4. Press **MENU (Base)** and then **VOL+ (Base)** or **VOL-** to select **ANNC&REC** or **ANNC ONLY**.
5. Press **MENU (Base)** to start recording.
6. Press **MENU (Base)** again to stop recording and save the message. The just saved message is played automatically.


#### NOTE

When playing the message, press **CLEAR** will delete it and the pre-recorded message will be played automatically.

#### 3.19.4.2 Playing the announcement

1. Press **MENU (Base)** and then **VOL+ (Base)** or **VOL-** to select **ANS. MACHINE**.
2. Press **MENU (Base)** and then **VOL+ (Base)** or **VOL-** to select **ANNOUNCEMENT**.
3. Press **MENU (Base)** and then **VOL+ (Base)** or **VOL-** to select **PLAY**.
4. Press **MENU (Base)** and then **VOL+ (Base)** or **VOL-** to select **ANNC&REC** or **ANNC ONLY**.
5. Press **MENU (Base)** and then the message is played.

#### 3.19.5 Call screening on/off

You are able to hear a caller leaving a message. You can then choose to ignore the caller or pick up the call. If calls screening is set to **OFF**, when the answering machine is recording, the corded base displays **SCREENNG?** Press **MENU (Base)** to listen to the caller through the base speaker at the volume set, and the screen displays **SCREENING**. If call screening is set to **ON**, you can listen to the caller leaving the message through the base speaker when the answering machine is recording, and the  lights on.



This can be turned off if you want, as follows:

1. Press **MENU (Base)** and then **VOL+ (Base)** or **VOL-** to select **ANS. MACHINE**.
2. Press **MENU (Base)** and then **VOL+ (Base)** or **VOL-** to select **BS SCREENING**.
3. Press **MENU (Base)** and then **VOL+ (Base)** or **VOL-** to turn on/off call screening.
4. Press **MENU (Base)** to save.

### **3.19.6 Deleting all old messages**

1. Press **MENU (Base)** and then **VOL+ (Base)** or **VOL-** to select **ANS. MACHINE**.
2. Press **MENU (Base)** and then **VOL+ (Base)** or **VOL-** to select **DEL ALL OLD**.
3. Press **MENU (Base)** and display will show **DELETE ALL?**.
4. Press **MENU (Base)** to confirm.

### **3.19.7 Remote access**

Remote access allows you to operate your answering machine and listen to your messages by calling your phone from another phone.

Turn the remote access on/off

1. Press **MENU (Base)** and then **VOL+ (Base)** or **VOL-** to select **ANS. MACHINE**.
2. Press **MENU (Base)** and then **VOL+ (Base)** or **VOL-** to select **REMOTE ACC.**.
3. Press **MENU (Base)** to select **ON** or **OFF**.
4. Press **MENU (Base)** to confirm.

To remote access your answering system from external line, you need to key in 4-digit security code at the external terminal (default code is 0000).



After entering the remote access mode, press the following keys to carry out your desired function.

Press...	To...
1	Repeat the message
2	Play/Stop the current message playback
3	Skip forward to the next message
4	Toggle Answer Off/Announce Only/ Announce and Record modes
5	Delete the message
7	Listen to the Main Menu (for Full Voice prompts only)

### 3.19.8 Setting the security code



This is used to change the remote access PIN if necessary.

1. Press **MENU (Base)** and then **VOL+ (Base)** or **VOL-** to select **ANS. MACHINE**.
2. Press **MENU (Base)** and then **VOL+ (Base)** or **VOL-** to select **REMOTE CODE**.
3. Press **MENU (Base)** and then enter the 4-digit remote code.
4. Press **MENU (Base)** to save.


## Enjoy Your Cordless Handset

### 4. Using the phone

#### 4.1 Making a call

1. Enter the phone number and then press /FLASH or /SPEAKER to dial the phone number.

#### 4.2 Speed dialing

1. In idle mode, press and hold a key from /1 to **WXYZ/9** until the number is displayed and dialed.

#### 4.3 Answering a call

1. Press /FLASH or /SPEAKER to answer the incoming call.



#### 4.4 Ending a call

1. During a call, press /BACK or put the handset on the base.



#### 4.5 Adjusting volume

1. During a call, press **VOL+** or **REDIAL/VOL-** to adjust the volume.



#### 4.6 Muting a call

1. During a call, press /MUTE to mute the microphone, so that you can talk to someone else in the room without your caller hearing you.
2. Press /MUTE again to unmute.


#### 4.7 Dialing from the redial list

1. In idle mode, press **REDIAL/VOL-** and then **VOL+** or **REDIAL/VOL-** to scroll and select an entry you want to dial.
2. Press /FLASH or /SPEAKER to dial the number.

#### 4.8 Dialing from the calls list

1. Press **CID** then **VOL+** or **REDIAL/VOL-** to select a desired call list entry,
2. Press /FLASH or /SPEAKER to dial the number.

#### 4.9 Adding an entry to the phonebook

1. Press .
2. Press **MENU** and then **VOL+** or **REDIAL/VOL-** to scroll and select **ADD**.




3. Press **MENU** and then enter the name.
4. Press **MENU** and then enter the number.
5. Press **MENU** to save.




### NOTE

Numbers can be up to 24 digits long and names up to 16 characters long. Entries are stored in alphabetical order.

## 4.10 Storing a phonebook entry as a one touch number

1. Press .
2. Press **MENU** and then **VOL+** or **REDIAL/VOL-** to select **SPEED DIAL**.
3. Press **MENU** and then **VOL+** or **REDIAL/VOL-** to select the speed dial key location from **1<</> / </> / 1** to **WXYZ/9**.
4. Press **MENU** and then **VOL+** or **REDIAL/VOL-** to scroll to the entry you want.
5. Press **MENU** to save.

## 4.11 Dialing from the phonebook

1. Press  and then **VOL+** or **REDIAL/VOL-** to scroll and select the entry you want to dial.
2. Press /**FLASH** or /**SPEAKER** to dial the number.

### TIPS

*Instead of scrolling to browse the phonebook entries, press the numeric key corresponding to the first letter of the entry you wish to locate. For example, pressing 2 will show the entries starting with A. Pressing 2 again will show the entries starting with B, etc.*

## 4.12 Caller ID

If you have subscribed to Caller ID service, and provided the identity of the caller is not withheld, the number of the caller will be displayed together with the date and time of the call (if provided by the network).

### NOTE

- If the telephone number is not available for incoming calls, the handset will display **UNAVAILABLE**.
- If the incoming call is from a withheld telephone number, the handset will display **PRIVATE**.
- Information about incoming calls will vary by country and network operator. Some operators may charge a subscription for their Caller ID service.

### 4.12.1 Calls list

The calls list contains details of missed and received calls. Details include the date and time of the call. Entries are displayed in chronological order with the most recent call at the top of the list.

**NOTE**

- When the calls list is full, a new call replaces the oldest one in the list.
- Details of up to 30 calls may be stored.
- If you receive more than one call from the same number, only the most recent call is kept in the calls list. When you have missed calls (incoming calls that you haven't answered) the **NEW** icon will be displayed in the display on all handsets registered to the base. If one handset is used to view the calls log, the **NEW** icon on the other handsets remains on (for multi-pack use only).

**4.12.2 Viewing the calls list**

1. Press **CID** to enter the calls list.
2. Scroll **VOL+** or **REDIAL/VOL-** to through the calls list.

**NOTE**

- When reviewing an entry from the calls list, press **#** **[ABC]/PAUSE/FORMAT** repeatedly to display the number in different format.

For example, if a caller number is displayed as 888-331-3383, the various formats will be:

331-3383  
1-331-3383  
888-331-3383  
1-888-331-3383

You may choose the desired number format for local and long distance numbers before dialing or saving it into the phonebook.

- The **NEW** icon is removed once the new call has been viewed.

**4.12.3 Saving a number from the calls list to the phonebook**

1. Press **CID** to enter the calls list.
2. Press **VOL+** or **REDIAL/VOL-** to select the entry you want.
3. Press **MENU** and then enter the name if desired.
4. Press **MENU** and then edit the number if desired.
5. Press **MENU** to save.

**4.12.4 Deleting a calls list entry**

1. Press **CID** to enter the calls list.
2. Press **VOL+** or **REDIAL/VOL-** to scroll to the entry you want.
3. Press **[☒]/MUTE** to delete the entry.

**4.12.5 Deleting the entire calls list**

1. Press **CID** to enter the calls list.
2. Press and hold **[☒]/MUTE**. **DELETE ALL CALL LOG ENTRIES?** is displayed.
3. Press **MENU** to confirm. All entries will be deleted.

**NOTE**

You need to review a call before you delete the record from the call list.



## 4.13 Personal Settings

### Menu map

MAIN MENU	DATE & TIME	PHONEBOOK	SETUP HS	SETUP BS	ANS MACHINE	RESET SETTINGS
SUB MENU	YEAR DATE TIME	VIEW ADD EDIT DELETE DELETE ALL PB CAPACITY SPEED DIAL	RINGER TONE RINGER VOLUME KEY TONE LOW BATT TONE OUT RANGE TONE HANDSET NAME LANGUAGE LCD CONTRAST REGISTRATION	DIAL MODE FLASH TIME AREA CODE	ANSWERER ON (if answering machine is off) Or ANSWERER OFF (if answering machine is on) ANSWERER MODE RINGS TO ANSWER ANNOUNCEMENT RECORD MEMO CALL SCREENING DEL ALL OLD MSG REMOTE ACCESS SECURITY CODE	CLR VOICE MAIL ALL SETTINGS





1. Press **MENU**.
2. Press **VOL+** or **REDIAL/VOL-** to scroll through the menu.
3. Press **MENU** for opening sub-menus and /or saving.
4. Press /**BACK** to go back to the previous menu level or cancel an action.

*If you do not press any button on the handset for 30 seconds, the display will automatically return to standby. It will also return to standby when the handset is placed on the base or charger.*

## 4.14 Intercom

This feature is only available when there are at least two registered handsets. It allows you to make internal calls, transfer external calls from one handset to another handset, and use the conference option.

### 4.14.1 Calling another handset

1. Press **INT**. Except for the originating handset, all registered handsets will be displayed in the list.
2. Press **VOL+** or **REDIAL/VOL-** to select the handset you want to call.
3. Press **MENU** to call the handset.
4. Press /**BACK** to hang up.

### NOTE

If the handset is not within the valid operation range, this function may not be available. During an intercom call, you will hear an alert tone if there is an incoming external call. You need to press /**BACK** to hang up the intercom call before answering the incoming external call.

### 4.14.2 Transferring a call to another handset

1. During an external call, press **INT**.
  - Your call is put on hold.
2. Press **VOL+** or **REDIAL/VOL-** to select the handset you want to call.
3. Press **MENU** to call the handset.
4. When the other handset answers by pressing /**FLASH** or /**SPEAKER**, press /**BACK** to transfer the call. If the other handset does not answer, press /**MUTE** to talk to your caller again.

### 4.14.3 Three-party conference call

1. During an external call, press **INT**.
  - Your caller is put on hold.
2. Press **VOL+** or **REDIAL/VOL-** to select the handset you want to call.
3. Press **MENU** to call the handset.



4. When the other handset answers the intercom call, press **MENU** on the calling handset to set up the conference call.
5. Press **⏪/BACK** on any handset to end a three-party conference call and leave the other handset engaged with the caller.

### NOTE

During an external call on the corded base, pressing **⏪/FLASH** or **🔊/SPEAKER** on any cordless handset will join in the call and set up a conference call.

## 4.15 Setting the dial mode

The default dialing mode is suitable for your country and network operator. It is unlikely that you should need to change this setting unless advised to do so.

1. Press **MENU** and then **VOL+** or **REDIAL/VOL-** to select **SETUP BS.**
2. Press **MENU** to select **DIAL MODE.**
3. Press **MENU** and then **VOL+** or **REDIAL/VOL-** to select **TONE** or **PULSE.**
4. Press **MENU** to save.

### NOTE

If the pulse mode is selected, press **\*/TONE** to switch from pulse to tone dialing temporarily when dialing out. After the call is ended, the dial mode will change back to pulse.

## 4.16 Setting the flash time

The default flash time is 600MS. It is unlikely that you should need to change this setting unless advised to do so.

1. Press **MENU** and then **VOL+** or **REDIAL/VOL-** to select **SETUP BS.**
2. Press **MENU** and then **VOL+** or **REDIAL/VOL-** to select **FLASH TIME.**
3. Press **MENU** and then **VOL+** or **REDIAL/VOL-** to the flash time you want. (8 options are available : 90, 100, 110, 250, 300, 400, 600 and 700MS)
4. Press **MENU** to save.

## 4.17 Setting the area code

1. Press **MENU** and then **VOL+** or **REDIAL/VOL-** to select **SETUP BS.**
2. Press **MENU** and then **VOL+** or **REDIAL/VOL-** to select **AREA CODE.**
3. Press **MENU** and then enter the area code.
4. Press **MENU** to save.



## 4.18 Registration

### 4.18.1 Registering a cordless handset

Up to 5 cordless handsets can be registered to a corded base. The original cordless handset is pre-registered to use. Additional handsets must be registered to the corded base before you can use them.

To register an additional cordless handset,

1. Press **MENU** and then **VOL+** or **REDIAL/VOL-** to select **SETUP HS.**
2. Press **MENU** and then **VOL+** or **REDIAL/VOL-** to select **REGISTRATION.**
3. Press **MENU** and then **VOL+** or **REDIAL/VOL-** to select **YES** or **NO.**
4. Select **YES** then press **MENU** to enter the registration procedure as follows:
  1. Press and hold **INT/FIND** for around 4 seconds on the corded base.
  2. Place the unregistered cordless handset on the charger.
  3. A confirmation tone is generated if registration is successful. **HANDSET X** is displayed where **X** denotes the number of handsets, and then the phone returns to idle.

4. To register an originally unregistered handset, follow steps 1 through 3 above.

## 4.19 Resetting all settings

1. Press **MENU** and then **VOL+** or **REDIAL/VOL-** to select **RESET SETTINGS.**
2. Press **MENU** and then **VOL+** or **REDIAL/VOL-** to select **ALL SETTINGS.**
3. Press **MENU** to select **YES.** All personalized settings will be reset to default.

### **NOTE**

All of your phonebook entries, calls list, and redial list, will remain unchanged.

## 4.20 Using your answering machine

### 4.20.1 Playing messages

1. Press **[∞]/MUTE** on the handset from idle mode. New messages will be played followed by any older messages



2. During the message playback, press the keys below on the handset to perform the following functions:

<b>I◀/▶/1</b>	Press to repeat the current message from the beginning. Press twice to playback the previous message
<b>▶/■/ABC/2</b>	Press to stop the current message playback
<b>▶▶/I/DEF/3</b>	Skip to play the next message
<b>VOL+</b>	Increase the volume
<b>REDIAL/VOL-</b>	Decrease the volume
<b>☐/MUTE</b>	Delete the current message and the next message will be played
<b>🔊 /SPEAKER</b>	Toggle the message playback via earpiece/speakerphone
<b>📞 /BACK</b>	Exit to idle

### NOTE

When you are on a call, the answering system will not answer the second incoming call.

#### 4.20.2 Turning on or off the answering machine

1. Press **MENU** and then **VOL+** or **REDIAL/VOL-** to select **ANSWER MACHINE**.
2. Press **MENU** and then **VOL+** or **REDIAL/VOL-** to select **ANSWERER ON** or **ANSWERER OFF**. If the answering machine is turned on originally, **ANSWERER OFF** will be

displayed. If the answering machine is turned off originally, **ANSWERER ON** will be displayed.

3. Press **MENU** to confirm.

#### 4.20.3 Setting the announcement mode

1. Press **MENU** and then **VOL+** or **REDIAL/VOL-** to select **ANSWER MACHINE**.
2. Press **MENU** and then **VOL+** or **REDIAL/VOL-** to select **ANSWERER MODE**.
3. Press **MENU** and then **VOL+** or **REDIAL/VOL-** to select the announcement modes:
  - **ANNC & RECORD** invites your callers to leave a message.
  - **ANNOUNCE ONLY** lets callers hear your announcement but they cannot leave a message.
4. Press **MENU** to save.

#### 4.20.4 Setting the number of rings

1. Press **MENU** and then **VOL+** or **REDIAL/VOL-** to select **ANSWER MACHINE**.
2. Press **MENU** and then **VOL+** or **REDIAL/VOL-** to select **RINGS TO ANSWER**.
3. Press **MENU** and then **VOL+** or **REDIAL/VOL-** to select the rings to answer. (4 options are available: **TOLL SAVER**, **3**, **4**, or **5 RINGS**).
4. Press **MENU** to save.

**NOTE**

If the Toll Saver setting is selected, the answering machine will pick up after two rings if there are new messages, and after four rings if there is no message.


**4.20.5 Announcement**

This is the message your callers hear on the answering machine. There are two pre-recorded outgoing messages, or you can record your own.

**4.20.5.1 Recording the announcement**

1. Press **MENU** and then **VOL+** or **REDIAL/VOL-** to select **ANSWER MACHINE**.
2. Press **MENU** and then **VOL+** or **REDIAL/VOL-** to select **ANNOUNCEMENT**.
3. Press **MENU** to select **RECORD**.
4. Press **MENU** and then **VOL+** or **REDIAL/VOL-** to select the answer mode **ANNC & RECORD** or **ANNOUNCE ONLY**.
5. Press **MENU** to start recording after the beep.
6. Press **MENU** again to stop recording and save the message. The just saved message is played automatically.

**NOTE**

When playing the message, pressing /**MUTE** will delete it and the pre-recorded message will be played automatically.

**4.20.5.2 Playing the announcement**

1. Press **MENU** and then **VOL+** or **REDIAL/VOL-** to select **ANSWER MACHINE**.
2. Press **MENU** and then **VOL+** or **REDIAL/VOL-** to select **ANNOUNCEMENT**.
3. Press **MENU** and then **VOL+** or **REDIAL/VOL-** to select **PLAY**.
4. Press **MENU** and then **VOL+** or **REDIAL/VOL-** to select the answer mode **ANNC&RECORD** or **ANNOUNCE ONLY**.
5. Press **MENU** and the message is played.

**4.20.6 Recording a memo**

You can record a memo which is stored in your answering machine and played back like a normal message.

1. Press **MENU** and then **VOL+** or **REDIAL/VOL-** to select **ANSWER MACHINE**.
2. Press **MENU** and then **VOL+** or **REDIAL/VOL-** to select **RECORD MEMO**.
3. Press **MENU** to start recording.
4. Press **MENU** again to stop recording and save the message. The just saved message is played automatically.



## NOTE

When playing the message, pressing **[MUTE]** will delete it permanently.

### 4.20.7 Call screening on / off

Call screening allows you to hear the message being recorded, and if you choose you may interrupt the message and take the call.

1. When the answering machine is recording, the cordless handset displays **SCREENING?**.
2. Press **MENU** to listen to the caller through the handset earpiece, the handset displays **CALL SCREENING**.
3. Press **[SPEAKER]** to listen via the handset loudspeaker.
4. Press **[MUTE]** to stop screening and leave the answering machine to record the message.
5. Press **[FLASH]** to talk to the caller and stop recording.

### 4.20.8 Deleting all old messages

1. Press **MENU** and then **VOL+** or **REDIAL/VOL-** to select **ANSWER MACHINE**.
2. Press **MENU** and then **VOL+** or **REDIAL/VOL-** to select **DEL ALL OLD MSG**.
3. Press **MENU** to confirm.

## NOTE

When the answering machine is full, **[MUTE]** will flash if there are new messages. **ERASE SOME ANSWERER MSG** will toggle within 2 seconds with **MEMORY FULL**. At this point, delete some messages to free up memory.

### 4.20.9 Remote access

Remote access allows you to operate your answering machine and listen to your messages by calling from external line.

Turn the remote access on/off

1. Press **MENU** and then **VOL+** or **REDIAL/VOL-** to select **ANSWER MACHINE**.
2. Press **MENU** and then **VOL+** or **REDIAL/VOL-** to select **REMOTE ACCESS**.
3. Press **MENU** and then **VOL+** or **REDIAL/VOL-** to select **ON** or **OFF**.
4. Press **MENU** to confirm.

To remote access your answering system from external line, you need to key in 4-digit security code at the external terminal (default code is 0000).

After entering the remote access mode, press the following keys to carry out your desired function.

<b>Press...</b>	<b>To...</b>
<b>1</b>	Repeat the message
<b>2</b>	Play/Stop the current message playback
<b>3</b>	Skip forward to the next message
<b>4</b>	Toggle Answer Off/Announce Only/ Announce and Record modes
<b>5</b>	Delete the message
<b>7</b>	Listen to the Main Menu (for full voice prompts only)

#### **4.20.10 Setting the security code**

This is used to change the remote access PIN if necessary.

1. Press **MENU** and then **VOL+** or **REDIAL/VOL-** to select **ANSWER MACHINE**.
2. Press **MENU** and then **VOL+** or **REDIAL/VOL-** to select **SECURITY CODE**.
3. Press **MENU** and then enter the 4- digit security code.
4. Press **MENU** to save.



## 5. Help

### **The icon is not scrolling when the cordless handset is placed on the charger**

- Incomplete battery contact - adjust the cordless handset on the charger.
- Dirty contact - clean the battery contact by wiping with an alcohol moistened cloth.
- Battery is full - charging is not necessary at this time.

### **No dial tone**

- If there is no base power, check the connections. Reset the phone by unplugging then plugging it back into an electrical outlet.
- If the cordless handset batteries are empty, recharge the battery pack for at least 24 hours.
- Move the cordless handset closer to the corded base.
- Be sure to use only the provided telephone cords.

### **Poor audio quality**

- If the corded base is too close to electrical appliances, reinforced concrete walls, or metal door frames, move the corded base from these areas.

### **No ring tone**

- The ringer may be off.
- The volume may need to be increased.

### **Caller ID does not work**

- Check your subscription with your network operator.
- If you subscribe to high-speed internet service (Digital Subscriber Line - DSL) through your telephone lines, you must install a DSL filter between the telephone base and the telephone wall jack. The filter will prevent noise and caller ID problems caused by DSL interference. Please contact your DSL service provider for more information about DSL filters.

### **A phonebook entry cannot be stored**

- The phonebook is full. Delete an entry to free memory.

### **No display**

- Try recharging or replacing the rechargeable battery pack
- Reset the corded base. Unplug the unit's electrical, then plug it back in.
- If the LED is not lit up, then try to unplug the unit's electrical power, and then plug it back in.



***If the cordless handset disconnects from the corded base during a phone call***

- Check that the power cord is connected properly into the corded base.
- Check that the power adapter is connected properly into the electrical outlet.
- Move the cordless handset closer to the corded base. It may be out of range.
- Reset the corded base by unplugging the unit's electrical power.
- Reset the cordless handset by unplugging and re-plugging its battery pack. Wait for around 15 seconds and re-plug the power again. Allow up to one minute for the cordless handset to synchronize with the registered corded base again.

***Noise interference on your radio or television***

- Your corded base or cordless charger may be too close. Move it as far away as possible.

**6. General information****If your product is not working properly...**

1. Read this User's Guide.
2. Visit our website: [www.motorola.com](http://www.motorola.com)
3. Contact Customer Service in the US and Canada at 1-888-331-3383.

To order a replacement battery pack contact customer service or visit our website.

**Important safety instructions**

Follow these safety precautions when using your phone to reduce the risk of fire, electric shock, and injury to persons or property:

1. Keep all vents and openings of the phone unblocked. Do not set the phone on a heating register or over a radiator. Ensure that proper ventilation is provided at the installation site.
2. Do not use while wet or while standing in water.
3. Do not use this product near water (for example, near a bath tub, kitchen sink, or swimming pool).
4. Do not allow anything to rest on the power cord. Place the power cord so that it will not be walked on.
5. Never insert objects of any kind into the product vents as that may result in fire or electric shock.



6. Unplug this product from the electrical outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.
7. Do not disassemble this product. If service or repair work is required, contact the customer service helpline found in this User's Guide.
8. Do not overload wall outlets and extension cords.
9. Avoid using during an electrical storm. Use a surge protector to protect the equipment.
10. Do not use this phone to report a gas leak, especially if you are in the vicinity of the gas line.

### **CAUTION**

*To reduce the risk of fire, use only No. 26 AWG or larger UL Listed or CSA Certified Telecommunication Line Cord.*

### **Unplug this cordless phone immediately from an outlet if:**

- The power cord or plug is damaged or frayed.
- Liquid has been spilled on the product.
- The product has been exposed to rain or water. Do not retrieve the handset or base until after you have unplugged the power and phone from the wall. Then retrieve the unit by the unplugged cords.
- The product has been dropped or the cabinet has been damaged.

- The product exhibits a distinct change in performance.

### **Installation Guidelines**

1. Read all instructions and save them for future reference.
2. Follow all warnings and instructions marked on the product.
3. Do not install this product near a bath tub, sink, or shower.
4. Operate this phone using only the power source that is indicated on the marking label. If you are unsure of the power supply to your home, consult with your dealer or local power company.
5. Do not place this product on an unstable cart, stand, or table. This product may fall, causing serious damage to the product.
6. Adjust only those controls that are covered by the operating instructions. Improper adjustment of other controls may result in damage and will often require extensive work to restore the product to normal operation.
7. Clean this product with a soft, damp cloth. Do not use chemicals or cleaning agents to clean this phone.



8. Use only the power supply that came with this unit. Using other power supplies may damage the unit.
  9. Because this phone operates on electricity, you should have at least one phone in your home that operates without electricity in case of a power outage.
  10. To avoid interference to nearby appliances, do not place the base of the phone on or near a TV, microwave oven, or VCR.
- The rechargeable battery packs that power this product must be disposed of properly and may need to be recycled. Refer to the battery label for battery type. Contact your local recycling center for proper disposal methods.

**SAVE THESE INSTRUCTIONS**

**CAUTION**

*To maintain compliance with the FCC's RF exposure guidelines, place the base unit at least 20 cm from nearby persons.*

**Battery Safety Instructions**

- Do not burn, disassemble, mutilate, or puncture the battery. The battery contains toxic materials that could be released, resulting in injury.

**CAUTION**

*There is a risk of explosion if you replace the battery with an incorrect battery type. Use only the battery pack that came with your phone or an authorized replacement recommended by the manufacturer.*

- Keep battery packs out of the reach of children.
- Remove battery packs if storing over 30 days.
- Do not dispose of battery packs in fire, which could result in explosion.

**Consumer Products and Accessories Limited Warranty ("Warranty")**

Thank you for purchasing this Motorola branded product manufactured under license by Binatone Electronics International LTD ("BINATONE").

***What Does this Warranty Cover?***

Subject to the exclusions contained below, BINATONE warrants that this Motorola branded product ("Product") or certified accessory ("Accessory") sold for use with this product that it manufactured to be free from defects in materials and workmanship under normal consumer usage for the period outlined below. This Warranty is your exclusive warranty and is not transferable.

***Who is covered?***

This Warranty extends only to the first consumer purchaser, and is not transferable.

***What will BINATONE do?***

BINATONE or its authorized distributor at its option and within a commercially reasonable time, will at no charge



repair or replace any Products or Accessories that does not conform to this Warranty. We may use functionally equivalent reconditioned/ refurbished/ pre-owned or new Products, Accessories or parts.

### **What Other Limitations Are There?**

ANY IMPLIED WARRANTIES, INCLUDING WITHOUT LIMITATION THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED TO THE DURATION OF THIS LIMITED WARRANTY, OTHERWISE THE REPAIR OR REPLACEMENT PROVIDED UNDER THIS EXPRESS LIMITED WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER, AND IS PROVIDED IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OF IMPLIED. IN NO EVENT SHALL MOTOROLA OR BINATONE BE LIABLE, WHETHER IN CONTRACT OR TORT (INCLUDING NEGLIGENCE) FOR DAMAGES IN EXCESS OF THE PURCHASE PRICE OF THE PRODUCT OR ACCESSORY, OR FOR ANY INDIRECT, INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES OF ANY KIND, OR LOSS OF REVENUE OR PROFITS, LOSS OF BUSINESS, LOSS OF INFORMATION OR OTHER FINANCIAL LOSS ARISING OUT OF OR IN CONNECTION WITH THE ABILITY OR INABILITY TO

USE THE PRODUCTS OR ACCESSORIES TO THE FULL EXTENT THESE DAMAGES MAY BE DISCLAIMED BY LAW.

Some jurisdictions do not allow the limitation or exclusion of incidental or consequential damages, or limitation on the length of an implied warranty, so the above limitations or exclusions may not apply to you. This Warranty gives you specific legal rights, and you may also have other rights that vary from one jurisdiction to another.

<b>Products Covered</b>	<b>Length of Coverage</b>
<b>Consumer Products</b>	<b>One (1) year</b> from the date of the products original purchase by the first consumer purchaser of the product.
<b>Consumer Accessories</b>	<b>Ninety (90) days</b> from the date of the accessories original purchase by the first consumer purchaser of the product.
<b>Consumer Products and Accessories that are Repaired or Replaced</b>	<b>The balance of the original warranty or for ninety (90) days</b> from the date returned to the consumer, whichever is longer.



## Exclusions

**Normal Wear and Tear.** Periodic maintenance, repair and replacement of parts due to normal wear and tear are excluded from coverage.

**Batteries.** Only batteries whose fully charged capacity falls below 80% of their rated capacity and batteries that leak are covered by this Warranty.

**Abuse & Misuse.** Defects or damage that result from: (a) improper operation, storage, misuse or abuse, accident or neglect, such as physical damage (cracks, scratches, etc.) to the surface of the product resulting from misuse; (b) contact with liquid, water, rain, extreme humidity or heavy perspiration, sand, dirt or the like, extreme heat, or food; (c) use of the Products or Accessories for commercial purposes or subjecting the Product or Accessory to abnormal usage or conditions; or (d) other acts which are not the fault of MOTOROLA or BINATONE, are excluded from coverage.

**Use of Non-Motorola branded Products and Accessories.** Defects or damage that result from the use of Non-Motorola branded or certified Products or Accessories or other peripheral equipment are excluded from coverage. Unauthorized Service or Modification. Defects or damages resulting from service, testing, adjustment, installation, maintenance,

alteration, or modification in any way by someone other than MOTOROLA, BINATONE or its authorized service centers, are excluded from coverage.

**Altered Products.** Products or Accessories with (a) serial numbers or date tags that have been removed, altered or obliterated; (b) broken seals or that show evidence of tampering; (c) mismatched board serial numbers; or (d) nonconforming or non-Motorola branded housings, or parts, are excluded from coverage.

**Communication Services.** Defects, damages, or the failure of Products or Accessories due to any communication service or signal you may subscribe to or use with the Products or Accessories is excluded from coverage.

### ***How to Obtain Warranty Service or Other Information?***

To obtain service or information, please call:

**US and Canada: 1-888-331-3383**

You will receive instructions on how to ship the Products or Accessories at your expense and risk, to a BINATONE Authorized Repair Center.

To obtain service, you must include: (a) the Product or Accessory; (b) the original proof of purchase (receipt)



which includes the date, place and seller of the Product; (c) if a warranty card was included in your box, a completed warranty card showing the serial number of the Product; (d) a written description of the problem; and, most importantly; (e) your address and telephone number.

These terms and conditions constitute the complete warranty agreement between you and BINATONE regarding the Products or Accessories purchased by you, and supersede any prior agreement or representations, including representations made in any literature publications or promotional materials issued by BINATONE or representations made by any agent employee or staff of BINATONE, that may have been made in connection with the said purchase.

## **FCC, ACTA and IC regulations**

### **FCC Part 15**

This equipment has been tested and found to comply with the requirements for a Class B digital device under Part 15 of the Federal Communications Commission (FCC) rules. These requirements are intended to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the

instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications to this equipment not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Privacy of communications may not be ensured when using this telephone.



To ensure safety of users, the FCC has established criteria for the amount of radio frequency energy that can be safely absorbed by a user or bystander according to the intended usage of the product. This product has been tested and found to comply with the FCC criteria. The Handset may be safely held against the ear of the user. The telephone base shall be installed and used such that parts of the user's body other than the hands are maintained at a distance of approximately 20 cm (8 inches) or more.

This Class B digital apparatus complies with Canadian ICES-003.

### **FCC Part 68 and ACTA**

This equipment complies with Part 68 of the FCC rules and with technical requirements adopted by the Administrative Council for Terminal Attachments (ACTA). The label on the back or bottom of this equipment contains, among other things, a product identifier in the format US: AAAEQ##TXXXX. This identifier must be provided to your local telephone company upon request.

The plug and jack used to connect this equipment to premises wiring and the telephone network must comply with applicable Part 68 rules and technical requirements adopted by ACTA. A compliant telephone cord and

modular plug is provided with this product. It is designed to be connected to a compatible modular jack that is also compliant. An RJ11 jack should normally be used for connecting to a single line and an RJ14 jack for two lines. See Installation Instructions in the User's Guide.

The Ringer Equivalence Number (REN) is used to determine how many devices you may connect to your telephone line and still have them ring when you are called. The REN for this product is encoded as the 6th and 7th characters following the US: in the product identifier (e.g., if ## is 03, the REN is 0.3). In most, but not all areas, the sum of all RENs should be five (5.0) or less. For more information, please contact your local telephone company.

This equipment may not be used with Party Lines. If you have specially wired alarm dialing equipment connected to your telephone line, ensure the connection of this equipment does not disable your alarm equipment. If you have questions about what will disable alarm equipment, consult your telephone company or a qualified installer.

If this equipment is malfunctioning, it must be unplugged from the modular jack until the problem has been corrected. Repairs to this telephone equipment can only be made by the manufacturer or its authorized



agents. For repair procedures, follow the instructions outlined under the Limited Warranty.

If this equipment is causing harm to the telephone network, the telephone company may temporarily discontinue your telephone service. The telephone company is required to notify you before interrupting service. If advance notice is not practical, you will be notified as soon as possible. You will be given the opportunity to correct the problem and the telephone company is required to inform you of your right to file a complaint with the FCC. Your telephone company may make changes in its facilities, equipment, operation, or procedures that could affect the proper functioning of this product. The telephone company is required to notify you if such changes are planned.

If this product is equipped with a corded or cordless handset, it is hearing aid compatible.

If this product has memory dialing locations, you may choose to store emergency telephone numbers (e.g., police, fire, medical) in these locations. If you do store or test emergency numbers, please:

- Remain on the line and briefly explain the reason for the call before hanging up.

- Perform such activities in off-peak hours, such as early morning or late evening.

### **Industry Canada**

Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference, including interference that may cause undesired operation.

The term "IC: " before the certification/registration number only signifies that the Industry Canada technical specifications were met.

The Ringer Equivalence Number (REN) for this terminal equipment is 0.1. The REN is an indication of the maximum number of devices allowed to be connected to a telephone interface. The termination on an interface may consist of any combination of devices subject only to the requirement that the sum of the RENs of all the devices does not exceed five.

This product meets the applicable Industry Canada technical specifications.





---

**Technical Specifications**

---

RF frequency band	1921.536 MHz — 1928.448 MHz
-------------------	--------------------------------

---

Channels	5
----------	---

---

Operating temperature	5°C to 45°C
-----------------------	-------------

---

Corded base voltage (AC voltage, 60Hz)	96 — 130 Vms
---	--------------

---

Corded base voltage (Adapter output)	6V DC, 400mA
---	--------------

---

Cordless Handset voltage	2.4V 500mAh Ni-MH battery pack
-----------------------------	-----------------------------------

---

Charger voltage (Adapter output)	6V AC, 300mA
-------------------------------------	--------------

---



**MOTOROLA**

Manufactured, distributed or sold by Binatone Electronics International LTD., official licensee for this product. MOTOROLA and the Stylized M Logo are trademarks or registered trademarks of Motorola Trademark Holdings, LLC. and are used under license. All other trademarks are the property of their respective owners.

© 2011 Motorola Mobility, Inc. All rights reserved.



Version 3.0

Printed in China



## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>