




motorola W510

MOTOMANUAL

www.motorola.com

HELLOMOTO


Introducing your new Motorola W510 GSM wireless phone. Here's a quick anatomy lesson.

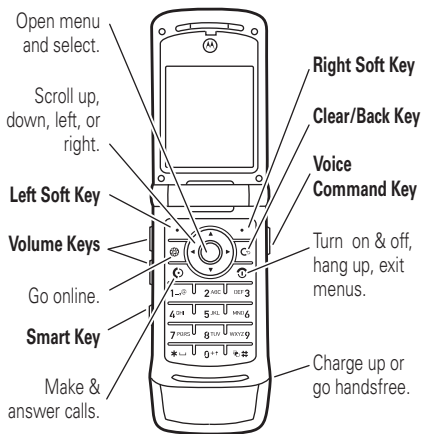

To change your home screen shortcuts and your main menu appearance, see page 57.
For Push to Talk (PTT) details, see page 17.


Home Screen



1 Press and hold the **Power Key**  for a few seconds or until the display lights up to turn on your phone.

2 Press the **Center Key**  to open the **Main Menu**.

Main Menu

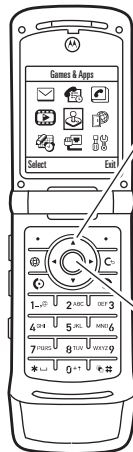

3 Press the **Navigation Key** **up, down, left, or right**  to highlight a menu feature.

4 Press the **Center Key**  to select it.

Motorola, Inc.
Consumer Advocacy Office
1307 East Algonquin Road
Schaumburg, IL 60196

www.hellomoto.com

Motorola Argentina S.A
Suipacha 1111 - Piso 18
C1008AAW Buenos Aires
ARGENTINA

Certain mobile phone features are dependent on the capabilities and settings of your service provider's network. Additionally, certain features may not be activated by your service provider, and/or the provider's network settings may limit the feature's functionality. Always contact your service provider about feature availability and functionality. All features, functionality, and other product specifications, as well as the information contained in this user's guide are based upon the latest available information and are believed to be accurate at the time of printing. Motorola reserves the right to change or modify any information or specifications without notice or obligation.

MOTOROLA and the Stylized M Logo are registered in the US Patent & Trademark Office. All other product or service names are the property of their respective owners. The Bluetooth trademarks are owned by their proprietor and used by Motorola, Inc. under license. Java and all other Java-based marks are trademarks or registered trademarks of Sun Microsystems, Inc. in the U.S. and other countries. Microsoft, Windows and Windows Me are

registered trademarks of Microsoft Corporation; and Windows XP is a trademark of Microsoft Corporation.

© Motorola, Inc., 2007.

Caution: Changes or modifications made in the radio phone, not expressly approved by Motorola, will void the user's authority to operate the equipment.

Manual Number: 6809513A64-0

contents

menu map	6	digital audio player	26	lock & unlock external keys	52
FCC Notice	8	photos	28	customize	53
Use and Care	9	videos	31	talking phone	53
essentials	10	text messages	33	ring style	53
about this guide	10	memory card	35	time & date	54
SIM card	11	cable connections	37	wallpaper	55
battery	11	phone updates	39	screen saver	55
turn it on & off	13	basics	40	themes	56
make a call	14	display	40	display appearance	56
answer a call	14	text entry	43	shortcuts and main menu	
store a phone number	14	volume	47	57	
call a stored phone number	15	navigation key	48	answer options	58
your phone number	16	voice commands	48	calls	59
main attractions	17	external display	50	turn off a call alert	59
push to talk (PTT)	17	handsfree speaker	50	delay answering	59
Bluetooth™ wireless	22	codes & passwords	51	recent calls	59
		lock & unlock phone	51		

redial	61	SAR Data	94
return a call	61	EU Conformance	95
caller ID	62	Safety Information	98
emergency calls	62	Warranty (except Mexico) .	
voicemail	63	103	
other features	64	Warranty (Mexico)	107
advanced calling	64	index	109
phonebook	68		
messages	73		
instant messaging	77		
personalizing	78		
call times & costs	79		
handsfree	80		
data calls	81		
network	83		
personal organizer	84		
security	86		
fun & games	87		
service and repairs	91		
SAR Data	92		

menu map

main menu



Messages

- Create Message
- Message Inbox
- Outbox
- Voicemail
- Drafts
- Email Msgs
- Browser Msgs
- Info Services *
- Templates



Recent Calls

- (press the  or  to scroll through the call lists)



Phonebook



Multimedia

- Themes
- Voice Records
- Camera
- Video Camera
- Pictures
- Sounds
- Videos



Games & Apps



Web Access *

- Browser
- Bookmarks
- Stored Pages
- History
- Go To Page
- Browser Setup
- Web Sessions *



Tools

- IM *
- SIM Applications *
- Calculator
- Datebook
- Alarm Clock
- Voice Dial
- Dialing Services
 - Fixed Dial *
 - Voice Dial
 - Service Dial *
 - Quick Dial
- Activation List *
- World Clock



Connection

- Bluetooth™ Link
- USB Settings
- MOTOSYNC™ *



Settings



- (see next page)

* optional features

This is the standard main menu layout.

Your phone's menu may be different.

To change your home screen shortcuts and your main menu appearance, see page 57.

Tip: Press  to exit the current menu, or  to exit all menus.

settings menu



Personalize

- Home Screen
- Main Menu
- Voice Dial Setup
- Skin
- Greeting
- Wallpaper
- Screen Saver
- Sound Settings



Ring Styles

- Style
- (style) Detail



Call Forward *

- Voice Calls
- Fax Calls
- Data Calls
- Cancel All
- Forward Status



In-Call Setup

- In-Call Timer
- Call Cost Setup *
- My Caller ID
- Talk and Fax
- Answer Options
- Call Waiting



Initial Setup

- Time and Date
- Speed Dial
- Auto Redial
- Display Timeout
- Backlight
- TTY Setup *
- Scroll
- Text Marquee
- Language
- Brightness
- DTMF
- Master Reset
- Master Clear



Phone Status

- My Tel. Numbers
- Credit Info/Available *
- Active Line *
- Battery Meter
- Download Location
- Storage Devices
- Software Update *
- Other Information



Headset

- Auto Answer
- Voice Dial



Car Settings

- Auto Answer
- Auto Handsfree
- Power-Off Delay
- Charger Time



Airplane Mode

- Airplane Mode
- Prompt at Power Up



Network

- New Network
- Network Setup
- Available Networks
- My Network List *
- Service Tone *
- Network Jingle *
- Call Drop Tone



Security

- Phone Lock
- External Key Lock
- Lock PTT Key *
- Lock Application
- Fixed Dial *
- Restrict Calls *
- Call Barring *
- SIM PIN
- New Passwords
- Certificate Mgmt *



Java™ Settings

- Java System
- Delete All Apps
- App Vibration
- App Volume
- App Priority *



PTT Settings *

- PTT Service

* optional features

FCC Notice to Users

The following statement applies to all products that have received FCC approval. Applicable products bear the FCC logo, and/or an FCC ID in the format FCC-ID:xxxxxx on the product label.

Motorola has not approved any changes or modifications to this device by the user. Any changes or modifications could void the user's authority to operate the equipment. See 47 CFR Sec. 15.21.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. See 47 CFR Sec. 15.19(3).

If your mobile device or accessory has a USB connector, or is otherwise considered a computer peripheral device whereby it can be connected to a computer for purposes of transferring data, then it is considered a Class B device and the following statement applies:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions,

may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Use and Care

To care for your Motorola phone, please keep it away from:



liquids of any kind

Don't expose your phone to water, rain, extreme humidity, sweat, or other moisture.



dust and dirt

Don't expose your phone to dust, dirt, sand, food, or other inappropriate materials.



extreme heat or cold

Avoid temperatures below $-10^{\circ}\text{C}/14^{\circ}\text{F}$ or above $45^{\circ}\text{C}/113^{\circ}\text{F}$.



cleaning solutions

To clean your phone, use only a dry soft cloth. Don't use alcohol or other cleaning solutions.



microwaves

Don't try to dry your phone in a microwave oven.



the ground

Don't drop your phone.

essentials







CAUTION: Before using the phone for the first time, read the *Important Safety and Legal Information* included in the gray-edged pages at the back of this guide.

about this guide

This guide shows how to open a menu feature as follows:

Find it:  >  **Messages** > **Create Message**

This means that, from the home screen:

- 1 Press the *center key*  to open the menu.
- 2 Press the *navigation key*  to scroll to  **Messages**, and press the *center key*  to select it.
- 3 Press the navigation key  to scroll to **Create Message**, and press the center key  to select it.

symbols



This means a feature is network, SIM card, or subscription dependent and may not be available in all areas. Contact your service provider for more information.

symbols



This means a feature requires an optional accessory.

SIM card


Caution: Don't bend or scratch your SIM card. Keep it away from static electricity, water, and dirt.

Your *Subscriber Identity Module* (SIM) card contains personal information like your phone number and phonebook entries.


To insert and use a **memory card**, see page 35.

Turn off your phone and remove your battery before you install or remove a SIM card.

1

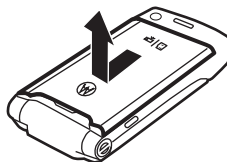


2

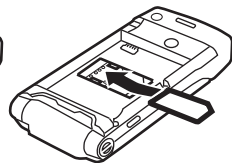


battery

battery installation


1

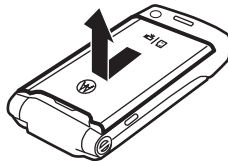

2

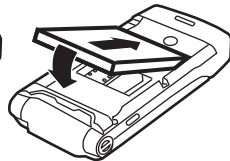


3

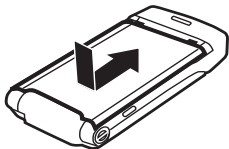

To replace the battery door, set the door against the phone and then slide it into place.

battery charging

New batteries are not fully charged. Plug the battery charger into your phone and an electrical outlet. Your phone might take several seconds to start charging the battery. When finished, your display shows **Charge Complete**.

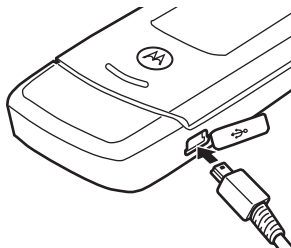

Tip: Relax, you can't overcharge your battery. It will perform best after you fully charge and discharge it a few times.

You can charge your battery by connecting a **cable** from your phone's mini-USB port to a USB port on a computer. Both your phone and the computer must be turned on, and your computer must have the correct software drivers installed. Cables and software drivers are available in Motorola Original data kits, sold separately.



If your battery is completely dead and you plug in a **cable** to charge it, your keypad and display might not light up. Your battery will still charge.

battery tips

Battery life depends on the network, signal strength, temperature, features, and accessories you use.

- Always use Motorola Original batteries and chargers. The warranty does not cover damage caused by non-Motorola batteries and/or chargers.



- New batteries or batteries stored for a long time may take more time to charge.
- When charging your battery, keep it near room temperature.

When storing your battery, keep it uncharged in a cool, dark, dry place.

- Never expose batteries to temperatures below -10°C (14°F) or above 45°C (113°F). Always take your

phone with you when you leave your vehicle.

- It is normal for batteries to gradually wear down and require longer charging times. If you notice a change in your battery life, it is probably time to purchase a new battery.



Contact your local recycling center for proper battery disposal.


Warning: Never dispose of batteries in a fire because they may explode.

Before using your phone, read the battery safety information in the “Safety and General Information” section included in this guide.

turn it on & off


Caution: Some phones ask for your SIM card PIN code when you turn them on. If you enter

an incorrect PIN code three times before the correct code, your SIM card is disabled, and your display shows **SIM Blocked**. Contact your service provider.



To turn on your phone, press and hold  for a few seconds or until the keypad or display lights up.

If prompted, enter your eight-digit SIM card PIN code and/or four-digit unlock code (for more about codes, see page 51).

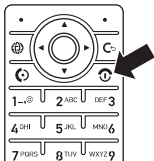To turn off your phone, press and hold  for a few seconds.







make a call

To make a call, enter a phone number and press . **To “hang up,”** close the flip or press .

To use voice commands for calling, see page 48.

answer a call

To answer a call when your phone rings and/or vibrates, just open the flip or press . **To “hang up,”** close the flip or press .

Note: Your phone cannot receive data over an EDGE network while it is playing videos or some sound files. The EDGE  status indicator appears at the top of your display when you can receive data over an EDGE network. 


store a phone number

You can store a phone number in your **Phonebook**:

Find it:  >  **Phonebook**, then press **Options** > **Create New** > **Phone Contact** or **SIM Contact**

Note: You can store new contacts in your **phone's memory** or on your **SIM card**.

Contacts on the SIM card only include a **Name** and **Number**.

- 1 Enter a name and other details for the phone number. To select a highlighted item, press the *center key* .
- 2 Press **Done** to store the number.



To **edit** or **delete** a **Phonebook** entry, see page 69.

To store an **email** address from the home screen, follow the steps above and enter the new contact's name and **Email** information.

Shortcut: Enter a phone number in the home screen, then press **Store** to create a contact. To choose whether your phone stores these contacts in your phone's memory or on your


SIM card, go back to the home screen and press  >  **Phonebook**, then press **Options** > **Setup** > **Default Storage** > **Phone** or **SIM Card**.


call a stored phone number

Find it:  >  **Phonebook**

- 1 Scroll to the phonebook entry.



Shortcut: In the phonebook, press keypad keys to enter the first letters of an entry you want.

- 2 Press  to call the entry.



Note: You can show contacts stored in your phone's memory or on your SIM card. To choose which contacts you see, press  >  **Phonebook**, then press **Options** > **View**. You can select **Phone & SIM Card**, **SIM Card**, or **Phone Contacts**.

To use voice commands for calling, see page 48.

your phone number

From the home screen, press *the clear key*  then  to see your number.

Tip: Want to see your phone number while you're on a call? Press **Options > My Tel. Number**.

You can edit the name and phone number stored on your SIM card. From the home screen, press  , select an entry, press **View**, press **Options**, and select **Edit**. If you don't know your phone number, contact your service provider.



main attractions

You can do much more with your phone than make and receive calls!

push to talk (PTT)


Push to Talk (PTT) lets you talk walkie-talkie style with other PTT subscribers. You can talk to one person or a group.

PTT and the other related features indicated are network and subscription dependent features, and are not available in all areas. PTT connectivity requires PTT-compatible phones.



Note: To lock your PTT key or turn PTT on or off, see page 20.

make a PTT call


When  appears at the top of your home screen, you can make and receive PTT calls. To make a PTT:

- 1 Enter a PTT subscriber's phone number in your home screen, or select a contact or group from a list:
 - **PTT Contacts** (press the PTT key to open the list)
Note: If you change your **Open To** setting, your PTT key does not open the contacts list (see page 20).
 - **PTT Quick Group** (press the PTT key and **Options > Quick Group**) This lets you select more than one contact for the call.

- **PTT Groups** (press the PTT key and **Options > Filter by > Groups**)

2 Hold the PTT key and speak after you hear the tone. Release the PTT key to let others speak.


To speak during a PTT call, hold your PTT key and speak after the tone. Only one person can speak at a time.

To end the call, press . If nobody speaks for 20 seconds, the call ends (actual timing varies by network).

To send a PTT alert instead of a standard PTT call, scroll to a PTT contact in **PTT Contacts** and press **Options > PTT Invite**. The contact's phone rings or vibrates, and the contact can speak first. If the contact does not respond, the call ends. You cannot send alerts to groups.

answer a PTT call

When you receive a PTT call, you hear a tone or alert followed by conversation from the caller.

- **To speak** when the caller stops speaking, hold your PTT key and speak after the tone. Only one person can speak at a time.
- **To end the call**, press .

If you change your **My Answer Mode** setting to **Manual**, your phone does not automatically answer as described (see page 20).

When you receive a PTT alert, press the PTT key and speak after the tone. You can also press **Ignore** to cancel the call.

Your display shows **Missed Call** if you miss a PTT alert. It does not show **Missed Call** when you miss a standard PTT call unless you set **My Answer Mode** to **Manual** (see page 20).



send a picture with push to view (PTV)

You can send a picture during a PTT call, or you can open a picture and start a PTT call to send it.

Note: You cannot send pictures in group calls or while someone is speaking. You can send pictures only to phones with push to view (PTV) capability.

To send a picture during a PTT call, press **Options**, then select **Camera** to capture a new picture or **Pictures** to send a stored picture.

To send a stored picture, press  >  **Multimedia** > **Pictures**, scroll to the picture, and press the PTT key.

To take a photo and send it, press  >  **Multimedia** > **Camera**, **Capture** the photo, and press the PTT key.

Your phone plays a tone when the picture transfer completes. To speak after the picture transfers, hold the PTT key and speak after the tone.

PTT contacts and groups


You can store PTT **Contacts** to make one-to-one calls, or you can store PTT **Groups** to make group calls.

To store a contact, press the **PTT key**, then **Options** > **Create New** > **Add PTT Contact**. Enter the contact's **Name** and phone number (**No.**), then press **Done**. Your network stores the contact and your phone returns to the **PTT Contacts** list with the new contact shown.

To create a group of contacts that you can call at the same time, press the **PTT key**, then **Options** > **Create New** > **Add PTT Group**. Enter the group's **Name** and select the **Members**, then press **Done**. Your network stores the group and

your phone returns to the **PTT Groups** list with the new group shown.

To see PTT contacts, press the PTT key. Scroll to a contact and press **Options** to **Edit** or **Manage** the contact. **Manage** lets you block the contact, set it as your default, or delete it..

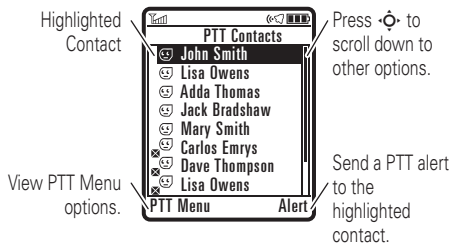

To see PTT groups, press the PTT key and scroll to the group. Press **Options** > **Manage** to set the group as your default, enable an online alert, or delete the group. You cannot edit a

group, but you can delete it and create a new one with the members you want.

Icons in the PTT contact and group lists indicate if someone is online (☺, ☺☺) or offline (☹, ☹☹). They also tell you if a contact is blocked (☒☺).

To **block** a contact, scroll to the contact and press **Options** > **Manage** > **Block**. To unblock the contact, scroll to it and press **Options** > **Manage** > **Unblock**.

To refresh the contact or group list from your network, press **Options** > **Refresh List**.

PTT settings

To **turn PTT on or off** from your home screen, press [PTT key] > [Settings icon] **Settings** > **PTT Settings** > **PTT Service** > **On/Off**.

To prevent accidental PTT calls, you can set your phone to **lock the PTT key** automatically

when you haven't pressed it for a few minutes and your phone is closed. Press

📶 > ⚙️ **Settings** > **Security** > **External Key Lock**, and select how long your phone should wait before it locks the key. To unlock the key, hold it for two seconds or open the phone. The PTT key unlocks when you receive a PTT call.

You can change your PTT menu and call preferences.

Find it: Press the **PTT key**, then press **Options** > **Setup**

options	
Open To	From the home screen, the PTT key can open a list of your most recent calls, your contacts, your groups, or both contacts and groups.

options	
Sort by	Sort your contacts and groups by Name , online Status , or call Frequency .
My Answer Mode	Set the mode for incoming PTT calls to Manual (press the PTT key to answer) or Automatic (standard mode that accepts all calls).
Block Unknown	Choose Yes to block unknown PTT callers.
PTT Call Failure	If a PTT call fails, your phone can ask if you want to make a voice call to the number (Manual Voice Call), your phone can Auto-Voice Call the number, or it can make No Voice Call .

options	
Tone Volume	Set the volume for the tone you hear when it is your turn to speak.
PTT Speaker	Turn the speakerphone On or Off for PTT calls.
Set Online Alert Tone	You can set an online alert to tell you when a contact or group comes online (scroll to the entry in your PTT Contacts or PTT Groups and press Options > Enable Online Alert). This setting tells your phone whether to play these alert tones (On) or not (Off).
GPRS Settings	This is set by your service provider.

options	
Server Settings	This is set by your service provider.
Hide Picture	Pictures received from Push to View (PTV) can be hidden after a set time: Always , 5 minutes , 1 hour , 1 day , 1 week , or Never .

Bluetooth™ wireless

Your phone supports Bluetooth wireless connections. You can connect your phone with a Bluetooth headset or car kit to make handsfree calls. You can also connect your phone with a phone or computer that supports Bluetooth connections to exchange files.

Note: The use of wireless phones while driving may cause distraction. Discontinue a

call if you can't concentrate on driving. Additionally, the use of wireless devices and their accessories may be prohibited or restricted in certain areas. Always obey the laws and regulations on the use of these products.


For maximum Bluetooth security, you should always connect Bluetooth devices in a safe, private environment.


use a headset or handsfree car kit

Before you try to connect your phone with a handsfree device, make sure the device is **on** and **ready** in *pairing* or *bonding* mode (see the user's guide for the device). You can connect your phone with only one device at a time.

Find it:  >  **Connection** > **Bluetooth Link** 
> **[Add Audio Device]**

Your phone lists the devices it finds within range.

- 1 Scroll to a device in the list and press the *center key* .
- 2 Press **Yes** or **OK** to connect to the device.
- 3 If necessary, enter the device passkey (such as **0000**) and press **OK**.

When your phone is connected, the Bluetooth indicator  appears in the home screen.

Shortcut: When your phone's Bluetooth power is on, your phone can automatically connect to a handsfree device you have used before. Just turn on the device, or move it near the phone. If the device doesn't connect, turn it off and back on.

Tip: Want to know more about your headset or car kit? For specific information about a device, refer to the instructions that came with it.

copy files to another device


You can use a Bluetooth connection to copy a media file, phonebook entry, datebook event, or Web shortcut from your phone to a computer or other device.




Note: You can't copy some copyrighted objects.

- 1 On your phone, scroll to the object that you want to copy to the other device.
- 2 Press **Options**, then select:
 - **Manage** > **Copy** for media files.
 - **Send Contact** for phonebook entries.
 - **Send** for datebook events.
- 3 Select a recognized device name, or **[Look For Devices]** to search for the device where you want to copy the file.

If your phone could not copy the file to the other device, make sure the device is **on** and **ready** in *discoverable* mode (see the user's guide for the device). Also, make sure the device is not busy with another similar Bluetooth connection.

Note: Once you connect your phone to a Bluetooth device, that device can start similar Bluetooth connections with your phone. Your display shows the Bluetooth indicator  at the top when there is a Bluetooth connection.

receive files from another device

If you do not see the Bluetooth indicator  at the top of your phone display, turn on your phone's Bluetooth feature by pressing



 >  **Connection** > **Bluetooth Link** > **Setup** > **Power** > **On**.

- 1 Place your phone near the device, and send the file from the device.

If your phone and the sending device don't recognize each other, place your phone in discoverable mode so the sending device can locate it: press

 >  **Connection** > **Bluetooth Link** > **Find Me**.

- 2 Press **Accept** on your phone to accept the file from the other device.

Your phone notifies you when file transfer is complete. If necessary, press **Store** to save the file.

send files to a printer

You can use a Bluetooth connection to send a picture, message, phonebook entry, or datebook event from your phone to a printer.



Note: You cannot print message **Templates** or a phonebook **Mailing List**.


- 1 On your phone, scroll to the object that you want to print, then press **Options** > **Print**.

Tip: If you see it, you can print it. After you capture a picture in the camera, you can press **Options** and select **Print**.



- 2 If available, choose additional objects or print options.
- 3 Select a recognized printer name listed in the **Printers** menu, or **[Look For Devices]** to search for the printer where you want to print the object.



Note: If you see **Service Not Supported** when you try to print, select **Options** > **Manage** > **Copy** > **Bluetooth** instead. Always use this option to print 4x6 photos.

digital audio player

Your phone can play and store MP3 and AAC song files. You can use a removable memory card with your phone to store more songs (see page 35). 




Note: You cannot use the audio player with a USB cable connected to your phone.

Find it:  >  **Games & Apps** > **Digital Audio Player**

Press  up or down to scroll to an option, and press the *center key*  to select it:

options	
Playlists	Create or play a playlist (see page 27).


options	
Songs	Show and play individual songs. Note: All of your phone's songs appear in the Songs list. Some songs do not have any Artist , Album , or Genre information stored, so they don't appear in those lists.
Albums	Select an album to show or play its songs.
Artists	Select an artist to show or play their songs.
Genres	Select a type of music to show or play songs.
About	Show audio player version information.

When you select a song, press the *center key*  to play , or pause , press

◂ left for previous ◀, or press ◃ right for next ▶.

Note: To change repeat , shuffle , and other settings, press **Options**.

Use the volume keys on the left side of your phone to control volume.

Your phone also has a **Sounds** player that can play songs and ring tones, but it cannot store **Artists** or other song information. To use the **Sounds** player, press ◂ >  **Multimedia** > **Sounds** and select the file you want to play.

load music files

To download songs to your phone, see page 88. To copy files between your phone and a computer, see page 37.

Note: Your phone may not play audio files that have a bit rate higher than 128 kbps. If you try to download or play one of these files, your

phone might show you an error or ask you to delete the file. Metadata information is **not** supported for **MP4** formatted files.

create a playlist

Find it: ◂ >  **Games & Apps** > **Digital Audio Player** > **Playlists** > **[New Playlist]**

- 1 Enter a name for the play list.
- 2 Press **Done**. Your display shows a list of song titles.
- 3 Press the *center key* ◂ to select songs for the playlist.
- 4 Press **Done** to store the list. Your display shows the songs in the playlist.

To reorder the songs in this list: Press > **Options** > **Reorder Playlist**. Press the *center key* ◂ to select a song, then press ◂ to move it up or down in the

order. When you have it in the right spot, press **Done**.

5 Press **Done** to store the list.

To hear your playlist, highlight it under **Playlists** and press play ▶.


photos

Note: Java games or applications will close and end when you open the camera.


take & store or send photos

Your camera lens is on the back of your phone when the phone is open. **To get the clearest pictures, wipe the lens clean with a dry cloth before you take a picture.**

1 Press  >  **Multimedia** > **Camera** to see the camera viewfinder.

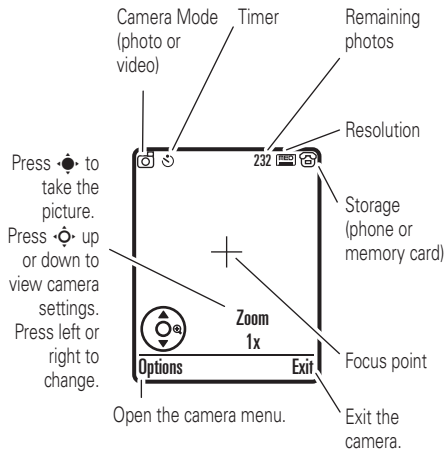

Note: Adjusting the exposure affects the brightness of both the viewfinder display and the captured photo.


2 Press the *center key*  to take the photo in the viewfinder. You can:

- Press **Options** to store the photo.


If you press **Options** > **Print**, you can print the picture over a Bluetooth™ connection (see page 25).

- Press **Send** to send the photo in a message.

Your phone might tell you that this is a **Multimedia Msg**, since it has a picture in it. Some other phones or networks do not support picture messages. Press **Yes** to send the message.

- Press  to discard the photo and return to the active viewfinder.

Before you capture the photo, you can press **Options** to open the camera menu:

options	
Go To Pictures	See stored pictures and photos.
Go To Video Mode	Switch to the video camera.
Auto-Timed Capture	Set a timer for the camera to take a photo.
Camera Setup	Open the setup menu to adjust photo settings.
Switch Storage Device	Choose to store pictures on your phone or a memory card. 

options


Free Space

See how much memory remains.

Note: Your service provider may store some content in user memory before you receive the phone.

self portrait

If you close your phone while the viewfinder is active, the external display shows the image. Press the

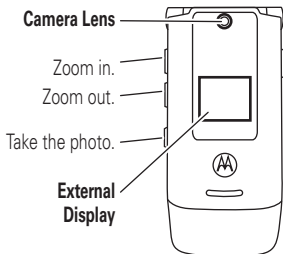

volume keys to zoom, or press the *smart key* to capture and store the image.



Note: If you are subscribed to the PTT Service, press the Voice Command key



When your phone is closed, it automatically stores the photos you take. To change where it stores the photos, see **Switch Storage Device** on page 29.

see stored photos

Find it:  >  **Multimedia**
> **Pictures** > *picture name*

- To **delete** a picture, scroll to it in the list and press **Options** > **Manage** > **Delete**.
- To **copy or move** a picture from your memory card () to your phone memory () , scroll to it in the list and press **Options** > **Manage**





> **Copy** or **Move** > **Memory Card**. You cannot copy or move some copyrighted files.

Tip: After you open a picture, you can press **Options** > **View Full Screen** to see the picture at the full display size (press any key to return to the regular view).

send a stored photo in a message

Find it:  >  **Messages** > **Create Message** 
> **Message**, then press **Options** > **Insert**
> **Picture**

- 1 Scroll to the picture you want and press **Insert**.
- 2 Enter the message text and press **Send To**.
- 3 Scroll to a recipient address and press the *center key* .
- 4 Press **Send** to send the message. 

Your phone might tell you that this is a **Multimedia Msg**, since it has a picture in it. Some other phones or networks do not support picture messages. Press **Yes** to send the message.

videos

Tip: Did you know your phone allows *video streaming*? If you go to a Web site that has videos, your phone can play the videos in your browser without downloading them onto your phone.


Note: Java games or applications will close and end when you open the camera.

record video clips

Your camera lens is on the back of your phone, when your phone is open. **To get the**

clearest videos, wipe the lens clean with a dry cloth before you capture a video.

Press **•••** > **Multimedia** > **Video Camera** to see the video viewfinder.

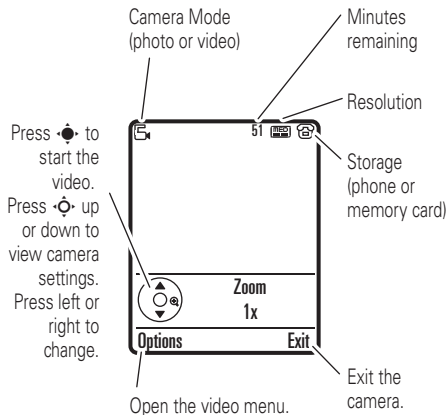

Note: The number of minutes remaining is an estimate.

Tip: If you want to send your video in a message, the video length must be set to **MMS**. To set length, press **Options** > **Video Camera Setup** > **Video Length**.


- 1 Press the *center key* **•••** to start recording the video in the viewfinder.
- 2 Press **Stop** to stop recording the video. You can:

- Press **Options** to preview, store, or discard the video.
- Press **Send**, then select **Send in Message** to send the video in a message.






Enter text and press **Send To**, then scroll to a recipient address and press the *center key* **•••** to select it. Press **Options** to enter a new number. To send the message, press **Send**.

Note: Some other phones or networks do not support messages with videos.

- Press  to discard the video and return to the active viewfinder.

play stored video clips

Find it:  >  **Multimedia** > **Videos**
> *video name*

- To **delete** a file, scroll to it in the list and press **Options** > **Manage** > **Delete**.
- To **copy or move** a file from your memory card () to your phone memory () , scroll to it in the list and press **Options** > **Manage** > **Copy or Move** > **Memory Card**. You cannot copy or move some copyrighted files.


Tip: While a video is playing, you can press **Options** > **Play Full Screen** to see the video at the

full display size (press any key to return to the regular view).

text messages

To create a group mailing list, see page 72. For more message features, see page 73.

send a text message


A text message can contain text and pictures, sounds, or other media objects. You can add multiple pages to a message, and you can put text and media objects on each page. You can send a message to other compatible phones or to email addresses. 

Find it:  >  **Messages** > **Create Message** > **New Message**

- 1 Press keypad keys to enter text on the page (for details about text entry, see page 43).

To insert a **picture, sound, or other object** on the page, press **Options > Insert**. Select the file type and the file.

To insert **another page** in the message, enter text or objects on the current page and press **Options > Insert > New Page**. You can enter more text and objects on the new page.

- 2 When you finish the message, press **Send To**.
- 3 Scroll to a recipient and press the *center key* . Repeat to add other recipients.

To enter a **new** number or email address, press **Options** and select **Enter Number** or **Enter Email**.

- 4 Before you send a message, you can press **Options** to choose **Save to Drafts**, **Cancel Message**, or open **Sending Options** (such as message **Subject** or **CC** addresses).

- 5 To **send** the message, press **Send**.

Your phone might tell you that this is a **Multimedia Msg**, if it has multiple pages or media objects in it. Some other phones or networks do not support multimedia messages. Press **Yes** to send the message.

receive a text message

When you receive a message, your phone plays an alert, and the display shows **New Message** with a message indicator, such as . Press **Read** to open the message.



To see all of your text messages:

Find it:  >  **Messages > Message Inbox**

If a multimedia message contains media objects:

- Photos, pictures, and animations show as you read the message.
- A sound file plays when its slide shows. Use the volume keys to adjust the sound volume.
- Attached files are added to the end of the message. To open an attachment, scroll to the file indicator/file name and press **View** (images), **Play** (sounds), or **Open** (phonebook vCards, datebook vCalendar entries, or unknown file types).

memory card

You can use a removable memory card with your phone to store and retrieve



multimedia objects (such as photos and sounds).

Your phone supports optional microSD memory cards with up to 2 GB capacity (greater than 1 GB capacity is guaranteed only for SanDisk microSD cards).


Note: If you download a copyrighted file and store it on your memory card, you can use the file only while your memory card is inserted in your phone. You cannot send, copy, or change copyrighted files.

install or remove a memory card

- 1 Remove the battery door.

2 Press the memory card into its slot until it clicks into place.

3 Set the battery door against the phone and then slide it into place.

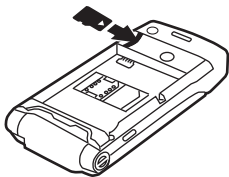

To remove the memory card, slide it back out.

Do not remove your memory card while your phone is using it or writing files on it.

see and change memory card information

To **see the files** stored on your memory card and on your phone, open a file list, such as **Pictures** (see page 30). Icons can indicate if a file is stored in your phone memory (📁) or on

your memory card (📁). To copy or move a file from your phone to your memory card, highlight it in the list and press **Options > Manage > Copy** or **Move > Memory Card**. You cannot copy or move some copyrighted files.

To **copy files** between your memory card and a computer, you can use a cable connection (see page 37) or a Bluetooth™ connection (see page 24).

To see your **memory card name, available memory**, and other information about the card:

Find it: 📶 > ⚙️ **Settings > Phone Status > Storage Devices**

- 1 Press 📶 to scroll to the memory card that is installed.
- 2 Press the *center key* 📶 to see the memory card information. Your phone stores any content that you add, like ring


tones or games, in *user memory*. Your service provider may store some content in user memory before you receive the phone.

or

Press **Options** to see the **Storage Device** menu, which lets you **Format** or **Rename** the memory card.

cable connections

 Your phone has a mini-USB port so you can connect it to a computer to transfer data.

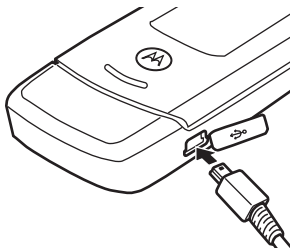

Note: Motorola Original USB data cables and supporting software are sold separately. Check your computer or hand-held device to determine the type of cable you need. To **transfer data** between your phone and computer, you might need to install the software included with the Motorola Original data kit. See the data kit user's guide for more information. To make **data calls** through a connected computer, see page 81.



connect your memory card to a computer

You can use a cable connection to access your phone's memory card with a PC.

Note: When your phone is connected to a computer, you can only access the memory card through the computer.

On your phone:

Disconnect the cable from your phone, if it is connected, then press  >  **Connection** > **USB Settings** > **Default Connection** > **Memory Card**.

This directs the USB connection to your memory card.

Connect the cable to your phone and to an available USB port on your computer. Then follow these steps:

On your computer:

- 1 Open your “My Computer” window, where your phone’s memory card appears as a “Removable Disk” icon.
- 2 Click on the “Removable Disk” icon to access the files on your phone’s memory card.
- 3 To store the desired files onto the memory card, drag and drop them as follows:

audio files: > mobile > audio

screen savers: > mobile > picture

wallpapers: > mobile > picture

video clips: > mobile > video

- 4 When you finish, disconnect your phone by selecting the “Safely Remove Hardware” icon in the system tray at the bottom of your computer screen. Then disconnect the “USB Mass Storage Device.”
- 5 Disconnect the cable from your phone and computer.

On your phone:

To return to **Data** as your USB default connection, press  >  **Connection** > **USB Settings** > **Default Connection** > **Data Connection**.

phone updates

Sometimes we think of ways to make your phone's software faster or more efficient after you've purchased your phone. You can find out if your phone can be updated at: <http://hellomoto.com/update>




Note: Software updates do not affect your phonebook entries or other personal entries. If you receive a software update but choose to install it later, see page 83.

basics


See page 1 for a basic phone diagram.


display


The *home screen* appears when you turn on the phone.

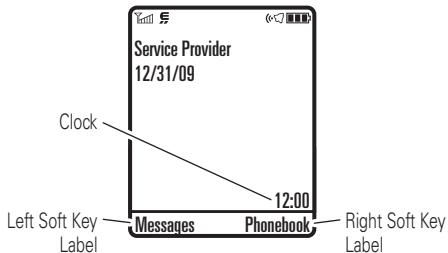


Note: Your home screen might look different from the one shown, depending on your service provider.

To dial a number from the home screen, press number keys and .

Press  up, down, left, or right in the home screen to open basic menu features.

Press the *center key*  to open the menu. *Soft key labels* show the current soft key functions. For soft key locations, see page 1.


Status indicators can show at the top of the home screen:

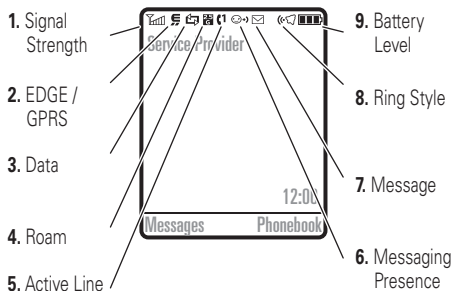

- 1 **Signal Strength Indicator** – Vertical bars show the strength of the network connection. You can't make or receive calls when or appears.
- 2 **EDGE/GPRS Indicator** – Shows when your phone is using a high-speed *Enhanced Data for GSM*



Evolution (EDGE) or General Packet Radio Service (GPRS) network connection.
Indicators can include:



- 3 **Data Indicator** – Shows connection status.



secure / unsecure packet data transfer




secure/unsecure application connection



secure/unsecure *Circuit Switch Data (CSD)* call




Bluetooth™ connection is active

4 Roam Indicator – Shows ▲ when your phone is seeking or using a network outside your home network. 

5 PTT / Active Line Indicator – Shows when you can make and receive PTT calls (📞) or both PTT calls and Instant Messages (😊📞). This also shows 📞 to indicate an active phone call, or 📞➡ to indicate when call forwarding is on. Indicators for dual-line-enabled SIM cards can include:


📞1 line 1 active	📞➡ line 1 active, call forward on
📞2 line 2 active	📞➡ line 2 active, call forward on

6 Messaging Presence / Reminder Indicator – If you set a reminder for a datebook event, 📅 can appear here.

When Instant Messaging (IM) is active, indicators can include: 

😊➡ IM active	😊🚫 invisible to IM
😊🚫 busy	😊🚫 offline


When a Java™ application is active, 📱 can show here.

7 Message Indicator – Shows when you receive a new message. Indicators can include: 

✉ text message	✉📞 voice message
📞📞 voice & text message	
📱 IM message	

8 Ring Style Indicator – Shows the ring style setting.


 loud ring

 vibrate & ring

 soft ring

 vibrate then ring

 vibrate


 silent

9 Battery Level Indicator – Vertical bars show the battery charge level. Recharge the battery when your display shows **Low Battery**.

text entry

Some features let you enter text.

For indicator descriptions see following section.

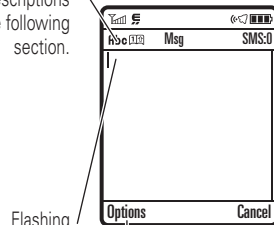





Flashing cursor indicates insertion point.

Press the **Options** key to open the submenu.

Press the **Cancel** key to exit without making changes.

Press **#** in a text entry view to select an entry mode:





entry modes	
1  or 1	Your Primary text entry mode can be set to any iTAP™  or tap 1 mode.
2  or 2	Your Secondary text entry mode can be set to any iTAP  or tap 2 mode, or set to None if you don't want a secondary entry mode.
123	Numeric mode enters numbers only.
@%	Symbol mode enters symbols only.

To set your primary and secondary text entry modes, press **Options > Text Setup** in a text entry view and select **Primary Text** or **Secondary Text**.

iTAP™ and tap mode tips

- Press **0** in a text entry view to change text case to all capital letters

(**ABC**), no capitals (**abc**), or next letter capital (**Abc**).


- To enter numbers quickly, press and hold a number key to temporarily switch to numeric mode. Press the number keys to enter the numbers you want. Enter a space to change back to iTAP or Tap mode.
- Press **1** to enter punctuation or other characters.
- Press  to move the flashing cursor to enter or edit message text.
- Press  to delete the character to the left of the cursor. Hold  to delete the word.
- To cancel your message, press .

iTAP™ mode

Press **[#]** in a text entry view to switch to iTAP mode. If you don't see **[1]** or **[2]**, press **Options > Text Setup** to set iTAP mode as your primary or secondary text entry mode.

iTAP mode lets you enter words using one keypress per letter. The iTAP software combines your keypresses into common words and predicts each word as you enter it.

For example, if you press **[7] [7] [6] [4]**, your display shows:

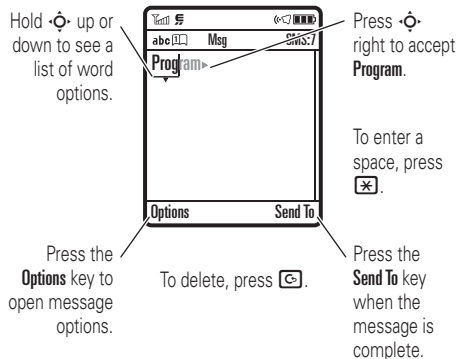

If you want a different word (such as **Progress**), continue pressing keypad keys to enter the remaining letters.


Tip: Don't worry if you forget how iTAP works. In a text entry display, you can press **Options > Text Setup > Text Tutorial** to see an explanation.

tap and tap extended modes

Press **#** in a text entry view to switch to tap mode. If you don't see **Abc1** or **Abc2**, press **Options > Text Setup** to set tap mode as your primary or secondary text entry mode.

To enter text in **Tap** mode, press a keypad key repeatedly to cycle through the letters and number on the key. Repeat this step to enter each letter. The **Tap Extended** mode works the same way, but includes more special characters and symbols.

For example, if you press **7** one time, your display shows:

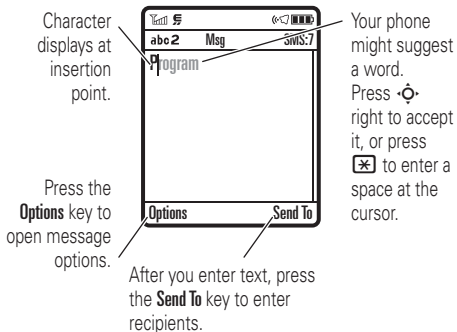


The first character of every sentence is capitalized. If necessary, press **⬇** down to change the character to lowercase before the cursor moves to the next position.

numeric mode

Press **#** in a text entry view until you see **123**. Press the number keys to enter the numbers you want.

Shortcut: You can press and hold a number key to temporarily switch to numeric mode from iTAP™ or Tap modes. Press the number keys to enter the numbers you want. Enter a space to change back to iTAP mode.


symbol mode

Press **#** in a text entry view until your display shows a list of symbols. Scroll to the symbol you want, then press the *center key* .

volume



Press the volume keys to:

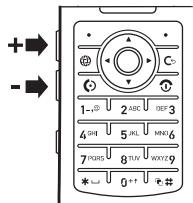
- turn off an incoming call alert
- change the earpiece volume during calls
- change the ringer volume from the home screen



Tip: Sometimes silence really is golden. That's why you can quickly set your ringer to **Vibrate** or **Silent** by holding the down volume key while you are in the home screen. You can also switch to **Silent** or back by holding **#** in the home screen.

navigation key

Press the *navigation key*  up, down, left, or right to scroll to items in the display. When you scroll to an item, press the *center key*  to select it.

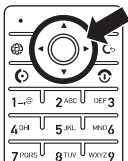

and replace *John Smith* with a phonebook entry name):

voice commands

You can use voice commands to tell your phone what to do.

- 1 Press and release the **voice key** on the left side of your phone.
Your phone prompts you to say a command.
- 2 Say a voice command from the list (replace *555-1212* with a phone number,

voice commands
"Call 555-1212"
"Call John Smith"
"Send Email John Smith"
"Send Voice Note 555-1212"
"Send Voice Note John Smith"
"Send Message 555-1212"
"Send Message John Smith"
"Lookup John Smith"
"PTT Connect John Smith"
"Go to Voicemail"
"Go to Camera"
"Go to Redial"
"Go to Received Calls"

voice commands
<p>“Check Status”</p> <p>Your phone tells you its battery strength, network signal strength, and whether its coverage is normal or roaming.</p>
<p>“Check Battery”</p>
<p>“Check Signal”</p>
<p>“Check Network”</p>
<p>“Check My Phone Number”</p>
<p>“Turn Prompts Off”</p> <p>Your phone turns off the sound on your voice command prompts (such as “Say a command.”). To turn prompts on again, say “Turn Prompts On.” Your phone confirms by saying “Voice prompts on.”</p>

Tips:

- You can say a phonebook entry’s name and number type together. For example, say “Call John Smith Mobile” to call the Mobile number stored for John Smith.
- Speak numbers at a normal speed and volume, pronouncing each digit distinctly. Don’t pause between digits.
- For voice command help, press the **voice key**, then press **Help**.

voice command setup

You can change voice command settings.

- 1 Press and release the **voice key** on the left side of the phone.
- 2 Press **Settings**.

3 Choose one of the settings below:

voice command settings	
Choice Lists	Turn choice lists on or off. Your phone uses choice lists to confirm voice commands by asking “Did you say...” followed by a choice list item.
Sensitivity	Make your phone more or less likely to reject a voice command.
Digit Dialing	Train your phone to recognize how you say digits.
Sound	Adjust the sound settings for your voice commands.
About	See voice command software information.

external display

When your phone is closed, the external display shows the time, date, status indicators, and notifications for incoming calls and other events. For a list of phone status indicators, see page 41.

handsfree speaker

You can use your phone’s handsfree speaker to make calls without holding the phone to your ear.

To turn the handsfree speaker on during a call, press **Speaker** (if available), or **Options > Spkrphone On**. Your display shows **Spkrphone On** until you turn it off or end the call.

Note: You must **keep the flip open when you use the speakerphone**. If you’re using

the speakerphone and you close the flip, the call ends.

Note: The handsfree speaker won't work when your phone is connected to a handsfree car kit or headset.

codes & passwords

Your phone's four-digit **unlock code** is originally set to **1234**. The six-digit **security code** is originally set to **000000**. If your service provider didn't change these codes, you should change them:

Find it:  >  **Settings** > **Security**
> **New Passwords**

You can also change your **SIM PIN** password.

If you forget your unlock code: At the **Enter Unlock Code** prompt, try entering 1234 or the last four digits of your phone number. If that

doesn't work, press  and enter your six-digit security code instead.

If you forget other codes: If you forget your security code, SIM PIN code, PIN2 code, or call barring password, contact your service provider.

lock & unlock phone

You can lock your phone to keep others from using it. To lock or unlock your phone, you need the four-digit unlock code.

To **manually lock** your phone:
Press  >  **Settings** > **Security** > **Phone Lock**
> **Lock Now**.

To **automatically lock** your phone whenever you turn it off: Press  >  **Settings** > **Security**
> **Phone Lock** > **Automatic Lock** > **On**.

Note: You can make emergency calls on a locked phone (see page 62). A locked phone still rings or vibrates for incoming calls or messages, **but you need to unlock it to answer.**

lock & unlock external keys

When your phone is closed, your external keys (such as the smart key and volume keys) lock to prevent accidental key presses.

Note: Your phone will not lock external keys if an action is in process. For instance, if you close your phone and press a volume key right away, your phone shows your ring style profile. Your external keys remain unlocked until you close the ring style profile.

To change how long your phone waits before it automatically locks your external keys:

📶 > ⚙️ **Settings** > **Security** > **External Key Lock**
> **Timer** > *a time interval* or **Off**

Note: If you choose **Off**, you can still manually lock your external keys by holding the smart key.

To **unlock** your external keys, press and hold the **smart/PTT key** (the key below your volume keys).

customize

talking phone

When you receive calls, your phone can “speak” the caller’s number or name rather than ringing. Also, your phone can read names to you when you scroll through your **Phonebook**, and can speak digits to you as you enter them to make a call. To turn these features on or off:

Find it:  >  **Settings** > **Personalize**
> **Sound Settings** > **Talking Phone**

Your phone speaks the name for any caller stored in your **Phonebook**, or speaks the digits for numbers not stored in your **Phonebook**.

Note: If you turn on **Talking Phone**, your phone **does not use** your **Ring Style** for incoming calls.

ring style

Note: If you turn on **Talking Phone**, your phone **does not use** your **Ring Style** for incoming calls.

Each ring style profile uses a different set of sounds or vibrations for incoming calls and other events. Here are the profiles you can choose:


 **Loud**

 **Vibe & Ring**

 **Soft**

 **Vibe then Ring**

 **Vibrate**

 **Silent**

The ring style profile’s indicator appears at the top of your home screen. To choose your profile:

Find it:  >  **Settings** > **Ring Styles**
> **Style:** *style name*


Shortcut: To change your ring style profile from the home screen, just press the volume keys up or down.

change alerts in a ring style

You can change the alerts for incoming calls and other events. Your changes are saved in the current ring style profile.

Find it:  >  **Settings** > **Ring Styles**
> *style* **Detail**

Note: *Style* represents the current ring style. You can't set an alert for the **Silent** ring style setting.

- 1 Scroll to **Calls** (or **Line 1** or **Line 2** for dual-line phones), then press **Change** to change it.
- 2 Scroll to the alert you want, then press the *center key* .



54 customize

3 Press **Back** to save the alert setting.

Note: When you charge your phone, the ringtone volume and settings change to Loud and Loud Detail profile. Any special ringtones that you set may also change if they were not Loud profile. After you unplug the phone from the charger, the settings change back to your previous settings.



time & date



Your phone can automatically update your time zone, time, and date. It uses the time and date for the datebook.

To **synchronize** the time zone, time, and date with the network: Press  >  **Settings** > **Initial Setup** > **Time and Date**

> **Autoupdate** > **Time & Time Zone**. If you don't want your phone to automatically update your time zone and date, choose **Time Only** instead.



To **manually** set the time zone, time, and date, turn off **Autoupdate**, then: Press  >  **Settings** > **Initial Setup** > **Time and Date** > **Time Zone**, *time* or *date*. To jump to a city in the time zone list, enter the first letter of its name by pressing keypad keys.


Tip: To choose three time zones for easier access, press  >  **Tools** > **World Clock**. When you open **World Clock**, you can press **Options** to see the **Map View** of time zones.

To choose an **analog or digital** clock for your home screen, press  >  **Settings** > **Personalize** > **Home Screen** > **Clock**.

wallpaper

Set a photo, picture, or animation as a wallpaper (background) image in your home screen.

Find it:  >  **Settings** > **Personalize** > **Wallpaper**


options	
Picture	Press  up or down to select a picture, or select None for no wallpaper.
Layout	Select Center to center the image in the display, Tile to repeat the image across the display, or Fit-to-screen to stretch the image across the display.

screen saver


Set a photo, picture, or animation as a screen saver. The screen saver appears when the flip is open and no activity is detected for a specified time.



Tip: To extend battery life, turn off the screen saver.

Find it:  >  **Settings** > **Personalize**
> **Screen Saver**

options	
Picture	Press  up or down to select a picture or animation, or select None for no screen saver.
Delay	Select the length of inactivity before the screen saver appears.

themes

A *phone theme* is a group of image and sound files that you can apply to your phone. Most themes include a wallpaper image, screen saver image, and ring tone. Your phone may come with some themes, and you can download more. 

To **apply** a theme, press  >  **Multimedia**
> **Themes** > *theme*.

To **download** a theme, see page 88.

To **delete themes you downloaded**, press  >  **Multimedia** > **Themes**, scroll to the theme, and press **Options** > **Delete** or **Delete All**.

display appearance

To choose a phone **skin** that sets the look and feel of your phone's display: Press  >  **Settings** > **Personalize** > **Skin**.

To set your display **brightness**: Press  >  **Settings** > **Initial Setup** > **Brightness**.

To save battery life, your keypad **backlight** turns off when you're not using your phone. The backlight turns on when you open the flip or press any key. To set how long your phone waits before the backlight turns off:


Press  >  **Settings** > **Initial Setup** > **Backlight**.

To save battery life, the **display** can turn off when you're not using your phone. The display turns back on when you open the flip or press any key. To set how long your phone waits before the display turns off:

Press  >  **Settings** > **Initial Setup**
> **Display Timeout**.

shortcuts and main menu


home screen shortcuts

In the home screen, you can press the navigation key or soft keys as **shortcuts**  to your favorite features. You can change the features that these keys open. For key locations, see page 1.

Find it:  >  **Settings** > **Personalize**
> **Home Screen** > **Home Keys**

options	
Icons	Show or hide your navigation key shortcut icons in the home screen.
Up, Down, Left, Right	Choose the features that open when you press the navigation key up, down, left, or right in the home screen.
Left Soft Key	Choose the feature that opens when you press the <i>left soft key</i> in the home screen.
Right Soft Key	Choose the feature that opens when you press the <i>right soft key</i> in the home screen.

main menu appearance

To make your **main menu appearance** either graphic icons or a text-based list, press  >  **Settings** > **Personalize** > **Main Menu** > **View** > **Icons** or **List**.

To change your **main menu order**, press  >  **Settings** > **Personalize** > **Main Menu** > **Reorder**.

answer options

You can use different ways to answer an incoming call. To turn on or turn off an answer option:

Find it:  >  **Settings** > **In-Call Setup** > **Answer Options**

options	
Multi-Key	Answer by pressing any key.

options	
Open to Answer	Answer by opening the flip.
Delayed Answer	Set up your delayed answering option (see page 59).

calls

To make and answer calls, see page 14.



turn off a call alert

You can press the volume keys to turn off a call alert before answering the call.

delay answering

If you want to answer a call, but need to step outside first, you can delay answering the call.


When your phone rings, press **Delay** or your voice key. Your phone stops ringing and plays a brief message for the caller, such as “Please hold, your call will be answered in a moment.” The call remains on hold until you press **Talk**.

To turn **Delayed Answer** on, or record your **Delayed Answer** message (up to 10 seconds), press  >  **Settings** > **In-Call Setup** > **Answer Options** > **Delayed Answer**

Note: When **Delayed Answer** is on, the **Open to Answer** feature is disabled.



recent calls

Your phone keeps lists of incoming and outgoing calls, even for calls that didn't connect. The most recent calls are listed first. The oldest calls are deleted as new calls are added.

Shortcut: Press  from the home screen to see a list of dialed calls.






Find it:  >  **Recent Calls**, then press  or  to switch to **Dialed Calls**, **Received Calls**, or **Missed Calls**

Scroll to a call. A ✓ next to a call means the call connected.



- To call the number, press .
- To see call details (like time and date), press the *center key* .
- To see the **Last Calls Menu**, press **Options**. This menu can include:


options	
Store	Create a phonebook entry with the number in the No. field. Store does not appear if the number is already stored.
Delete	Delete the entry.
Delete All	Delete all entries in the list.

options	
Show ID	Show your caller ID for the next call.
Hide ID	Hide your caller ID for the next call.
Send Message	Open a new text message with the number in the To field.
Send Voice Message	Record and send a voice message to the number.
Add Digits	Add digits after the number.
Attach Number	Attach a number from the phonebook or recent calls lists.
Send Tones	Send the number to the network as DTMF tones. Note: This option appears only during a call .

options		
Talk then Fax	Talk and then send a fax in the same call (see page 81).	
Filter by	Select all, dialed, received, or missed calls.	
Notepad	Open the number in a text editor.	
Call Times	Open your call time information.	
Call Cost	Open your call cost information.	
Data Times	See how much time you have spent on data transfers.	
Data Volumes	See how much data you have transferred.	

redial


- 1 Press  from the home screen to see a list of recent calls.
- 2 Scroll to the entry you want to call, then press .

If you hear a **busy signal**, and you see **Call Failed**, you can press  or **Retry** to redial the number. When the call goes through, your phone rings or vibrates one time, shows **Redial Successful**, and connects the call.

return a call

Your phone keeps a record of your unanswered calls, and shows **X Missed Calls**, where **X** is the number of missed calls.

- 1 Press **View** to see the received calls list.

- 2 Scroll to the call you want to return, then press .

caller ID

Calling line identification (caller ID) shows the phone number for an incoming call in your external and internal displays.

Your phone shows the caller's name and picture when they're stored in your phonebook, or **Incoming Call** when caller ID information isn't available.

You can set your phone to play a different ringer ID for an entry stored in your phonebook (see page 70).


To show or hide **your phone number** from the next person you call, enter the phone number and press **Options > Hide ID/Show ID**.



emergency calls

Your service provider programs one or more emergency phone numbers, such as 911 or 112, that you can call under any circumstances, even when your phone is locked or the SIM card is not inserted.

Note: Emergency numbers vary by country. Your phone's preprogrammed emergency number(s) may not work in all locations, and sometimes an emergency call cannot be placed due to network, environmental, or interference issues.

- 1 Press the keypad keys to dial the emergency number.
- 2 Press  to call the emergency number.

voicemail

Your network stores the voicemail messages you receive. To listen to your messages, call your voicemail number.



Note: Your service provider may include additional information about using this feature.



When you **receive** a voicemail message, your phone shows the voicemail message indicator  and **New Voicemail**. Press **Call** to listen to the message.

To **check** voicemail messages:

Find it:  >  **Messages** > **Voicemail**

Your phone may prompt you to store your voicemail phone number. If you don't know your voicemail number, contact your service provider.

Note: You can't store a **p** (pause), **w** (wait), or **n** (number) character in this number. If you want to store a voicemail number with these characters, create a phonebook entry for it. Then you can use the entry to call your voicemail.

To **change** your voicemail number or turn off voicemail notification, press  >  **Messages**, then press **Options** and select **Setup** > **Voicemail Setup**.

Tip: To open a list of your **Missed Calls**, see page 59.

other features

advanced calling

To use voice commands for calling, see page 48.

features

attach a phone number



Dial an area code or prefix for a phonebook number, then press **Options** > **Attach Number**.

features

notepad

> **Recent Calls**, press **Options**, then > **Notepad**

- To call the number, press .
- To create a phonebook entry with the number in the **No.** field, press **Store**.
- To open the **Dialing Menu** to attach a number or insert a special character, press **Options**.

features

international calls



If your phone service includes international dialing, press and hold **0** to insert your local international access code (indicated by +). Then, press the keypad keys to dial the country code and phone number.

hold a call

Press **Options > Hold** to put all active calls on hold.

mute a call

Press **Mute** (if available) or **Options > Mute** to put all active calls on mute.

features

call waiting



When you're on a call, you'll hear an alert if you receive a second call.

Press **☎** to answer the new call.

- To switch between calls, press **Switch**.
- To connect the two calls, press **Options > Link**.
- To end the call on hold, press **Options > End Call On Hold**.

To turn the call waiting feature on or off:

☎ > **⚙ Settings > In-Call Setup > Call Waiting > On or Off**

conference call



During a call:

Dial the next number, press **☎**, and press **Options > Link**.

features

transfer a call



During a call:

Options > **Transfer**, dial transfer number, press



call forwarding




Set up or cancel call forwarding:

 >  **Settings** > **Call Forward**

restrict calls



Restrict outgoing or incoming calls:



 >  **Settings** > **Security** > **Restrict Calls**

Tell your phone to allow **All**, **None**, or only the calls from your **Phonebook**.

call barring



Restrict outgoing or incoming calls:

 >  **Settings** > **Security** > **Call Barring**

features

TTY calls



Set up your phone for use with an optional TTY device:

 >  **Settings** > **Initial Setup** > **TTY Setup**

Note: A teletypewriter (TTY) is a communication device used by people who are hard of hearing or have a speech impairment. TTY does not work from mobile phone to mobile phone.

change phone line



If you have a dual-line-enabled SIM card, you can change your line to make and receive calls from your other phone number.

 >  **Settings** > **Phone Status** > **Active Line**



features

fixed dial



When you turn on fixed dialing, you can call only numbers stored in the fixed dial list.

Turn fixed dialing on or off:

 >  **Settings** > **Security** > **Fixed Dial**

Use the fixed dial list:

 >  **Tools** > **Dialing Services** > **Fixed Dial**

service dial



Your service provider might give you phone numbers for taxi companies or other services. These phone numbers are stored on your SIM card. To see them:

 >  **Tools** > **Dialing Services** > **Service Dial**

features

quick dial





Dial preprogrammed phone numbers:

 >  **Tools** > **Dialing Services** > **Quick Dial**

DTMF tones

Activate DTMF tones:



 >  **Settings** > **Initial Setup** > **DTMF**

When you dial a number, your phone sends it to your network as *Dual Tone Multi Frequency* (DTMF) tones.

To send DTMF tones during a call, just press number keys or scroll to a number in the phonebook or recent calls lists and press **Options** > **Send Tones**.

phonebook



To store and call phonebook entries, see page 14.


Note: You can show contacts stored in your phone's memory or on your SIM card. To choose which entries you see, press  >  **Phonebook**, then press **Options** > **View**.



You can select **Phone & SIM Card**, **SIM Card**, or **Phone Contacts**.

features

assign a speed dial key to a phonebook entry

You can assign the keys  through  to phonebook entries. Then, when you press and hold a key, your phone calls the entry.

Note: Your service provider might assign some keys, such as  for your voicemail number.

Press  >  **Phonebook** and scroll to the phonebook entry. Then, press **Options** > **Add to Speed Dial** and pick a speed dial key.

features

use the speed dial key for a phonebook entry

To **use a speed dial key** that you assigned to a phonebook entry, just press and hold the key while in your home screen.

edit your speed dial keys

 >  **Phonebook**, then press **Options** > **Manage Contacts** > **Speed Dial**

choose a speed dial key list

You can set speed dial to call the entries in your phone memory phonebook or your Fixed Dial list:







 >  **Settings** > **Initial Setup** > **Speed Dial** > **Phone Memory** or **Fixed Dial**.

features

edit or delete a phonebook entry

Edit a number stored in the phonebook:

 >  **Phonebook**, scroll to the phonebook entry, and press **Options**. You can select **Edit Contact**, **Delete Contact**, or other options.

Shortcut: In the phonebook, press keypad keys to enter the first letters of an entry you want. You can also press  and  to see the entries in your categories or entries you used recently.

features

set ringer ID for a phonebook entry

Assign a ring alert (ringer ID) to an entry:

📍 > 📖 **Phonebook** > *entry*, then press
Options > **Edit Contact** > **Ringer ID** > *ringer name*

Note: The **Ringer ID** option isn't available for entries stored on the SIM card. To copy an entry from SIM to phone memory, see page 72.

To activate ringer IDs:

📍 > ⚙️ **Settings** > **Ring Styles** > *style Detail*
> **Ringer IDs** > **On**

features

set picture ID for a phonebook entry

Assign a photo or picture to show when you receive a call from an entry:

📍 > 📖 **Phonebook** > *entry*, then press
Options > **Edit Contact** > **Picture** > *picture name*

Note: The **Picture** option isn't available for entries stored on the SIM card. To copy an entry from SIM to phone memory, see page 72.

features

set category for a phonebook entry

•◉ > ☞ Phonebook > *entry*, then press
Options > Edit Contact > Category > *category name*

Note: The **Category** option isn't available for entries stored on the SIM card. To copy an entry from SIM to phone memory, see page 72.

When you open your phonebook, press ☒ or ☐ to see your categories.

set category view for phonebook

•◉ > ☞ Phonebook, then press Options
> Filter by > Category > *category name*

You can show **All** entries, entries in a predefined category (**Business**, **Personal**, **General**, **VIPs**), or entries in a category you create.

Shortcut: When you open your phonebook, press ☒ or ☐ to see your categories.

features

create a new category

•◉ > ☞ Phonebook, then press
Options > Manage Contacts > Edit Phone Categories
> [New Category]

Enter the category name, and select its members from your phonebook entries.

edit a category

•◉ > ☞ Phonebook, then press
Options > Manage Contacts > Edit Phone Categories

Scroll to the category name and press
Options > Edit Category.

You can edit the category name, members, ringer ID, or picture. Your phone uses the ringer ID and picture whenever you receive calls from numbers in the category.

features

create group mailing list



You can put several phonebook entries in a group mailing list, then send a message to the list. To create a list:

 >  **Phonebook**, then press
Options > **Create New** > **Message List**

Note: A **Message List** cannot include entries stored on the SIM card. To copy an entry from SIM to phone memory, see page 72.

sort phonebook list



Set the order in which entries are listed:

 >  **Phonebook**, then press
Options > **Setup** > **Sort by** > **First Name** or **Last Name**

features



copy one phonebook entry

Copy an entry from the phone to the SIM card, or from the SIM card to the phone:

 >  **Phonebook**, scroll to the entry, press
Options > **Copy to SIM Card** or **Copy to Phone**



copy multiple phonebook entries

Copy multiple phonebook entries between the phone and SIM card:

 >  **Phonebook**, then press
Options > **Select Multiple to**, and select
Copy Phone to SIM or **Copy SIM to Phone**

send phonebook entry to another device

Send a phonebook entry to another phone, computer, or device:

 >  **Phonebook**, scroll to the entry, press
Options > **Send Contact**

features

print phonebook entry over Bluetooth™ connection



You can use a Bluetooth wireless connection to send a phonebook entry from your phone to a printer.

 >  Phonebook

Scroll to the entry you want to print, and press **Options** > **Print**.

You cannot print a **Mailing List**. For more about Bluetooth connections, see page 22.

messages

For basic text message features, see page 33.

features

send email



 >  Messages > **Create Message**
> **New Email**

Note: You can write up to 3000 characters in an email message. Writing a longer message may prevent the message from being downloaded or may truncate the message.

features

send voice message

 >  **Messages** > **Create Message**
> **New Voice Msg**

Your phone starts recording the voice message. To stop recording, press **Stop**. Your phone inserts the voice recording into a message and lets you enter email addresses or phone numbers of the recipients.

use a message template








 >  **Messages** > **Templates**
> **Text Templates** or **Multimedia Templates**

Select a template to create a new message based on the template.


features

read and manage messages

 >  **Messages** > **Message Inbox**

Icons next to each message indicate if it is read  or unread . Icons can also indicate if the message has an attachment , might be SPAM , or is locked , urgent , or low priority .

To **Reply**, **Forward**, **Lock**, or **Delete** a message, scroll to it and press **Options**.

To open a message, press . Then, you can press **Options** to use or store any phone numbers, email addresses, Web sites, or files in the message.


features

read and manage email



 >  **Messages** > **Email Msgs**

To **Reply**, **Forward**, **Lock**, or **Delete** a message, scroll to it and press **Options**.

To open a message, press . Then, you can press **Options** to use or store any phone numbers, email addresses, Web sites, or files in the message.

store message objects



Go to a multimedia message page, or scroll to an object in a message, then:

Options > **Store**

features

print message over Bluetooth™ connection



You can use a Bluetooth wireless connection to send a message from your phone to a printer.

 >  **Messages** > **Message Inbox**, **Email Msgs**, **Outbox**, or **Drafts**

Scroll to the message you want to print and press **Options** > **Print**.


You cannot print message **Templates**. For more about Bluetooth connections, see page 22.

features

store text messages on your SIM card



To store incoming text messages on your SIM card, press:



 >  **Messages**, then press **Options > Setup > Message Setup > Text Msg Setup > Default Storage > SIM Card**

features

edit email settings







You can edit the settings for your Email connections. To use email, you need to store your email **User ID** and **Password**.

 >  **Messages**, then press **Options > Setup > Email Msg Setup > Account Settings**


If you have more than one email account, select an account to edit.

Your phone shows a list of email settings. Here is where you store your email **User ID** and **Password**.

Note: To create a new account, select **[New Entry]** in the **Account Settings** list. Your display shows a folder for each email account under  >  **Messages > Email Msgs**.

features	
<p>browser messages</p> <p>Read messages received by your micro-browser:</p> <p>•◉ > ✉ Messages > Browser Msgs</p>	
<p>info services</p> <p>Read subscription-based information services messages:</p> <p>•◉ > ✉ Messages > Info Services</p>	

instant messaging

features	
<p>log in</p> <p>•◉ > 🗨 IM</p> <p>Select an IM account to log in, or select [New Account] to set up an IM account.</p>	

features	
<p>log in automatically</p> <p>•◉ > 🗨 IM, press Options, then > Offline Settings</p> <p>Turn on Auto-Login to start the IM login whenever you select •◉ > IM. Turn on Power-On Login to start the IM login whenever you turn on your phone.</p>	
<p>set IM ring style</p> <p>Select a ring or vibration for new IM messages and contact alerts.</p> <p>•◉ > ⚙ Settings > Ring Styles > <i>style</i> Detail > IM</p>	

personalizing

features



language

Set menu language:

 >  **Settings** > **Initial Setup** > **Language**

scroll

Set the scroll bar to **Up/Down** or **Wrap Around** in menu lists:

 >  **Settings** > **Initial Setup** > **Scroll**

text marquee

Set the speed for scrolling text in your display:

 >  **Settings** > **Initial Setup** > **Text Marquee**



features

activate ringer IDs

Activate ringer IDs assigned to phonebook entries and categories:

 >  **Settings** > **Ring Styles** > *style Detail*
> **Ringer IDs**

ring volume

 >  **Settings** > **Ring Styles** > *style Detail*
> **Ring Volume**

keypad volume

 >  **Settings** > **Ring Styles** > *style Detail*
> **Key Volume**

features

reminders

Set a reminder for when you have not responded to an incoming call, message, or other event:

 >  Settings > Ring Styles > *style* Detail
> Reminders

master reset

Reset all options **except** unlock code, security code, and lifetime timer:

 >  Settings > Initial Setup > Master Reset


features

master clear

Caution: Master clear **erases all information you have entered** (including phonebook and datebook entries) **and content you have downloaded** (including photos and sounds) stored in your phone's memory. After you erase the information, you can't recover it.

 >  Settings > Initial Setup > Master Clear

call times & costs



Network connection time is the elapsed time from the moment you connect to your service provider's network to the moment you end the call by pressing . This time includes busy signals and ringing.

The amount of network connection time you track on your resettable timer may not equal the amount of time for which you are billed by your service provider. For billing information, contact your service provider.

features

call times

Show call timers:

 >  **Recent Calls**, press **Options**, then > **Call Times**

in-call timer



Show time or cost information during a call:

 >  **Settings** > **In-Call Setup** > **In-Call Timer**

features

call cost








Show call cost trackers:




 >  **Recent Calls**, press **Options**, then > **Call Cost**

handsfree

Note: The use of wireless phones while driving may cause distraction. Discontinue a call if you can't concentrate on driving. Additionally, the use of wireless devices and their accessories may be prohibited or restricted in certain areas. Always obey the


laws and regulations on the use of these products.

features	
speakerphone	
Activate the speakerphone during a call: Press Speaker (if available), or Options > Spkrphone On .	
auto answer (car kit or headset)	
Automatically answer calls when connected to a car kit or headset:  >  Settings > Car Settings or Headset > Auto Answer	
voice dial (headset)	
Enable voice dial with headset send/end key:  >  Settings > Headset > Voice Dial	

features	
auto handsfree (car kit)	
Automatically route calls to a car kit when connected:  >  Settings > Car Settings > Auto Handsfree	

data calls

To connect your phone with a USB cable, see page 37.


features	
send data	
Connect your phone to the device, then place the call through the device application.	

features

receive data or fax

Connect your phone to the device, then answer the call through the device application.

talk then fax



Connect your phone to the device, enter fax number, press **Options > Talk then Fax**, then press  to make the call.

features

set up Exchange ActiveSync

You can use the Internet to synchronize your phone's phonebook and datebook entries with an email account on a Microsoft® Exchange 2003 Server.



You need to know the email account's **user name** and **password**, the Microsoft® Exchange **server name**, and the **user domain name**. Confirm that the **Mobility** option is enabled on the email account, and that **data service** is activated with your phone service provider.

To **set up** an ActiveSync partner, press  >  **Connection > MOTOSYNC > Exchange**, press **Options**, then > **Setup**. Enter the server details, including **Server Name**, **Domain**, and the **Web Session** to use. To set up a **Web Session**, see page 89.

features

use Exchange ActiveSync

Once you set up an Exchange ActiveSync partner, you can schedule your phone to synchronize with the account automatically.

To **schedule** synchronization, press  >  **Connection** > **MOTOSYNC** > **Exchange**, press **Options**, then > **Auto Sync Setup**. Enter the time and days you want your phone to synchronize.

network

features

network settings

See network information and adjust network settings:

 >  **Settings** > **Network**

software update

Your service provider can send updated phone software over the air to your phone. When your phone receives a software update, you can choose to download it and install it later. To install a software update you downloaded:

 >  **Settings** > **Phone Status** > **Software Update**
> **Install Now**

personal organizer


features

set alarm

 >  Tools > Alarm Clock

turn off alarm

When an alarm happens:


To turn off the alarm, press **Disable** or .

To set an eight-minute delay, press **Snooze**.

Note: **Snooze** is available only if the phone is already powered on when the alarm sounds.

add new datebook event

 >  Tools > Datebook, scroll to the day, press , scroll to **Create New Event**, and press .

If you set a reminder for a datebook event,  can appear at the top of your screen.

features

see datebook event

See or edit event details:

 >  Tools > Datebook, scroll to the day, and press .

Scroll to the event and press . To edit the details, press **Options** > **Edit**.

Tip: Keeping up with life can be tough work. To see a list of your upcoming events, open the datebook and press **Options** > **View** > **Organized Events**.

event reminder

When an event reminder happens:

To see reminder details, press **View**.

To close the reminder, press **Exit**.

features

send datebook event to another device

Send a datebook event to another phone, computer, or device:

 >  **Tools** > **Datebook**, scroll to the day, press , scroll to the event, press **Options** > **Send** > **with Bluetooth**

print datebook month, week, or day over Bluetooth™ connection

You can use a Bluetooth wireless connection to send a datebook month, week, or day from your phone to a printer.

 >  **Tools** > **Datebook**

Go to the month, week, or day view and press **Options** > **Print**.

For more about Bluetooth connections, see page 22.

features

create voice record

Press and hold the voice key, speak into the phone, release the voice key.

Note: Recording phone calls is subject to varying state and federal laws regarding privacy and recording of conversations. Always obey the laws and regulations on the use of this feature.

play voice record

Play back a voice record:



 >  **Multimedia** > **Sounds**, scroll to the voice record, and press the *center key* 

calculator

 >  **Tools** > **Calculator**

features

currency converter

 >  **Tools** > **Calculator**, then press **Options** > **Exchange Rate**

Enter exchange rate, press **OK**, enter amount, and press **Options** > **Convert Currency**.



security

features

SIM PIN

Caution: If you enter an incorrect PIN code three times before the correct code, your SIM card is disabled and your display shows **SIM Blocked**.

Lock or unlock the SIM card:

 >  **Settings** > **Security** > **SIM PIN**

features

lock feature

 >  **Settings** > **Security** > **Lock Application**

manage certificates



Enable or disable Internet access certificates stored on your phone:

 >  **Settings** > **Security** > **Certificate Mgmt**

Certificates are used to verify the identity and security of Web sites when you download files or share information.

fun & games



For basic information on the camera, see page 28.

features

listen to sound files

 >  **Multimedia** > **Sounds**

Scroll to a file and select it to listen.



Note: Your phone cannot receive PTT calls or data over an EDGE network while it is playing some sound files. Indicators appear at the top of your display when you can receive PTT  or EDGE  data.

features

delete or manage sound files

 >  **Multimedia** > **Sounds**

To **delete** a file, scroll to it in the list and press **Options** > **Manage** > **Delete**.

To **copy or move** a file from your memory card () to your phone memory ()

scroll to it and press **Options** > **Manage** > **Copy** or **Move** > **Memory Card**.

You cannot copy or move some copyrighted files.



To **categorize** sound files, press **Options** > **Categories**. You can create categories, assign files, and choose which category shows in your **Sounds** list.



features

create ring tones

Create ring tones that you can use with your phone:

 >  **Multimedia** > **Sounds** > **[New Melody]**

start micro-browser






Just press .

download objects from Web page



Download a picture, sound, or other object from a Web page:

Press , go to the page that links to the file, scroll to the link, and select it.

To activate downloaded copyrighted files, press  >  **Tools** > **Activation List** > *file type* > *file*. You can see file's **Status**, **Type**, **Activation**, and **Counts Remaining**.

features

store downloaded files in your phone or memory card

You can choose to store your downloaded files on your phone or your memory card you download choose where to store the files you download:

 >  **Settings** > **Phone Status**
> **Download Location** > **Memory Card** or **Phone**

To see how much memory is available on your phone or memory card, see page 36.

features

video streaming online

If you go to a Web site with videos, your phone can play the videos in your browser without downloading them onto your phone. This is called *video streaming*.

To try video streaming, just start your micro-browser and go to a page that provides videos for streaming.

Web sessions



A *Web Session* stores settings that your phone uses to access the Internet. To select or create a Web session:

 >  **Web Access** > **Web Sessions**

features

clear micro-browser history




Clear the micro-browser's history, cache, or cookies:

 >  **Web Access** > **Browser Setup**
> **Clear History, Reset Cache, or Clear Cookies**

download game or application



You can download a Java™ game or application the same way you download pictures or other objects:


Press , go to the page that links to the file, scroll to the link, and select it.


features

start game or application




Start a Java™ game or application:

•◂◃• >  **Games & Apps**, scroll to the game or application, press the *center key* •◂◃•

To **pause** a Java app, press  or close the flip. When you start the Java app again, it will resume where you left off.

Note: Java apps will close and end if you open the camera.

To **install** and run games stored on your memory card, press •◂◃• >  **Games & Apps** > **[Install New]**.

features

airplane mode

You can switch your phone to airplane mode to prevent it from communicating with the network. This lets you use games or other applications while you are on an airplane, without interfering with airplane communications.

Note: Your phone cannot make Bluetooth™ connections when **Airplane Mode** is on.

•◂◃• >  **Settings** > **Airplane Mode** > **Airplane Mode** > **On**

You can make the airplane mode option appear whenever you turn on your phone:

•◂◃• >  **Settings** > **Airplane Mode** > **Prompt At Power Up** > **On**

service and repairs

If you have questions or need assistance, we're here to help.

Go to www.hellomoto.com, where you can select from a number of customer care options. You can also contact the Motorola Customer Support Center at 0800 666 8676 (Argentina), 800-201-442 (Chile), 01-800-700-1504 (Colombia), 01 800 021 0000 (México), 0800-100-4289 (Venezuela), or 0-800-52-470 (Perú).

Specific Absorption Rate Data

This model wireless phone meets the government's requirements for exposure to radio waves.

Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission (FCC) of the U.S. Government and by the Canadian regulatory authorities. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age or health.

The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC and by the Canadian regulatory authorities is 1.6 W/kg.¹ Tests for SAR are conducted using standard operating positions accepted by the FCC and by Industry Canada with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR

level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station, the lower the power output.

Before a phone model is available for sale to the public in the U.S. and Canada, it must be tested and certified to the FCC and Industry Canada that it does not exceed the limit established by each government for safe exposure. The tests are performed in positions and locations (e.g., at the ear and worn on the body) reported to the FCC and available for review by Industry Canada. The highest SAR value for this model phone when tested for use at the ear is 1.08 W/kg, and when worn on the body, as described in this user guide, is 0.55 W/kg. The SAR value for this product in its data transmission mode (body-worn use) is 0.31 W/kg. (Body-worn measurements differ among phone models, depending upon available accessories and regulatory requirements).²

While there may be differences between the SAR levels of various phones and at various positions, they all meet the governmental requirements for safe exposure. Please note that improvements to this product model could cause differences in the SAR value for later products; in all cases, products are designed to be within the guidelines.

Additional information on Specific Absorption Rates (SAR) can be found on the Cellular Telecommunications & Internet Association (CTIA) Web site:

<http://www.phonefacts.net>

or the Canadian Wireless Telecommunications Association (CWTA) Web site:

<http://www.cwta.ca>

1. In the United States and Canada, the SAR limit for mobile phones used by the public is 1.6 watts/kg (W/kg) averaged over one gram of tissue. The standard incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements.
2. The SAR information includes the Motorola testing protocol, assessment procedure, and measurement uncertainty range for this product.

Specific Absorption Rate Data

This model meets international guidelines for exposure to radio waves.

Your mobile device is a radio transmitter and receiver. It is designed not to exceed the limits for exposure to radio waves recommended by international guidelines. These guidelines were developed by the independent scientific organization ICNIRP and include safety margins designed to assure the protection of all persons, regardless of age and health.

The guidelines use a unit of measurement known as the Specific Absorption Rate, or SAR. The ICNIRP SAR limit for mobile devices used by the general public is 2 W/kg and the highest SAR value for this device when tested at the ear was 0.55 W/kg.¹ As mobile devices offer a range of functions, they can be used in other positions, such as on the body as described in this user guide.² In this case, the highest tested SAR value is 0.38 W/kg.¹

As SAR is measured utilizing the device's highest transmitting power, the actual SAR of this device while operating is typically below that indicated above. This is due to automatic changes to the power level of the device to ensure it only uses the minimum level required to reach the network.

While there may be differences between the SAR levels of various phones and at various positions, they all meet the governmental

requirements for safe exposure. Please note that improvements to this product model could cause differences in the SAR value for later products; in all cases, products are designed to be within the guidelines.

The World Health Organization has stated that present scientific information does not indicate the need for any special precautions for the use of mobile devices. They note that if you want to reduce your exposure then you can do so by limiting the length of calls or using a "hands-free" device to keep the mobile phone away from the head and body.

Additional Information can be found on the websites of the World Health Organization (<http://www.who.int/emf>) or Motorola, Inc. (<http://www.motorola.com/rfhealth>).

1. The tests are carried out in accordance with international guidelines for testing. The limit incorporates a substantial margin for safety to give additional protection for the public and to account for any variations in measurements. Additional related information includes the Motorola testing protocol, assessment procedure, and measurement uncertainty range for this product.
2. Please see the *Safety and General Information* section about body worn operation.

European Union Directives Conformance Statement



Hereby, Motorola declares that this product is in compliance with

- The essential requirements and other relevant provisions of Directive 1999/5/EC
- All other relevant EU Directives



The above gives an example of a typical Product Approval Number.

You can view your product's Declaration of Conformity (DoC) to Directive 1999/5/EC (to R&TTE Directive) at www.motorola.com/rtte. To find your DoC, enter the product Approval Number from your product's label in the "Search" bar on the web site.



MOTOROLA

Important Safety and Legal Information

Safety and General Information

This section contains important information on the safe and efficient operation of your mobile device. Read this information before using your mobile device.*

Exposure to Radio Frequency (RF) Energy

Your mobile device contains a transmitter and receiver. When it is ON, it receives and transmits RF energy. When you communicate with your mobile device, the system handling your call controls the power level at which your mobile device transmits.

Your Motorola mobile device is designed to comply with local regulatory requirements in your country concerning exposure of human beings to RF energy.

Operational Precautions

For optimal mobile device performance and to be sure that human exposure to RF energy does not exceed the guidelines set forth in

* The information provided in this document supersedes the general safety information in user's guides published prior to May 1, 2006.

the relevant standards, always follow these instructions and precautions.

External Antenna Care

If your mobile device has an external antenna, use only a Motorola-supplied or approved replacement antenna. Use of unauthorized antennas, modifications, or attachments could damage the mobile device and/or may result in your device not complying with local regulatory requirements in your country.

DO NOT hold the external antenna when the mobile device is IN USE. Holding the external antenna affects call quality and may cause the mobile device to operate at a higher power level than needed.

Product Operation

When placing or receiving a phone call, hold your mobile device just like you would a landline phone.

If you wear the mobile device on your body, always place the mobile device in a Motorola-supplied or approved clip, holder, holster, case, or body harness. If you do not use a body-worn accessory supplied or approved by Motorola, keep the mobile device and its antenna at least 2.5 centimeters (1 inch) from your body when transmitting.

When using any data feature of the mobile device, with or without an accessory cable, position the mobile device and its antenna at least 2.5 centimeters (1 inch) from your body.

Using accessories not supplied or approved by Motorola may cause your mobile device to exceed RF energy exposure guidelines. For a list of Motorola-supplied or approved accessories, visit our Web site at: www.motorola.com.

RF Energy Interference/Compatibility

Nearly every electronic device is subject to RF energy interference from external sources if inadequately shielded, designed, or otherwise configured for RF energy compatibility. In some circumstances your mobile device may cause interference with other devices.

Follow Instructions to Avoid Interference Problems

Turn off your mobile device in any location where posted notices instruct you to do so. These locations include hospitals or health care facilities that may be using equipment that is sensitive to external RF energy.

In an aircraft, turn off your mobile device whenever instructed to do so by airline staff. If your mobile device offers an airplane mode or similar feature, consult airline staff about using it in flight.

Pacemakers

If you have a pacemaker, consult your physician before using this device.

Persons with pacemakers should observe the following precautions:

- ALWAYS keep the mobile device more than 20 centimeters (8 inches) from your pacemaker when the mobile device is turned ON.
- DO NOT carry the mobile device in the breast pocket.
- Use the ear opposite the pacemaker to minimize the potential for interference.
- Turn OFF the mobile device immediately if you have any reason to suspect that interference is taking place.

Hearing Aids

Some mobile devices may interfere with some hearing aids. In the event of such interference, you may want to consult your hearing aid manufacturer or physician to discuss alternatives.

Other Medical Devices

If you use any other personal medical device, consult your physician or the manufacturer of your device to determine if it is adequately shielded from RF energy.

Driving Precautions

Check the laws and regulations on the use of mobile devices in the area where you drive. Always obey them.

When using your mobile device while driving, please:

- Give full attention to driving and to the road. Using a mobile device may be distracting. Discontinue a call if you can't concentrate on driving.
- Use handsfree operation, if available.
- Pull off the road and park before making or answering a call if driving conditions so require.

Responsible driving practices can be found in the "Smart Practices While Driving" section at the end of this guide and/or at the Motorola Web site: www.motorola.com/callsmart.

Operational Warnings

Obey all posted signs when using mobile devices in public areas, such as health care facilities or blasting areas.

Automobile Air Bags

Do not place a mobile device in the air bag deployment area.

Potentially Explosive Atmospheres

Areas with potentially explosive atmospheres are often but not always posted, and can include fueling areas such as below decks

on boats, fuel or chemical transfer or storage facilities, or areas where the air contains chemicals or particles, such as grain, dust, or metal powders.

When you are in such an area, turn off your mobile device, and do not remove, install, or charge batteries. In such areas, sparks can occur and cause an explosion or fire.

Damaged Products

If your mobile device or battery has been submerged in water, punctured, or subjected to a severe fall, do not use it until you take it to a Motorola Authorized Service Center. Do not attempt to dry it with an external heat source, such as a microwave oven.








Batteries and Chargers

If jewelry, keys, beaded chains, or other conductive materials touch exposed battery terminals, this could complete an electrical circuit (short circuit), become very hot, and could cause damage or injury. Be careful when handling a charged battery, particularly when placing it inside a pocket, purse, or other container with metal objects. **Use only Motorola Original batteries and chargers.**

Caution: To avoid risk of personal injury, do not dispose of your battery in a fire.



Your battery, charger, or mobile device may contain symbols, defined as follows:

Symbol	Definition
	Important safety information follows.
	Do not dispose of your battery or mobile device in a fire.
	Your battery or mobile device may require recycling in accordance with local laws. Contact your local regulatory authorities for more information.
	Do not throw your battery or mobile device in the trash.
	Your mobile device contains an internal lithium ion battery.
	Do not let your battery, charger, or mobile device get wet.
	Listening at full volume to music or voice through a headset may damage your hearing.

Choking Hazards

Your mobile device or its accessories may include detachable parts, which may present a choking hazard to small children. Keep your mobile device and its accessories away from small children.

Glass Parts

Some parts of your mobile device may be made of glass. This glass could break if the product is dropped on a hard surface or receives a substantial impact. If glass breaks, do not touch or attempt to remove. Stop using your mobile device until the glass is replaced by a qualified service center.

Seizures/Blackouts

Some people may be susceptible to epileptic seizures or blackouts when exposed to flashing lights, such as when playing video games. These may occur even if a person has never had a previous seizure or blackout.

If you have experienced seizures or blackouts, or if you have a family history of such occurrences, please consult with your physician before playing video games or enabling a flashing-lights feature (if available) on your mobile device.

Discontinue use and consult a physician if any of the following symptoms occur: convulsion, eye or muscle twitching, loss of awareness, involuntary movements, or disorientation. It is always a good idea to hold the screen away from your eyes, leave the

lights on in the room, take a 15-minute break every hour, and stop use if you are very tired.

Caution About High Volume Usage



Listening at full volume to music or voice through a headset may damage your hearing.

Repetitive Motion

When you repetitively perform actions such as pressing keys or entering finger-written characters, you may experience occasional discomfort in your hands, arms, shoulders, neck, or other parts of your body. If you continue to have discomfort during or after such use, stop use and see a physician.

Latin America Warranty, except Mexico

Latin America Warranty MOTOROLA INC.

Subscribers/Cellular Division

Through its own service centers and/or its authorized service centers, Motorola provides a 1-year warranty that covers the cellular phone, all its parts and labor against any defect and operation as long as the "Product" has been operated and handled under normal conditions. The term of 1 year begins when the "Product" is purchased.

Conditions

- 1 For warranty service, return the "Product" and this warranty to the place of purchase or to any Motorola authorized service center.

If additional information is needed, please contact any of our service centers:

Motorola de México, S.A.
Bosques Alisos No. 125
Bosques de las Lomas
CP 05120 México, D.F.
Telephone: 257-6700

Motorola de Brasil
Rua Bandeira, Paulista 580
Sao Paulo, Brazil 05424-010
Telephone: 821-9991

Centro de Servicio
Motorola de Colombia
Diagonal 127A N. 17-64
Bogotá, Colombia
Telephone: 615-5759
Telephone: 615-5769
Telephone: 216-1743

If the cellular phone has been installed in a vehicle, take the vehicle to the service center to analyze the equipment, or the installation on the vehicle. This warranty does not cover the installation of the cellular phone.

- 2** Motorola Inc., through its own service centers and/or their authorized service centers, will repair or replace the cellular phone at no charge. This warranty covers shipping expenses, only if it is needed to make the repair.

Motorola Inc. through its own service centers and/or their authorized service centers, at its own discretion, will repair, replace, or reimburse the purchase price of the defective cellular phone only during the warranty period, as long as the "Product", in accordance with the conditions established in this warranty, is returned to a Motorola service center or to a Motorola authorized service center. All the accessories, batteries, parts, small boards or equipment of the cellular telephone that by virtue of being defective are replaced in

fulfillment of this warranty, will automatically become property of Motorola Inc.

- 3** To receive warranty service, present your cellular phone or accessory to any Motorola service center or to any Motorola authorized service center along with your receipt of purchase or comparable substitute that indicates the date of purchase, serial number of the transceiver, and/or electronic serial number.
- 4** The repair time will not be greater than 30 days, starting from the day the equipment was received at the service center.
- 5** To purchase parts, spare parts, accessories and service not covered by this warranty, contact one of the following service centers:

Motorola de México, S.A.
Bosques Alisos No. 125
Bosques de las Lomas
CP 05120 México, D.F.
Telephone: 257-6700

Motorola de Brasil
Rua Bandeira, Paulista 580
Sao Paulo, Brazil 05424-010
Telephone: 821-9991

Centro de Servicio
Motorola de Colombia
Diagonal 127A N. 17-64
Bogotá, Colombia
Telephone: 615-5759
Telephone: 615-5769
Telephone: 216-1743

Or to any authorized service center in your locality.

- 6** This warranty is not valid in the following cases:
- a** Defects or damages derived from abnormal use.
 - b** Defects or damages derived from accident or negligence.
 - c** Defects or damages derived from tests, unsuitable operation, maintenance, installation and adjustments, or derived from any alteration or modification of any type.
 - d** Damage caused to antennas, unless they are consequences of defects in material or workmanship.
 - e** When the cellular phone has been disassembled and/or repaired so that its operation has been affected or that it can not be tested to verify any claim that grants this warranty.
 - f** Any cellular phone with a serial number that has been removed, altered, or obliterated.
 - g** Defects or damages caused by food spills or liquids.

- h** When the cables of the control unit have been stretched or the module tongue -piece has broken.
- i** When the surface of the "Product" and its pieces have been scratched or damaged due to the normal use.
- j** Leather cases.
- k** Rented cellular phones.
- l** When the "Product" has been altered or repaired by non-Motorola authorized service centers.
- m** When the "Product" has not been operated in agreement with the instructions that accompany the "Product".

The batteries (Nickel-Cadmium) are warranted only if their capacity is reduced by 80% below its predicted capacity. This warranty is null for all types of batteries if:

- a** The batteries are charged by a charger that has not been approved by MOTOROLA.
- b** If any of the battery seals are broken or tampered with.
- c** If the batteries were used or installed in non-MOTOROLA equipment.

"Product":

Brand: Motorola Model:

Number of Mechanical Series:

Number of Electronic Series:

Name of Distributor:

Street and Number:

Town:

Municipality:

Postal Code, City, State, or Country:

Telephone:

Date of Delivery or Installation:

Limited Warranty (Mexico)

For Motorola Personal Communication Products and Accessories that are Purchased in Mexico

I. Concepts Covered by this Warranty

This warranty covers all the parts, components, accessories and labor of the Motorola “product” from defects in materials and workmanship under normal consumer usage.

The Motorola “Products” that are protected under this warranty can be: (a) cellular telephones, (b) radar sets, (c) two-way radios, and (d) wireless telephones.

Motorola de Mexico S.A., at its option, will at no charge repair, replace, or refund the purchase price of any “Product” that does not conform to this warranty. Motorola may use functionally equivalent reconditioned/refurbished/pre-owned or new Products, Accessories or parts. Updates in software are not covered.

II. Length of Warranty Coverage

The length of coverage is one (1) year from the date the new “Product” was purchased from an authorized distributor.

III. Place where consumers can make the warranty effective, obtain parts, components, and accessories:

Motorola de México, S.A.
Bosques de Alisos 125
Col. Bosques de las Lomas
Del. Cuajimalpa
Te:(55) 5257-6700

IV. Procedure to Make the Warranty Effective

For warranty service, return the “Product” (with its components and accessories, such as batteries, antennas, and charger) to the place of purchase, to the address above, or to an authorized

service center, or call 01 800 021 0000. To request a refund, you must present this warranty, sealed by the place of purchase, along with the "Product."

V. Warranty Limitations or Exceptions

The warranty is not valid:

- 1 When the "Product" has been used in conditions different from the normal ones.
- 2 When the "Product" has not been operated as described in the operating instructions.)
- 3 When the "Product" has been altered or repaired by someone other than Motorola, or its authorized service centers.

If repairs are not covered by this warranty, Motorola, at the request of the purchaser, will provide information regarding availability, prices, and other conditions for the repair of the "Product".

To obtain information on Products that need repairs not covered by this warranty, please call 01 800 021 0000.

Product Model:	Date of purchase:
	Seal of the authorized or established distributor where the "Product" was purchased:

Note: In other countries, consult the laws and local regulations under the warranty and its local Motorola office.

index

- A**
- accessories 11, 80
 - accessory connector port 1
 - activation list 88
 - active line indicator 42
 - active line, changing 66
 - ActiveSync 82, 83
 - airplane mode 90
 - alarm clock 84
 - alert
 - set 47, 53, 54
 - turn off 47, 59
 - answer a call 14, 58
 - attach a number 60, 64
 - audio player 26
- B**
- backlight 56
 - battery 11, 12
 - extending battery life 13
 - battery indicator 43
 - battery life, extending 55, 56, 57
 - Bluetooth connection
 - datebook entry, printing 85
 - datebook entry, sending 85
 - description 22
 - messages, printing 75
 - phonebook entries 72, 73
 - brightness 56
 - browser messages 77
 - browser. See micro-browser
- C**
- cables 37
 - calculator 85
 - call
 - answering 14, 58
 - barring 66
 - end 14
 - ending 14
 - forwarding 66
 - making 14
 - timers 80
 - waiting 65
 - call forward indicator 42
 - caller ID 60, 62, 70
 - camera 28

car kit 80
categories 71
center key 1, 48
center select key 10
certificate management 86
clock 54
codes 51
conference call 65
copy files 24
copyrighted files, activating
 88
costs, tracking 80

D

data call 81, 82
data indicator 41
date, setting 54
datebook 84
delayed answer 59
dial a phone number 14, 67
dialed calls 59

digital audio 26
display 2, 40, 56
downloaded files
 activating 88
 from Web pages 88
 in messages 75
 storage location 88
drafts folder 34
DTMF tones 60, 67

E

earpiece volume 47
EDGE indicator 41
email
 reading and managing 75
 sending 73
 settings 76
emergency number 62
end a call 14
end key 1, 14

Enter Unlock Code message
 51
external display 30, 50

F

fax call 61, 81, 82
fixed dial 67
flip 14, 58
forward calls 66

G

games 89
GPRS indicator 41
group mailing list 72

H

handsfree speaker 50
headset 80
headset jack 1
hold a call 65

home screen 2, 40, 57

I

IM 77

IM indicators 42

in-call indicator 42

Incoming Call message 62

information services 77

instant messaging. See IM

international access code 65

iTAP text entry mode 45

J

Java applications 89

Java indicator 42

K

keypad 58, 78

L

language 78

linking. See Bluetooth
connection

lock

application 86

phone 51

SIM card 86

Low Battery message 43

M

make a call 14

master clear 79

master reset 79

memory card 35

menu 2, 10, 40, 58, 78

menu icons 40, 58

message 74, 76

message indicator 34, 42

message reminders 79

micro-browser 77, 88, 89

Missed Calls message 61

MMS, defined 33

MOTOSYNC 82, 83

MP3 sound files 26, 27

multimedia message 33, 74,
76

music 87

mute a call 65

N

navigation key 1, 10, 48

network settings 83

notepad 64

number. See phone number

numeric entry mode 47

O

object exchange 24

1-touch dial 69

open to answer 58

optional accessory 11

optional feature 10

P

pairing. See Bluetooth
connection

passwords. See codes

personalize 78

phone number 16, 66

phonebook 60, 64, 68, 69

photo 28

picture ID 62, 70

PIN code 14, 51, 86

PIN2 code 51

power key 1, 14

printing 25

PTT 17

calls, answering 18

calls, making 17

contacts and groups 19

icons 20

indicator 42

locking key 20

Quick Groups 17

sending pictures 19

settings 20

turning on or off 20

PTV 19

Push to Talk. See PTT

Q

quick dial 67

R

received calls 59

recent calls 59

redial 61

reminders 79

restrict calls 66

return a call 61

ring style indicator 43

ring style, setting 47, 53

ring tone 87, 88

ringer ID 62, 70, 78

ringer volume 47, 78

roam indicator 41

S

safety information 98

screen saver 55

scrolling 78

security code 51

send key 1, 14

service dial 67

signal strength indicator 41

silent answer 59

SIM Blocked message 13,
86

SIM card 11, 14, 51, 67, 76,
86

skin 56

soft keys 1, 40, 57

software update 83

speakerphone 80

speed dial 68, 69
store your number 16
streaming video 89
symbol entry mode 47
synchronizing 82, 83

T

talking phone 53
tap text entry mode 46
telephone number. See
 phone number
text entry 43
text marquee 78
text message 74, 76
theme 56
time zone 54
time, setting 54
timers 80
transfer a call 66
TTY device 66
turn on/off 13

U

unlock
 application 86
 phone 14, 51
 SIM card 86
unlock code 51
USB cables 37

V

video clip 33
videos 32, 89
voice commands 48
voice dial 48, 81
voice message 74
voice record 85
voicemail 63
voicemail message indicator
 42, 63
volume 47, 78

W

wallpaper 55
Web pages 88
Web sessions 89

Y

your phone number 16

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>