

# MGE™ Galaxy™ 6000

50, 60 Hz

250 - 600 kVA

## User manual

Single-unit UPS

Modular UPS

Parallel UPS with SSC

Frequency converter

Static Switch Cubicle



**APC**®

by Schneider Electric



## Introduction

System performance .....	5
System description .....	5
Different types of MGE™ Galaxy™ 6000 systems .....	6
Isolation and protection devices .....	8
Main operating modes .....	9

## Description of MGE™ Galaxy™ 6000 cubicles

Inverter cubicle .....	13
Battery cubicle .....	14
Static Switch Cubicle .....	15
External maintenance bypass cubicle .....	15

## Control panel

Visible control panel .....	16
Hidden control panel .....	18

## Start-up

System start-up .....	20
Start-up of a unit .....	22

## Shutdown

Shutdown of a unit .....	24
System shutdown .....	25
Buzzer reset .....	26

## Alarms

Maintenance bypass .....	27
--------------------------	----

## Environment information

Standard information "Media Contacts 9" .....	28
"LED" signalling box .....	29
Additional information "Media Contacts 15" .....	29

## Maintenance

Maintenance configuration .....	31
Battery maintenance .....	33
Autodiagnosics .....	34
Visual check .....	34
Functional check .....	34
Training center .....	34

## "Monitor" alphanumeric display

General .....	36
Control panel .....	36
Lights 1 to 8 .....	37
Alarm display and buzzer reset .....	38
Measurement system .....	41
Voltage measurements .....	42
Current measurements .....	42
Frequency and power measurements .....	43
Battery measurements .....	43
Inverter "On/Off" commands .....	45
Language, display contrast and buzzer volume settings .....	45
Display system configuration .....	46

# Contents (cont.)

## Options

"LED" signalling box .....	47
Media Contacts 15 additional auxiliary transmission .....	47
"Tele Monitor" remote indications unit .....	47
"GTC link" communications system .....	47
"Vision" display .....	48
"Remote vision" display .....	48
Insulating and Mains 1, 2, and load voltage matching transformer .....	48
Harmonics filter and power factor improvement .....	48
Double bridge rectifier-charger .....	49
Battery "Temperature Monitor" .....	49
Empty cubicles .....	49

---

All MGE™ Galaxy™ 6000 products are protected by patents. They implement original APC by Schneider Electric technology not available to other manufacturers.

To take into account evolving standards and technology, equipment may be modified without notice. Indications concerning technical characteristics and dimensions are not binding unless confirmed by APC by Schneider Electric.

This document may be copied only with the written consent of APC by Schneider Electric. Authorized copies must be marked "APC by Schneider Electric MGE™ Galaxy™ 6000 User Manual N° 6739380EN.

## System performance

### A MGE™ Galaxy™ 6000


uninterruptible power supply (UPS) delivers 3-phase power with the following characteristics:

- ▶ stable voltage (+/-0.5% under steady state conditions and +/-5% under transient conditions for load step changes of 25 to 100% or of 100 to 25%);
- ▶ stable frequency (+/-0.05Hz without Mains 2);
- ▶ or frequency synchronized with Mains 2 to 50/60Hz +/-2Hz (value may be configured in 0.25 HZ steps);
- ▶ free of micro-breaks and outages for the duration of the battery time (10, 15 or 30 minutes);
- ▶ less than 4% distortion in all system configurations with linear loads;
- ▶ less than 5% distortion for a 100% non-linear load with a peak factor of up to 3.5.

The acoustic noise level of a

**MGE™ Galaxy™ 6000** UPS is under 70dBA.

Single-line diagram of the MGE™ Galaxy™ 6000 system

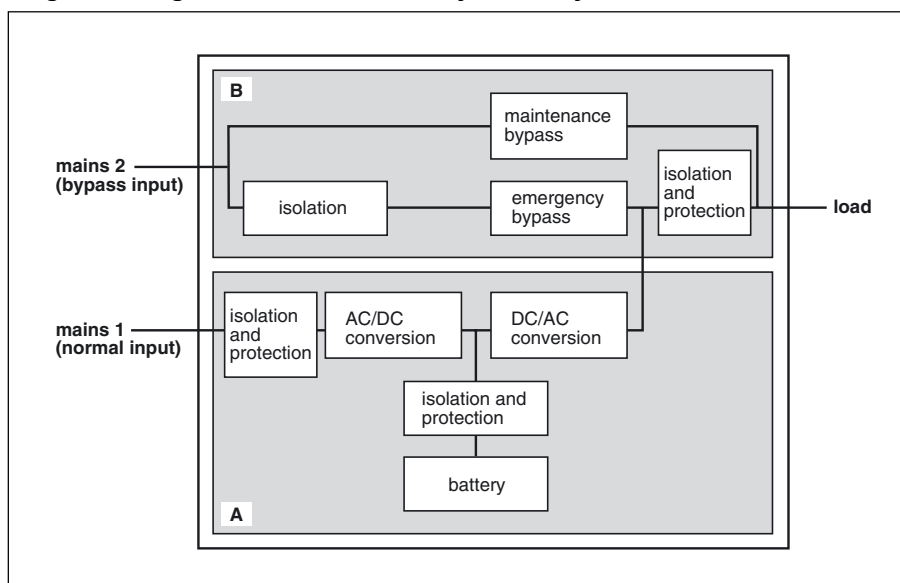

## System description

- ▶ a rectifier-charger (RC) module converts 3-phase AC power from the Mains 1 supply into DC power for the normal inverter input and float charges or recharges the batteries;
- ▶ a battery unit provides backup power for the inverter in the event of a voltage drop or a Mains 1 failure;
- ▶ an inverter module converts the DC power supplied by the rectifier-charger module or the battery unit into 3-phase AC power for the load;
- ▶ an emergency bypass module ensures the instantaneous transfer of the load via the static switch to the Mains 2 bypass line in the event of an inverter shutdown (initiated by the user or by a protective device) or a sudden overload;
- ▶ a maintenance bypass which isolates the UPS for maintenance and transfers the load without interrupting the supply of power. The maintenance bypass is made up of three manual switches.

### Note:

- ▶ the Mains 1 normal input and the Mains 2 bypass input have different functions and, depending on the installation, may be protected differently upstream and/or come from different sources;
- ▶ frequency converters are available without backup batteries;
- ▶ the emergency bypass line and the maintenance bypass line do not exist in installations where the load frequency and the Mains 2 frequency are different (for example in frequency converters);
- ▶ for reasons of redundancy and/or increased power, the rectifier-charger, inverter and battery modules (the UPS, part A in the MGE™ Galaxy™ 6000 schematic diagram above) may be arranged in parallel lines. In this case, an isolation function is added to the output of each UPS for maintenance without disrupting the load. In this type of system, the components of part B in the diagram are located in a separate cubicle referred to as the "Static Switch Cubicle".

### The system may also include:

- ▶ an isolating transformer on the Mains 2 line;
- ▶ a harmonics filter on the Mains 1 input;
- ▶ different remote control, indication and display systems;
- ▶ a double bridge rectifier-charger module.

# Introduction (cont.)

## Different types of MGE™ Galaxy™ 6000 systems

- ▶ Single-unit or modular UPS: (figure 1)

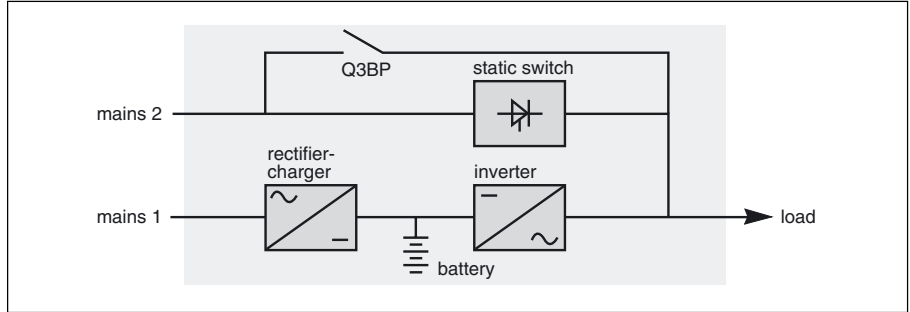


Fig. 1

- ▶ Multi-bypass modular UPSs: (figure 2)

**Note:**  
2 modular UPSs (identical ratings) can be parallel-connected in this way.

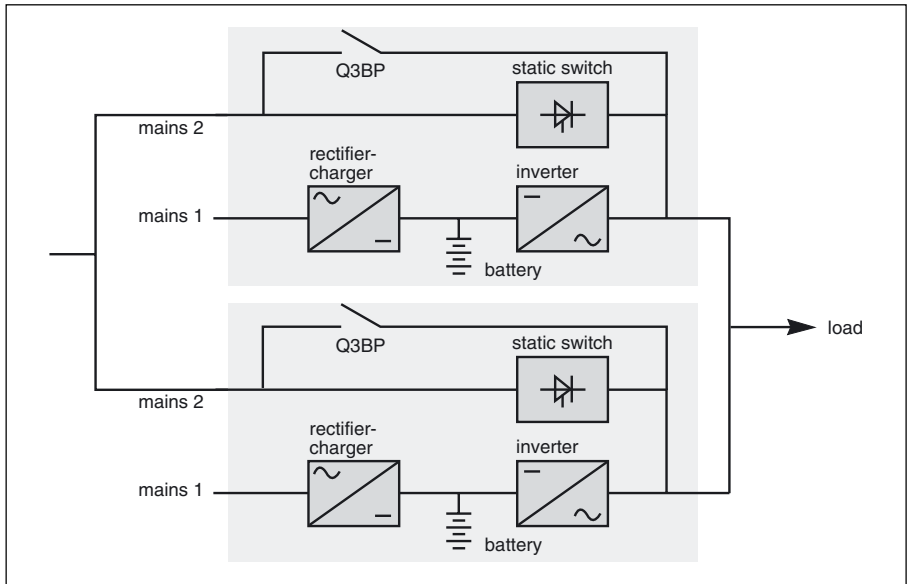


Fig. 2

- ▶ Modular UPSs with external maintenance bypass: (figure 3)

**Note:**  
Up to 4 UPS (identical ratings) can be parallel-connected.


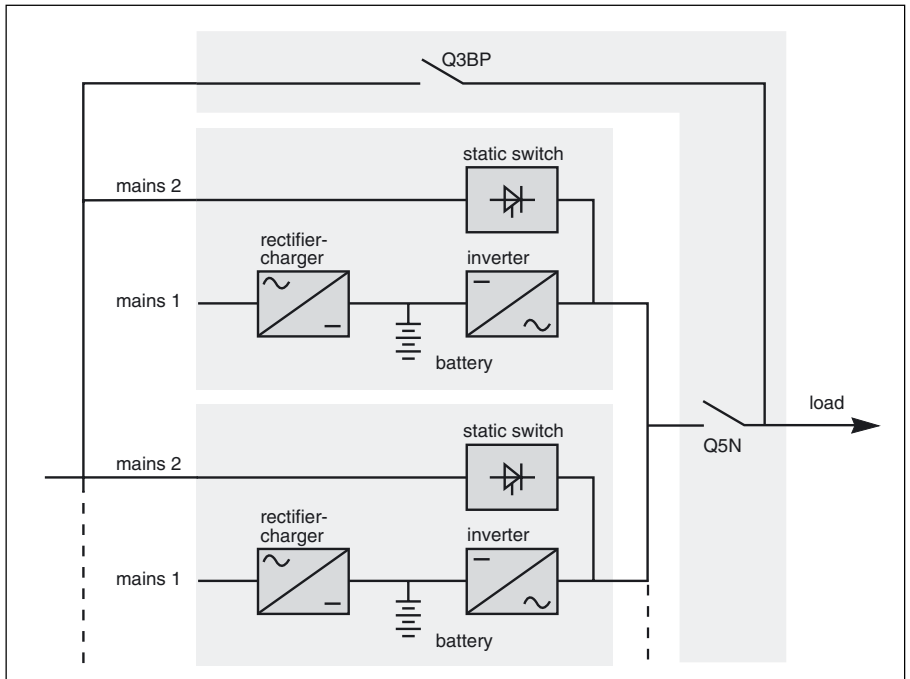



Fig. 3

- ▶ Frequency converter with battery backup power: (figure 4)

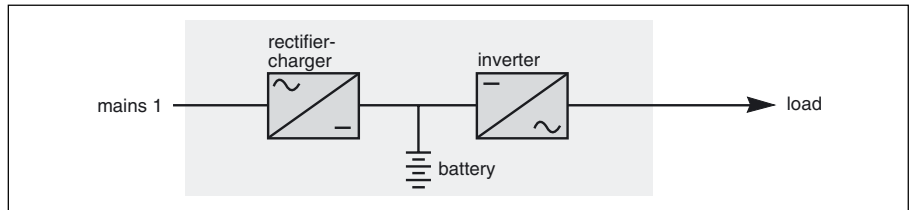


**Fig. 4**

- ▶ Frequency converter without backup power: (figure 5)

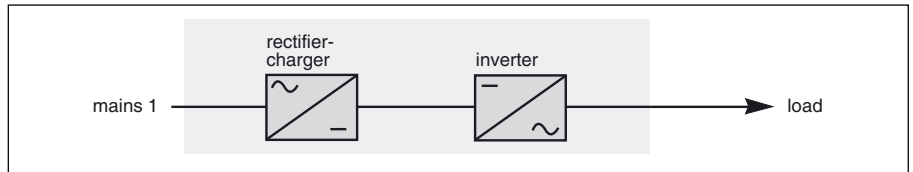

**Fig. 5**


- ▶ Frequency converters with backup power: (figure 6)

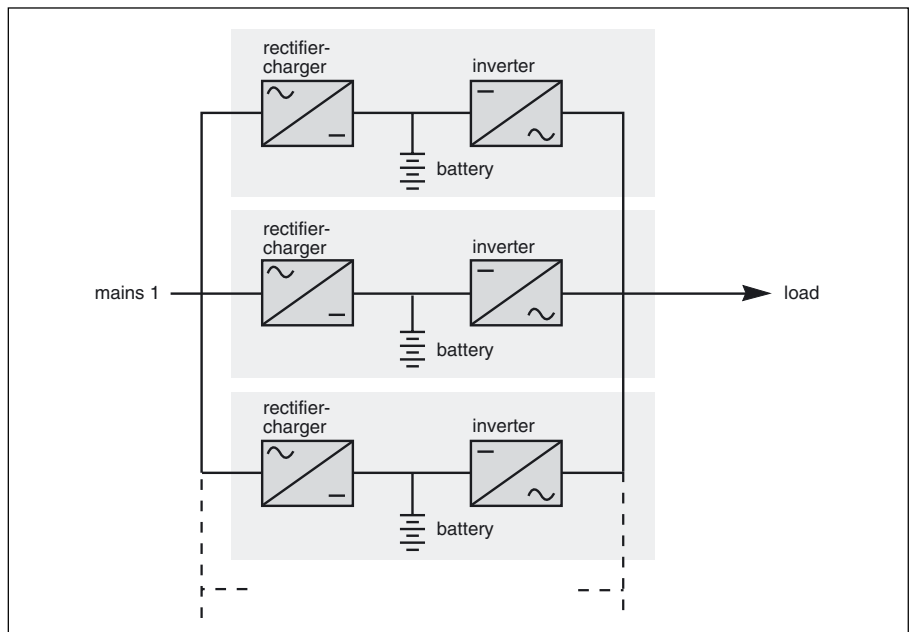

**Fig. 6**

- ▶ Parallel UPSs with SSC: (figure 7)

**Note:**  
Up to 6 UPS (identical ratings) can be parallel-connected in this way.

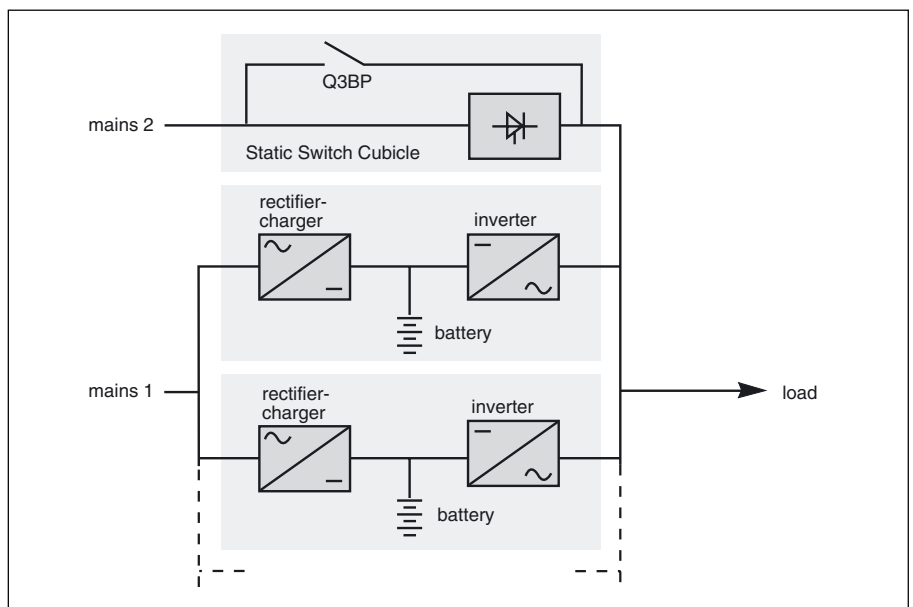

**Fig. 7**

# Introduction (cont.)

## Isolation and protection devices

### UPS or converter cubicles

(figure 8)

- ▶ **Q1** (switch):
  - ▷ isolation from Mains 1,
  - ▷ RC start-up;
- ▶ **QF1** (circuit breaker):
  - ▷ battery protection and isolation;
- ▶ **Q5N** (switch):
  - ▷ isolation of the inverter, frequency converter or static switch module from the load;
- ▶ **Q4S** (switch):
  - ▷ isolation of the static switch from Mains 2;
- ▶ **Q3BP** (switch):
  - ▷ bypass switch for maintenance;
- ▶ **FU1-2-3** (fuses):
  - ▷ protection of the RC from Mains 1;
- ▶ **FU5-6-7** (fuses):
  - ▷ protection of the inverter from the load.

#### Note:

- ▷ switches Q4S and Q3BP do not exist on frequency converters,
- ▷ circuit breaker QF1 does not exist on frequency converters without a battery.

### Example of a single-unit UPS or single modular UPS

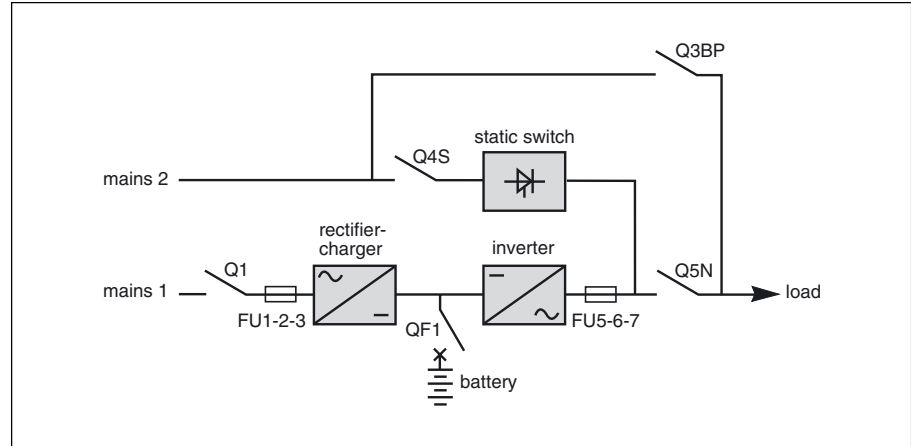


Fig. 8

### Static Switch Cubicle

(figure 9)

- ▶ **Q4S** (switch):
  - ▷ isolation of the static switch (and mechanical contactor K2S) from Mains 2;
- ▶ **Q3BP** (switch):
  - ▷ bypass switch for maintenance;
- ▶ **Q5N** (switch):
  - ▷ isolation of the load from the parallel UPSs;
- ▶ **Q1** (fuse switch):
  - ▷ protection of the cubicle control electronics from the parallel-connected inverter outputs;
- ▶ **Q2** (fuse switch):
  - ▷ protection of the cubicle control electronics from Mains 2.

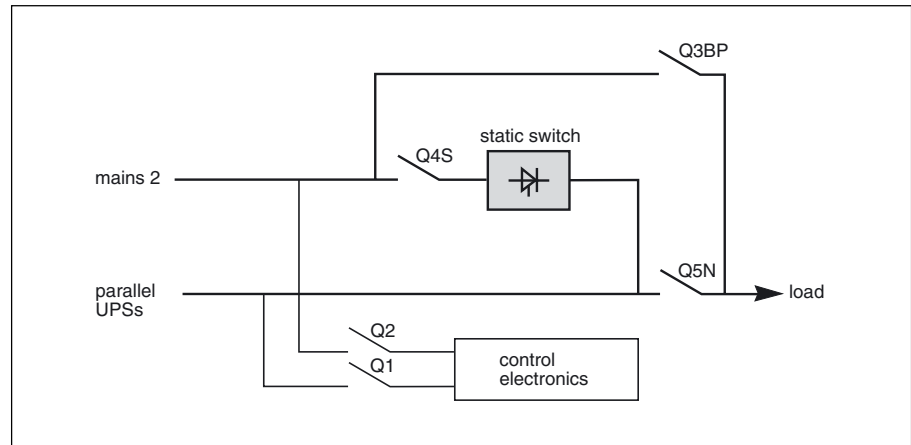


Fig. 9

### External maintenance bypass cubicle

(figure 10)

- ▶ **Q3BP** (switch):
  - ▷ bypass switch for maintenance;
- ▶ **Q5N** (switch):
  - ▷ isolation of the load from the parallel-connected UPSs.

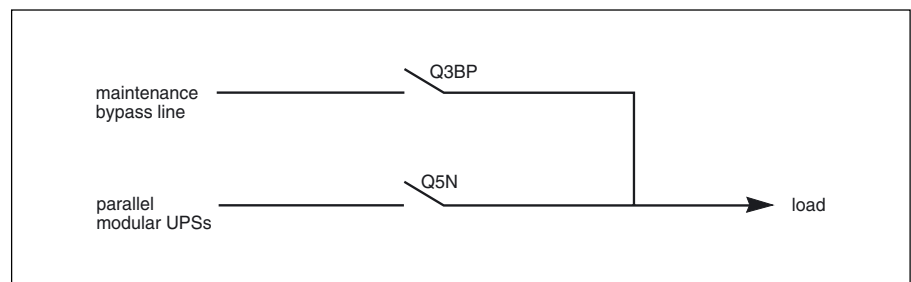


Fig. 10




## Main operating modes

### Normal operation

Mains 1 power is available:

(see figure 11).

The green "load protected" light (5) on the control panel is on.

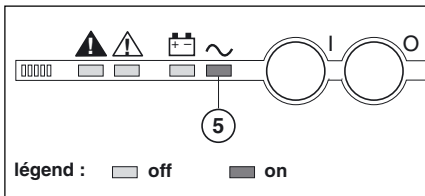

The power necessary for the load is provided by Mains 1 through the rectifier-charger and the inverter. The rectifier-charger also supplies the power to float charge and recharge the battery (1). The rectifier-charger output voltage (DC) is regulated for the different battery types and charging modes:

- ▶ vented lead-acid or Ni/Cd batteries: two different voltages, one for float charging and one for recharging;
- ▶ sealed lead-acid batteries: a single voltage for both charge functions.

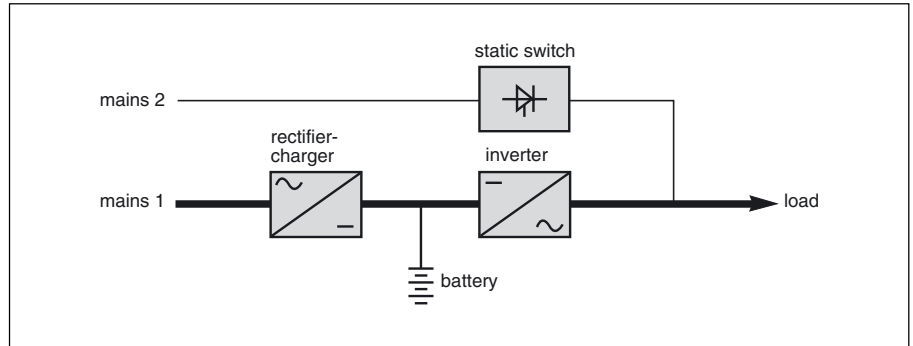


Fig. 11

The voltages depend on the number of battery cells and the battery manufacturer. They can be factory set and are adjustable by the after-sales support technicians. An optional electronic board may be used to continuously measure the battery temperature and automatically adjust the voltages.

### Parallel UPS systems:

the power drawn by the load is equally shared between the different UPSs.

(1) Except for frequency converters without a battery

### Operation with Mains 1 down

(figure 12)

In the event of a Mains 1 failure or Mains 1 voltage outside specified tolerance of -10% in amplitude (-15% optionally), the rectifier-charger stops and the battery supplies the necessary backup power to the load via the inverter. The battery, float-connected between the rectifier-charger and the inverter, discharges during this operating mode.

The green "load protected" light (5) on the control panel is on.

The user is warned of battery operation by a buzzer and the orange "load on battery" light (4) on the control panel.

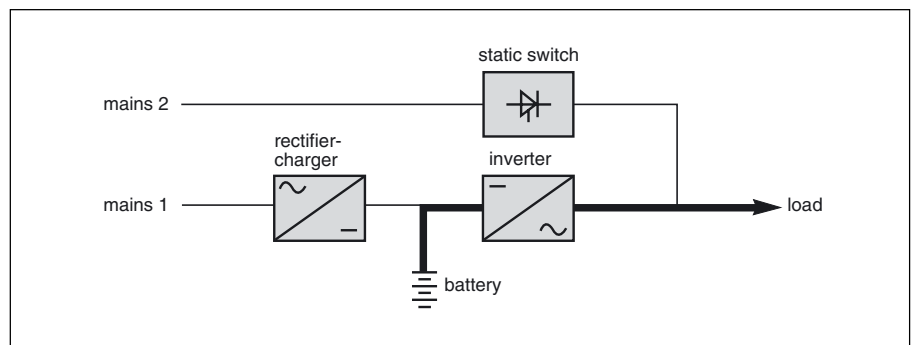
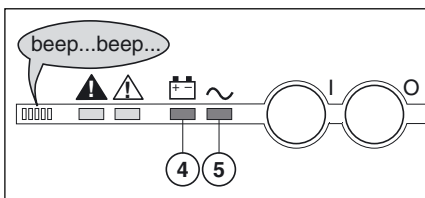


Fig. 12

This information is also available via volt-free changeover contacts for remote control devices.

**In this case, there is a 30 seconds delay.**

### Note:

In the event of a Mains 1 failure, frequency converters without a battery shut down and the load is no longer supplied.

# Introduction (cont.)

## Battery time


The available battery time during a Mains 1 outage depends on the:

- ▶ rated capacity of the battery;
- ▶ power consumed by the load;
- ▶ temperature of the battery;
- ▶ age of the battery.

The specified battery time corresponds to a minimum duration at full rated load. The actual backup time can therefore be greater if the system operates below its full rated load during the Mains 1 outage. Operation on battery power can be extended beyond the specified time by reducing the load power consumption (by disconnecting non-critical loads).

A "low battery shutdown" warning signal is sent via volt-free changeover contacts for remote control devices when the battery voltage reaches a level slightly above the minimum level.

This signal warns the user of the imminent end of battery power. On the device itself, the buzzer beeps increasingly rapidly and loudly. Battery power stops when the voltage supplied by the battery reaches the voltage minimum (340V). This results in inverter shutdown and transfer of the load without interruption to Mains 2. The red "load not protected" light (2) on the control panel is on.

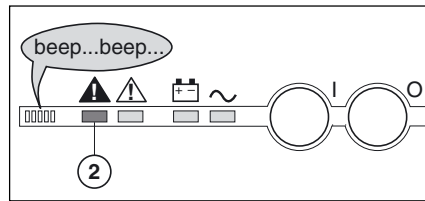

If Mains 2 also fails, the load is no longer supplied. Normally, the inverter shuts down when the time on the battery power exceeds three times the specified backup time.

### Note:

As an optional function (battery time estimator), the "low battery shutdown" warning signal can be sent with an adjustable time delay prior to the effective end of battery power.

## Operation with Mains 1 restored (figure 13)

When Mains 1 power is restored or its voltage returns to within specified tolerances, the system automatically returns to its normal operating mode described above (on the condition it did not reach the end of battery power). If the end of battery power was reached (with the resulting inverter shutdown), the RC restarts automatically, but the inverter must be restarted manually, either locally or remotely in systems equipped with a remote-control unit. The rectifier-charger recharges the battery which was discharged during the Mains outage.

### Note:

In frequency converters without battery power, the return of Mains 1 power results in the automatic restart of the RC and the inverter.

The battery charge cycle takes place in two steps (see figure 14):

▶ **step 1:** the battery is recharged at a constant current limited to  $0.1C_{10}$  (i.e. 1/10th of the battery capacity specified for a 10 hour discharge). The DC voltage increases with the battery charge until the charge level is reached;

▶ **step 2:** the battery is recharged at constant voltage equal to the charge level (maximum value 463V).

The charging current gradually decreases until reaching a specified low value (floating current).

For vented lead-acid batteries, the rectifier-charger supplies the charging voltage for 0 to 255 hours (parameter defined by the after-sales support department) and then the floating voltage. For sealed lead-acid batteries,

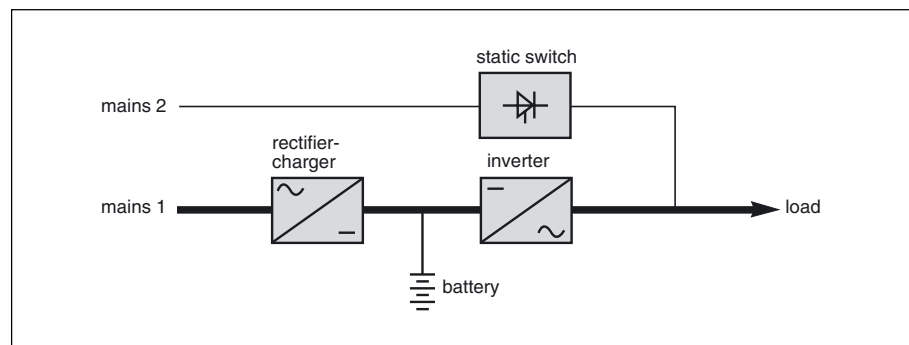


Fig. 13

## Battery charge cycle

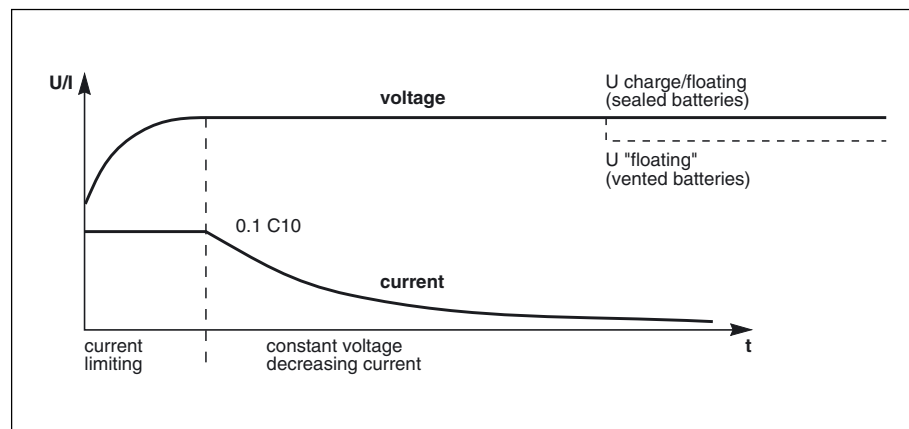


Fig. 14

the charging and floating voltages are the same.

### Note:

If the Mains 1 failure is shorter than 0 to 255 seconds (parameter defined by the after-sales support department), the

charger does not initiate a complete charge cycle but automatically supplies the floating voltage.

## Installation with an engine generator set

(figure 15)

If a stand-by generator is included in the installation, it is generally started automatically in the event of a Mains failure and connected to the main low voltage switchboard. It is disconnected when Mains power is restored.

With such a system, the required battery time may be reduced to the time necessary for starting and bringing on line the stand-by generator.

The battery supplies power to the inverter during the transfers:

Mains → generator and  
generator → Mains.

The transfer sequences described:  
Mains → battery → generator and  
generator → battery → Mains are fully automatic. They in no way affect the load and require no manual operation by the user.

## Example of an installation with an engine generator set

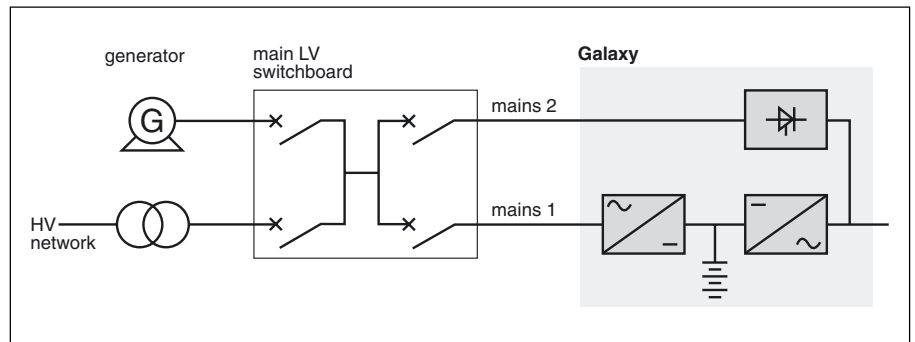


Fig. 15

### Note:

To avoid load surges on the generator, the rectifier/charger is started with a 10 second maximum current consumption walk-in.

## UPS shutdown or overload (systems with a static switch module)

(figure 16)

### Single-unit UPSs, modular UPSs or UPSs with an SSC:

▶ in the event of a UPS shutdown (initiated by the user or by an internal protective device), the load is automatically transferred to the Mains 2 bypass line. If transfer conditions are correct, transfer takes place instantly, without interruption to the load.

### Note:

Transfer conditions are not correct when Mains 2 characteristics are outside tolerances (voltage: +/-10%; frequency as per personalization; phase sync with inverter +/-3°);

▶ in the event of a major transient overload (greater than 160% of the full load), immediate transfer takes place as above, without interruption to the load.

When the overload disappears, the load is automatically returned to the inverter depending on the configured value of the re-transfer counter: no return to inverter, or 1 to 255 (personalized value) overloads accepted before the load is permanently transferred to Mains 2. This operating mode allows start-up of load devices causing high inrush currents.

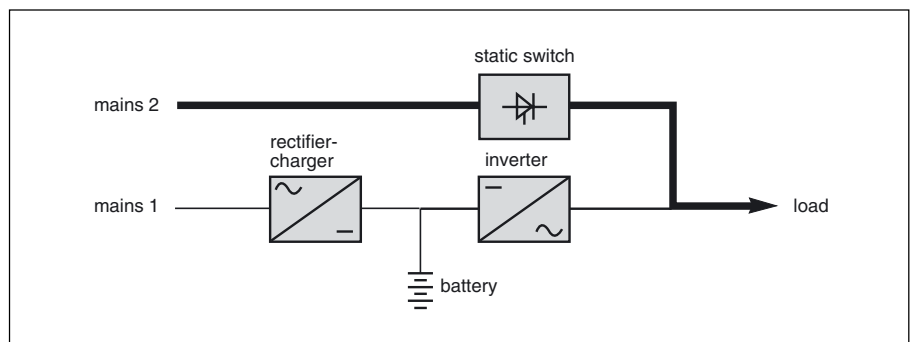



Fig. 16

This system requires correct transfer conditions. If the conditions are not correct, the inverter will current limit to 160% of its rated current for 1 second before stopping;

▶ in the event of a small but extended overload (i.e. a continuous level of power exceeding the full rated load), the inverter will continue to supply power for a period depending on the magnitude of the overload (10 minutes for a 125% overload, 1 minute for a 150% overload). See figure 17 (Overload curve);

▶ in all three of the above cases, the inverter shutdown and supplies the load via Mains 2 with the following information on the control panel:

- ▶ green "load protected" light ⑤ off,
- ▶ buzzer ① on,
- ▶ red "load not protected" light ② on.

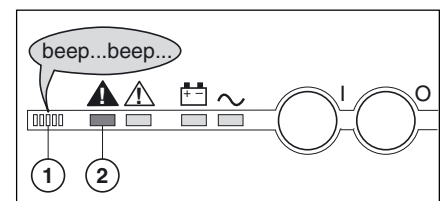

# Introduction (cont.)

## Frequency converters without redundancy

- ▶ in the event of a shutdown, the load is no longer supplied with power;
- ▶ in the event of a major transient overload (greater than 160% of the rated load), the inverters will current limit to 160% of their rated current for 1 second before stopping;
- ▶ in the event of a small but extended overload (i.e. a continuous level of power exceeding the full rated load), the inverters will continue to supply power for a period depending on the magnitude of the overload (10 minutes for a 125% overload, 1 minute for a 150% overload, see figure 17), and then stop;
- ▶ in all three of the above cases, inverter shutdown results in the following on the control panel of the concerned unit:
  - ◻ green "load protected" light ⑤ off,
  - ◻ buzzer ① on,
  - ◻ red "load not protected" light ② on.

## Frequency converters with redundancy

- ▶ the shutdown of one unit is of no consequence for the load. The other lines each take up an equal amount of load power and the load continues to be supplied normally; Inverter shutdown results in the following on the control panel of the concerned unit:
  - ◻ green "load protected" light ⑤ off,
  - ◻ buzzer ① on,
  - ◻ red "load not protected" light ② on.
- ▶ in the event of an overload, the system only loses its redundancy as long as the overload is less than the total rated power of the functioning units. If the overload is greater, the operating mode is that previously described for systems without redundancy.

## Overload curve

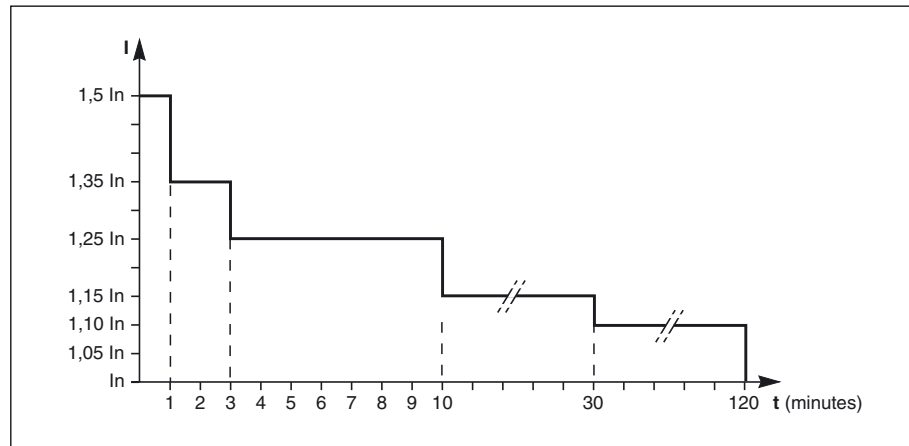


Fig. 17

## Output voltage quality and continuity

The output voltage is stable in amplitude and frequency and is free of interruptions or transients outside specified tolerances, irrespective of Mains 1 or load disturbances (outages, load step changes, etc.).

### Steady state voltage regulation:

For stable or slowly varying load conditions, the inverter output voltage is regulated to within +/-0.5% in amplitude.

The frequency of the output voltage can theoretically be regulated to within 0.1% of the rated value, however the output frequency range may be intentionally extended to a maximum of +/-2Hz so that the inverter can remain synchronized with Mains 2 and its inherent frequency fluctuations, thus enabling transfer of the load to the bypass line at any time.

### Note:

The output frequency range can be personalized and if necessary modified on the customer site by a qualified support technician from +/-0.25Hz to +/-2Hz in 0.25Hz steps.

When the Mains 2 voltage moves outside this frequency range, the inverter is desynchronized and operates in "free running" mode, with the output frequency regulated to a high level of accuracy by a quartz oscillator.

When the Mains 2 frequency returns to within the specified tolerances, the inverter is gradually re-synchronized to the bypass line at a rate of 0.5Hz to 2Hz/s (as per the value personalized by the after-sales support department), thus avoiding exposing the load to sudden frequency variations.

### Transient voltage regulation:

The inverter output voltage is not notably affected by instantaneous major variations in load characteristics. This is due to the PWM (Pulse Width Modulation) chopping technique and the microprocessor-based regulation system that instantly compensates for any variation. In particular, the inverter output voltage remains within +/-5% of the rated voltage for load step changes of 25 to 100% or of 100 to 25%.

# Description of MGE™ Galaxy™ 6000 cubicles

## Inverter cubicle

The rated outputs for MGE™ Galaxy™ 6000 UPS's (without parallel connection) or frequency converters are 160, 200, 250, 300, 400, 500, 600 kVA.

### Legend for figures 18 to 21:

- 1 - rectifier-charger (RC) module
- 2 - inverter stack modules
- 3 - rack for electronic control boards
- 4 - static switch module (Single-unit or modular UPS)
- 4' - output static switch module (modular UPS, frequency converter or parallel UPS with SSC)
- 5 - RC input fuses FU1-2-3
- 6 - Mains 1 input switch Q1
- 7 - protection fuses FU8 for the Mains 2 resistance/capacitance voltage surge protection network
- 8 - Mains 2 input switch Q4S (Single-unit or modular UPS)
- 9 - maintenance bypass switch Q3BP (Single-unit or modular UPS)
- 10 - output switch Q5N
- 11 - inverter output fuses FU 5-6-7
- 12 - "Media Contacts 9" remote indications board
- 13 - additional "Media Contacts 15" remote indications board (optional).

### 250 to 400kVA UPS or frequency converter

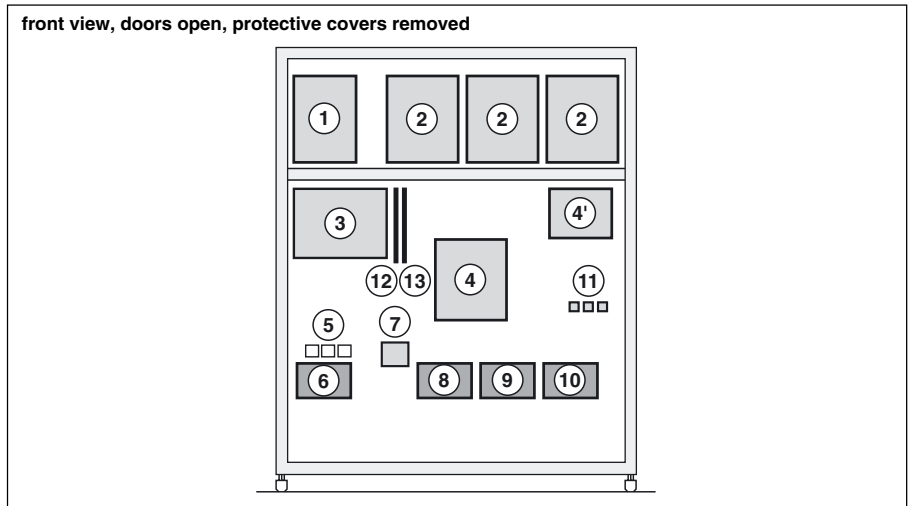


Fig. 18

### 450 to 500kVA UPS or frequency converter

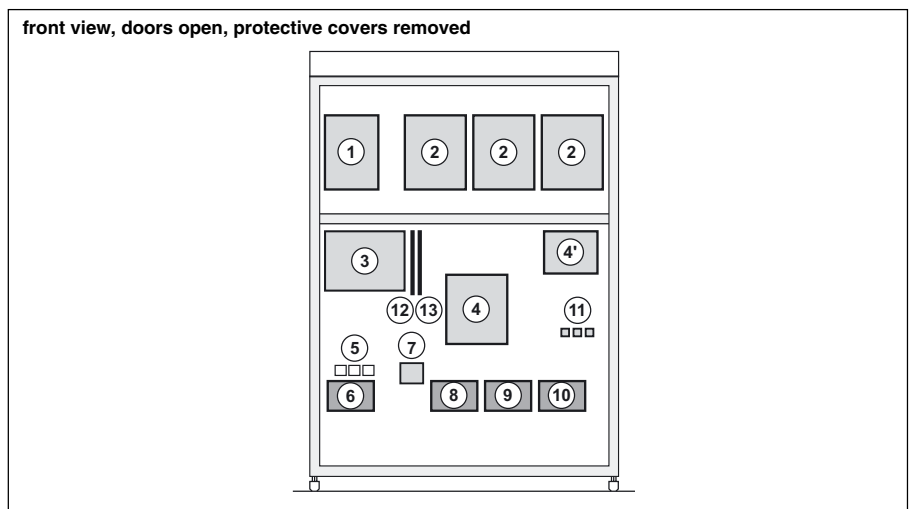


Fig. 19

### 600kVA UPS or frequency converter

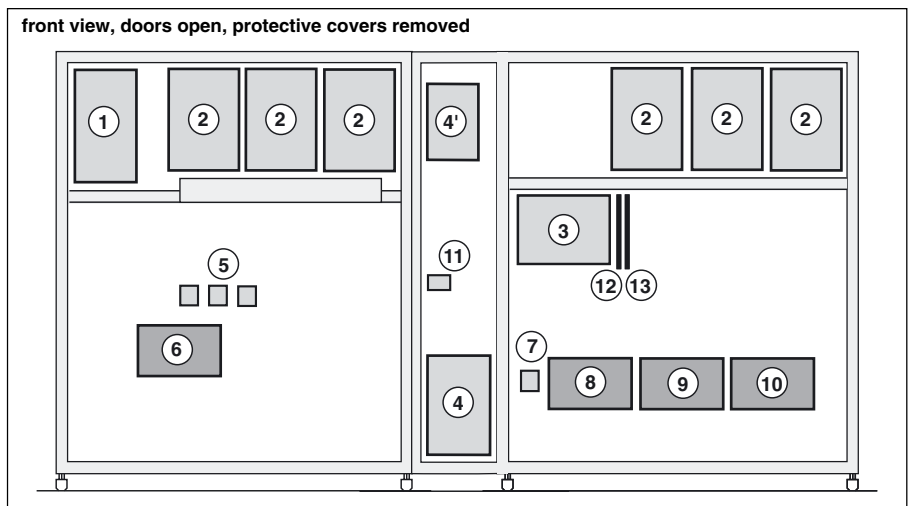


Fig. 20

# Description of MGE™ Galaxy™ 6000 cubicles (cont.)

## 800 kVA UPS

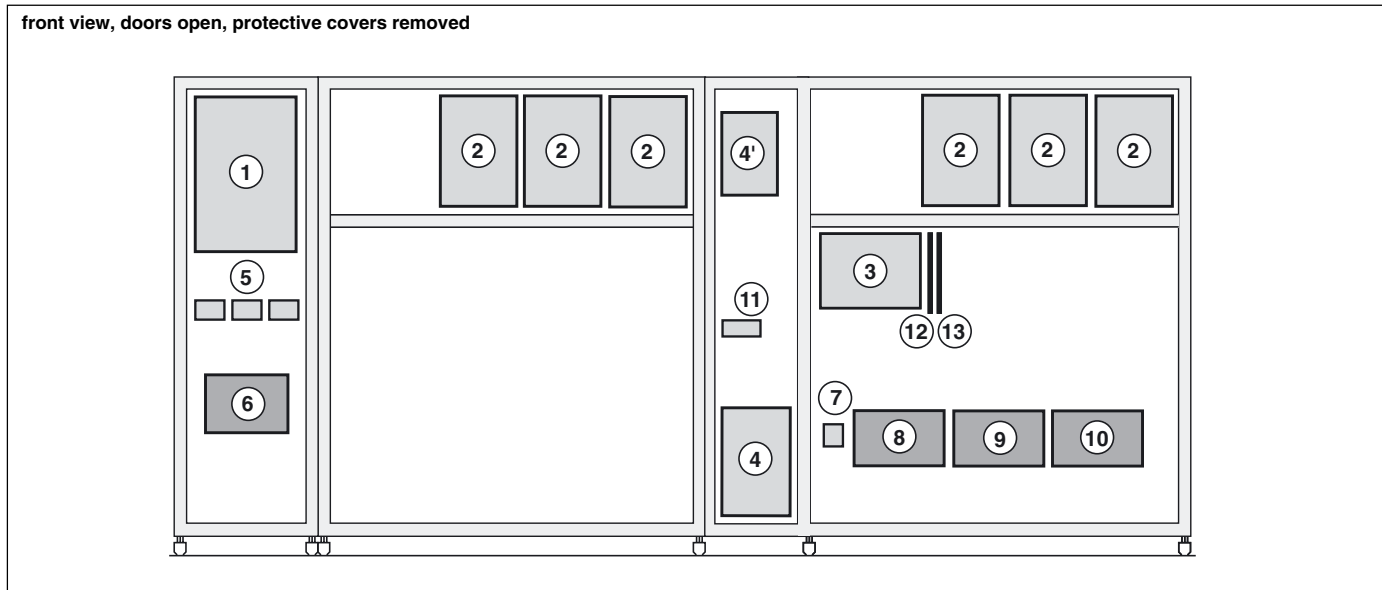


Fig. 21

## Battery cubicle

(for a 250 to 300kVA UPS)

Figure 22 is an example of component layout in a battery cubicle and a battery circuit breaker enclosure.

### Legend for figure 22:

1 - battery isolation and protection circuit breaker QF1.

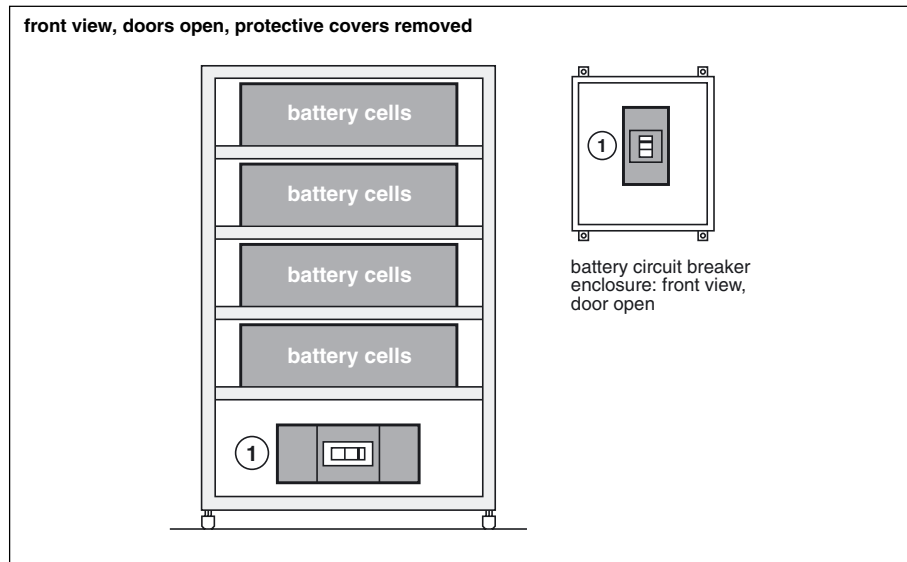


Fig. 22

# Description of MGE™ Galaxy™ 6000 cubicles (cont.)

## Static Switch Cubicle

Static Switch Cubicles are rated 500, 800, 1200 and 2000 kVA. Figure 23 presents the layout of components in these cubicles.

### Legend for figure 23:

- 2 - Mains 2 input switch Q4S,
- 3 - maintenance bypass switch Q3BP,
- 4 - output switch Q5N,
- 5 - static switch module,
- 6 - electronic control boards for the backup function,
- 7 - protection fuses FU1 for the Mains 2 resistance/capacitance voltage surge protection network,
- 8 - fuse switch Q1 (protection of the control electronics power supply against Mains 1),
- 9 - fuse switch Q2 (protection of the control electronics power supply against Mains 2),
- 10 - "Media Contacts 9" remote indications board,
- 11 - additional "Media Contacts 15" remote indications board (optional).

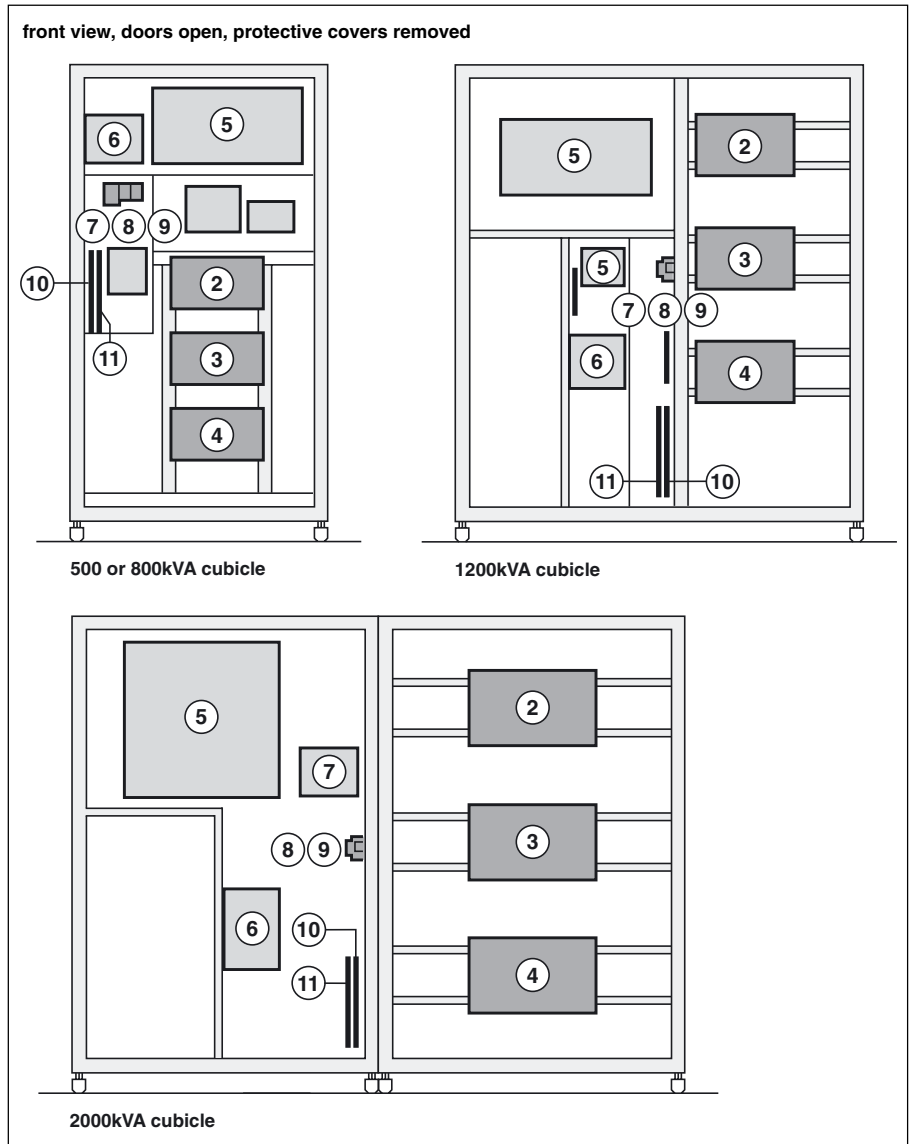


Fig. 23

## External maintenance bypass cubicle

### Legend for figure 24:

- 1 - connection of auxiliary wires to indicate the positions of switches Q5N and Q3BP,
- 2 - maintenance bypass switch Q3BP,
- 3 - output switch Q5N.

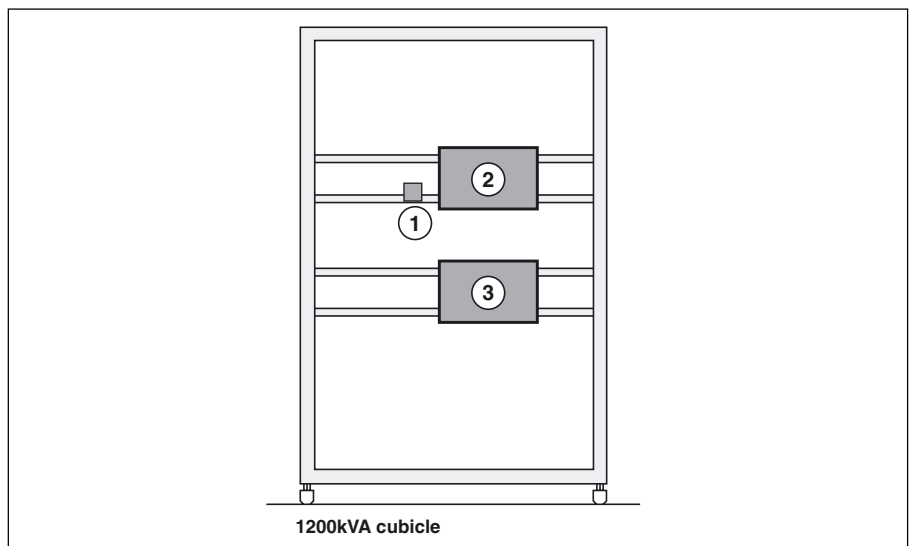


Fig. 24

# Control panel


**MGE™ Galaxy™ 6000** control panels (see figure 25) are made up of:

- ▶ a visible panel with the basic controls and indications required to check the general status of the system;
- ▶ a hidden panel with more detailed indications and more sophisticated control functions including an autodiagnostic system.

**Note:**

The information on the Mains 2 provided below does not concern frequency converters. Information on batteries does not concern frequency converters without batteries.

**MGE™ Galaxy™ 6000 control panel**

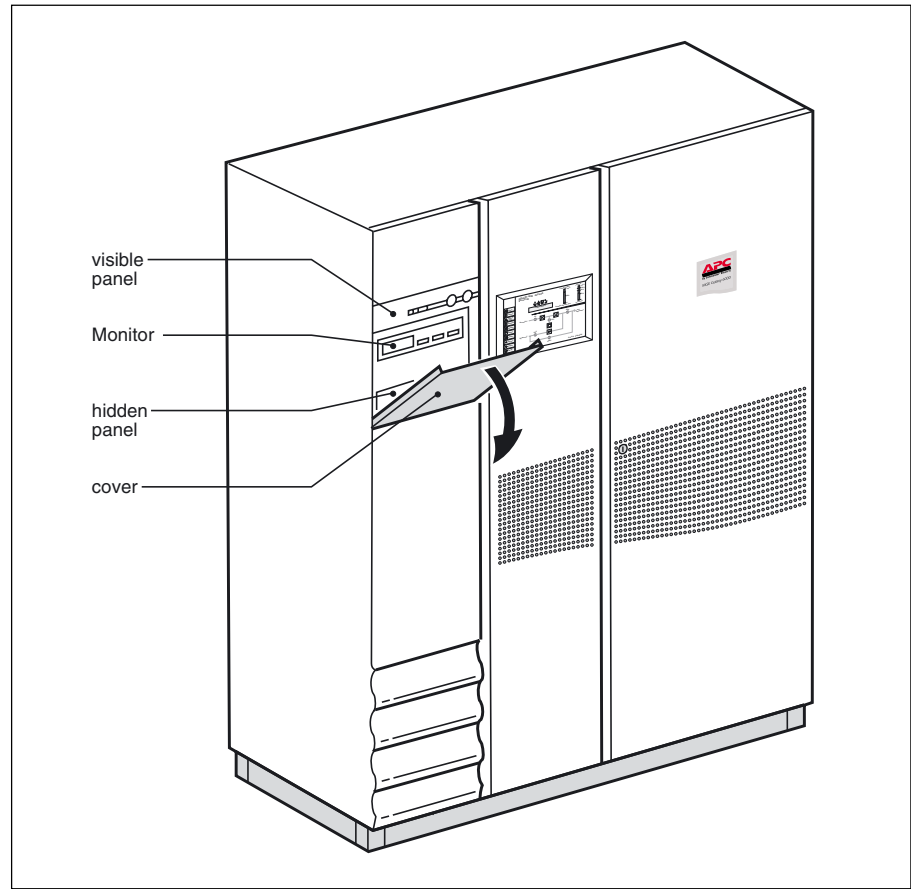

**Fig. 25**

## Visible control panel

Located in the upper left part of the cubicle front, the visible panel is designed to provide an easy and rapid overview of system status (see figures 26 and 27).


Interpretation of symbols is very simple and requires no particular training. The information concerns only the cubicle on which the panel is located. The panel indicates:

- ▶ normal operation (load protected);
- ▶ abnormal situations (operating problem);
- ▶ dangerous situations (load not protected);
- ▶ operation with load on battery power.

The control panel on the Static Switch Cubicle provides important information for the load:

- ▶ normal operation (load protected and supplied by the UPSs);
- ▶ abnormal situations (system malfunction);
- ▶ dangerous situations (load not protected).

**Visible control panel (Inverter or frequency converter cubicle)**

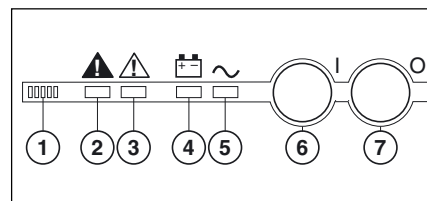


**Fig. 26**

**Legend for figure 26:**

- 1 - buzzer
- 2 - "load not protected" light
- 3 - "operating problem" light
- 4 - "load on battery" light
- 5 - "load protected" light
- 6 - "inverter on" button
- 7 - "inverter off" button

**Visible control panel (Static Switch Cubicle)**

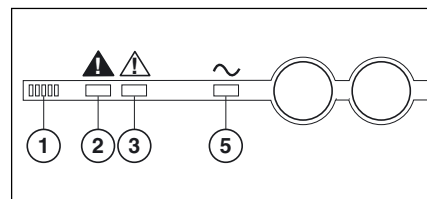


**Fig. 27**

**Legend for figure 27:**

- 1 - buzzer
- 2 - "load not protected" light
- 3 - "operating problem" light
- 5 - "load protected" light



## Buzzer ①

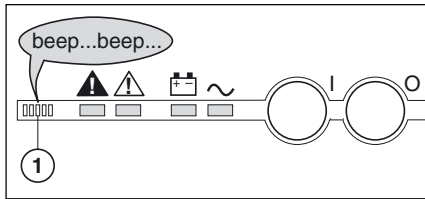


The buzzer sounds in the following situations:

- ▶ load supplied by Mains 2;
- ▶ load on battery;
- ▶ operating problems.

It beeps at a low decibel level and slow rate for minor problems and when the load is supplied from battery power. When the "low battery shutdown imminent" warning is received, the beeps increase in decibel level and rate. Finally, if the inverter shuts down, the beep is loud and continuous. A buzzer reset button is located on the hidden control panel. If the buzzer is reset, a higher level alarm will set it on again.

## "Load not protected" light

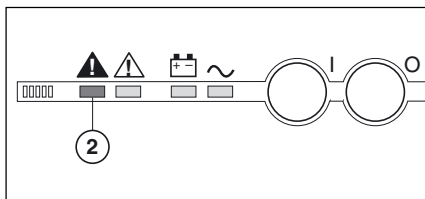


This red light ② signals that:

- ▶ the load is supplied by Mains 2 following inverter shutdown (initiated by the user or by a protective device or a sudden overload) or the opening of the inverter output switch Q5N;
- ▶ battery circuit breaker QF1 has opened, thus making battery power unavailable.

### Note:

In a parallel system, this light concerns only the specific UPS. The load may still be protected by the other lines.


## "Operating problem" light

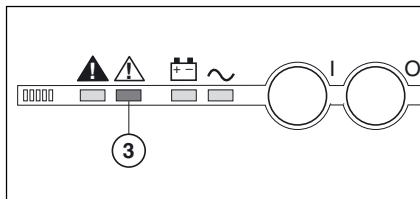

This orange light ③ signals an operating problem or an environment fault, however the load is still supplied by the inverter.

- ▶ operating problems:
  - ▷ static switch ventilation fault,
  - ▷ static switch control system fault;
- ▶ environment faults:
  - ▷ battery temperature outside tolerances,
  - ▷ overload greater than 5%,
  - ▷ Mains 2 up but with voltage, frequency or phase characteristics outside tolerances with regards to the inverter.


## "Battery operation" light

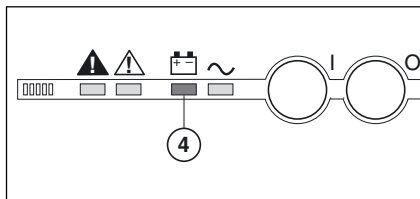

This blinking orange light ④ signals that the load is on battery power following:

- ▶ a Mains 1 outage or voltage drop;
- ▶ insufficient power on Mains 1, for example power supplied by an engine generator set requiring additional battery power;
- ▶ battery problem.

## "Load protected" light

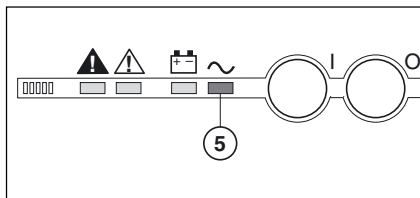


This green light ⑤ signals that the load is supplied by the inverter and that the specified battery time is available in the event of a Mains 1 outage. In short, it signals that the system is operating normally.

### Note:

In parallel systems, this light concerns only the specific UPS. The load may not be protected if it depends on the other lines. It is necessary to take into account all the "load protected" lights ⑤ for the different system lines or the light on the control panel of the Static Switch Cubicle, if it exists.

## "Inverter on" button

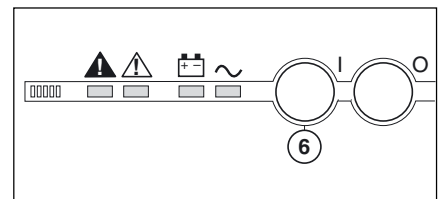


This green button ⑥ is used to locally start the inverter. When it is pushed, the green "load protected" light ⑤ blinks for 3 seconds, indicating that the start-up order has been received. When the inverter has synchronized with Mains 2, it supplies the load and the green "load protected" light ⑤ remains on. The load is supplied by the UPS and the system is functioning normally. If the transfer to Mains 2 conditions are not correct (Mains 2 voltage, frequency or phase conditions outside tolerances), the inverter will not start and the system awaits a special order (see the "Hidden control panel" section).

### Note:

- ▶ for modular UPSs with external maintenance bypass or parallel UPSs with SSC, transfer of the load to the inverters takes place only when the number of operating lines required to supply the load has been reached;
- ▶ for frequency converters, inverter start-up must take place with the load off or drawing a quantity of power equal to or less than that supplied by a single UPS.

# Control panel (cont.)

## "Inverter off" button

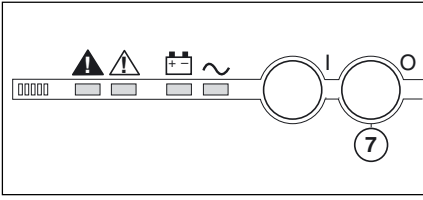

This gray button (7) turns the inverter off.

► press the "inverter off" button (7) for 3 seconds;

► if the transfer to Mains 2 conditions are correct:

▷ the load is transferred without interrupting to Mains 2,

▷ the inverter shuts down,

▷ the green "load protected" light (5)

goes off and the red "load not protected" light (2) goes on.

► if the transfer to Mains 2 conditions are not correct, the button produces no effect. A special function on the hidden panel may be used to force the transfer.

### Caution:

If the transfer is forced, the load will be subjected to a 0.8 second interruption in the supply of power.

### Note:

► for Modular UPSs or parallel UPSs with SSC, the shutdown of an inverter may or may not result in the transfer of the load to Mains 2, depending on redundancy conditions;

► if the transfer to Mains 2 conditions are not correct or if the system does not have a Mains 2, the shutdown of a single inverter will result in the shutdown of the entire system if there is no redundancy.

## Hidden control panel

The hidden panel, located behind the hinged cover, offers the following indications and control functions:

- environment faults;
- general faults in system modules;
- special control buttons (see figure 28).

This panel is identical for all types of cubicles, however, the controls or indications (8) that do not concern a given cubicle are not activated.

### Clear fault log

This button (10) clears the alarms stored in memory. The memory may not be cleared until the cause of the alarms has ceased.

### Buzzer reset

This button (11) stops the buzzer. A new fault starts the buzzer again.

### Battery charge cycle

This button (12) starts a battery charge cycle (vented lead-acid batteries only). The cycle duration may be programmed (default value is 24 hours). Then the RC automatically shifts to "floating" mode.

### Return to float charge

This button (13) can be used during a charge cycle to force the RC to return to "floating" mode.

### Security button

This button (14) avoids inadvertent operation of the remaining three control buttons:

- Mains 2 synchronization or desynchronization;
- forced transfer to inverter with load interruption;

## Hidden control panel (Inverter and Static Switch Cubicles)

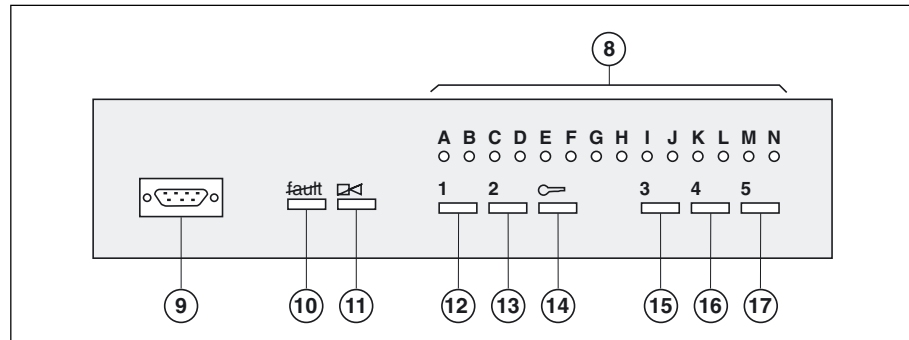


Fig. 28

► forced inverter shutdown with load interruption;  
When pressing one of the above three buttons, the security button must also be pressed at the same time.

### Mains 2 synchronization or desynchronization

This button (15) desynchronizes or resynchronizes the inverter output frequency with that of Mains 2.

### Note:

► for parallel-connected modular UPSs, this function must be carried out on all the UPSs.

### Forced transfer to inverter with load interruption

This button (16) transfers the load to the inverter. If the transfer conditions (Mains 2 characteristics outside tolerances) are not correct, the transfer will result in a 0.8 second interruption in the supply of power to the load.

### Note:

► for parallel-connected modular UPSs, forced transfer of the load will not take place if the number of operating UPSs required by the load is greater than one;

► for parallel UPSs with centralised SSC, this function is available only on the SSC.

### Forced inverter shutdown with load interruption

This button (17):

- transfers the load to Mains 2;
- shuts down the inverter.

It may be used if the transfer conditions (Mains 2 characteristics outside tolerances) are not correct, in which case the "inverter off" button (7) on the visible control panel produces no effect;

- is disabled on the SSC.

## Light A - emergency shutdown

This red light signals that the remote "emergency shutdown" button was pressed (external information received and stored in memory).

## Light B - rectifier-charger on

This green light indicates that the rectifier-charger is on.

## Light C - rectifier-charger fault

This red light is an alarm stored in memory signaling a rectifier-charger fault. It can signify one or several of the following faults:

- ▶ input switch Q1 open;
- ▶ RC input protection fuse (FU1-2-3) blown;
- ▶ RC internal over-temperature;
- ▶ battery charge over-current;
- ▶ battery over-voltage;
- ▶ RC electronic control board faulty, not calibrated or not personalized;
- ▶ power supply board fault.

## Light D - Mains 1 outside tolerances

This yellow light signals that the Mains 1 voltage and/or frequency characteristics are outside tolerances.

## Light E - battery room ventilation fault and/or harmonics filter temperature outside tolerances

This yellow light is an alarm stored in memory signaling a battery room ventilation fault (external information that must be supplied from the room). If the installation includes a harmonics filter, this light will also signal an overtemperature of the filter's inductor (information supplied).

## Light F - battery temperature outside tolerances

This yellow light signals that the battery temperature is outside tolerances (external information supplied by special board ("Temperature Monitor" option).

## Light G - battery charging

This yellow light signals that the battery is being recharged (vented batteries only). This light is deactivated in systems with sealed lead-acid batteries.

## Light H - inverter fault

This red light is an alarm stored in memory signaling an inverter fault. It can signify one or several of the following faults:

- ▶ inverter shutdown due to inverter output voltage outside tolerances;
- ▶ inverter output protection fuse (FU5-6-7) blown;
- ▶ inverter stack subassembly protection fuse blown (parallel systems);
- ▶ inverter leg fault;
- ▶ inverter output transformer over-temperature;
- ▶ inverter leg over-temperature;
- ▶ phase or output voltage fault (parallel systems only);
- ▶ internal clock fault;
- ▶ inverter control board faulty, not calibrated or not personalized;
- ▶ power supply board fault.

## Light I - battery discharged

This yellow light signals that the battery has reached its minimum voltage level, resulting in inverter shutdown.

## Light J - inverter desynchronized with Mains 2

This light signals that the inverter output frequency has been voluntarily desynchronized with that of Mains 2.

## Light K - transfer to inverter function fault

This red light is an alarm stored in memory signaling a fault in the systems for load transfer from Mains 2 to the inverter. It can signify one or several of the following faults:

- ▶ inverter output switch K3N fault;
- ▶ parallel-connection relay fault (parallel systems only);
- ▶ static switch internal over-temperature;
- ▶ static switch ventilation fault;
- ▶ static switch power supply fault;
- ▶ transfer function control board fault;
- ▶ inverter control board not calibrated or not personalized;
- ▶ power supply board fault.

## Light L - overload

This yellow light is an alarm signaling one or several of the following faults:

- ▶ inverter stack current more than 5% above rated current;
- ▶ inverter output current more than 5% above rated current;
- ▶ Mains 2 line current more than 5% above rated current;
- ▶ inverter shutdown due to current limiting of output current.

## Light M - Mains 2 outside tolerances

This yellow light signals that the Mains 2 voltage or frequency characteristics are outside tolerances.

## Light N - maintenance position

This yellow light signals that devices QF1, Q4S, Q5N and Q3BP are set to the maintenance configuration. The UPS system is not available for load protection.

## Test connector

This 9-pin connector is reserved for after-sales support technicians. It is used for connection to a microcomputer for:

- ▶ system calibration;
- ▶ personalization;
- ▶ computer-aided diagnostics.


# Start-up

## System start-up


### Single-unit or modular UPS

Proceed in the following order:


- close the upstream switches supplying Mains 1 and 2 power (on the LV switchboard);
- close Mains 1 input switch Q1. The system powers up:

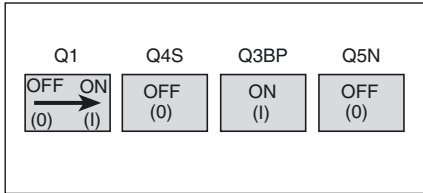


- red "load not protected" light ② on the control panel goes on,
- the rectifier/chargers automatically starts;
- close Mains 2 input Q4S:

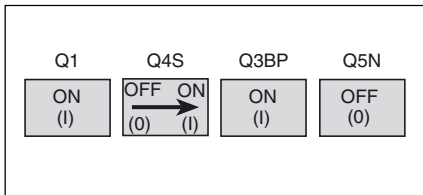


- close inverter output switch Q5N:

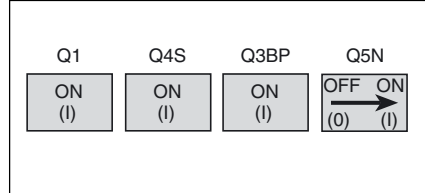


- close battery circuit breaker QF1:

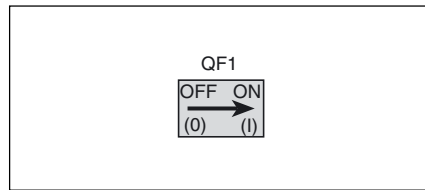

- open maintenance bypass switch Q3BP:

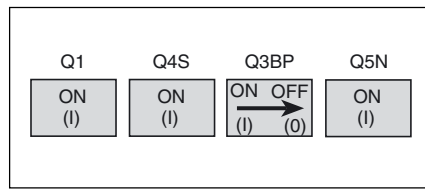

- press the inverter on button ⑥ on the control panel:

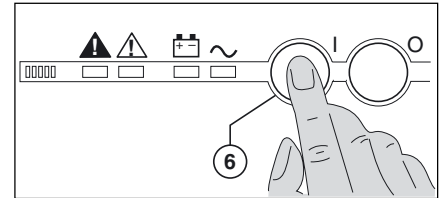


- green "load protected" light ⑤ blinks for 3 seconds,
- the inverter starts and if transfer to Mains 2 conditions are correct, the load is supplied by the inverter,
- red "load not protected" light ② goes off,
- green "load protected" light ⑤ remains on, without blinking.


### Multi-bypass modular UPS

Proceed in the following order:


- check that switches Q1, Q4S, Q5N and QF1 on the UPSs are open and that switches Q3BP are closed, otherwise set them to the required position;
- close the upstream switches (on the low-voltage switchboard) supplying power to the Mains 1 and Mains 2 inputs on the UPSs, the load is supplied with power;
- close the Mains 1 input switch Q1 on the UPSs to supply them with power:

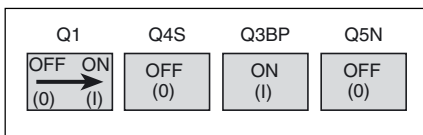


- red "load not protected" light ② on the control panels of the UPSs goes on:

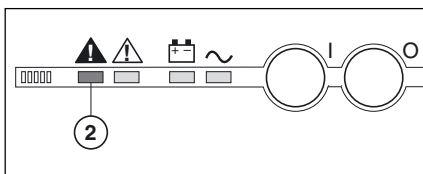


- the rectifier/chargers automatically start;
- close the Mains 2 input switch Q4S on the UPSs:

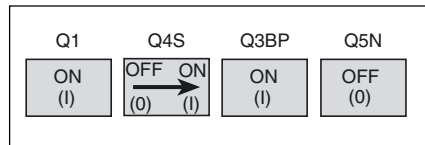


- close inverter output switch Q5N on the UPSs:

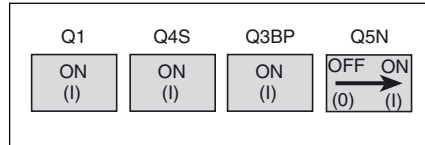


- close battery circuit breaker QF1 on the UPSs:

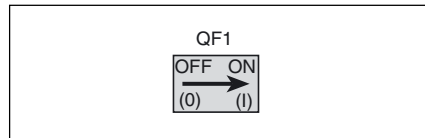


- open maintenance bypass switch Q3BP on the UPSs:

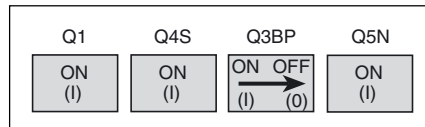

- the load is now supplied by the Mains 2 input via the static switches of the UPSs.
- press the "inverter on" button ⑥ on the control panel of each UPSs:

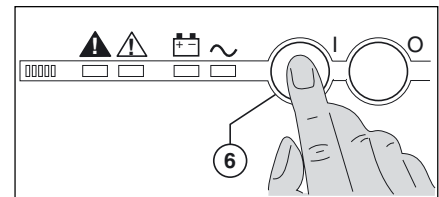


- green "load protected" light ⑤ flashes for three seconds,
- the inverter starts and, if transfer conditions with the Mains 2 input are correct, the load is transferred to the inverter,
- red "load not protected" light ② goes off,
- green "load protected" light ⑤ on the control panel goes on.

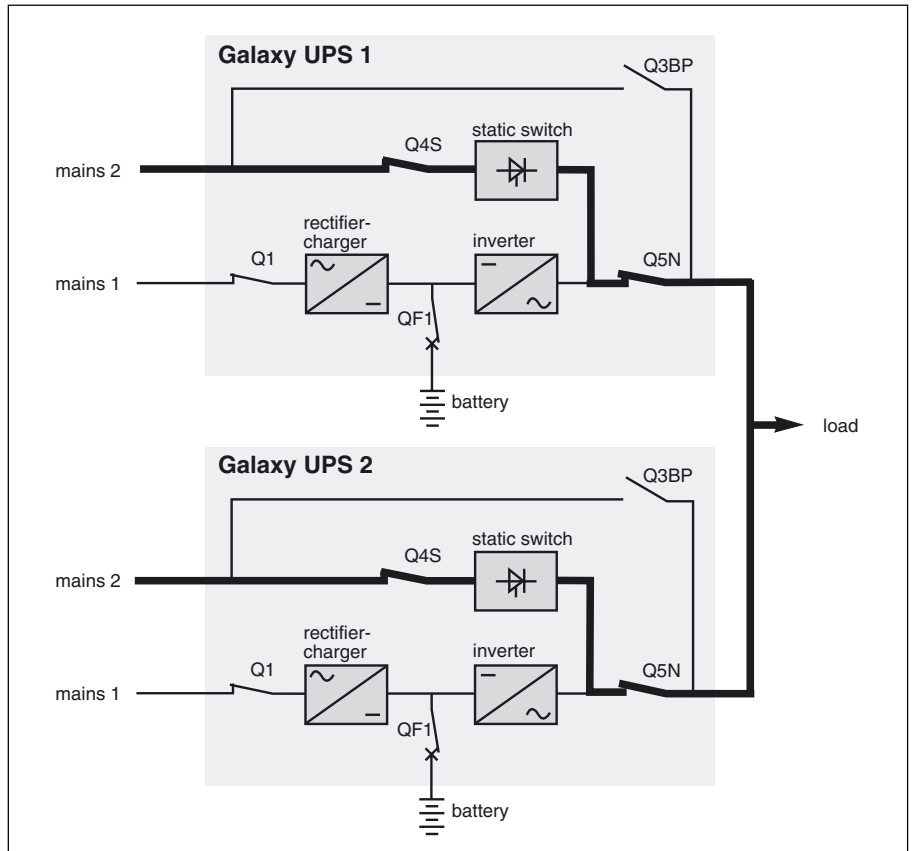


## Modular UPS with external maintenance bypass

Proceed in the following order:


- ▶ check that all lines supplying the load are off or that the load is disconnected;
- ▶ in the maintenance bypass cubicle, open output switch Q5N, then close bypass switch Q3BP;
- ▶ close the upstream switch (on the low-voltage switchboard) supplying power to the Mains 1 inputs on the UPSs;
- ▶ close the Mains 1 input switch Q1 on the UPSs to supply them with power:

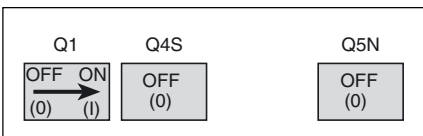


- ▷ the rectifier/chargers automatically start;
- ▷ red "load not protected" light (2) on the control panels of the UPSs goes on:

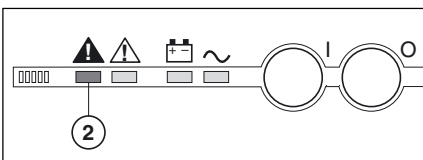


- ▶ close battery circuit breaker QF1 on the UPSs:

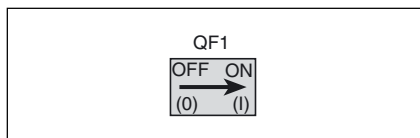

- ▶ close the upstream switches (on the low-voltage switchboard) supplying power to the Mains 2 inputs on the UPSs, then close the Mains 2 input switch Q4S on the UPSs:

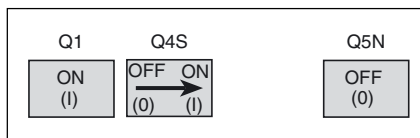


- ▶ close inverter output switch Q5N on the UPSs:

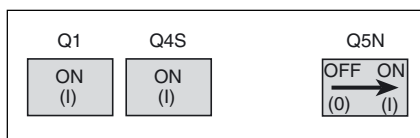

- ▶ close output switch Q5N in the maintenance bypass cubicle;
- ▶ open bypass switch Q3BP in the maintenance bypass cubicle;

- ▶ press the "inverter on" button (6) on the control panel of a UPS:

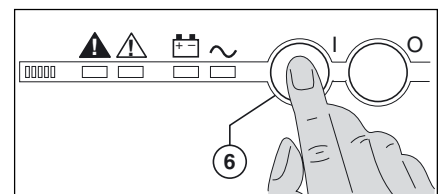

- ▷ green "load protected" light (5) flashes for three seconds,
- ▷ the inverter starts and waits for the start of the other units;
- ▶ proceed in the same manner for each unit. When the number of running units is sufficient, the inverter output switches close and the load is supplied by the inverters:
- ▷ red "load not protected" light (2) goes off,
- ▷ green "load protected" light (5) on the control panel goes on.

## Start-up (cont.)

### Frequency converters

Proceed in the following order:


- ▶ check that all lines supplying the load are off or that the load is disconnected;
- ▶ close the upstream switch supplying Mains 1 power (on the LV switchboard);
- ▶ close Mains 1 input switch Q1.

The system powers up:



- ▷ red "load not protected" light ② on the control panel goes on,
- ▷ the rectifier-charger automatically starts;


- ▶ close battery circuit breaker QF1 (systems equipped with a battery);

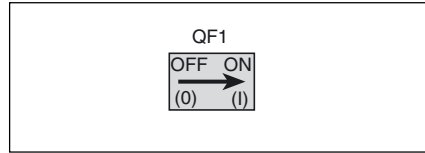

- ▶ close inverter output switch Q5N:



- ▶ press the "inverter on" button ⑥ on the control panel:

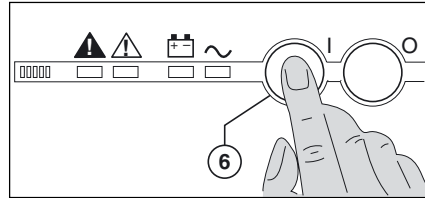

- ▷ green "load protected" light ⑤ blinks for 3 seconds,

- ▷ the inverter starts and awaits the start of the other inverters;

- ▶ proceed in the same manner for each line;

- ▷ when they are all on or enough have been started to supply the rated load, the output switch for each running line closes. The load is supplied and the connected devices can be started,

- ▷ red "load not protected" light ② goes off,

- ▷ green "load protected" light ⑤ remains constant, on the control panel of each line supplying the load.

### Parallel UPS systems with a Static Switch Cubicle

Proceed in the following order:

- ▶ check that all lines supplying the load are off or that the load is disconnected;
- ▶ close the upstream switches supplying Mains 1 and 2 power (on the LV switchboard);
- ▶ close fuse switch Q2 in the Static Switch Cubicle (see figure 22);
- ▶ close Mains 2 input switch Q4S in the Static Switch Cubicle;
- ▶ close switch Q5N in the Static Switch Cubicle;
- ▶ open maintenance bypass switch Q3BP in the Static Switch Cubicle;

- ▶ close fuse switch Q1 in the Static Switch Cubicle;

- ▶ close input switch Q1 on an UPS line.

The line powers up;

- ▷ red "load not protected" light ② on the line control panel goes on,

- ▷ the RC automatically starts;

- ▶ close the line battery circuit breaker QF1;

- ▶ close inverter output switch Q5N for the line;

- ▶ press the "inverter on" button ⑥ on the line control panel;

- ▷ green "load protected" light ⑤ blinks for 3 seconds,

- ▷ the inverter starts and awaits the start of the other inverters;

- ▶ proceed in the same manner for each line;

- ▷ when they are all on or enough have been started to supply the rated load power, the output switch for each running line closes and the load is supplied with power;

- ▷ red "load not protected" light ② goes off,

- ▷ green "load protected" light ⑤ remains on, without blinking, on the control panel of each line supplying the load.

## Start-up of a unit

### Start-up of a rectifier/charger

- ▶ it is recommended not to stop the rectifier/charger because the battery will no longer be charged. Rectifier/charger start-up is automatic when Mains 1 input switch Q1 is closed;
- ▷ red "load not protected" light ② on the control panel goes on;
- ▶ close battery circuit breaker QF1.

## Start-up of an inverter

When the rectifier/charger is on:

- ▶ press the "inverter on" button (6) on the control panel;
- ▷ green "load protected" light (5) blinks for 3 seconds;

## Single-unit or modular UPS system:

- ▶ the inverter starts and if the transfer to Mains 2 conditions are correct, the load is supplied by the inverter;
- ▷ red "load not protected" light (2) goes off,
- ▷ green "load protected" light (5) becomes constant.

## Frequency converter or multi-bypass UPS:

- ▶ the inverter starts and awaits the start of the other inverters;
- ▶ when they are all on or enough have been started to supply the rated load power, the output switch for each running line closes and the load is supplied with power;
- ▷ red "load not protected" light (2) goes off,
- ▷ green "load protected" light (5) becomes constant, on the control panel of each line supplying the load.

## Modular UPS with external maintenance bypass or parallel UPS with SSC:

- ▶ the inverter starts and awaits the start of the other inverters;
- ▶ when they are all on or enough have been started to supply the rated load power, the output switch for each running line closes and the load is supplied with power;
- ▷ red "load not protected" light (2) goes off,
- ▷ green "load protected" light (5) remains on, without blinking, on the control panel of each line supplying the load and on the control panel of the Static Switch Cubicle.

## Frequency converter without a battery:

- ▶ Start-up of the rectifier/charger automatically leads to start-up of the inverter.




# Shutdown

## Shutdown of a unit

### Shutdown of an inverter

- ▶ press the "inverter off" button (7) on the control panel for 3 seconds;

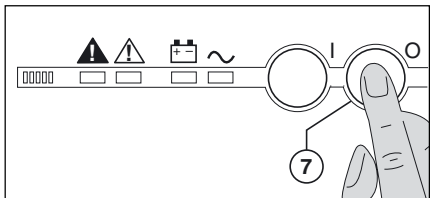

### Single-unit UPS

- ▶ green "load protected" light (5) goes off,
- ▶ red "load not protected" light (2) on the control panel goes on,
- ▶ the inverter stops;
- ▶ if transfer to Mains 2 conditions are correct, the inverter shuts down and the load is transferred to Mains 2;
- ▶ if transfer to Mains 2 conditions are not correct, the inverter does not shut down;
- ▶ special action on the hidden control panel is required to force inverter shutdown,
- ▶ to force inverter shutdown, press simultaneously the security button (14) and button 5 "Forced inverter shutdown" (17) on the hidden control panel,
- ▶ the load is transferred to Mains 2 with a 0.8 second interruption in the supply of power.

### Multi-bypass modular UPS:

- ▶ the UPS shuts down (the other parallel-connected unit can supply the entire load):
  - ▶ green "load protected" light (5) goes off,
  - ▶ red "load not protected" light (2) on the control panel goes on.
- The load is not affected and continues to be supplied by the other unit.

### Modular UPS with external maintenance bypass:

- ▶ all the UPSs shut down:
- ▶ green "load protected" light (5) goes off,
- ▶ red "load not protected" light (2) on the control panel of each unit goes on,
- ▶ orange "operating problem" light (3) on the other units goes on, all shut down due to the overload.

### Frequency converter:

- ▶ if the system is redundant, i.e. the other parallel-connected inverters can supply the load on their own, the inverter shuts down:
  - ▶ green "load protected" light (5) goes off,
  - ▶ red "load not protected" light (2) lights on the control panel of the line;
- The load is not affected in that the other inverters continue to supply it normally;
- ▶ if the system is not redundant, all the inverters shut down;
  - ▶ green "load protected" light (5) goes off,
  - ▶ red "load not protected" light (2) on the control panel of each line goes on,
  - ▶ orange "operating problem" light (3) on the control panel of the other lines goes on, all shut down due to the overload.

### Parallel UPS with SSC:

- ▶ if the system is redundant, i.e. the other parallel-connected inverters can supply the load on their own, the inverter shuts down:
  - ▶ green "load protected" light (5) goes off,
  - ▶ red "load not protected" light (2) lights on the control panel of the line.
- The load is not affected in that the other inverters continue to supply it normally;
- ▶ if the system is not redundant and the transfer to Mains 2 conditions are correct, all the inverters shut down;
  - ▶ green "load protected" light (5) goes off,
  - ▶ red "load not protected" light (2) lights on the control panel of each line,
  - ▶ orange "operating problem" light (3) on the control panel of the other lines goes on (all shut down due to the overload),
  - ▶ the load is transferred to Mains 2 without an interruption in the supply of power;
  - ▶ if the system is not redundant and the transfer to Mains 2 conditions are not correct, the inverter does not shut down;
  - ▶ special action on the hidden control panel is required to force inverter shutdown,
  - ▶ to force inverter shutdown, press simultaneously the security button (14) and button 5 "Forced inverter shutdown" (17) on the hidden control panel,
  - ▶ the load is transferred to Mains 2 with a 0.8 second interruption in the supply of power.

### Shutdown of a rectifier/charger

Except in frequency converters without a battery, it is recommended not to stop the rectifier/charger because the battery will no longer be charged. Except in the case of a test of the inverter on battery power, the rectifier/charger should be shutdown after the inverter to avoid unnecessary battery discharge.

Proceed in the following order:

- ▶ open battery circuit breaker QF1;
- ▶ open Mains 1 input switch Q1;
- ▶ the rectifier/charger shuts down,
- ▶ all control panel lights go off because the device is powered down.

### Note:

In a frequency converter without a battery, rectifier/charger shutdown automatically results in inverter shutdown.




## System shutdown


### Single-unit or single modular UPS

- ▶ shutdown the inverter (see the "shutdown of a module" section);
- ▶ carry out operations in the following order:


- ▷ close maintenance bypass switch Q3BP:

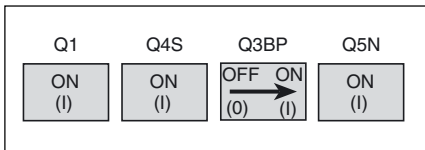


- ▷ open output switch Q5N:

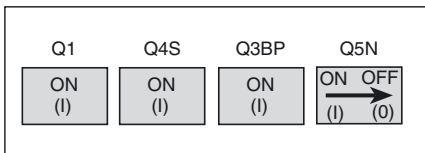


- ▷ open Mains 2 input switch Q4S:

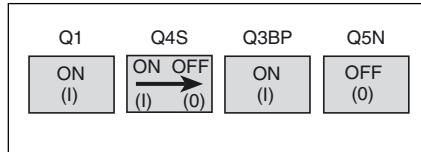

- ▷ open battery circuit breaker QF1:

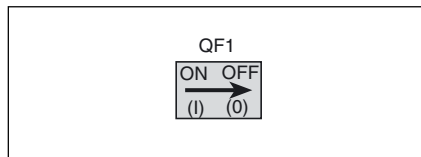

- ▷ open Mains 1 input switch Q1:

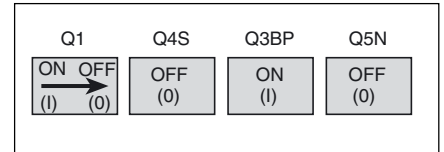

- ▶ the UPS is powered down (except the Mains cables upstream from switches Q1, Q4S and Q3BP) and the load is supplied by Mains 2. All the lights on the control panel are off. A full powering down requires load shutdown and the opening of the upstream protection devices on Mains 1 and 2.

### Modular UPS with external maintenance bypass

- ▶ shutdown each UPS (see section "shutdown of a unit");
- ▶ transfer to the maintenance bypass in the order indicated below (the load is supplied directly by Mains 2 via bypass switch Q3BP):

- ▷ in the maintenance bypass cubicle, close switch Q3BP, then open switch Q5N;


- ▷ open output switch Q5N for each UPS;

- ▷ cut the Mains 2 supply to each UPS by opening the upstream protection devices;

- ▷ open battery circuit breaker QF1 on each UPS;

- ▷ open input switch Q1 on each UPS;


- ▶ the UPSs are de-energised once the capacitors have discharged.

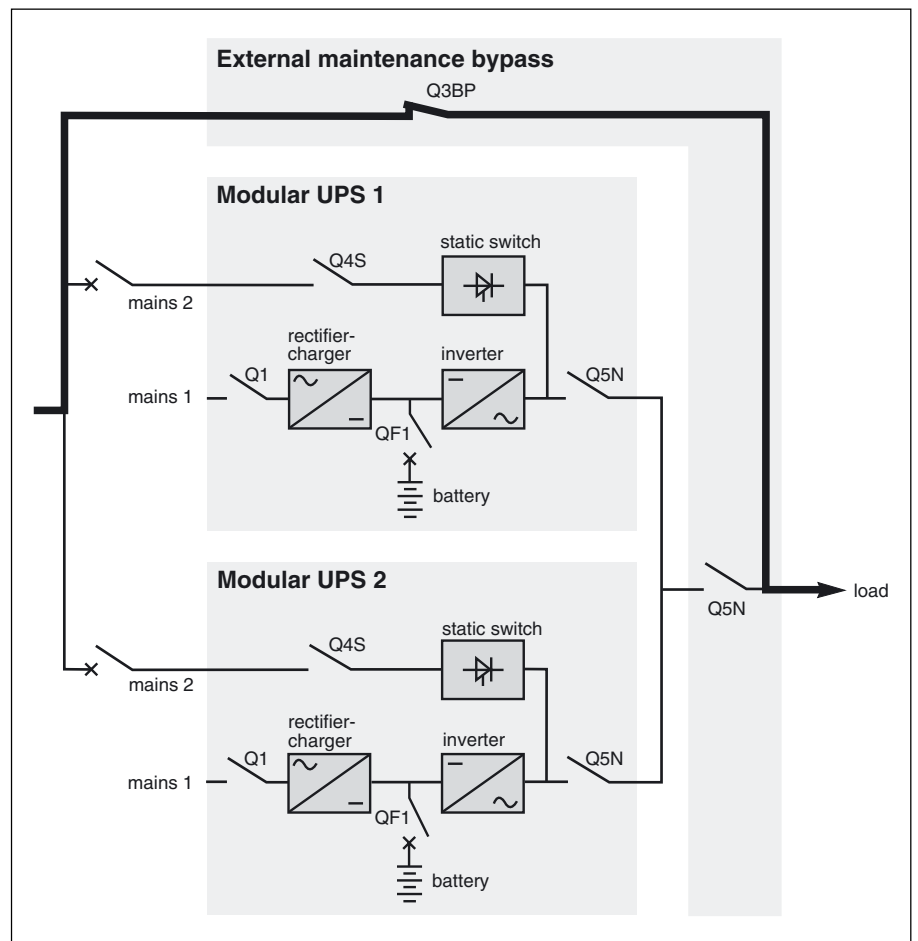

# Shutdown (cont.)

## Multi-bypass modular UPS


- shut down each UPS (see section "shutdown of a unit");
- the load is supplied via the Mains 2 of each UPS;
- close switch Q3BP on each UPS, the load is supplied by the Mains 2, via the bypass lines (Q3BP) of each UPS;
- open switches Q5N, Q4S, Q1 and QF1 on each UPS, the situation is that shown in the figure opposite;
- the UPSs are de-energised once the capacitors have discharged.

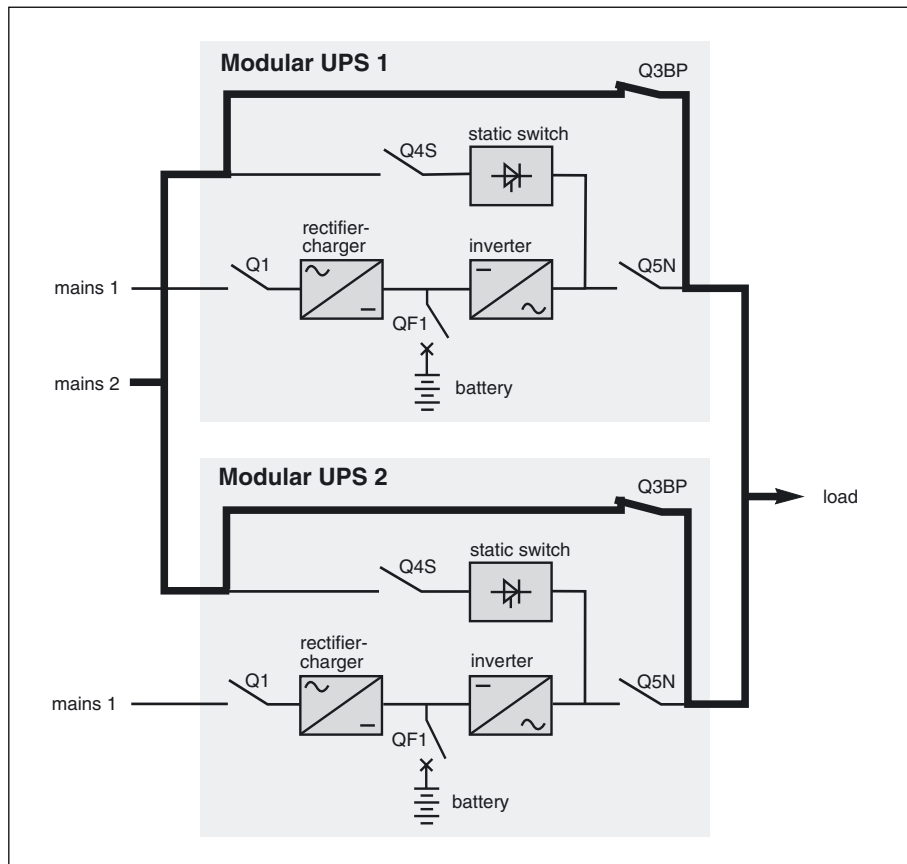

## Frequency converters (no Mains 2)

Shutdown of the inverters results in the interruption of the load;

- shut down each inverter (see the "shutdown of a unit" section);
- open battery circuit breaker QF1 and Mains 1 input switch Q1 on each unit;

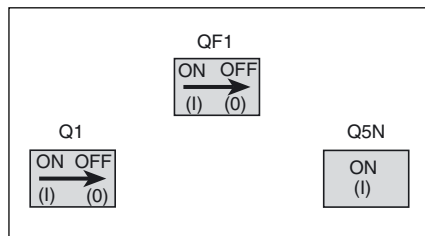

- the system is powered down (except the Mains 1 cables upstream from switch Q1). A full powering down requires the opening of the upstream protection device on Mains 1.

## Parallel UPSs with SSC (with Mains 2)

- shut down each inverter (see the "shutdown of a unit" section);
- carry out the maintenance bypass operation in the Static Switch Cubicle (the load will be directly supplied by Mains 2 via maintenance bypass switch Q3BP);


- close switch Q3BP and open switches Q5N and Q4S in the "static switch" cubicle;
- open fuse switches Q1 and Q2 in the Static Switch Cubicle;
- open battery circuit breaker QF1 in each UPS (except for frequency converters without a battery);
- open input switch Q1 for each UPS;
- the UPSs are powered down (except

the Mains cables upstream from switches Q1, Q4S and Q3BP) and the load is supplied by Mains 2. All the lights on the control panel are off. A full powering down requires load shutdown and the opening of the upstream protection devices on Mains 1 and 2.

## Buzzer reset

- first determine the cause of the alarm;
- press the "buzzer reset" button (11) on the hidden control panel on the concerned cubicle.

The buzzer stops, but a new alarm will set it off again.

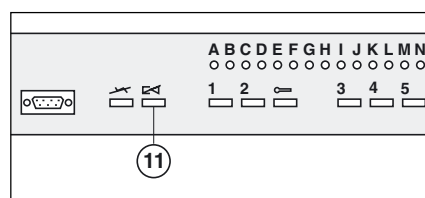

The autodiagnostic system considers any system status other than normal as a problem.

**Prior to any other action**, note any lights (A to N) on the hidden control panel that may be on.

Also note any messages on the screen.

Certain problems may result in the control panel not functioning.

**In this case, it is strongly recommended to call the after-sales support department.**

- ▶ if the load is still correctly supplied with power, it has probably been transferred to Mains 2 (static switch) and is therefore no longer protected;
- ▶ if the load is no longer supplied with power, transfer it manually to the maintenance bypass (see section below).

## Maintenance bypass


This operation is possible only if the system includes a Mains 2. It results in the load being directly supplied by Mains 2 via maintenance bypass switch Q3BP, thus ensuring a higher level of security in the event of a malfunction.

### Important:


Prior to beginning the bypass operation, shut down all system inverters (press the "inverter off" button ⑦ on each UPS control panel). If an inverter remains operating and the Mains 2 transfer conditions are not correct, the load will suffer a 0.8 second interruption.

Switching procedures are explained on a drawing next to each switch. It is imperative that the operation proceed in the following order:

- ▶ **shut down** any inverters that may still be running;

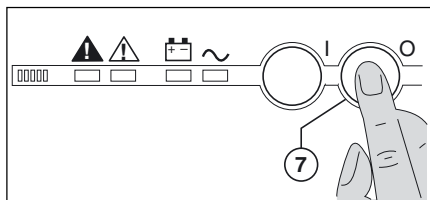

- ▶ **1** : close maintenance bypass switch Q3BP;
- ▶ **2** : open inverter output switch Q5N;
- ▶ **3** : open Mains 2 input switch Q4S:

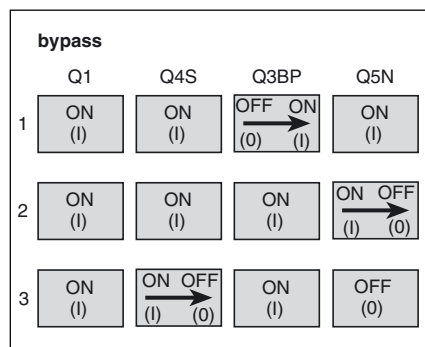

### Note:


- ▶ in systems with a Static Switch Cubicle, the above operation is carried out in the Static Switch Cubicle;
- ▶ the operation with the three switches is carried out in reverse order (3, 2, 1) to return to normal status;
- ▶ in an installation comprising modular UPSs with an external maintenance bypass, the operation is carried out in the external maintenance bypass. The cubicle is not equipped with a Q4S switch and it is therefore necessary to open the protection devices upstream on the maintenance-bypass line.

# Environment information

## Standard information Media Contacts 9

Terminals XR1, XR2, XR3 and XR4 on the remote transmission board of each type of unit can be used for the input of data from the operating environment and for the transmission of signals on the operational status of the device (see figures 18, 19, 20 and 22 for the position of the board).

### Remote transmission board

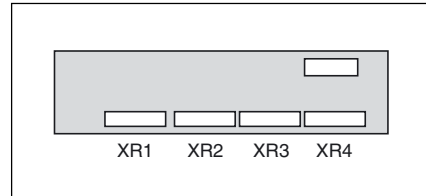

### Signal reception

The signals should be provided by volt-free contacts.

► **emergency shutdown.** An NC contact causes:

- rapid shutdown of the inverter and the RC,
- opening of battery circuit breaker QF1,
- transfer of the load to Mains 2 (generally without interruption in the supply of power);

► **battery room ventilation fault:** a NO contact causes the shutdown of the RC;

► **battery circuit breaker QF1 closed:** a NO contact inhibits inverter start-up when the breaker is open;

► **battery temperature:** an optional PC-board may be connected to the remote transmission board. It supplies information on the battery temperature, thus enabling the RC to regulate the battery voltage.

#### Note:

The Static Switch Cubicle does not receive any of the above signals.

### Signal transmission

► **an auxiliary 24V power supply,** isolated and backed up, is used to supply:

- the undervoltage coil release for the battery circuit breaker(s) QF1,
- an optional board that measures the temperature in the battery room;
- **"general alarm" information** (2 volt-free changeover contacts) which includes:
  - internal faults,
  - information on temperatures outside tolerances in the battery room (optional),
  - overload information ( $I > I_n$ ),
  - static switch ventilation and power-supply faults;

► **"low battery shutdown" warning signal** (2 volt-free changeover contacts) indicating that battery time is about to run out. The warning threshold may be personalized;

► **"load on inverter" signal** (2 volt-free changeover contacts) indicating that the load is supplied by the inverter. In single-unit UPS systems, one volt-free changeover contact may be used to indicate that the load is supplied by Mains 2;

► **"load on battery" signal** (2 volt-free changeover contacts) indicating that the inverter is supplied by the battery in the following cases:

- Mains 1 outage or voltage drop,
- RC shutdown,
- RC current limiting;

This signal, which may be used to initiate process saving and shutdown procedures following micro-breaks; is time-delayed by 30 seconds to avoid unnecessary operations following micro-breaks;

► **"maintenance position" signal** (2 volt-free changeover contacts) indicating that;

- maintenance bypass switch Q3BP is closed,
- Mains 2 input switch Q4S is open,
- inverter output switch Q5N is open,
- battery circuit breaker QF1 is open;

► **signal to open battery circuit breaker(s) QF1** in the event the "emergency shutdown" button being pressed or to avoid an excessive battery discharge (more than 3 rated time).

#### Note:

► the maximum breaking capacity of the changeover contacts is 5A at 250V;

► information on the battery is not supplied to frequency converters without a battery or to the Static Switch Cubicle;

► in systems with a Static Switch Cubicle, the "load on inverter" and "maintenance position" signals must be directed to the Static Switch Cubicle.


## "LED" signalling box (optional)

A basic "LED" signalling box with four indication lights may be supplied as an option with the **MGE™ Galaxy™ 6000** system.

It supplies the following signals:

- ▶ load on battery;
- ▶ low battery shutdown warning;
- ▶ inverter stop;
- ▶ general alarm.


It connects to the terminals presented on the preceding page and draws its power from the external 220V AC, 50Hz or 60Hz power supply not connected to a UPS.

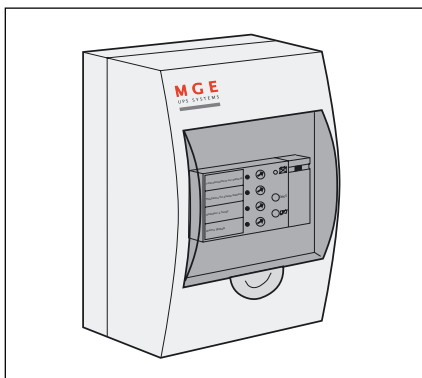

## Additional information "Media Contacts 15" (optional)

An additional board may be installed in all types of systems. Terminals XR5 to XR9 on the board may be used to receive additional information from the environment and supply more precise information on system status (see figures 18, 19, 20 and 22 for the position of the board).

### Additional remote transmission board

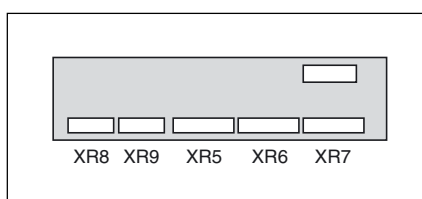

### Signal reception

The signals should be provided by volt-free contacts.

- ▶ **"desynchronization with Mains 2" signal** inhibits the inverter from synchronizing its output frequency with that of Mains 2. The inverter supplies a stable frequency and the load may no longer be correctly transferred from the inverter to Mains 2. In the event of a malfunction or an overload, the transfer will take place with a 0.8 second interruption in the supply of power to the load;
- ▶ **"gradual rectifier/charger shutdown" signal** makes the rectifier/charger shut down progressively to avoid excessive step load variations in the event of a low output engine generator set replacing Mains 1;
- ▶ **"generator current limiting" signal** makes the rectifier/charger current limit the power drawn when a low output engine generator set has replaced Mains 1. The additional power required for the inverter is supplied by the battery;
- ▶ **"battery charge current limiting" signal** reduces the battery charge current (programmable parameter) in the event a low output engine generator set has replaced Mains 1;

- ▶ **"transfer to Mains 2 disabled" signal** blocks transfer of the load from the inverter to Mains 2. In the event the inverter shuts down (overload, etc.), the load is no longer supplied (for modular UPSs, this information is disabled and transferred to an auxiliary output);
- ▶ **"transfer to Mains 2 with interruption disabled" signal** blocks transfer of the load from the inverter to Mains 2 if it would result in an interruption in the supply of power to the load. Only no-break transfers are allowed, i.e. transfer to Mains 2 conditions must be correct or the transfer is disabled (for modular UPSs, this information is disabled and transferred to an auxiliary output);
- ▶ **"auxiliary" signal** can be used to provoke (depending on personalization):
  - ▷ a forced shutdown of the inverter (regardless of the status of Mains 2),
  - ▷ a protected inverter shutdown (transfer of the load to Mains 2 without interruption only if it is within tolerances),
  - ▷ modification of the inverter output frequency (50Hz or 60Hz);
- ▶ **"remote inverter on" signal** can be used to remotely start the inverter;
- ▶ **"remote inverter off" signal** can be used to remotely shut down the inverter.

### Note:

In a system with a Static Switch Cubicle, the following signals must be directed to the Static Switch Cubicle:

- ▷ desynchronization with Mains 2,
- ▷ transfer to Mains 2 disabled,
- ▷ transfer to Mains 2 with interruption disabled.

## Environment information (cont.)

### Signal transmission

These signals are each transmitted by two volt-free changeover contacts with a maximum breaking capacity of 5A 250V.

▶ **"overload" signal** indicates that an overload has taken place ( $P_{load} > P_{nominal}$  in kVA);

▶ **"rectifier/charger function fault" signal** indicates that:

▷ a fault has taken place in the rectifier/charger module,

▷ Mains 1 input switch Q1 is open;

▶ **"inverter function fault" signal**

indicates that a fault has taken place in the inverter module;

▶ **"transfer to inverter fault" signal** indicates that the load transfer conditions from Mains 2 to the inverter are incorrect;

▶ **"transfer to Mains 2 fault" signal** indicates that the transfer to Mains 2 conditions (voltage, frequency or phase) are incorrect and a forced transfer will result in a 0.8 second interruption in the supply of power to the load;

▶ **"rectifier/charger on" signal** indicates the status of the module.

#### Note:

A Static Switch Cubicle receives only the following signals:

- ▷ overload,
- ▷ transfer to inverter fault,
- ▷ transfer to Mains 2 fault.

## Maintenance configuration

### Single-unit or single modular UPS (figure 29)

During maintenance, the UPS must be isolated from Mains 1 and 2, the battery and the load.

#### ► inverter isolation

Proceed in the following order:

- ▷ shut down the inverter (press the "inverter off" button (7) for 3 seconds),
- ▷ close bypass switch Q3BP,
- ▷ open isolating switches Q5N, Q4S, QF1 and Q1.

The UPS is powered down once the capacitors have discharged (a few minutes);

#### ► start-up

Following servicing, proceed in the following order:

- ▷ close switch Q1, then after approximately ten seconds, switches QF1, Q5N and Q4S,
- ▷ open bypass switch Q3BP,
- ▷ start the inverter (press the "inverter on" button (6)).

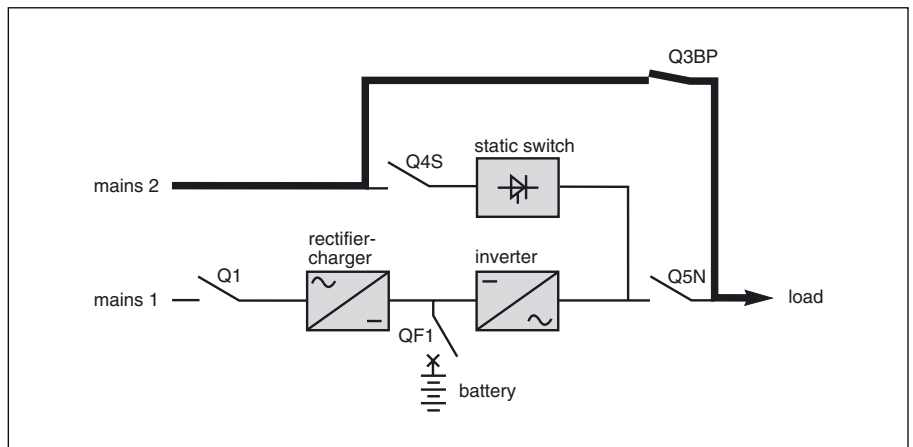


Fig. 29

#### Caution:

► work should be carried out in accordance with applicable safety regulations;

► to avoid interrupting the load, the various switching operations must be carried out in the correct order. Operations are explained in diagrams placed next to the switches.

### Multi-bypass modular UPS (figure 30)

Prior to servicing a given UPS, it must be isolated from Mains 1, Mains 2, its battery and the load outputs of the other UPSs (in this case, never operate the Q3BP switches in the units).

#### ► isolate the UPS

Proceed in the following order:

- ▷ shut down the inverter (press the "inverter off" button (7) for three seconds);
- ▷ open isolating switches Q5N, QF1, Q4S and Q1 in the unit.

The UPS is de-energised once the capacitors have discharged (a few minutes).

#### ► start-up

Once servicing is completed, proceed in the following order:

- ▷ close Q1, then QF1, Q4S and Q5N;
- ▷ start the inverter (press the "inverter on" button (6)).

**Note.** It is strongly advised to call on our after-sales support department for these operations.

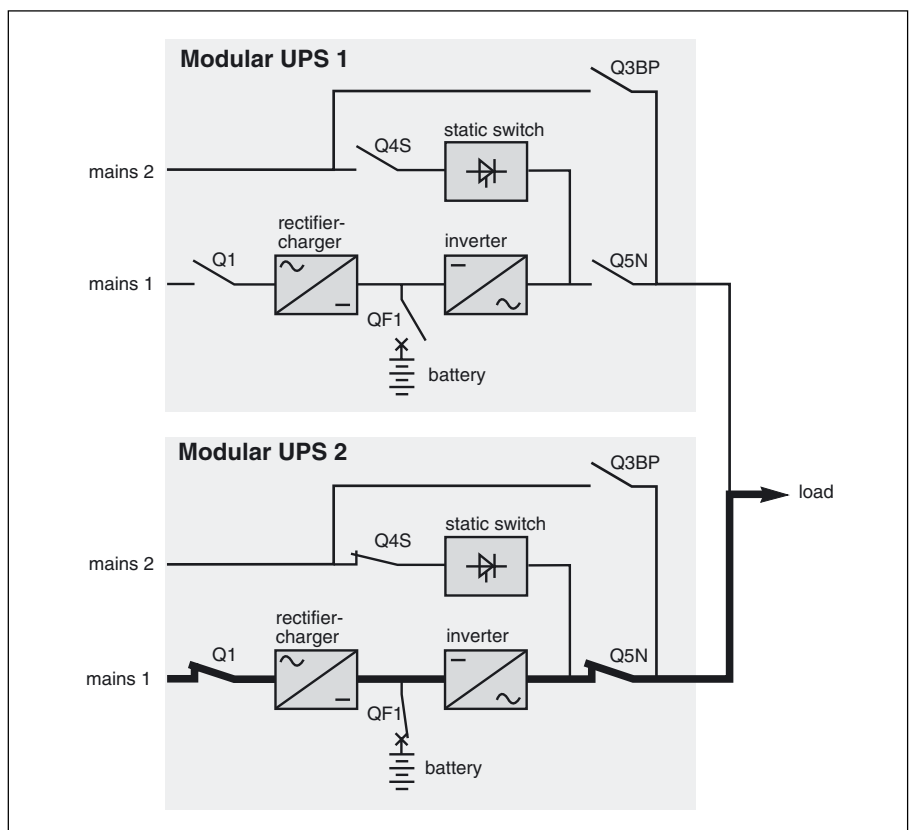


Fig. 30

# Maintenance (cont.)

## Modular UPS with external maintenance bypass

(figure 31)

To service a number of modular UPSs with an external maintenance bypass, it is necessary to isolate them.

### ► isolate the UPSs

Proceed in the following order:

- ⓓ shut down each inverter (press the "inverter off" button ⑦ for three seconds),
- ⓓ switch to the maintenance bypass whereby the load will be directly supplied by Mains 2 via Q3BP (close Q3BP, then open Q5 in the maintenance bypass cubicle),
- ⓓ open input switch Q4S on each UPS;
- ⓓ isolate each UPS from Mains 2 by opening the upstream protection devices,
- ⓓ open input switch Q1 on each UPS,
- ⓓ open output switch Q5N on each UPS.

The UPSs are de-energised (except the Mains 1 cables upstream of the Q1 switches on each UPS), but the load is supplied with Mains 2 power via the maintenance bypass. Complete isolation of the installation requires opening of the upstream protection devices on both Mains 1 and Mains 2.

### ► start-up

Once servicing is completed, proceed in the following order:

- ⓓ close the input switches Q1 and Q4S on each UPS,
- ⓓ close output switch Q5N on each UPS,
- ⓓ close output switch Q5N in the maintenance bypass cubicle,
- ⓓ open switch Q3BP in the maintenance bypass cubicle,
- ⓓ close battery circuit breaker Q1 on each UPS,

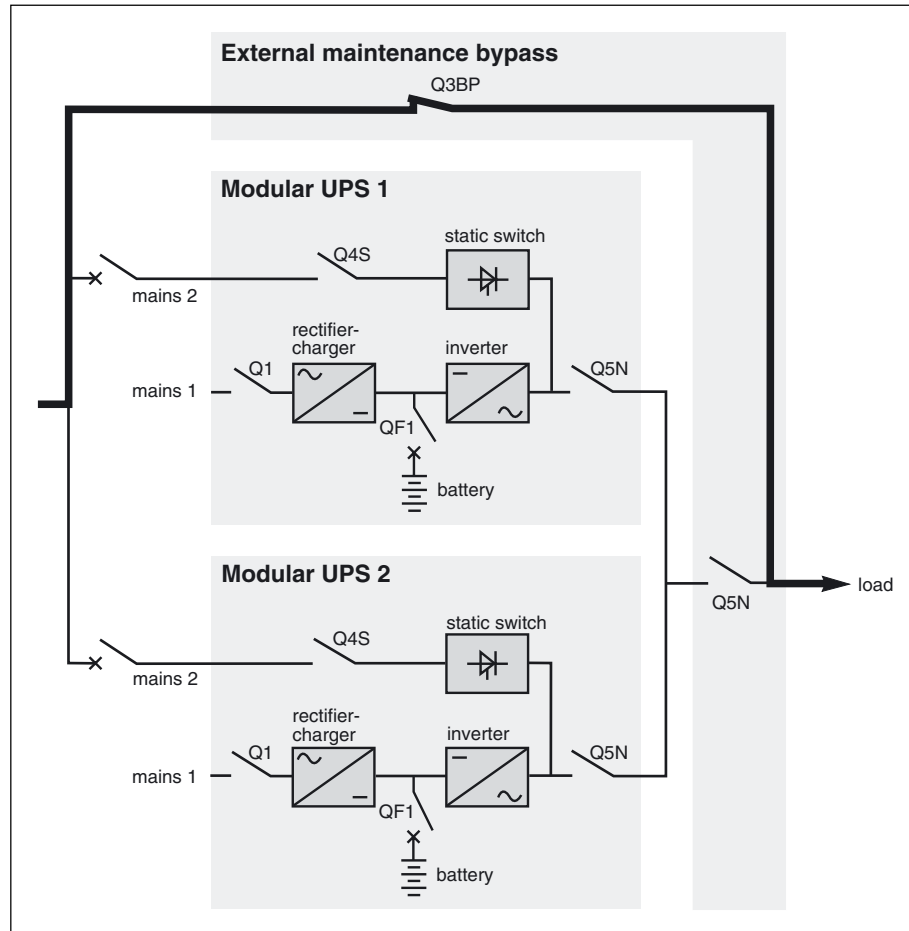


Fig. 31

- ⓓ start all the inverters (press the "inverter on" button ⑥).
- The UPSs all come on line at the same time if they are sufficient in number to supply the load.

**Note.** It is strongly advised to call on our after-sales support department for these operations.

## Frequency converter or parallel UPS with SSC

(figure 32)

During maintenance, the concerned UPS or converter must be isolated from Mains 1, its battery and the output circuits of the other units.

### ► inverter isolation

Proceed in the following order:

- ⓓ shut down the inverter (press the "inverter off" button ⑦ for 3 seconds),
- ⓓ open isolating switches Q5N, QF1 and Q1 for that line.

The unit is powered down once the capacitors have discharged (a few minutes).

In redundant systems with at least one redundant UPS, the other UPSs (or converters) ensure continuity of power to the load.

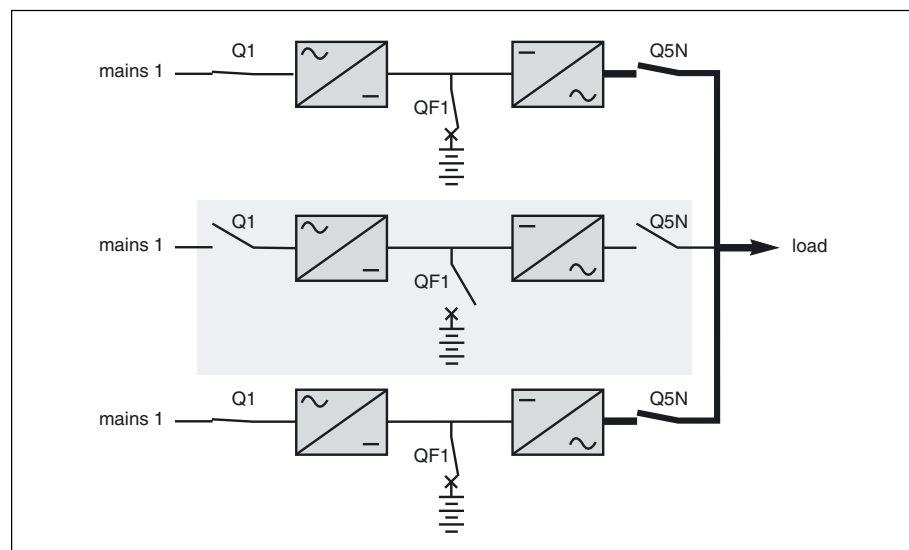


Fig. 32: frequency converter example



In non-redundant systems with a Mains 2, the load is supplied by the Mains 2 and the Static Switch Cubicle. In non-redundant systems without a Mains 2, the entire system must be shut down.

## ► start-up

Following servicing, proceed in the following order:

- ▷ close switch Q1, then switches QF1, Q5N and Q4S,
- ▷ start the inverter (press the "inverter on" button **⑥**).

## Note:

We recommend that you call on the after-sales support department to carry out these operations.

## Static Switch Cubicle

During maintenance, the Static Switch Cubicle must be isolated from Mains 2, the load and the parallel UPSs.

► if work is required on the control electronics alone, open cubicle switch Q4S (but not Q5N) and cubicle fuse switches Q1 and Q2. The load can then remain supplied by the UPSs. After servicing, reclose fuse switches Q1, Q2 and switch Q4S.

## Caution:

When the Static Switch Cubicle is powered down using the above procedure, only the control electronics are in fact powered down. The power circuits remain energized. Maintenance on the static switch power circuits requires shutdown of the UPSs and transfer of the load to the maintenance bypass line.

- open switch Q5N, then the disconnecter-fuses Q1 and Q2 in the SSC;
- open switches Q5N, then switch Q4S on all the UPSs (figure 33).

## Caution:

**Even in the maintenance bypass configuration, the cubicle is only partially shut down and the supply of power to the load continues via switch Q3BP.**

► more extensive maintenance work on the Static Switch Cubicle requires the entire system to be shut down.

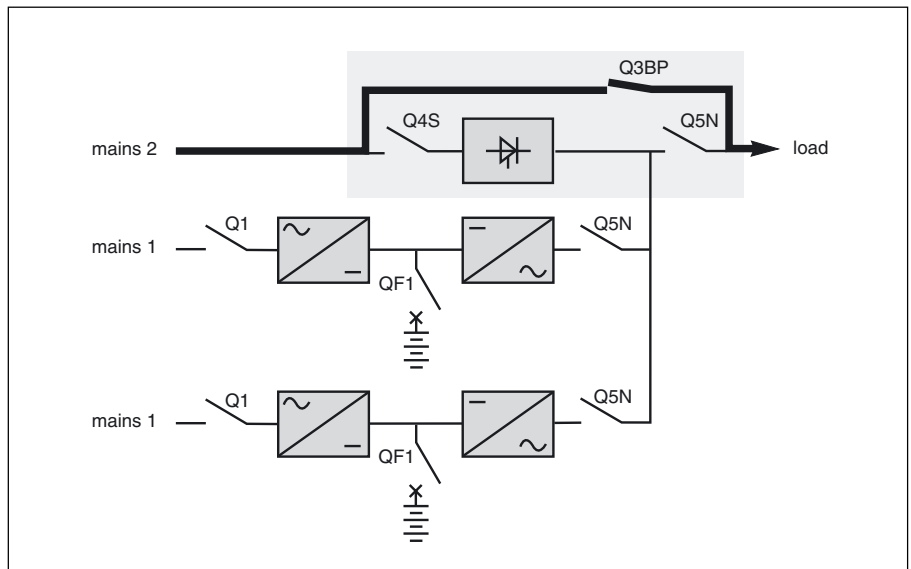


Fig. 33

## Note:

We recommend that you call on the after-sales support department to carry out these operations.

## Battery maintenance

Consult the instructions supplied by the battery manufacturer. Below are a few general indications:

### ► sealed lead-acid batteries.

These batteries require no maintenance:

▷ but check the terminals of each cell from time to time and clean if necessary;


### ► vented lead-acid batteries:

- ▷ check the electrolyte level regularly and add water if necessary,
- ▷ check the voltage of each cell to determine if it is necessary to equalize the battery,
- ▷ check the terminals of each cell and clean if necessary.

## Caution:

Battery maintenance is undertaken with the system powered up. Operations must be carried out in accordance with applicable safety regulations by qualified personnel using insulated tools, gloves and safety goggles.

Batteries contain dangerous substances that will harm the environment if thrown away. If you change the batteries yourself, call on qualified organizations for battery disposal and recycling.

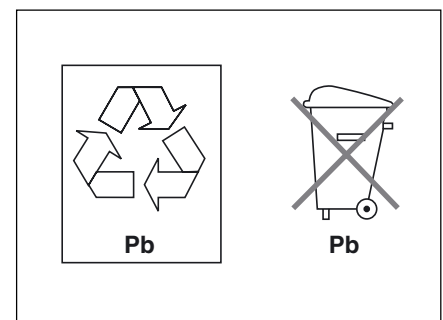

# Maintenance (cont.)

## Autodiagnosics

Note the indications supplied on the hidden control panel (lights A to N (8)). See the "control panel" section. In systems with one or several alphanumeric displays, check the list of alarms.

If there is a true malfunction, note the indications and alarms and call the after-sales support department.

---

## Visual check

► after-sales support technicians will power down the system prior to any maintenance operations.

### Note:

In redundant, parallel UPS systems and frequency converters, the check may be carried out successively on each UPS or converter without interrupting the load. In other configurations and for the Static Switch Cubicle, the load must be supplied via the maintenance bypass (see the "Alarm" section).

► clean the system regularly, particularly the air inlet and outlet grills. Check that the air circulates freely in the cubicles. Use a vacuum cleaner if necessary;

► check that nothing hinders the ventilation at the top of the system;

► check that all the fans operate correctly.

---

## Functional check

► check that lights J, K, M and N on the hidden control panel are not on to avoid an interruption in the supply of power to the load due to incorrect transfer conditions or a battery problem;

► press the "inverter off" button and check that the buzzer and control panel lights function correctly (see the "main operating modes" section);

► press the "inverter on" button and check again that the control panel lights function correctly;

► run a transfer to battery test. With the

inverter on, open input switch Q1.

The orange "battery" light on the control panel should light. After two minutes on battery power, close input switch Q1.

The rectifier/charger should automatically restart and the orange "battery" light on the control panel should go off;

► in parallel systems, run these tests on each UPS or converter.

## Training centers

To allow you to use APC by Schneider Electric products effectively and carry out basic maintenance, we offer a complete range of technical training courses in English and French.

### Training centers Schneider Critical Power & cooling services 50 Hz :

---

France Training Centre  
140, Avenue Jean Kuntzmann  
Innovallée  
38334 - St Ismier Cedex  
France

Tel: +33 (0)4 76 18 34 14  
Fax: +33 (0)4 76 18 45 21

---

Singapore Training Centre  
10 Ang MO Kio Street 65, #03-06/10  
Techpoint Building  
Singapore 569059  
Singapore

Tel: +65 6389 6792

---

China Training Centre  
No. 999, Shen Fu Road  
Min Hang District  
Shanghai 201108  
P.R. China

Tel: +86 21 3407 3365  
Fax: +86 21 3407 4526

---

Internet : [Http://powerlearning.apc.com](http://powerlearning.apc.com)  
On-line catalogue and registration.

### Training center Schneider Critical Power & cooling services 50-60 Hz :

---

United States Training Centre  
132 Fairgrounds Road  
West Kingston - RI02892  
U.S.A

Tel: +1 877 800 4272

---

# "Monitor" alphanumeric display

## General

► **local operation.** The "Monitor" alphanumeric display (see figure 34) may be installed behind the hinged cover of the hidden panel (see figure 25) on the control panel in all types of cubicles (UPS or Static Switch Cubicle).

► **remote operation.** Installed in a special enclosure, the "Tele Monitor" provides the user with remote indications on system status. Two "Tele Monitor" units may be connected to the same system, one as a master for indications and remote control, the other as a slave for indications only.

The "Monitor" can operate in two different modes:

- **mono-cubicle:** the option monitors only the cubicle in which it is installed;
- **multi-cubicle:** "Monitor" can monitor all system cubicles (up to eight maximum). In this mode, the system is equipped with only one "Monitor" which may be installed in any of the cubicles.

Alphanumeric display screen and control panel

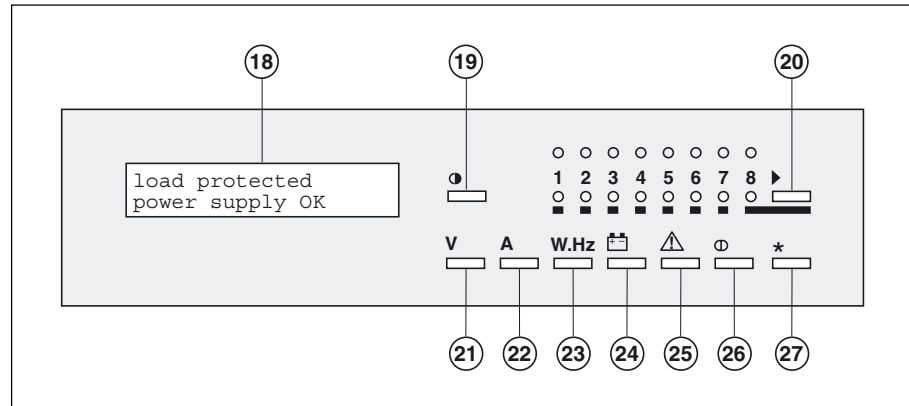


Fig. 34

The alphanumeric display screen (18) is made up of two lines with 20 characters each. The control panel is made up of:

- nine display control buttons,
- eight selection lights for the concerned cubicle,
- eight alarm lights for the cubicles.

## Display

A message indicating the general status of the cubicle or system is continuously displayed. If there is no alarm or problem and the load is normally supplied, the message on the screen is:



## Control panel

### "Settings" button (19).

This button can be used to select the display language, adjust screen contrast to local conditions and, for the "Tele Monitor" option, adjust the volume level of the buzzer.

### "V" button (21).

Provides access to voltage measurements:

- Mains 1 phase-to-phase voltages;
- Mains 2 phase-to-neutral and phase-to-phase voltages;
- inverter output phase-to-neutral and phase-to-phase voltages;
- load phase-to-neutral and phase-to-phase voltages.

### "A" button (22).

Provides access to current measurements:

- currents on the Mains 1 and 2 lines and the load;
- percent current drawn by the load;
- percent load with regards to the rated value;
- load current peak factor.

### "W.Hz" button (23).

Provides access to measurements:

- Mains 1 and 2 and inverter frequency;
- active and apparent power drawn by the load;
- load power factor.

### "Battery" button (24).

Provides access to battery measurements:

- battery voltage (or DC voltage for frequency converters without a battery);
- battery current (charge or discharge);
- battery temperature (optional);
- remaining battery time.

### "Alarms" button (25).

Displays current or logged alarms and stops the buzzer for the "Tele Monitor" option.


A blinking character ("!", "A" or "kW") at the end of the line indicates that the user must press the "alarms" (25), "A" (22) or "W.Hz" (23) button respectively to display the remaining alarms or further information.

### "I/O" button (26).

Provides access to On/Off controls. This button is active only on remote, master "Tele Monitor" units.

### "\*" button (27).

This button has a number of functions depending on the displayed messages (confirmation, positive response, etc.). Pressing this button followed immediately by the "V" button (21) (less than one second) provides access to the display configuration function. In "Monitor" multi-cubicles mode, this button can also be used to display the type of cubicle concerned by the displayed message. The information disappears when the button is released. For example:

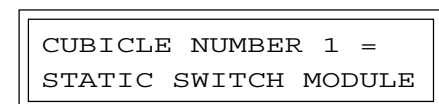

# "Monitor" alphanumeric display (cont.)

## ">" button (20)

This button has a number of functions depending on the displayed messages (selection, negative response, etc.). In "Monitor" multi-cubicles mode, this button can also be used to select one of the eight cubicles that may be connected to the "Monitor" unit, in which case any action on the control panel and the messages or measurements displayed concern only the selected cubicle. In the event the selected cubicle does not respond, the following message is displayed:

CUBICLE NUMBER XX  
UNAVAILABLE

In the event of no reply from the display screen, the following message appears:

DISPLAY NUMBER XX  
UNAVAILABLE

Which corresponds to a communications fault.


In the event of invalid data, the following message is displayed:

CUBICLE NUMBER XX  
FAULT

### Note:

- ▶ most functions may be directly accessed. For example, when voltage measurements are currently displayed, it is possible to directly access current measurements by pressing the "A" button;
- ▶ in "Monitor" multi-cubicles mode, it is possible to access the same measurement in another cubicle by simply pressing the ">" button. For example, if the battery voltage of a cubicle is currently displayed, it is possible to directly display the battery voltages of the other cubicles by pressing the ">" button once for each other cubicle.

## General display function organization

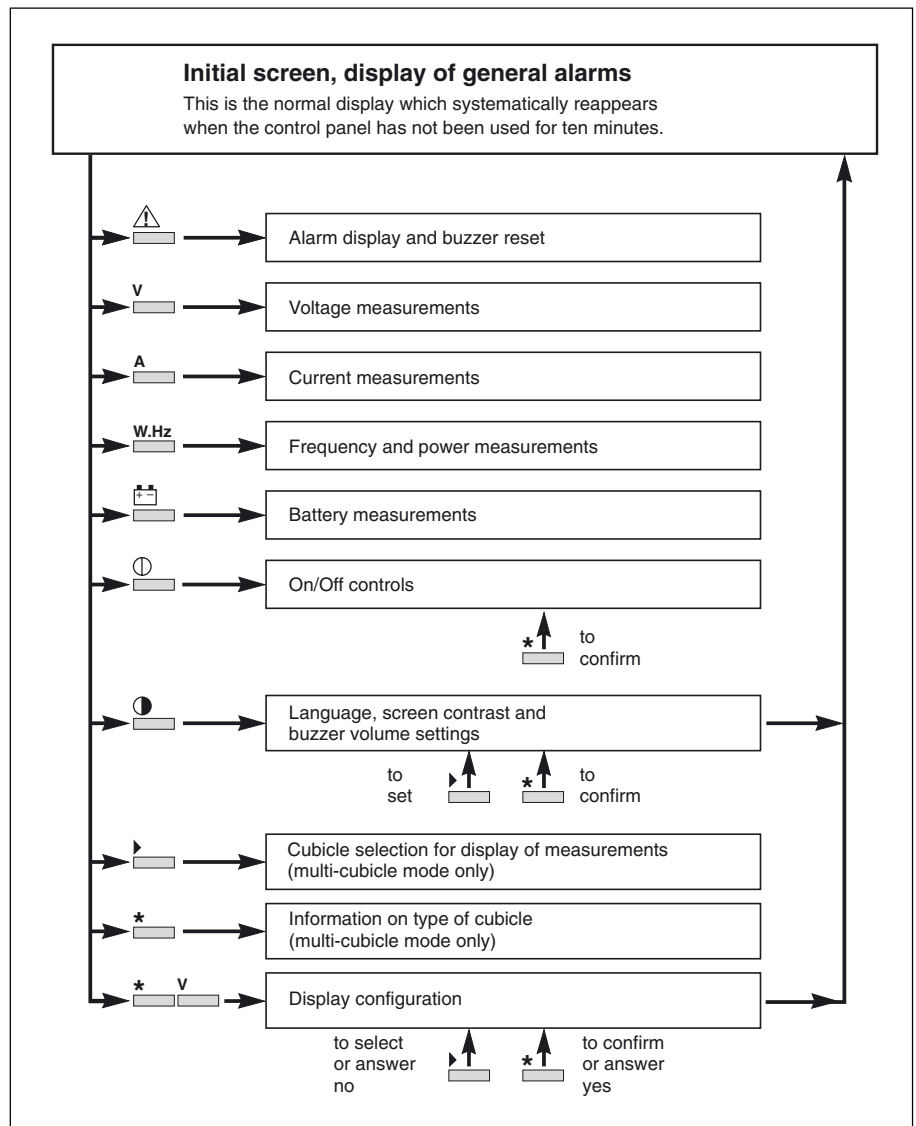

## Lights 1 to 8

These lights are useful particularly in multi-cubicle mode.

### Green lights

Only one of these lights is on at a time, indicating the number of the cubicle concerned by the current display.

### Red lights

These lights provide an indication on system status by signaling alarms and problems in the concerned cubicles.

They light if maintenance is carried out on a cubicle or if the communication link with a cubicle breaks down.

# "Monitor" alphanumeric display (cont.)

## Alarm display and buzzer reset

When the control panel has not been used for ten minutes, the alphanumeric display presents a general message indicating the general status of the cubicle or the system.

If there are no alarms or problems, and the load is correctly supplied by the inverter, the display indicates:

```
LOAD PROTECTED
POWER SUPPLY OK
```

If there is a problem, the screen first displays a general alarm, then if applicable, a list of secondary alarms may be obtained by successively pressing the "alarms" button ("!"). See the lists below.


For the local "Monitor" option, button **(1)** on the hidden control panel stops the buzzer.

For the remote "Monitor" option ("Tele Monitor"), the "!" button stops the buzzer.

### Note:

The existence of another alarm in the list is indicated by the blinking "!" character at the end of a message. The last alarm in the list is not followed by the blinking "!" character at the end. If the "alarms" button is pressed again, the system returns to the initial screen.

## Display of alarms

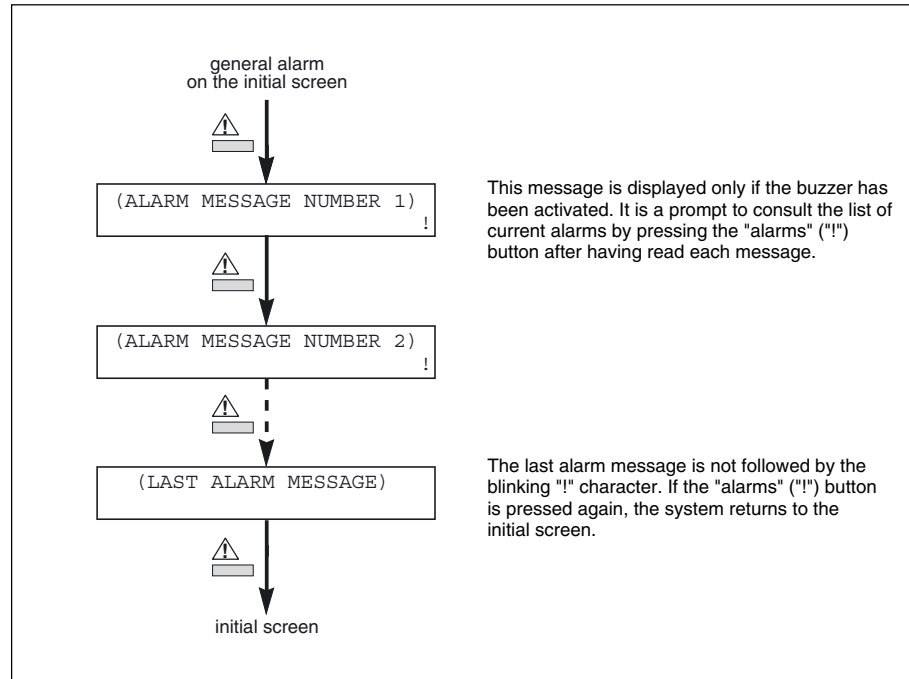

## List of general alarms

```
LOAD PROTECTED
POWER SUPPLY OK
```

This is the normal display when there are no alarms or problems and the load is correctly supplied by the inverter.

```
LOAD PROTECTED
PROBLEM . . . !
```

The load is supplied by the inverter, but a minor problem requiring servicing has occurred. The cause of the problem is contained in the list of secondary alarms (see next page).

```
MAINS 1 PROBLEM
LOAD ON BATTERY !
```

The load is supplied by the inverter, but Mains 1 is down or outside tolerances and power is supplied by the battery.

```
REMAINING BAT. TIME
__MN %KW LOAD =__
```

This message is automatically displayed for five seconds, alternating with the preceding. It indicates the remaining battery time in minutes prior to inverter shutdown. The calculation takes into account:

- ▶ the percentage of full rated load power being drawn;
- ▶ the type of battery;
- ▶ battery temperature;
- ▶ battery age.

```
LOW BATTERY
SHUTDOWN IMMINENT !
```

This message replaces the "Mains 1 problem, load on battery" message when battery voltage reaches the "low battery shutdown" warning level. It alternates with the message described above, "remaining battery time...". The user must then rapidly take measures to secure the load (load shedding, file saves and shutdown,

etc.). In the next one to two minutes at most, the inverter will shutdown and the load will be interrupted.

Two low battery thresholds exist:

- ▶ a battery voltage threshold, which is slightly above the threshold causing an inverter shutdown (this threshold can be disabled);
- ▶ a time threshold, which refers to an adjustable value of the time remaining before effective end of battery power.

```
ALARM . . . !
```

This message signifies that the battery circuit breaker is open and the inverter shut down. The cause of the alarm is in the list of secondary alarms (see next page).

# "Monitor" alphanumeric display (cont.)

## List of secondary alarms

These alarm messages may be consulted by pressing the "alarms" ("!") button when the "!" character appears at the end of a general alarm message. The "alarms" ("!") button can then be used to read the other alarms from the list.

EMERGENCY SHUTDOWN  
AUXILIARY COMMAND !

The remote emergency-shutdown button has been pressed with as a result:

- ▶ shutdown of the inverter;
  - ▶ shutdown of the rectifier/charger;
  - ▶ opening of battery circuit breaker QF1;
  - ▶ transfer of the load to Mains 2.
- To ensure full powering down of the system, this button must also open the external upstream circuit breakers supplying Mains 1 and 2.

LOAD ON  
MAINS 2 !

The load has been transferred to Mains 2 and is no longer protected.

MAINS 2 PROBLEM  
CHECK FREQUENCY !

Mains 2 frequency is outside tolerances and the inverter, unable to synchronize, has switched to free-running frequency mode. Transfer of the load from the inverter to Mains 2 or vice-versa will result in an interruption of the supply of power to the load.

MAINS 2 PROBLEM  
CHECK VOLTAGE !

Mains 2 voltage is outside tolerances. Transfer of the load from the inverter to Mains 2 or vice-versa will result in an interruption of the supply of power to the load.

FREQUENCY IMPOSED  
DESYNCH. COMMAND !

The inverter has received an external command to desynchronize its output frequency with that of Mains 2.

INVERTER IMPOSED  
AUXILIARY COMMAND !

The inverter has received an auxiliary command inhibiting transfer to Mains 2. In the event of an inverter malfunction and shutdown, the load will no longer be supplied.

BATTERY OVERTEMP.  
CHECK FANS !

This message is displayed only if the "Temperature Monitor" option has been installed. It signals that the battery temperature is outside tolerances.

BATT. HOUSING VENT  
OR HARM FILTER FAULT !

A fault requiring servicing has occurred in the battery room ventilation system. The rectifier-charger stops after 30 seconds.

If the installation includes a harmonics filter, this light will also signal an overtemperature of the filter's inductor.

MAINS 1 PROBLEM  
CHECK FREQUENCY !

Mains 1 frequency is outside tolerances and the RC has shut down. The inverter is on battery power.

MAINS 1 PROBLEM  
CHECK VOLTAGE !

Mains 1 is down or its voltage is outside tolerances and the rectifier/charger has shut down. The inverter is on battery power.

CHARGER SHUTDOWN  
AUXILIARY COMMAND !

The rectifier/charger has received an external command to progressively shut down (for example, for a progressive transfer to an engine generator set).

INPUT KVA LIMITED  
AUXILIARY COMMAND !

The rectifier/charger has received an external command to limit the power drawn on Mains 1. The remaining power required for the load is supplied by the battery. This situation is encountered, for example, when the system operates on power supplied by

an undersized engine generator set.

I BATTERY LIMITED  
AUXILIARY COMMAND !

The rectifier/charger has received an external command to limit the charge current supplied to the battery. The normal charge current will be supplied when Mains 1 returns. This situation is encountered, for example, when the system operates on power supplied by an undersized engine generator set.

### Note:

The battery charge current limit value may be programmed.

BATTERY BREAKER  
QF1 OPEN !

QF1 battery circuit breaker has tripped or is open. The load is no longer protected because battery power is unavailable in the event of a Mains 1 outage.

LOW BATTERY  
... !

The inverter has shut down at the end of battery power.

CHARGER OFF  
... !

The rectifier/charger has shut down.

CHARGER FAULT  
CALL SUPPORT DEPT. !

A fault has occurred in the rectifier/charger module requiring servicing by the after-sales support department.

MAINS 1 SWITCH  
Q1 OPEN !

Mains 1 input switch Q1 is open. It must be closed for rectifier/charger start-up.

I INVERTER > IN  
CHECK P.F. KW

An inverter overload has occurred due to a load power factor greater than 0.9. The blinking "kW" sign at the end of the message is a prompt to read the load power factor.

# "Monitor" alphanumeric display (cont.)

INVERTER FAULT  
CALL SUPPORT DEPT. !

A fault has occurred in the inverter module requiring servicing by the after-sales support department.

INVERTER SHUTDOWN  
OVERLOAD > I MAX !

An overload greater than 1.6 In has occurred on the load, resulting in inverter shutdown.

INVERTER SHUTDOWN  
OVERLOAD > IN A

An overload between In and 1.6 In has occurred on the load, resulting in inverter shutdown. The blinking "A" at the end of the message is a prompt to read the load current measurement.

AUXILIARY CONTROL  
SIGNAL RECEIVED !

An auxiliary "Media Contacts 15" option signal has been received. The next display will indicate which of the four possible functions was set.

FORCED UPS SHUTDOWN  
AUXILIARY CONTROL

The UPS has received a forced shutdown command. This corresponds to an auxiliary control signal received via a "Media Contacts 15" option set for this function.

PROTECT. UPS SHUTDOWN  
AUXILIARY CONTROL

The UPS has received a shutdown command. This command will only be executed if load transfer conditions on Mains 2 are satisfied. This corresponds to an auxiliary signal received via a "Media Contacts 15" option set for this function.

FREQUENCY REVERSAL  
AUXILIARY CONTROL

The UPS has received a command to change its output frequency (50 or 60Hz).

This command is only executed if the inverter is off. The frequency will be changed the next time the inverter is started. The command corresponds to an auxiliary control signal received via a "Media Contacts 15" option set for this function

I LOAD > IN  
CHECK LOAD A

The power drawn by the load is greater than the rated value. The blinking "A" at the end of the message is a prompt to read the load current measurement.

TRANSFER FAULT  
CALL SUPPORT DEPT. !

A fault has occurred in the static switch which ensures transfer of the load between the inverter and Mains 2. Servicing by the after-sales support department is required.

PHASE OUT OF LIMITS !

For a single-unit UPS or Static Switch Cubicle, the phase shift between the inverter and Mains 2 is outside tolerances. Transfer of the load between the inverter and Mains 2 will result in an interruption in the supply of power to the load.

For a parallel UPS, the phase shift between this inverter and the other inverters is outside tolerances, and the corresponding UPSs has therefore been disconnected.

MAINS 2 SWITCH  
Q4S OPEN !

Mains 2 input switch Q4S is open, i.e. transfer of the load from the inverter is impossible.

OUTPUT SWITCH  
Q5N OPEN !

Inverter output switch Q5N is open, i.e. the load cannot be supplied by the inverter.

MAINT. BYPASS SWITCH  
Q3BP CLOSED !

Maintenance bypass switch Q3BP is closed. The system is in maintenance configuration and the load is supplied by Mains 2.

EMERGENCY OFF  
OVERLOAD > IN !

The load is no longer supplied by Mains 2 following an extended overload.

BATTERY  
CHARGING !

The battery is currently being recharged.

INDEPENDENT  
INVERTER FREQUENCY !

The inverter frequency is stable and accurate to 0.05Hz, but no longer synchronous with that of Mains 2.

NUMBER OF INVERTERS  
READY INSUFFICIENT !

This message is valid only for parallel UPS systems. The number of UPSs ready for connection to the load is insufficient for the required power level. Another UPS must be started before all the lines together may supply the load. Until another line is started, the load will remain supplied by Mains 2.

BATTERY MAINTENANCE  
CALL AFTER-SALES

Indicates that the battery has probably reached the end of its service life (based on the estimated average service life since its installation).

TRANSFER DISABLED  
AUXILIARY CONTROL

Transfer of the load to Mains 2 is inhibited due to:

- ▶ certain transfer conditions not satisfied;
- ▶ "transfer to Mains 2 with interruption disabled" auxiliary contact of the "Media Contacts 15" option closed.



# "Monitor" alphanumeric display (cont.)

UPS IMPOSED  
TRANSFER DISABLE !

- ▶ UPS operating with current limitation;
- ▶ internal fault;
- ▶ auxiliary control inhibits switching to Mains 2.

Cannot transfer the load to Main 2 due to:

- ▶ transfer conditions not satisfied;
- ▶ UPS operating on an independent frequency;

## Measurement system

The "Monitor" system displays a number of input and output measurements at different points in the system.

### ▶ Mains 1

- ▷ phase-to-phase voltages,
- ▷ currents of the three phases,
- ▷ frequency;

### ▶ Mains 2

- ▷ phase-to-neutral voltage,
- ▷ phase-to-phase voltages,
- ▷ frequency;

### ▶ battery

- ▷ voltage,
- ▷ charge or discharge current,
- ▷ remaining battery time (calculated for each UPS);

### ▶ inverter output

- ▷ phase-to-neutral voltage,
- ▷ phase-to-phase voltages,
- ▷ currents of the three phases,
- ▷ frequency,
- ▷ active and apparent power,
- ▷ ratio peak current / rated current rms;

### ▶ total load

- ▷ phase-to-neutral voltage,
- ▷ phase-to-phase voltages,
- ▷ currents of the three phases,
- ▷ frequency,
- ▷ active and apparent power;


### ▶ option

- ▷ battery temperature.


### Note:

Frequency converters without batteries are not concerned by the battery measurements. The displayed battery voltage corresponds to the DC voltage at the RC output.


## Single-unit or modular UPS

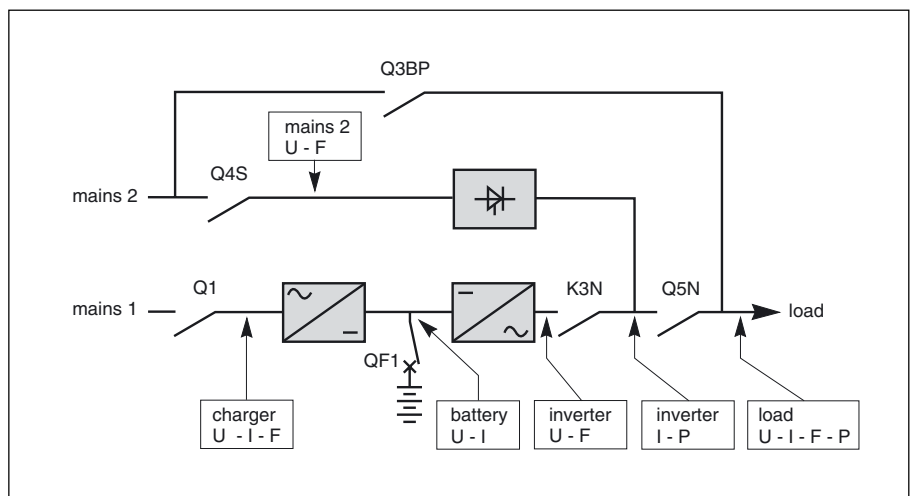

## Frequency converter

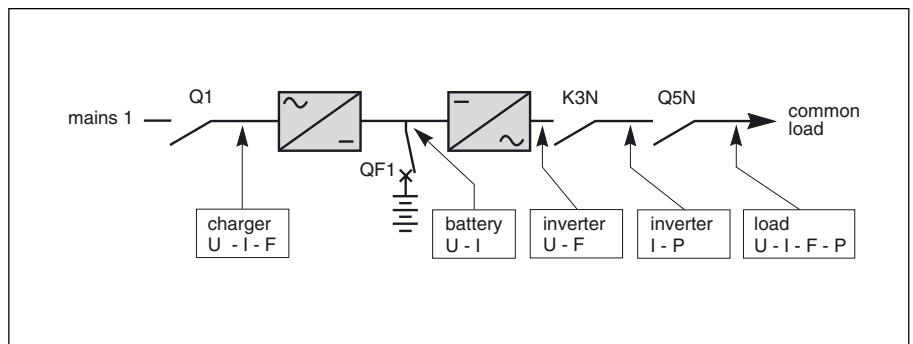

## Static Switch Cubicle

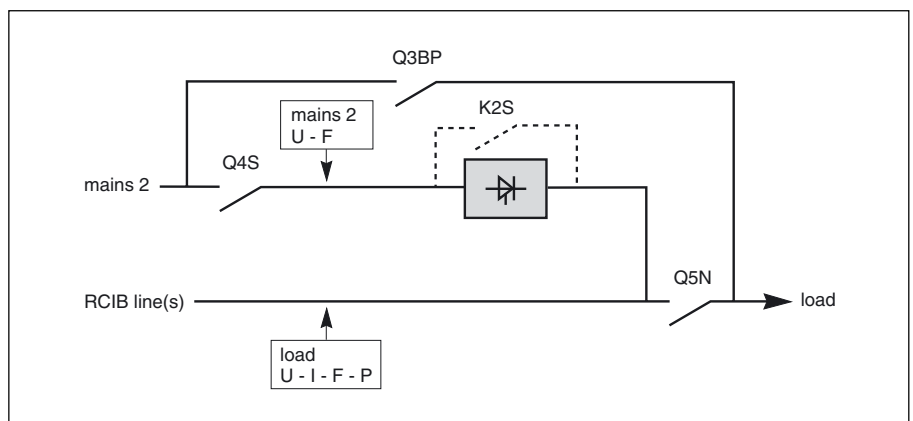

# "Monitor" alphanumeric display (cont.)

## Voltage measurements

These measurements may be accessed in two manners:

- ▶ pressing the "V" button displays the series of screens in the figure opposite;
- ▶ in "Monitor" multi-cubicle mode, pressing the ">" button when the screen already displays the voltage measurements of a cubicle. The system shifts to the voltage measurements of the next cubicle.


### Note:

- ▶ Mains 2 measurements are not displayed on converters and parallel UPS with SSC;
- ▶ Mains 1 and inverter output measurements are not displayed on Static Switch Cubicles.

### Caution:

For installations comprising a number of modular UPSs connected in parallel, the absence of load (UPS output) voltage indicated on a display is only valid if it also indicated on the displays of all the other parallel-connected UPSs. Before carrying out any work on a UPS, always check the absence of voltage using a method complying with applicable safety rules for work on electrical equipment.

## Display of voltage measurements

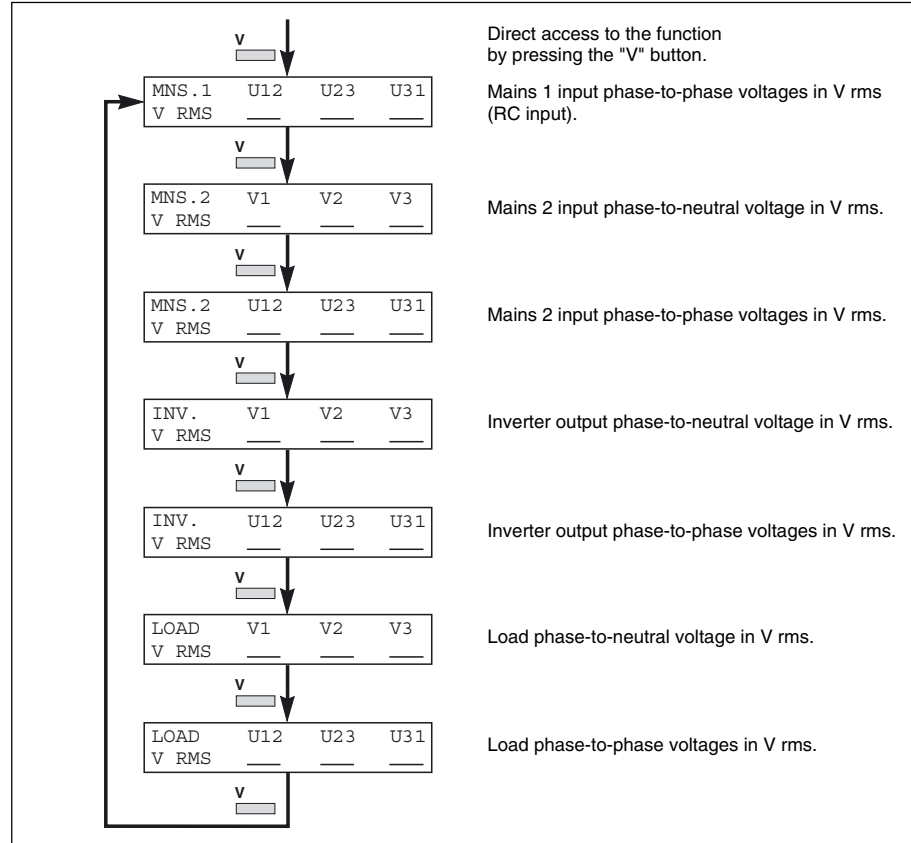

Direct access to the function by pressing the "V" button.

Mains 1 input phase-to-phase voltages in V rms (RC input).

Mains 2 input phase-to-neutral voltage in V rms.

Mains 2 input phase-to-phase voltages in V rms.

Inverter output phase-to-neutral voltage in V rms.

Inverter output phase-to-phase voltages in V rms.

Load phase-to-neutral voltage in V rms.

Load phase-to-phase voltages in V rms.

## Current measurements


These measurements may be accessed in two manners:

- ▶ pressing the "A" button displays the series of screens in the figure opposite;
- ▶ in "Monitor" multi-cubicle mode, pressing the ">" button when the screen already displays the current measurements of a cubicle. The system shifts to the current measurements of the next cubicle.

### Note:

- ▶ Mains 2 measurements are not displayed on UPS cubicles in parallel UPS systems;
- ▶ Mains 1 and inverter output measurements are not displayed on Static Switch Cubicles.

## Display of current measurements

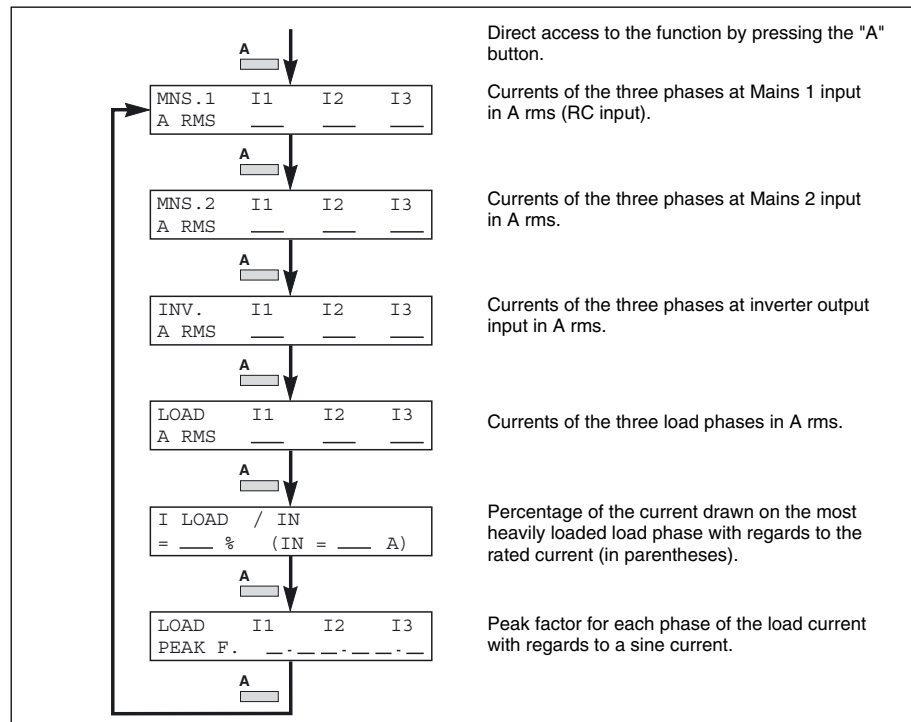

Direct access to the function by pressing the "A" button.

Currents of the three phases at Mains 1 input in A rms (RC input).

Currents of the three phases at Mains 2 input in A rms.

Currents of the three phases at inverter output input in A rms.

Currents of the three load phases in A rms.

Percentage of the current drawn on the most heavily loaded load phase with regards to the rated current (in parentheses).

Peak factor for each phase of the load current with regards to a sine current.

# "Monitor" alphanumeric display (cont.)

## Frequency and power measurements


These measurements may be accessed in two manners:

- ▶ pressing the "W.Hz" button displays the series of screens in the figure opposite;
- ▶ in "Monitor" multi-cubicle mode, pressing the ">" button when the screen already displays the frequency and power measurements of a cubicle. The system shifts to the frequency and power measurements of the next cubicle.

### Note:

- ▶ Mains 2 measurements are not displayed on UPS cubicles in parallel UPS systems;
- ▶ Mains 1 output measurements are not displayed on Static Switch Cubicles.

### Display of power and frequency measurements

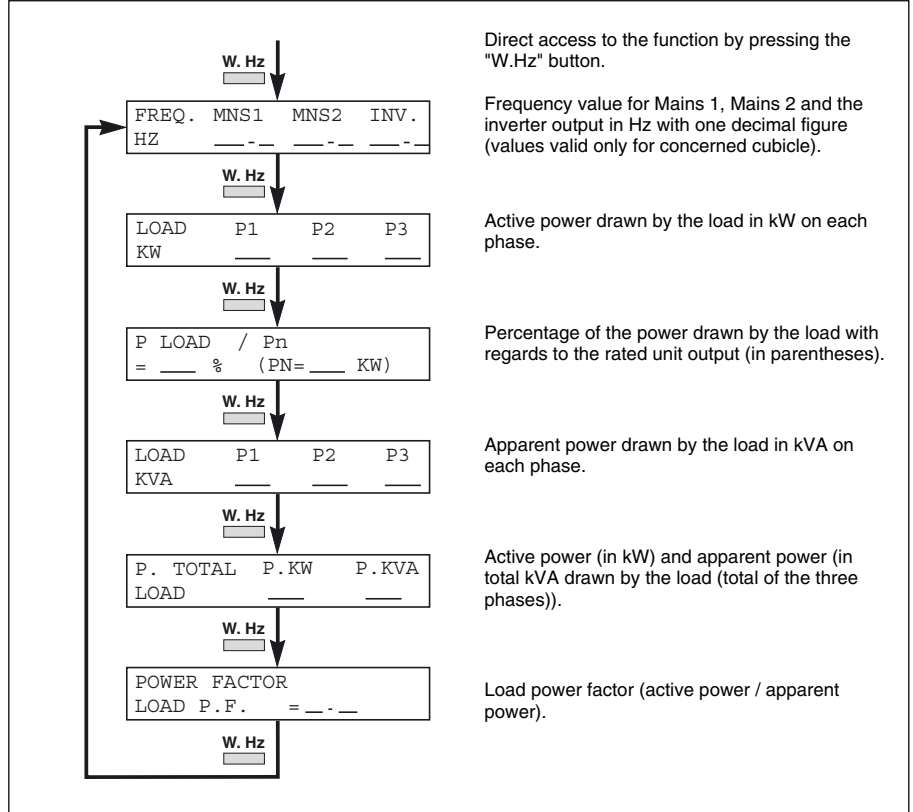

## Battery measurements

These measurements may be accessed in two manners:

- ▶ pressing the "battery" button displays the series of screens in the figure opposite;
- ▶ in "Monitor" multi-cubicle mode, pressing the ">" button when the screen already displays the battery measurements of a cubicle. The system shifts to the battery measurements of the next cubicle.


### Note:

- ▶ these measurements do not concern the Static Switch Cubicle. The "battery" button on the Static Switch Cubicle will display the following message for a few seconds:

COMMAND INVALID  
STATIC SWITCH MODUL

- ▶ the available battery time value blinks to attract attention;
- ▶ the battery temperature is displayed only if the "Temperature Monitor" option is installed.

### Display of battery measurements

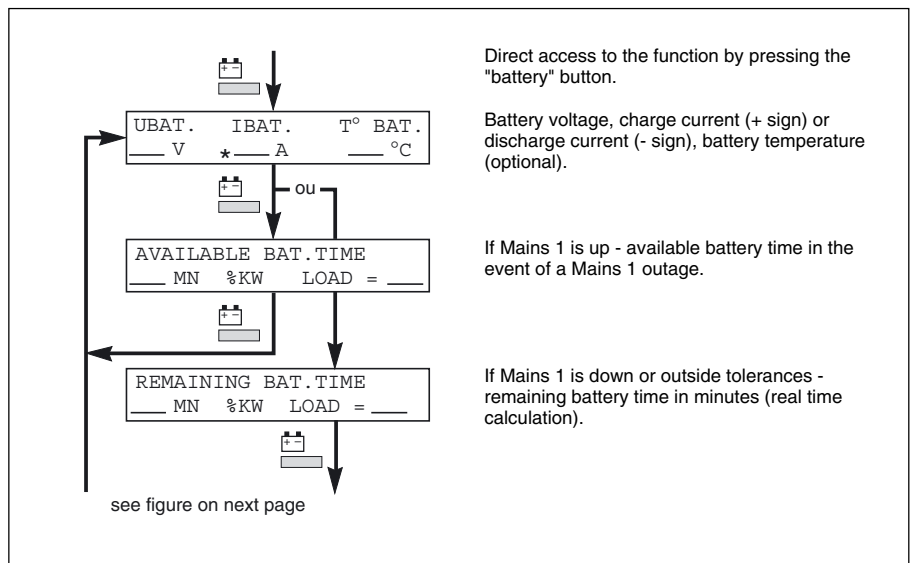


### Note:

- ▶ Stars appear in the battery backup time display if the battery time estimator function has not been validated by the after-sales support technicians.

# "Monitor" alphanumeric display (cont.)

▶ **battery test:** see figure opposite.

## Display of battery measurements (cont.)

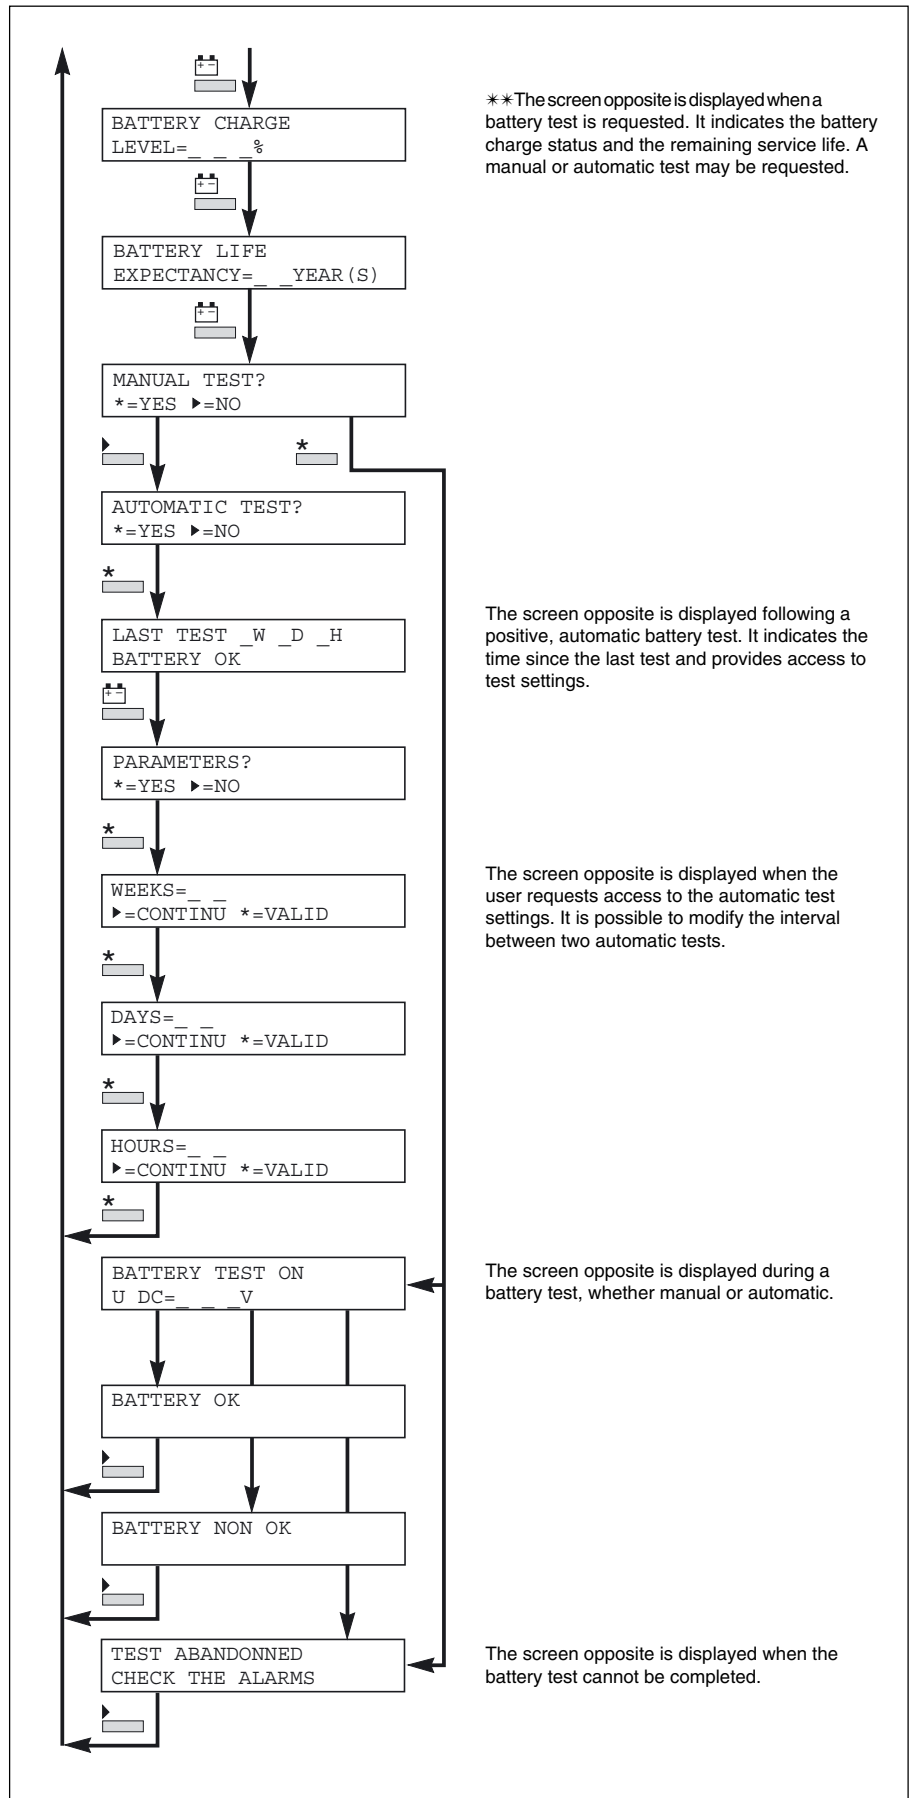

# "Monitor" alphanumeric display (cont.)

## Inverter On/Off commands

These commands may be accessed only via the master display. When the "I/O" button is pressed, the series of screens in the figure opposite is displayed.

### Note:

▶ these commands do not concern the Static Switch Cubicle. The "I/O" button on the "static switch" cubicle produces the message:

```
COMMAND INVALID
STATIC SWITCH MODUL
```


▶ the "I/O" button on a slave display monitor produces the message:

```
COMMAND INVALID
ON SLAVE DISPLAY
```

▶ if the On/Off commands have not been validated (by the after-sales support technicians), pressing the "I/O" button produces the message:

```
COMMAND INVALID
CONFIGURATION
```

## Display for the inverter On/Off commands

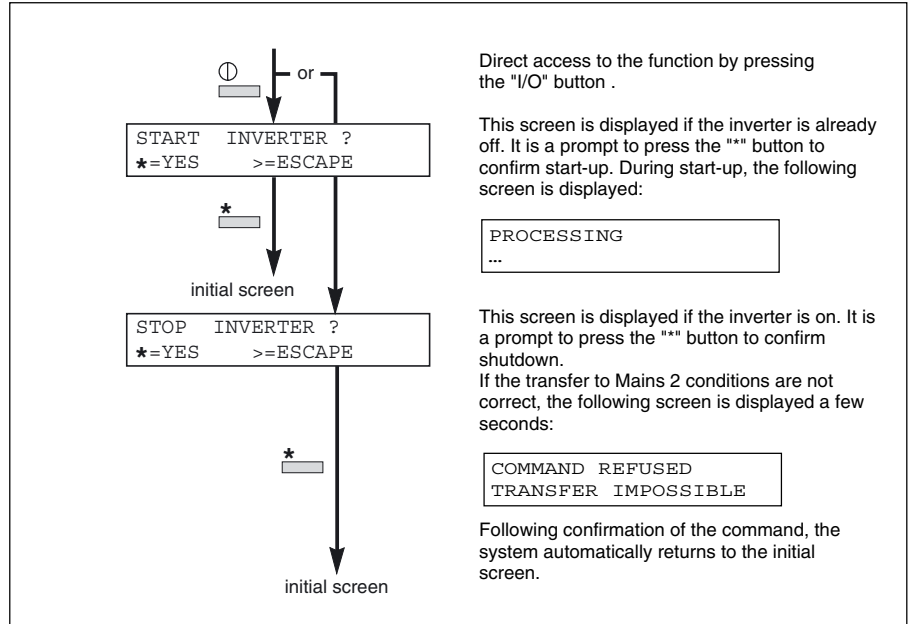


▶ if a "Soft Tunor" session is in progress (initiated by after-sales support technicians), pressing the "I/O" button produces the message:

```
COMMAND INVALID
SOFT TUNOR
```

## Language, display contrast and buzzer volume settings

These settings may be accessed by pressing the "settings" button. The series of screens in the figure opposite is displayed.

## Display of the settings selection screens

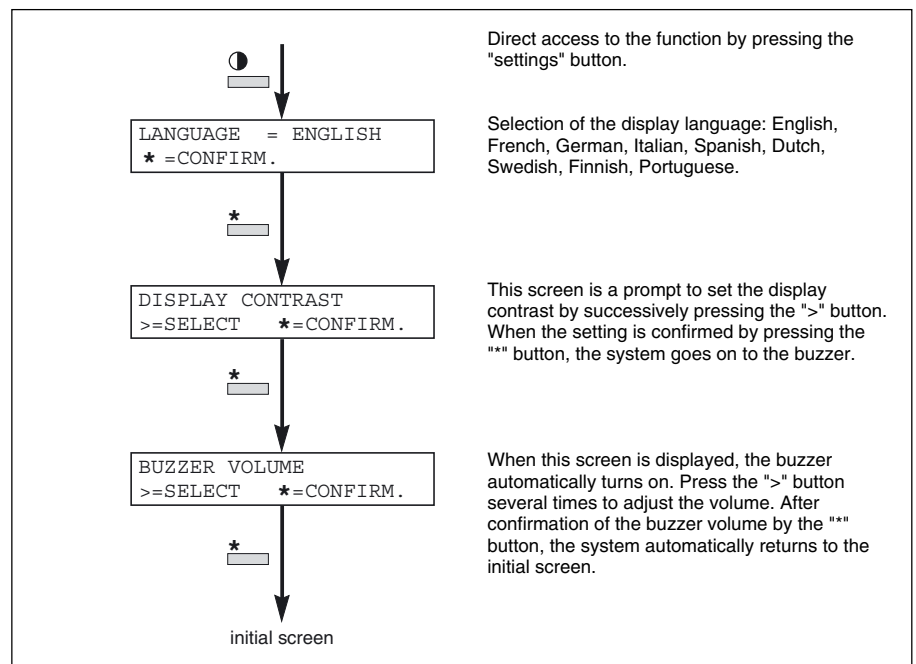

# "Monitor" alphanumeric display (cont.)


## Display system configuration

This function may be accessed from the initial screen. Press the "\*" button, followed by the "V" button in less than one second.


### Note:

- ▶ ensure that two "Monitor" or "Tele Monitor" units do not receive the same number;
- ▶ only one master "Tele Monitor" may be installed on the display network;
- ▶ this function may be accessed only with a password.

## Display system configuration

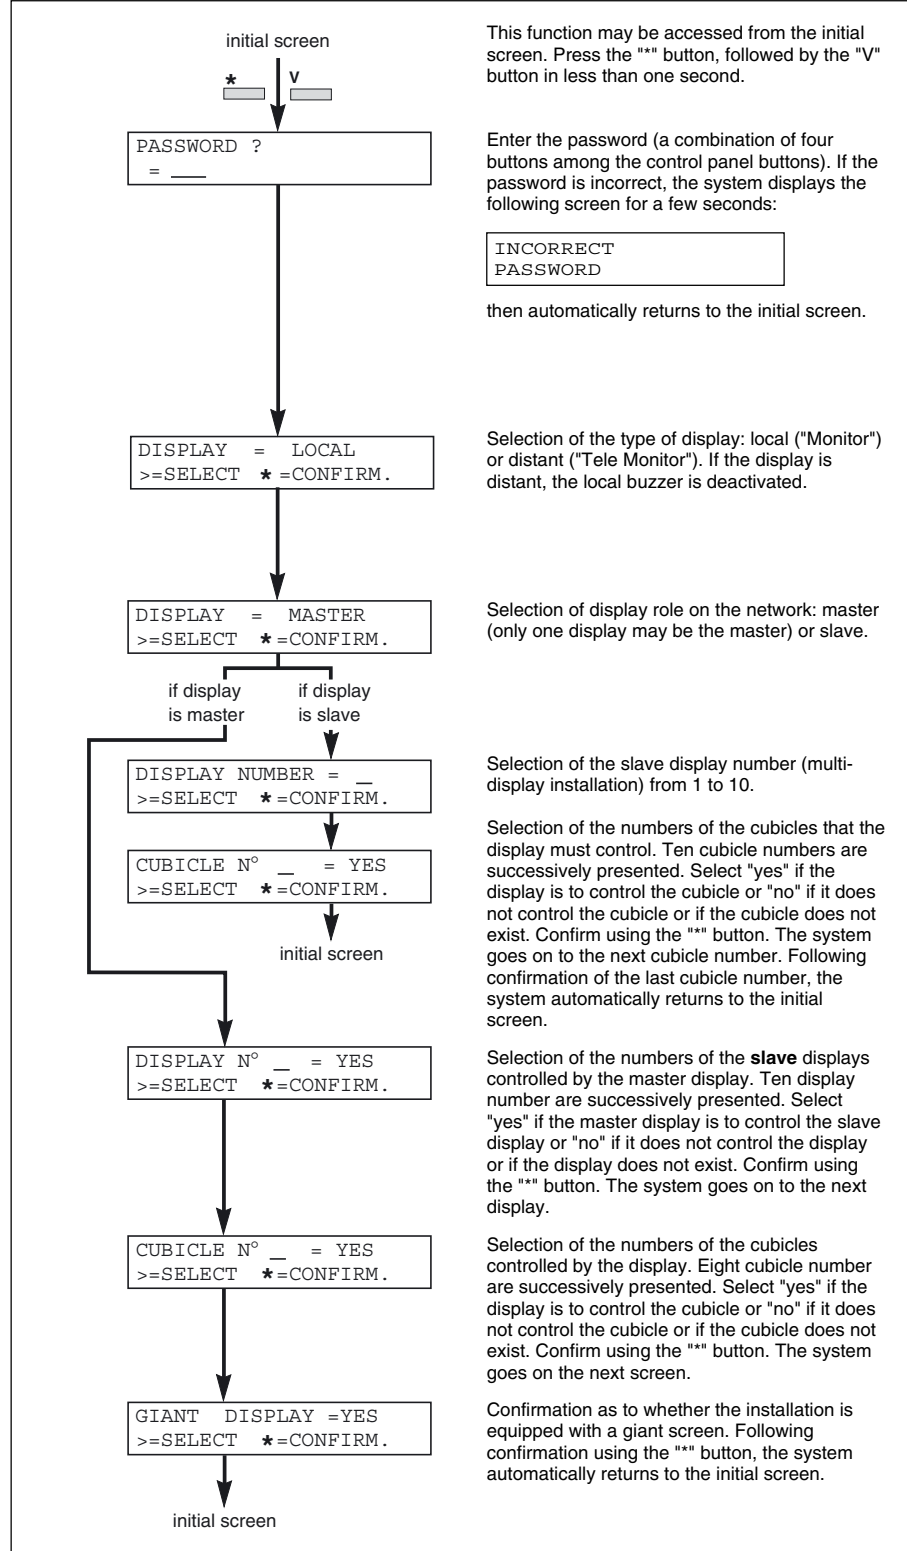

## "LED" signalling box

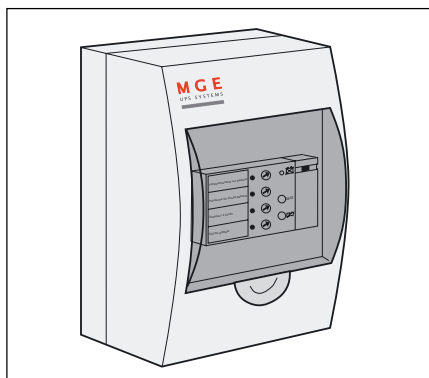


This unit remotes the basic elements of information on system status:

- ▶ load on battery;
- ▶ low battery shutdown warning;
- ▶ inverter stop;
- ▶ general alarm.

Used for basic remote monitoring, it includes a buzzer with a reset button and an indication light test button. It is also equipped with a battery to ensure correct operation in the event of a power supply problem.

## "Media Contacts 15" additional auxiliary transmission

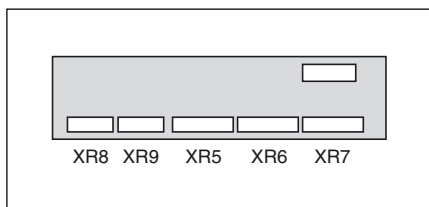


An additional board may be installed on all types of devices for the reception of additional environment information and the transmission of additional information on the device status.

For further details on the information received and transmitted, see the "Environment information" section).

The position of the board is indicated in figures 18, 19, 20, 21 and 23.

## "Tele-Monitor" remote indications unit

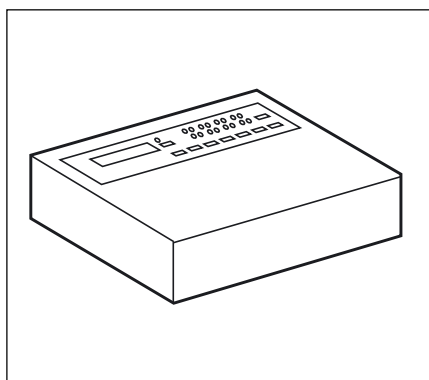

This unit is the remote version of the optional alphanumeric display installed on the UPS or Static Switch Cubicles. It offers the same functions (see the "Monitor alphanumeric display" section).

Two units may be remotely installed, in which case:


- ▶ one unit is the master with all the indications and control functions;
- ▶ the other is the slave with only indications functions.

## "GTC link" communications system

The "GTC link" is a communications system comprising both hardware and software for transmission to a computer system, such as a Building and Energy Management (BEM) system, of information on the **MGE™ Galaxy™ 6000** operating status and reception of the On/off and self-test remote controls.

# Options (cont.)

## "Vision" display

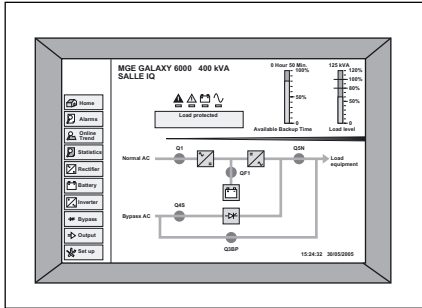


The "Vision" display may be installed in all types of cubicles (UPS or Static Switch Cubicle).

The "Vision" display can operate in two different modes:


- ▶ **mono-cubicle:** the "Vision" display monitors only the cubicle in which it is installed;
- ▶ **multi-cubicle:** "Vision" display can monitor all system cubicles (up to eight maximum). In this mode, the system is equipped with only one "Vision" display which may be installed in any of the cubicles.

## "Remote vision" display

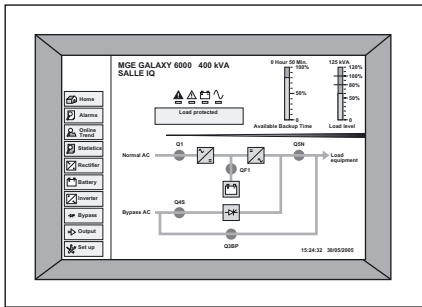


Installed in a special enclosure, the "Remote vision" display provides the user with remote indications on system status.

## Insulating and Mains 1, Mains 2 and load voltage matching transformer

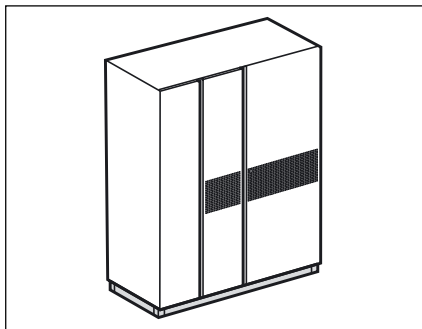

This transformer may be used to match Mains 2 voltage to that of the inverter, to create galvanic insulation between the load and the Mains or to create the appropriate neutral system.

## Harmonics filter and power factor improvement

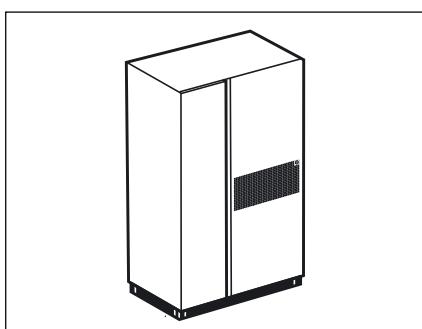


This option, placed on the Mains 1 input upstream from the inverter, reduces the reinjection of harmonic currents into the mains. Harmonic reinjection, produced by the rectifier/charger, increases distortion on the mains. The amount of the increase depends on the source impedance. The reduction in distortion reduces the risk of disturbing other sensitive loads connected to the mains. The filter can also increase the power factor upstream from the inverter.

Three types of filter are available:

- ▶ uncompensated filter for the advantages listed above;
- ▶ compensated filter for the advantages listed above and to limit the capacitive current absorbed by the filter (additional inductance), in the event the UPS is supplied by an engine generator set;
- ▶ phase shift filter, an economical solution to limit the reinjection of harmonics on the mains.




## Double bridge rectifier-charger

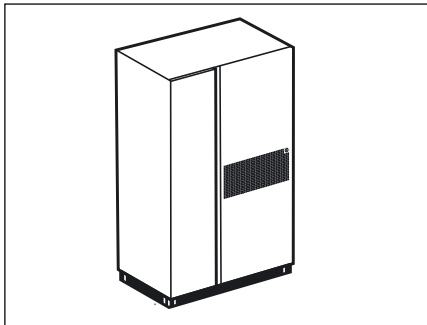

This option reduces the reinjection of harmonic disturbances into Mains 1, but to a lesser extent than the harmonics filter. The double bridge rectifier-charger replaces the **MGE™ Galaxy™ 6000UPS's** standard input rectifier-charger.


## Battery "Temperature Monitor"

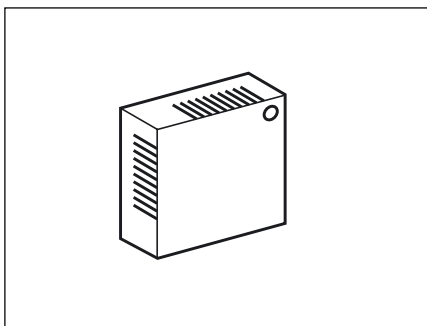

An electronic PC-board measures the battery temperature. The rectifier/charger uses this information to adjust the battery charge current to the temperature in view of:

- ▶ optimizing battery recharge;
- ▶ obtaining maximum battery time;
- ▶ ensuring maximum battery life.

## Empty cubicles

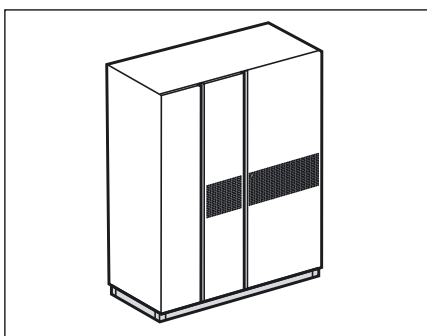

Cubicles may be supplied empty, thus enabling users to make up their own auxiliary cubicles (battery cubicles or other) or panels and meet the particular demands of each installation. In this way, the entire electrical installation will have a uniform appearance.



by **Schneider** Electric

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>