

**RECHARGEABLE
BATTERY**

VBB5058

Rechargeable Battery for the VBP50 and VBP58

A. Instruction

Thank you for purchasing the VBB5058, this battery is designed for use with the Audiovox VBP50 and VBP58 "Portable DVD In Bag". Please read the entire manual prior to operation. The documentation will assist you in recharging the battery properly.

B. Rechargeable Battery Installation and Use

The NiMH battery pack is specially designed for your player, NiMH batteries feature high storage capacity and low level of degradation. This means the NiMH batteries doesn't have "Memory Effect" and thus can be recharged safely regardless of whether the battery is fully or only partially spent. Please fully charge the battery prior to first use.

A full recharge takes approximately five-hours and one full charge can provide power to the player for approximately 3 hours.

NOTE: When the DVD player is used with the battery as a power source, ensure that the battery has been charged for at least Five hours prior to connecting it to the DVD player.

While the battery is recharging, the light next to the DC power input will light up RED. Once fully recharged, the light will turn GREEN. Once the light is GREEN you may remove the wall plug.

C. Precautions related to Battery Recharge

1. Once the battery has been fully dis-charged it should be immediately recharged (regardless of whether you plan to use Battery power again or not) in order to maximize battery life.
2. To charge the battery, connect the power jack directly into the VBP50/VBP58 main unit with the POWER Switch in the OFF position.

D. Using and Maintaining your Rechargeable Batteries

1. Make sure that only the AC transformer included with the Player is used to recharge your batteries.
2. Recharge effectiveness will degrade when environmental temperatures drop below 50oF (10oC) or exceed 95oF (35oC).
3. Remove Battery from the Player and store properly if the player is not to be used for an extended period of time. For periods of two months or

more, recharge the Battery at least once every two months to avoid irreparable damage to the Battery. If the Battery is left attached to the Player for an extended period, recharge the battery at least once every two weeks.

4. Avoid charging fully charged Batteries.
5. Under no circumstances short out the Battery.
6. Do not store the Battery in a metal container, or leave the battery in a humid or damp environment.
7. Store the Battery in an airtight container with desiccant or other dehumidifying agent.

E. Installing the Battery Pack

1. First, make sure the player is in "Stop" mode (OFF) and that the AC power supply has been disconnected.
2. Close the player cover.
3. Align the battery pack with the players front edge.
4. Push the battery towards the rear of the player until it locks into position. The lock position is indicated by a click. The Battery will fit snugly to the player.

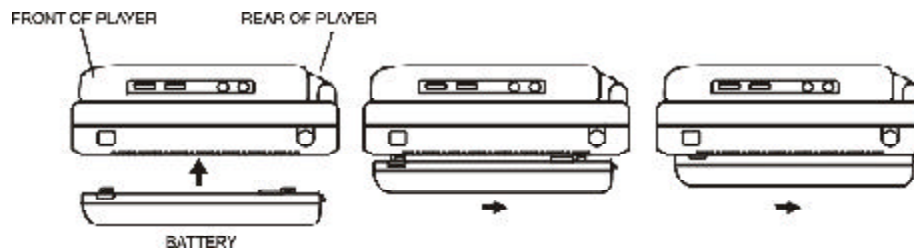


Figure 1. Installing the DVD Player Battery

F. Removing the Battery Pack

1. First, make sure the player is in "Stop" mode and that the AC power supply has been disconnected.
2. Close the player cover.
3. Press and release the latch on the Battery in the of the arrow.
4. Push the Battery toward the front of the player until it disengages.

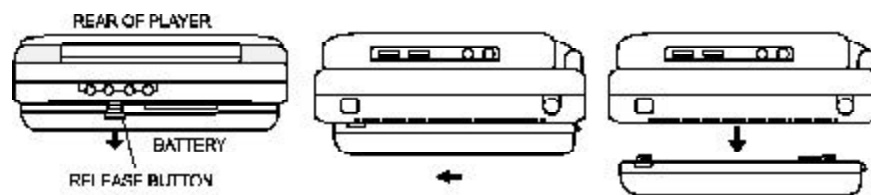


Figure 2. Removing the DVD Player Battery

G. SPECIFICATION

Dimensions (W x H x D): 189 x 21 x 134mm (7.44" x .83" x 5.28")

Battery Type: NiMH

Voltage: 7.2V

Capacity: 3600mAH



AUDIOVOX 12 MONTH LIMITED WARRANTY

Applies to Audiovox Video Products

AUDIOVOX ELECTRONICS CORPORATION (the Company) warrants to the original retail purchaser of this product that should this product or any part thereof, under normal use and conditions, be proven defective in material or workmanship within 12 months from the date of original purchase, such defect(s) will be repaired or replaced with reconditioned product (at the Company's option) without charge for parts and repair labor.

To obtain repair or replacement within the terms of this Warranty, the product is to be delivered with proof of warranty coverage (e.g. dated bill of sale), specification of defect(s), transportation prepaid, to the Company at the address shown below.

This Warranty does not extend to the elimination of externally generated static or noise, to correction of antenna problems, to costs incurred for installation, removal or reinstallation of the product, or to damage to tapes, discs, speakers, accessories, or electrical systems.

This Warranty does not apply to any product or part thereof which, in the opinion of the Company, has suffered or been damaged through alteration, improper installation, mishandling, misuse, neglect, accident, or by removal or defacement of the factory serial number/bar code label(s). THE EXTENT OF THE COMPANY'S LIABILITY UNDER THIS WARRANTY IS LIMITED TO THE REPAIR OR REPLACEMENT PROVIDED ABOVE AND, IN NO EVENT, SHALL THE COMPANY'S LIABILITY EXCEED THE PURCHASE PRICE PAID BY PURCHASER FOR THE PRODUCT.

This Warranty is in lieu of all other express warranties or liabilities. ANY IMPLIED WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY, SHALL BE LIMITED TO THE DURATION OF THIS WRITTEN WARRANTY. ANY ACTION FOR BREACH OF ANY WARRANTY HEREUNDER INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY MUST BE BROUGHT WITHIN A PERIOD OF 30 MONTHS FROM DATE OF ORIGINAL PURCHASE. IN NO CASE SHALL THE COMPANY BE LIABLE FOR ANY CONSEQUENTIAL OR INCIDENTAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED, WHATSOEVER. No person or representative is authorized to assume for the Company any liability other than expressed herein in connection with the sale of this product.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damage so the above limitations or exclusions may not apply to you. This Warranty gives you specific legal rights and you may also have other rights which vary from state to state.

U.S.A. : AUDIOVOX ELECTRONICS CORPORATION
, 150 MARCUS BLVD., HAUPPAUGE, NEW YORK 11788 | 1-800-645-4994

CANADA : CALL 1-800-645-4994 FOR LOCATION OF WARRANTY STATION SERVING YOUR AREA

128-5918B



For Customer Service
Visit Our Website At
www.audiovox.com
Product Information, Photos,
FAQ's Owner's Manuals

© 2003 Audiovox Electronics Corp., 150 Marcus Blvd., Hauppauge, New York. 11788

128-6830

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>