

Canon

Exif Print

Photo All-In-One

PIXMA MP190 series

Quick Start Guide



QT51498V01

Getting Help from Canon

Help Us Help You Better

Before you contact Canon, please record the following information.

Serial Number (located on the inside of the product): _____

Model Number (located on the top of the product): _____

Setup CD-ROM number (located on the CD-ROM): _____

Purchase Date: _____

Customer Technical Support Sequence*

1. Online Support — www.canontechsupport.com

For comprehensive self-help in an interactive environment, the place to start is our helpful tech support Web site. In addition, the latest driver downloads, answers to frequently asked questions, product information, and “where to buy” instructions are found here. For individual attention, try emailing our friendly technical support representatives, trained to communicate quick, easy, and logical solutions within 24 hours.

2. Toll-Free Live Tech Support

This option provides live telephone technical support, free of service charges, Monday-Friday (excluding holidays), during the warranty period. Telephone Device for the Deaf (TDD) support is available at **(1-866-251-3752)**.

For more information and updated program specifics, please visit our web site at **www.canontechsupport.com**.

* Support program specifics are subject to change without notice.

Canon

PIXMA MP190 series

Photo All-In-One

Quick Start Guide

© **CANON INC. 2008**

All rights reserved. No part of this publication may be transmitted or copied in any form whatsoever without the express written permission.

Disclaimer

Canon U.S.A., Inc. has reviewed this manual thoroughly in order that it will be an easy-to-use guide to your Canon PIXMA MP190 series Photo All-In-One. All statements, technical information and recommendations in this manual and in any guides or related documents are believed reliable, but the accuracy and completeness thereof are not guaranteed or warranted, and they are not intended to be, nor should they be understood to be, representation or warranties concerning the products described.

Depending on your application program, operations may differ. For details, refer to the instruction manual of your application. The steps described in this manual are in Windows Vista operating system Ultimate Edition (hereafter referred to as "Windows Vista") and Mac® OS X v.10.4.x.

When Using Mac OS X v.10.5.x

For details on the printer driver functions, refer to the *PC Printing Guide* on-screen manual.

All information regarding non-Canon products was compiled from publicly available information. No representation is made regarding the accuracy thereof.



As an ENERGY STAR® Partner, Canon Inc. has determined that this product meets the ENERGY STAR® guidelines for energy efficiency.

About Consumables

Consumables (ink tanks / FINE Cartridges) are available for 5 years after production has stopped.

Trademarks

- Microsoft is a registered trademark of Microsoft Corporation.
- Windows is a trademark or registered trademark of Microsoft Corporation in the U.S. and/or other countries.
- Windows Vista is a trademark or registered trademark of Microsoft Corporation in the U.S. and/or other countries.
- Macintosh and Mac are trademarks of Apple Inc., registered in the U.S. and other countries.

Table of Contents

Introduction	2	Legal Limitations on Use of Your Product and Use of Images	64
Safety Precautions	3	Users in the U.S.A.	65
Before Using the Machine	6	Index	69
Included Items	6		
Operation Panel.....	7		
Turning the Machine On and Off	9		
Handling the Original Document.....	11		
Loading Printing Paper	12		
Copying	20		
Making Copies	20		
Changing the Copy Settings	21		
Using Useful Copy Function	21		
Printing from Your Computer	22		
Printing with Windows.....	22		
Printing with Macintosh.....	23		
Scanning Images	24		
Scanning Methods	24		
Routine Maintenance	25		
List of Maintenance Codes	25		
When Printing Becomes Faint or Colors Are Incorrect.....	26		
Printing the Nozzle Check Pattern.....	27		
Examining the Nozzle Check Pattern	28		
Print Head Cleaning.....	29		
Print Head Deep Cleaning	30		
Aligning the Print Head.....	31		
Replacing a FINE Cartridge.....	33		
Keeping the Best Printing Results	39		
Cleaning Your Machine	40		
Troubleshooting	43		
An Error Code Is Displayed on the LED	44		
LED Cannot Be Seen At All	46		
Cannot Install the MP Drivers	47		
Cannot Connect to Computer Properly.....	48		
Print Results Not Satisfactory	49		
Print Results Not Satisfactory When Copying.....	52		
Printing Does Not Start	53		
Paper Does Not Feed Properly.....	53		
Paper Jams.....	55		
Message Appears on the Computer Screen	56		
The Document Cover Comes Off	58		
Scanning Problems.....	58		
Appendix	59		
How to Use the Documentation Provided.....	59		
Reading the On-screen Manuals	60		
Solution Menu (Windows Only)	61		
My Printer (Windows Only)	61		
Specifications.....	62		

Introduction

This *Quick Start Guide* uses the following symbols to indicate important information. Always observe the instructions indicated by these symbols.

Warning

Instructions that, if ignored, could result in death or serious personal injury caused by incorrect operation of the equipment. These must be observed for safe operation.

Caution

Instructions that, if ignored, could result in personal injury or material damage caused by incorrect operation of the equipment. These must be observed for safe operation.

Important




Instructions that must be observed for safe operation.


▲ Safety Precautions

Please read the safety warnings and cautions provided in this manual to ensure that you use the machine safely. Do not attempt to use the machine in any way not described in this manual.

▲ Warning




You may cause an electric shock, fire, or damage the machine if you ignore any of these safety precautions.

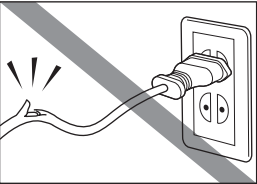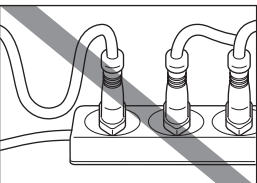
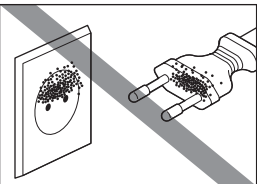
Choosing a location	Do not place the machine close to flammable solvents such as alcohol or thinners.	
Power supply	Never attempt to plug in or unplug the machine from the power supply when your hands are wet.	
	Always push the plug all the way into the power outlet.	
	Never damage, modify, stretch or excessively bend or twist the power cord. Do not place heavy objects on the power cord.	
	Never plug the machine into a power socket that is shared with other equipment (extension lead/cord, 2- or 3-way adapter, etc.).	
	Never use the machine if the power cord is bundled or knotted.	
	If you detect smoke, unusual smells or strange noises around the machine, immediately unplug the machine at the power supply and call for service.	
	Periodically, unplug the machine and use a dry cloth to wipe off any dust or dirt collected on the plug and the power outlet. If the machine is placed at a location exposed to a lot of dust, smoke, or high humidity, the dust collected on the plug absorbs moisture and may cause insulation failure and fire.	
If you hear thunder, disconnect the power supply of the machine and refrain from using it. Leaving the machine plugged in may cause fire, electric shock, or damage to the machine, depending on the thunder storm.		
Use the power cable included with the machine.		

<p>Cleaning the machine</p>	<p>Use a damp cloth to clean the machine. Never use flammable solvents such as alcohol, benzene or thinners. If flammable solvents come in contact with electrical components inside the machine, it could cause a fire or electric shock.</p>	
	<p>Always unplug the machine from the power outlet before cleaning the machine. If you accidentally switch the machine on while cleaning it, you could injure yourself or damage the machine.</p>	
<p>Maintaining the machine</p>	<p>Do not attempt to disassemble or modify the machine. There are no user serviceable parts inside the machine. The machine contains high-voltage components. Never attempt any maintenance procedure not described in this guide.</p>	
<p>Working around the machine</p>	<p>Do not use highly flammable sprays near the machine. This could cause a fire or electric shock if the spray comes into contact with electrical components inside the machine.</p>	

⚠ Caution

You may cause injury or damage the machine if you ignore any of these safety precautions.
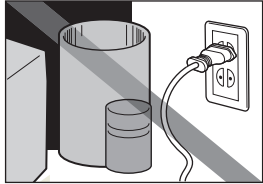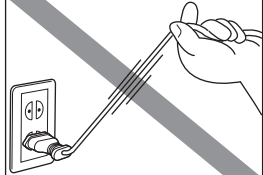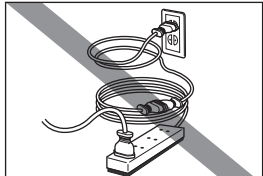
<p>Choosing a location</p>	<p>Do not install the machine in a location that is unstable or subject to excessive vibration. Do not install the machine in locations that are very humid or dusty, in direct sunlight, outdoors, or close to a heating source. To avoid the risk of fire or electric shocks, install the machine in a location with an ambient temperature range of 5°C to 35°C (41°F to 95°F) and humidity of 10% to 90% (condensation free). Do not place the machine on a thick rug or carpet. Do not place the machine with its back attached to the wall.</p>	
<p>Power supply</p>	<p>Ensure that the area around the power outlet is kept clear at all times so you can easily unplug the power plug if necessary.</p>	
	<p>Never remove the plug by pulling on the cord.</p>	
	<p>Do not use an extension lead/cord.</p>	

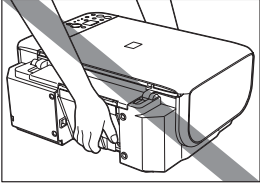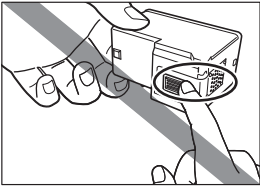Working around the machine	<p>Never put your hands or fingers in the machine while it is printing.</p> <p>When moving the machine, carry the machine at both ends. Do not hold the rear side of the machine.</p> 
	<p>Do not place any object on the machine.</p>
	<p>Do not place metal objects (paper clips, staples, etc.) or containers of flammable solvents (alcohol, thinners, etc.) on top of the machine.</p>
	<p>If any foreign object (metal or liquid) fall into the machine, unplug the power plug and call for service.</p>
	<p>Do not transport or store the machine on a slant, vertically or upside-down, as the ink may leak and damage the machine.</p>
	<p>When loading a thick book on the Platen Glass, do not press hard on the Document Cover. The Platen Glass may break and cause injury.</p>
FINE Cartridges (Ink Cartridges)	<p>Keep FINE Cartridges (Ink Cartridges) out of the reach of children.</p> <p>In case ink is accidentally licked or swallowed, rinse out mouth or give one or two glasses of water to drink. If irritation or discomfort occurs, obtain medical advice immediately.</p>
	<p>In case ink gets in contact with eyes, rinse with water immediately. In case ink gets in contact with skin, wash with soap and water immediately. If irritation to eyes or skin persists, obtain medical advice immediately.</p>
	<p>Do not shake FINE Cartridges (Ink Cartridges). Ink may spill out and stain clothing or the surrounding area.</p>
	<p>Never touch the electrical contacts or Print Head Nozzles on a FINE Cartridge (Ink Cartridge) after printing. The metal parts may be very hot and could cause burns.</p> 
	<p>Do not throw FINE Cartridges (Ink Cartridges) into fire.</p>

Before Using the Machine


Included Items

Check that all the following items are in the box. If anything is missing or damaged, contact your Canon Service representative.

- Machine
- Setup CD-ROM (Includes drivers, applications, and manuals)
- Easy Setup Instructions (Setup Sheet)
- Quick Start Guide
- Canon Black and Color FINE Cartridges
- Power cord
- Additional documents

* A USB cable is necessary to connect the machine with your computer.

Operation Panel

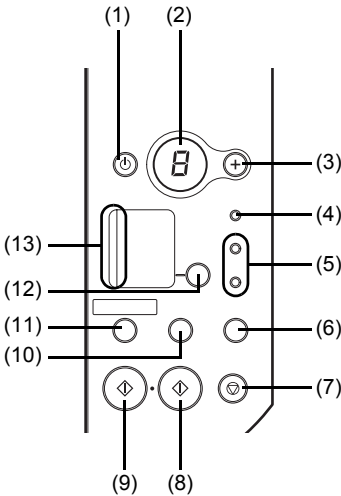

(1) ON button / Power lamp

Turns the machine on and off. Lights or flashes green to indicate the power status. Before turning on the machine, make sure the Document Cover is closed.

Note

Power Lamp and Alarm Lamp

You can check the status of the machine by the **Power** and **Alarm** lamps.

- **Power** lamp Off: The power is off.
- **Power** lamp lit green: The machine is ready to print.
- **Power** lamp flashing green: The machine is initializing or shutting down.
- **Alarm** lamp lit orange: An error has occurred and the machine is not ready to print. For details, see “An Error Code Is Displayed on the LED” on page 44.
- **Power** lamp flashing green once and **Alarm** lamp flashing orange once alternately: An error that requires contacting your Canon Service representative may have occurred. For details, see “Power Lamp Flashes Green and Alarm Lamp Flashes Orange Alternately” on page 46.

(2) LED (Light Emitting Diode)

Displays the number of copies, Maintenance menu selections or the operational status.

(3) [+] button

Increases the number of copies.

(4) Alarm lamp

Lights or flashes orange when an error, such as paper-out or ink-out, occurs.

(5) Black/Color Ink lamps


Lights or flashes to show the ink status.

(6) SCAN button

Opens the MP Navigator EX to scan a document to your computer according to the settings selected. To use this button, the machine must be connected to a computer. For details, refer to the *Scanning Guide* on-screen manual.

(7) Stop/Reset button

Cancels operations or a print job in progress.

- (8) **Color button***
Starts color copying. Also, finalizes your selection for the menu or setting item.
 - (9) **Black button***
Starts black & white copying. Also, finalizes your selection for the menu or setting item.
 - (10)  **(Maintenance) button**
Accesses the Maintenance menu.
 - (11) **Fit to Page button / Fit-to-Page lamp**
Enables/disables the Fit-to-Page copying. Lights when Fit-to-Page copying is enabled.
 - (12) **Paper button**
Switches the page size and media type for copying.
For information on how to switch the page size between A4 and Letter, see “Setting The Default Page Size” on page 21.
 - (13) **Paper lamp**
Displays the selected page size and media type for copying.
- * In the software applications or manuals, the **Black** and **Color** buttons are collectively called the “**Start**” or “**OK**” button.

Turning the Machine On and Off

Turn on the machine before printing.

■ Turning on the Machine

Note

If preparatory operations below are not complete, follow your setup sheet to complete them.

- The FINE Cartridges are installed properly.

If you are using the machine connected to a computer, confirm also the following.

- The machine is connected to your computer.
 - The MP Drivers are installed.
-


1 Press the **ON** button to turn on the machine.

The **Power** lamp flashes and then remains lit green.

Important

If the **Alarm** lamp lights up or flashes orange and an error code is displayed on the LED, see “An Error Code Is Displayed on the LED” on page 44.

2 If you are using the machine connected to a computer, turn on your computer.

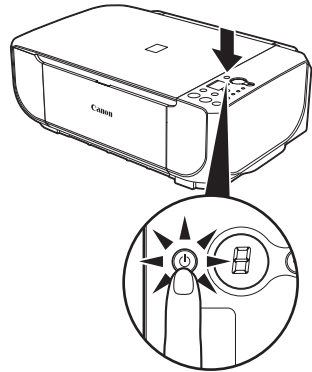

■ Turning off the Machine

1 To turn off the machine, press the **ON** button.

When the **Power** lamp stops flashing, the machine is turned off.

This takes a few seconds or as long as around 30 seconds.


Important

When Turning Off the Machine

Follow the procedure below to turn off the machine.

1. Confirm that the **Power** lamp on the machine has gone out.
2. Unplug the power plug from the wall outlet or switch off the power outlet strip.

When you press the **ON** button to turn off the machine, the machine automatically puts a protective cap on the Print Head to prevent the ink from drying. If you remove the power plug or switch off the power outlet strip before the **Power** lamp goes out, this capping will not be done properly, causing the Print Head to dry and clog.

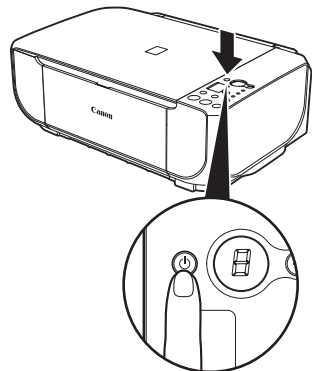

● Screen-saver Mode

The LED goes out if the machine is not operated for about five minutes*.

Perform a print operation to restore the display.

* You cannot change the wait time before the LED goes out.

Note

When you want to restore the display, perform a print operation or press any button except for the **ON** button. When you press the **ON** button while the machine is in Screen-saver mode, the machine turns off.

Handling the Original Document

This section describes how to load the original document on the Platen Glass.

■ Original Document Requirements

The original documents you load on the Platen Glass for copying or scanning must meet these requirements:

Document type	<ul style="list-style-type: none">● Paper documents● Photographs● Books
Size (W x L)	Max. 8.5 x 11.7 inches / 216 x 297 mm
Thickness	Max. 0.6 inches / 15 mm

■ Loading Original Documents

Load originals to copy or scan on the Platen Glass.

Note

Make sure any glue, ink, correction fluid, or the like on the original document is completely dry before loading it on the Platen Glass.


1 Load the original document on the Platen Glass.

(1) Lift the Document Cover.

Note

If the Document Cover comes off, see “The Document Cover Comes Off” on page 58 and attach it.

- (2) Load the original with the side to be copied/ scanned facing down on the Platen Glass. Place the original in landscape orientation and align the upper corner of it with the alignment mark as shown in the figure on the right.

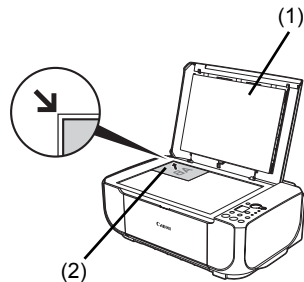


Important

- Do not place any objects weighing more than 4.4 lb / 2 kg on the Platen Glass.
- Do not press or put weight on the original with pressure exceeding 4.4 lb / 2 kg. Doing so may cause the scanner to malfunction or the Platen Glass to break.

Note

The machine cannot scan the shaded area in the figure on the right.

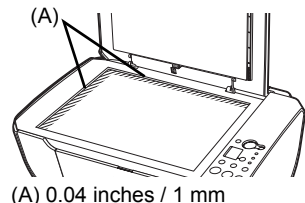

2 Gently close the Document Cover.

Loading Printing Paper

This section describes how to load printing paper in the Rear Tray.

■ Using Specialty Media

Canon recommends that you use Canon genuine media to ensure optimal print quality.

● Photo Quality Media

- Glossy Photo Paper
- Matte Photo Paper
- Photo Paper Plus Glossy
- Photo Paper Plus Glossy II
- Photo Paper Plus Semi-gloss
- Photo Paper Pro
- Photo Paper Pro II
- Photo Stickers



● Media Suited for Business Documents

- High Resolution Paper
- Super White Paper



■ Paper Handling

● Recommended Paper and Requirements

Media Type	Model ^{*1}	Paper Support Load Limit	Paper Output Tray Load Limit	Paper Thickness Lever ^{*2}	Printer Driver Setting for Media Type	
Plain Paper ^{*3}	—	Around 100 sheets	Around 50 sheets	Left	Plain Paper	
Envelopes ^{*4}	—	10 envelopes	^{*6}	Right	Envelope	
High Resolution Paper ^{*4}	HR-101N	80 sheets	50 sheets	Left	High Resolution Paper	
Super White Paper	SW-201	80 sheets	50 sheets	Left	Plain Paper	
Glossy Photo Paper "Everyday Use" ^{*5}	GP-501	A4, Letter, 5" x 7" / 13 x 18 cm, and 8" x 10" / 20 x 25 cm: 10 sheets 4" x 6" / 10 x 15 cm and Wide: 20 sheets	^{*6}	Left	Glossy Photo Paper	
Matte Photo Paper ^{*4}	MP-101			Left	Matte Photo Paper	
Photo Paper Glossy	GP-502			Left	Glossy Photo Paper	
Photo Paper Plus Semi-gloss ^{*5}	SG-201			Left	Photo Paper Plus Semi-gloss	
Photo Paper Pro ^{*4*5}	PR-101			Left	Photo Paper Pro	
Photo Paper Pro II ^{*4*5}	PR-201			Left	Photo Paper Pro II	
Photo Paper Plus Glossy ^{*5}	PP-101			Left	Photo Paper Plus Glossy	
Photo Paper Plus Glossy II ^{*5}	PP-201			Left	Photo Paper Plus Glossy II	
Photo Stickers ^{*4}	PS-101			1 sheet	Left	Glossy Photo Paper
T-Shirt Transfers ^{*4}	TR-301			1 sheet	Right	T-Shirt Transfers

^{*1} Paper with a Model Number is Canon specialty media. Refer to the instruction manual supplied with the paper for detailed information on the printable side and notes on handling paper. For information on the paper sizes available for each Canon genuine paper, visit our website. You may not be able to purchase some Canon genuine papers depending on the country or region of purchase. Paper is not sold in the US by Model Number. Purchase paper by name.

^{*2} If the corners or edges of the paper are smudged, try to print with the Paper Thickness Lever set to the right. It may improve print quality.
Reset the Paper Thickness Lever to the left when you finish printing.
For details on the Paper Thickness Lever, refer to "Front View" in "Main Components" of the *User's Guide* on-screen manual.

^{*3} Proper feeding of paper may not be possible at the maximum capacity depending on the type of paper or environmental conditions (either very high or low temperature and humidity). In such cases, reduce the sheets of paper you load at a time to around half (around 0.2 inches / 5 mm in paper stack height).

^{*4} Available only when printing from your computer.

^{*5} When loading paper in stacks, the print side may be marked as it is fed in or sheets may be stuck to one another causing them not to be fed properly. In this case, load one sheet at a time.

*6 We recommend that you remove the previously printed sheet or envelope from the Paper Output Tray before continuously printing to avoid blurs and discoloration.

Important

- Put unused paper back into the package, and store them avoiding heat, humidity, and direct sunlight.
- Do not touch the printed surface nor stack the printed sheets until the ink is fixed.
- If you select "Photo Paper" when copying, use the following paper types for best printing results: GP-501, GP-502, PP-101, PP-201, SG-201.

Note

For a detailed description of printing media types, refer to "Printing Media" in the *User's Guide* on-screen manual.

● Media Types You Cannot Use


Do not use the following types of paper. Using such paper will not only produce unsatisfactory results, but can also cause the machine to jam or malfunction. Additionally, when printing on A5 or smaller sized paper, do not use paper thinner than a postcard, including plain paper or notepad paper cut to a small size.

- Folded, curled, or wrinkled paper
- Damp paper
- Paper that is too thin (weighing less than 17 lb / 64 gsm)
- Paper that is too thick (plain paper, except for Canon genuine paper, weighing more than 28 lb / 105 gsm)
- Picture postcards
- Postcards affixed with photos or stickers
- Any type of paper with holes
- Paper that is not rectangular
- Paper bound with staples or glue
- Paper with adhesives
- Paper decorated with glitter, etc.

■ Loading Paper

● Important

- You cannot print on postcards affixed with photos or stickers.
- Always load paper in portrait orientation (A). Loading paper in landscape orientation (B) can cause the paper to be jammed.

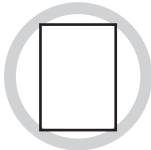

(A)



(B)

📖 Note

- We recommend using genuine Canon photo media when printing photographs. For details on the specialty media Canon provides for use with its various printers, see “Using Specialty Media” on page 12.

When Printing on Plain Paper

- You can use general copy paper or Canon’s Super White Paper. When printing on both sides, we recommend Canon’s Super White Paper Double-Sided.


Paper size:

- Standard sizes: A4, B5, A5, Letter, and Legal
- Non-standard sizes: 2.17 x 3.58 inches to 8.5 x 26.6 inches/55.0 x 91.0 mm to 215.9 x 676.0 mm

Paper weight: 17 to 28 lb / 64 to 105 gsm (non-Canon genuine plain paper)

- 100% recycled paper can be used.
 - If you cut plain paper to 4" x 6" / 10 x 15 cm or 5" x 7" / 13 x 18 cm for a trial print, it can cause paper jams.
-

1 Flatten the four corners of the paper before loading it.

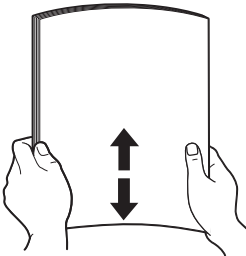

📖 Note


- Align the edges of paper neatly before loading. Loading paper without aligning the edges may cause paper jams.
 - If paper is curled, hold the opposing curled corners and gently bend them in the opposite direction until the paper becomes completely flat. See “Paper is curled.” on page 51.
 - To avoid curling, handle paper as follows.
 - When you do not print, remove unused paper from the Rear Tray, put them back into the package, and keep it on a level surface.
 - Take out only the necessary number of sheets from the package, just before printing.
-

2 Prepare to load paper.

- (1) Open the Paper Support, then pull out the Paper Support Extension.
- (2) Open the Paper Output Tray fully. If it is not opened fully, an error may occur.
- (3) Open the Output Tray Extension.
- (4) Adjust the position of the Paper Thickness Lever.

The Paper Thickness Lever switches the clearance between the Print Head and loaded paper to match the media type.

Set it to the right when printing on envelopes or T-shirt transfers, and left when printing on any other type of paper.

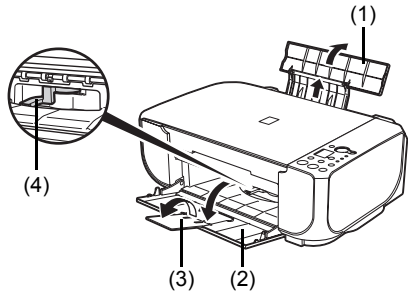


Note

If the corners or edges of the paper are smudged, try to print with the Paper Thickness Lever set to the right. It may improve print quality. Reset the Paper Thickness Lever to the left when you finish printing.

3 Load the paper.

- (1) Load the paper in the Rear Tray with the print side facing UP.
- (2) Align the paper stack against the right side of the Rear Tray.
- (3) Pinch the Paper Guide and slide it against the left side of the paper stack. Do not slide the Paper Guide too strong. Paper may not be fed properly.

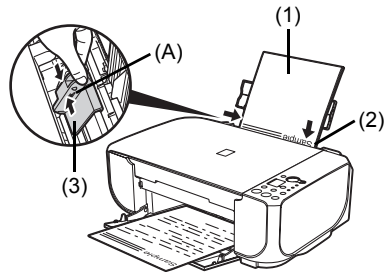

* Do not load higher than the Load Limit Mark (A).

4 Specify the page size and media type settings according to the loaded paper.

Note

- When performing copy direct printing without using a computer, select the size and type of the loaded paper using the Operation Panel. For details on settings, see “Making Copies” on page 20.
- When using the machine connected to a computer, select the size and type of the loaded paper in **Page Size** (or **Paper Size**) and **Media Type** in the printer driver. For details on printer driver settings, see “Printing with Windows” on page 22 or “Printing with Macintosh” on page 23.
- The machine makes a rattling noise when paper is fed. Although it does not indicate machine malfunction, if necessary, you may reduce the noises by specifying the **Quiet Mode** setting in the printer driver. For details, refer to the *PC Printing Guide* on-screen manual for the printer driver settings.

■ Loading Envelopes

Use either European DL or US Comm. Env. #10-sized envelope.


With proper printer driver settings, the address will be printed according to the direction of envelope.

🚫 Important


- You need to print from the computer to print on envelopes.
 - Do not use the following envelopes:
 - Envelopes with a double flap (or sticker flaps)
 - Envelopes with an embossed or treated surface
 - Envelopes with pressure seals
 - Envelopes whose gummed flaps are already moistened and adhesive
-

1 Prepare the envelopes.


- Press down on all four corners and edges of the envelopes to flatten them.

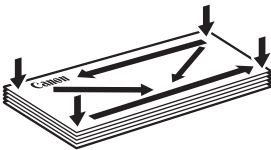

- If the envelopes are curled, hold the opposite corners and gently twist them in the opposite direction.

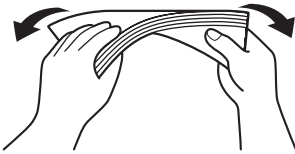

- If the corner of the envelope flap is folded, flatten it.
- If the leading edge of an envelope is puffed up or curled, use a pen to press the envelope flat and sharpen the crease. Press the envelope flat, working from the middle to the edge.




- * The above illustrations show a side view of the leading edge of the envelope.

🚫 Important

The envelopes may jam in the machine if they are not flat or the edges are not aligned. Make sure that no curl or puff exceeds 0.1 inches / 3 mm.

2 Load the envelopes.

- (1) Load the envelope against the right side of the Rear Tray.
Load with the address side facing UP and the rear flaps DOWN on the left.
Up to 10 envelopes can be loaded at once.
- (2) Pinch the Paper Guide and slide it against the left side of the envelope.
Do not slide the Paper Guide too strong.
Envelopes may not be fed properly.

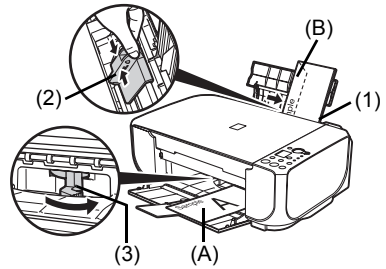

- (A) Printing orientation
(B) Make sure the flaps are folded.

- (3) Set the Paper Thickness Lever to the right.
Reset the Paper Thickness Lever to the left when you finish printing.

3 Specify the settings in the printer driver.

- (1) Select **Envelope** in **Media Type**.
- (2) Select the size for envelopes.
In Windows®, select **DL Env.** or **Comm. Env. #10** in **Page Size**.
In Macintosh®, select **DL Envelope** or **#10 Envelope** in **Paper Size**.
- (3) Select **Landscape** in **Orientation**.

Important

Be sure to set the printer driver setting properly. If you do not, the address will be printed in the wrong direction.

Note


For details on printer driver settings, see "Printing with Windows" on page 22 or "Printing with Macintosh" on page 23.

■ Loading Small-Sized Paper

You can use 4" x 6" / 10 x 15 cm and 5" x 7" / 13 x 18 cm-sized papers.

● Important

Always load paper in portrait orientation (A). Loading paper in landscape orientation (B) can cause the paper to be jammed.

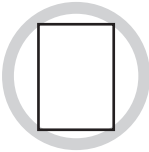


(A)



(B)

1 Load the paper.

- (1) Load the small-sized paper against the right side of the Rear Tray with the print side facing UP.
- (2) Pinch the Paper Guide and slide it against the left side of the paper stack.
Do not slide the Paper Guide too strong.
Paper may not be fed properly.
- (3) Set the Paper Thickness Lever to the left.

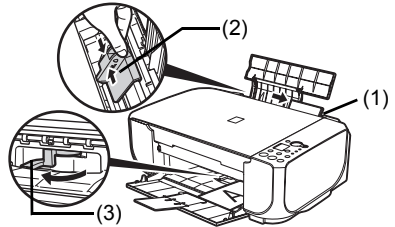

2 Specify the page size and media type settings according to the loaded paper.

📖 Note


- When performing copy direct printing without using a computer, select the size and type of the loaded paper using the Operation Panel.
For details on settings, see "Making Copies" on page 20.
- When using the machine connected to a computer, select the size and type of the loaded paper in **Page Size** (or **Paper Size**) and **Media Type** in the printer driver.
For details on printer driver settings, see "Printing with Windows" on page 22 or "Printing with Macintosh" on page 23.

Copying

Making Copies

This section describes the basic procedure to make copies.


- 1** Turn on the machine.
See "Turning the Machine On and Off" on page 9.
- 2** Load paper.
See "Loading Printing Paper" on page 12.
- 3** Load the original on the Platen Glass (A).
See "Loading Original Documents" on page 11.

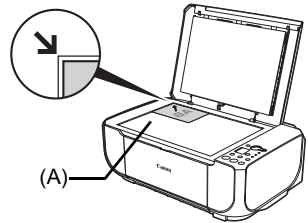

- 4** Specify the copy settings.
 - (1)** Press the **+** button repeatedly to specify the number of copies (max. 20 copies).

 **Note**

By pressing the **+** button repeatedly, **F** will be displayed on the LED. The number of copies will be set as 20.



- (2)** Press the **Paper** button repeatedly to specify the page size and media type.
The **Paper** lamp indicates the selected page size and media type.
A4 or Letter Plain Paper / A4 or Letter Photo Paper / 4" x 6" Photo Paper

- 5** Press the **Color** button for color copying, or the **Black** button for black & white copying.

 **Note**


The machine makes a rattling noise when paper is fed. Although it does not indicate machine malfunction, if necessary, you may reduce the noises by specifying the **Quiet Mode** setting in the printer driver. For details, refer to the *PC Printing Guide* on-screen manual for the printer driver settings.

Changing the Copy Settings

■ Setting The Default Page Size

You can switch the size of paper loaded in the Rear Tray between A4 and Letter.

- 1 Press the **Maintenance** button repeatedly until **d** appears.




- 2 Press the **Black** button to select A4, or the **Color** button to select Letter.

Using Useful Copy Function

For details, refer to “Fit-to-Page Copying” in “Making Copies” of the *User’s Guide* on-screen manual.

Fit-to-Page Copying

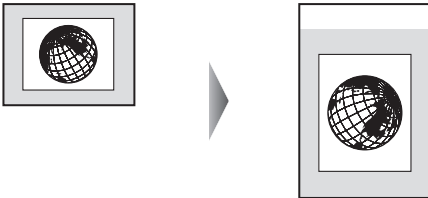


Printing from Your Computer

This section describes procedure for basic printing.

Printing with Windows


- 1 Turn on the machine and load the paper in the machine.
See “Turning the Machine On and Off” on page 9 and “Loading Printing Paper” on page 12.
- 2 Create a document or open a file to print using an appropriate application software.
- 3 Select **Print** on the application software’s **File** menu.
- 4 Make sure that your machine’s name is selected in **Select Printer**, and click **Preferences** (or **Properties**).

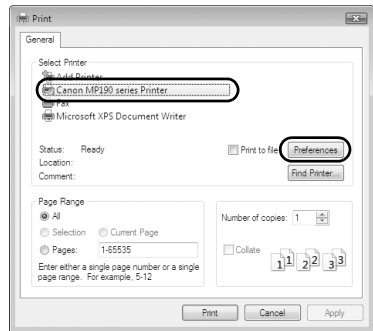

- 5 Specify the required settings and click **OK**.

Note

For details on the printer driver functions, click **Help** or **Instructions** to view the online help or the *PC Printing Guide* on-screen manual. **Instructions** is only displayed when the on-screen manuals are installed.

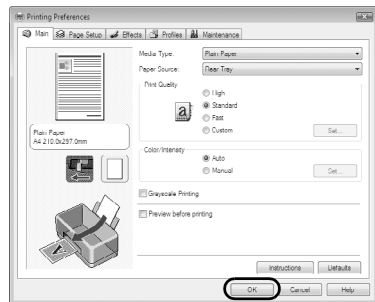

- 6 Click **Print** (or **OK**).

Note

- The machine makes a rattling noise when paper is fed. Although it does not indicate machine malfunction, if necessary, you may reduce the noises by specifying the **Quiet Mode** setting in the printer driver. For details, refer to the *PC Printing Guide* on-screen manual for the printer driver settings.
- If straight lines are misaligned or print quality is not satisfactory after installing the MP Drivers, you may need to align the Print Head. Refer to “Aligning Print Head on the Computer” in the *User’s Guide* on-screen manual.

Printing with Macintosh


Note

When Using Mac OS X v.10.5.x

For details on how to use the machine on Mac OS X v.10.5.x, refer to the *PC Printing Guide* on-screen manual.

- 1 Turn on the machine and load the paper in the machine.
See “Turning the Machine On and Off” on page 9 and “Loading Printing Paper” on page 12.
- 2 Create a document or open a file to print using an appropriate application software.
- 3 Select **Page Setup** on the application software’s **File** menu.

- 4 Make sure that your machine’s name is selected in **Format for**.
- 5 Select the page size of the loaded paper in **Paper Size**.

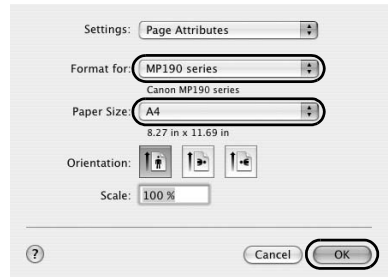


- 6 Click **OK**.



- 7 Select **Print** on the application software’s **File** menu.

- 8 Select **Quality & Media** in the pop-up menu.

- 9 Specify the required settings.

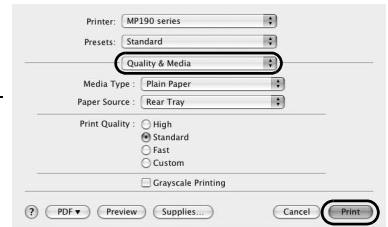

Note

For details on the printer driver functions, click  to view the *PC Printing Guide* on-screen manual. If the on-screen manuals are not installed, the *PC Printing Guide* on-screen manual is not displayed even if  is clicked.

- 10 Click **Print**.

Note

- The machine makes a rattling noise when paper is fed. Although it does not indicate machine malfunction, if necessary, you may reduce the noises by specifying the **Quiet Mode** setting in the printer driver. For details, refer to the *PC Printing Guide* on-screen manual for the printer driver settings.
- If straight lines are misaligned or print quality is not satisfactory after installing the MP Drivers, you may need to align the Print Head. Refer to “Aligning Print Head on the Computer” in the *User’s Guide* on-screen manual.

Scanning Images

You can scan images from the machine to a computer without printing them and save them in popular image types such as JPEG, TIFF, bitmaps, or PDF. If you are scanning printed text, you can use the OCR (Optical Character Recognition) software to convert it to text data.

Scanning Methods

You can select from the various scanning methods.

● If You Want to Edit or Print the Scanned Images with MP Navigator EX

MP Navigator EX enables you to edit the scanned images, such as optimizing or trimming.

You can also start application software from MP Navigator EX to edit or print the scanned images.

For detailed operations of MP Navigator EX, refer to the *Scanning Guide* on-screen manual.

You can also use the Operation Panel to open MP Navigator EX as well as open it using the computer.

See "Opening MP Navigator EX Using the Operation Panel" on page 24.

● If You Want to Scan Originals with Advanced Settings with ScanGear

ScanGear enables you to scan originals with advanced settings such as the resolution.

For detailed operations of ScanGear, refer to the *Scanning Guide* on-screen manual.

Besides the above-mentioned methods, you can use a TWAIN- or WIA- (Windows Vista and Windows XP only) compliant application software and the Control Panel (Windows Vista and Windows XP only) to scan originals with this machine. For detailed operations, refer to the *Scanning Guide* on-screen manual.

■ Opening MP Navigator EX Using the Operation Panel

1 (Macintosh only) Prepare your computer before scanning.

This operation is not necessary for Mac OS X v.10.4.x. For details, refer to "Scanning Methods" in the *User's Guide* on-screen manual.

2 Turn on the machine.

See "Turning the Machine On and Off" on page 9.

3 Load the original document on the Platen Glass.

See "Handling the Original Document" on page 11.

4 Press the **SCAN** button.

The MP Navigator EX opens.









5 Scan documents with MP Navigator EX.

For detailed operations of MP Navigator EX, refer to the *Scanning Guide* on-screen manual.

Routine Maintenance

List of Maintenance Codes

To perform maintenance of the machine, press the **Maintenance** button repeatedly until the desired code is displayed on the LED, then press the **Black** or **Color** button.

Maintenance Code	Operation	See
	Prints the nozzle check pattern.	"Printing the Nozzle Check Pattern" on page 27
	Performs Print Head Cleaning.	"Print Head Cleaning" on page 29
	Performs Print Head Deep Cleaning.	"Print Head Deep Cleaning" on page 30
	Prints the head alignment sheet.	"Aligning the Print Head" on page 31
	Scans the head alignment sheet.	"Aligning the Print Head" on page 31
	Prints the current head alignment setting.	"Aligning the Print Head" on page 31
	Cleans the paper feed roller.	"Cleaning the Paper Feed Roller (Roller Cleaning)" on page 41
	Cleans the bottom plate.	"Cleaning the Inside of the Machine (Bottom Plate Cleaning)" on page 41

When Printing Becomes Faint or Colors Are Incorrect

When printing becomes faint or colors are incorrect, the print head nozzles on FINE Cartridges are probably clogged. Print the nozzle check pattern to confirm the condition of the nozzles and then perform Print Head Cleaning.

If print results are not satisfactory, performing Print Head Alignment may improve print quality.

Note

Before Performing Maintenance

- Make sure that a FINE Cartridge has not run out of ink. See “Getting the Ink Status Information” on page 33.
 - Make sure that a FINE Cartridge is installed properly. See “Replacing FINE Cartridges” on page 36.
 - Make sure that the orange protective tape is removed from the bottom of a FINE Cartridge.
 - If the error code is displayed on the LED, see “An Error Code Is Displayed on the LED” on page 44.
 - Increase the **Print Quality** setting in the printer driver settings.
See “Print Results Not Satisfactory” on page 49.
-

Step 1

See “Printing the Nozzle Check Pattern” on page 27.

If lines are missing or if white streaks appear



Step 2

See “Print Head Cleaning” on page 29.

If the problem is not resolved after performing
Print Head Cleaning twice



Step 3

See “Print Head Deep Cleaning” on page 30.

If the problem is not resolved after performing
Print Head Deep Cleaning twice



Step 4

See “Replacing a FINE Cartridge” on page 33.



After cleaning the Print Head, print and examine the nozzle check pattern.

Note


- If the straight line is misaligned or the Print Head position is misaligned, align the Print Head position. See “Aligning the Print Head” on page 31.
 - You can also perform the maintenance operation from your computer. For details, refer to the *PC Printing Guide* on-screen manual.
-

Printing the Nozzle Check Pattern

Print the nozzle check pattern to determine whether the ink ejects properly from the print head nozzles.

- 1** Make sure that the machine is turned on, then load a sheet of A4 or Letter-sized plain paper in the Rear Tray.
- 2** Open the Paper Output Tray, then open the Output Tray Extension.
Set the Paper Thickness Lever to the left. For details on the Paper Thickness Lever, refer to “Front View” in “Main Components” of the *User’s Guide* on-screen manual.
- 3** Print the nozzle check pattern.

(1) Press the **Maintenance** button repeatedly until **A** appears.



(2) Press the **Black** or **Color** button.
The machine prints a nozzle check pattern.

- 4** Examine the pattern and take the appropriate action.
See “Examining the Nozzle Check Pattern” on page 28.

Examining the Nozzle Check Pattern


Examine the nozzle check pattern, and perform cleaning if necessary.

Note


The nozzle check pattern will not be printed correctly if there is not enough ink. Replace the FINE Cartridge if the remaining amount of ink is insufficient.

See "Replacing a FINE Cartridge" on page 33.

- 1 Check the nozzle check pattern you printed.

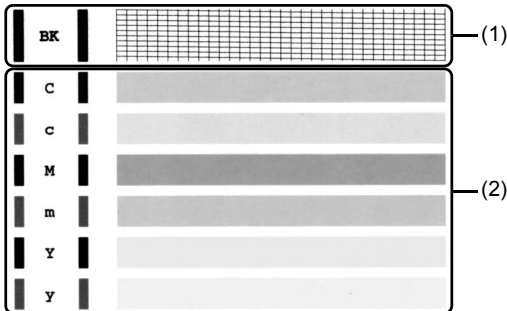

- (1) If lines of this pattern are missing, the print head nozzles need cleaning.
Example: When lines are missing (Black ink)



- (2) If these patterns have white streaks, the print head nozzles need cleaning.
Example: When white streaks appear (Color ink)



- 2 When cleaning is necessary, perform Print Head Cleaning.

See "Print Head Cleaning" on page 29.

Print Head Cleaning

Clean the Print Head if lines are missing or if white streaks appear in the printed nozzle check pattern. Cleaning unclogs the nozzles and restores the print head condition. Note that cleaning the Print Head causes used ink to be absorbed in the ink absorber. Cleaning the Print Head consumes ink, so perform Print Head Cleaning only when necessary.

- 1** Make sure that the machine is turned on.
- 2** Start Print Head Cleaning.
 - (1) Press the **Maintenance** button repeatedly until **H** appears.



- (2) Press the **Black** or **Color** button.
Print Head Cleaning starts.

Do not perform any other operations until Print Head Cleaning finishes. This takes about one minute.

- 3** Confirm the condition of the Print Head.

When Print Head Cleaning finishes, the LED returns to the standby mode.

Print the nozzle check pattern to check the print head condition.

See "Printing the Nozzle Check Pattern" on page 27.

Note

If the problem is not resolved after performing Print Head Cleaning twice, try Print Head Deep Cleaning. See "Print Head Deep Cleaning" on page 30.

Print Head Deep Cleaning

If print quality does not improve by standard Print Head Cleaning, try Print Head Deep Cleaning, which is a more powerful process. Note that cleaning the Print Head causes used ink to be absorbed in the ink absorber. Print Head Deep Cleaning consumes more ink than standard Print Head Cleaning, so perform this procedure only when necessary.

- 1** Make sure that the machine is turned on.
- 2** Start Print Head Deep Cleaning.
 - (1) Press the **Maintenance** button repeatedly until **y** appears.



- (2) Press the **Black** or **Color** button.
Print Head Deep Cleaning starts.
Do not perform any other operations until Print Head Deep Cleaning finishes. This takes about two minutes.


- 3** Confirm the condition of the Print Head.
 - (1) Print the nozzle check pattern to check the print head condition.
See "Printing the Nozzle Check Pattern" on page 27.
 - (2) If the problem is not resolved, perform Print Head Deep Cleaning again.
 - (3) If this does not solve the problem, a FINE Cartridge may have run out of ink. Replace it with a new one. See "Replacing a FINE Cartridge" on page 33.

Aligning the Print Head

If ruled lines are printed misaligned or print results are otherwise unsatisfactory, adjust the print head position.


- 1 Make sure that the machine is turned on, then load a sheet of A4 or Letter-sized plain paper in the Rear Tray.
- 2 Open the Paper Output Tray, then open the Output Tray Extension.
Set the Paper Thickness Lever to the left. For details on the Paper Thickness Lever, refer to "Front View" in "Main Components" of the *User's Guide* on-screen manual.
- 3 Print the Print Head Alignment Sheet.

(1) Press the **Maintenance** button repeatedly until **P** appears.



Note


If you select **L**, the machine exits the process after printing the current head position adjustment values.



(2) Press the **Black** or **Color** button.
The Print Head Alignment Sheet is printed.

4 Adjust the print head position.

(1) Check the printed patterns and fill in the corresponding circle (○) with a dark pencil or a black ink pen to select the number of the pattern in column A that has the least noticeable streaks.

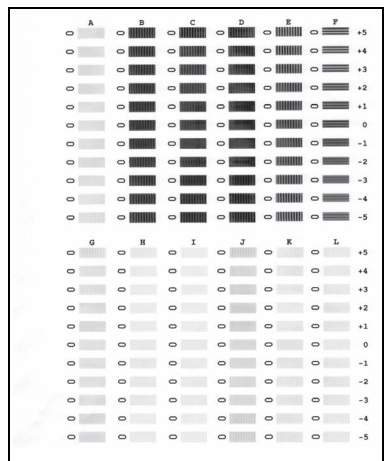

 **Note**

If it is difficult to pick the best pattern, pick the setting that produces the least noticeable white streaks.



(A)



(B)




(C)




(D)

- (A) Less noticeable vertical white streaks
 - (B) More noticeable vertical white streaks
 - (C) Less noticeable horizontal white streaks
 - (D) More noticeable horizontal white streaks
-

- (2) Repeat the procedure until you finish selecting the pattern number for column L.
- (3) Place the Print Head Alignment Sheet face-down on the Platen Glass. When placing the Print Head Alignment Sheet, place the front side down and align the upper left corner of it with the alignment mark as shown in the figure below.

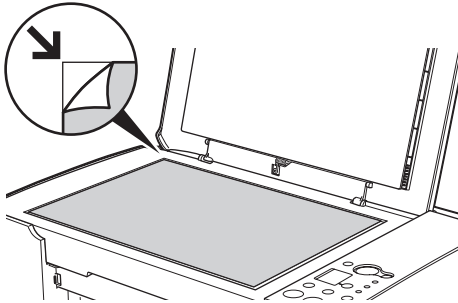

- (4) Make sure that **U** is displayed on the LED, then press the **Black** or **Color** button. The Print Head Alignment Sheet is scanned and the print head is aligned automatically.



 **Note**

- If adjustment is not done successfully, the error code is displayed on the LED. In this case, start over from step 1 to print a new Print Head Alignment Sheet. For details, see “An Error Code Is Displayed on the LED” on page 44.
 - If the results of Print Head Alignment on the machine are not satisfactory, perform Print Head Alignment on the computer. For details, refer to “Aligning Print Head on the Computer” in the *User’s Guide* on-screen manual.
 - To adjust columns M to R, you need to perform the print head alignment on your computer. For details, refer to “Aligning Print Head on the Computer” in the *User’s Guide* on-screen manual.
-

Replacing a FINE Cartridge

This section explains the way to confirm the ink status and the procedure to replace FINE Cartridges.

When ink runs out or other errors occur, an error code is displayed on the LED to inform you of the error. See “An Error Code Is Displayed on the LED” on page 44 and confirm how to handle it.

When printing from your computer, error messages appear on your computer screen as well.

Note

- If there is no improvement with the quality of printing following such maintenance as Print Head Cleaning, a FINE Cartridge is probably empty. When ink runs out, replace the FINE Cartridge. The machine cannot print if the wrong type of FINE Cartridge is used.
 - For information on the compatible FINE Cartridges, see the back cover of this guide.
-

■ Getting the Ink Status Information

You can confirm the status of FINE Cartridges in the following ways:


- “With the Ink Lamps” on page 33
 - “With the Computer Screen” on page 34
-

Note




The ink level detector is mounted on the machine to detect the remaining ink level. The machine considers as ink is full when a new FINE Cartridge is installed, and then starts to detect a remaining ink level. If you install a used FINE Cartridge, the indicated ink level of it may not be correct. In such case, refer to the ink level information only as a guide.

● With the Ink Lamps

Make sure that the LED is on the standby mode. You can confirm the status of each cartridge by the ink lamps.

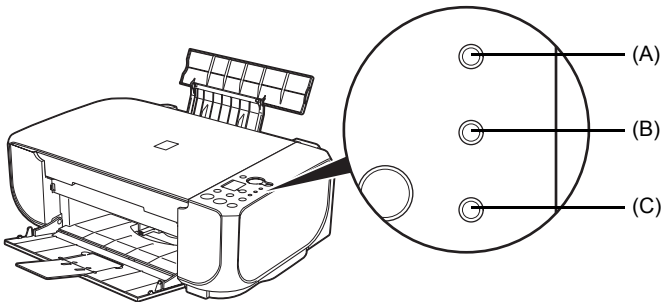


- (A) **Alarm** lamp
- (B) **Black Ink** lamp
- (C) **Color Ink** lamp

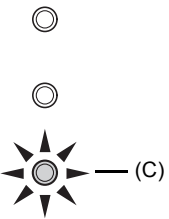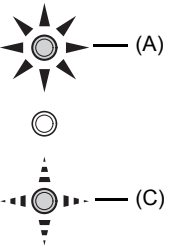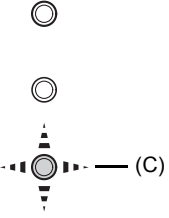

 <p>(C) The Ink lamp lights.</p>	<p>Ink is low. You can continue printing for a while, but we recommend you to have a new FINE Cartridge available.</p> <p>* The diagram on the left indicates the status of the Color FINE Cartridge as an example.</p>
 <p>(A) The Alarm lamp lights. (C) The Ink lamp flashes.</p>	<ul style="list-style-type: none"> • If “E, 1, 6” is displayed on the LED, ink has run out. See “E, 1, 6” (Ink has run out.) in “An Error Code Is Displayed on the LED” on page 44 and take appropriate action. • If “E, 1, 3” is displayed on the LED, ink may have run out. See “E, 1, 3” (Ink level cannot be detected.) in “An Error Code Is Displayed on the LED” on page 44 and take appropriate action. <p>* The diagram on the left indicates the status of the Color FINE Cartridge as an example.</p>
 <p>(C) The Ink lamp flashes.</p>	<p>The function for detecting the remaining ink level is disabled.</p> <p>* The diagram on the left indicates the status of the Color FINE Cartridge as an example.</p>

● **With the Computer Screen**

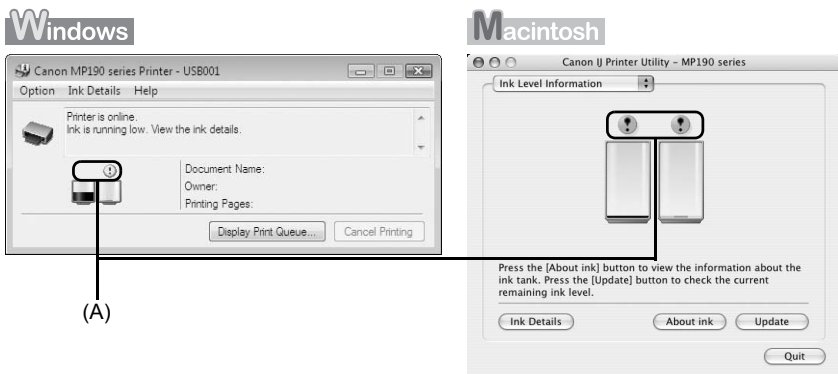You can confirm the status of each FINE Cartridge on the printer status monitor (Windows) and Canon IJ Printer Utility (Macintosh).



(A) Confirm whether any symbols are displayed here.

-  Ink is low. You can continue printing for a while, but we recommend you to have a new FINE Cartridge available.
-  Ink has run out. See “E, 1, 6” (Ink has run out.) in “An Error Code Is Displayed on the LED” on page 44 and take appropriate action.

 **Note**

Message may be displayed during printing. Confirm the displayed message and take appropriate action.

Follow the procedure below to open each of the confirmation screens.

Windows

- 1** Open the printer properties dialog box.
Refer to “Opening the Printer Properties Dialog Box Directly from Control Panel” in “Opening the Printer Properties Dialog Box (Windows)” of the *User’s Guide* on-screen manual.
- 2** Click **View Printer Status** on the **Maintenance** sheet.
To confirm the FINE Cartridge information, click the **Ink Details** menu.

 **Note**

You can also display the printer status monitor by clicking **Canon XXX Printer** (where “XXX” is your machine’s name) which appears on the taskbar during printing.

Macintosh

- 1** Open the **Canon IJ Printer Utility**.
Refer to “Opening the Canon IJ Printer Utility (Macintosh)” in the *User’s Guide* on-screen manual.
- 2** Select **Ink Level Information** in the pop-up menu.
To confirm the FINE Cartridge information, click **Ink Details**.


■ Replacing FINE Cartridges

When FINE Cartridges run out of ink, replace them using the following steps.

Important

Handling FINE Cartridges

- Do not touch the electrical contacts or Print Head Nozzles on a FINE Cartridge. The machine may not print out properly if you touch it.

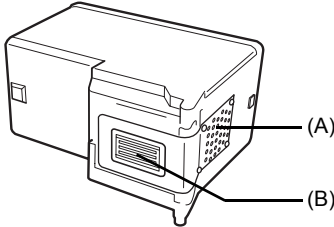

(A) Electrical Contacts


(B) Print Head Nozzles

- To maintain optimal printing quality, we recommend the use of specified Canon brand FINE Cartridges.
Refilling ink is not recommended.
- Once you remove a FINE Cartridge, replace it immediately. Do not leave the machine with FINE Cartridges removed.
- Replace empty cartridges with new ones. If you insert FINE Cartridges that has been removed once, the machine may not print out properly due to some reasons such as clogging of the nozzles.
Furthermore, with such cartridges, the Low Ink Warning may not be displayed properly.
- Once a FINE Cartridge has been installed, do not remove it from the machine and leave it out in the open. This will cause the FINE Cartridge to dry out, and the machine may not operate properly when it is reinstalled. To maintain optimal printing quality, use a FINE Cartridge within six months of first use.

Note

- If a FINE Cartridge runs out of ink, you can print with either Color or Black FINE Cartridge, in whichever ink remains, only for a while. However the print quality may be reduced compared to when printing with both cartridges. Canon recommends to use new FINE cartridges in order to obtain optimum qualities.
Even when printing with one ink only, print with leaving the empty FINE Cartridge installed. If either of the Color FINE Cartridge or Black FINE Cartridge is not installed, an error occurs and the machine cannot print.
For information on how to configure this setting, refer to the *PC Printing Guide* on-screen manual.
- Color ink may be consumed even when printing a black-and-white document or when black-and-white printing is specified.
Color ink is also consumed in Print Head Cleaning and Print Head Deep Cleaning, which may be necessary to maintain the machine's performance.

- 1 Open the Paper Output Tray.
- 2 Make sure that the machine is turned on, lift the Scanning Unit (Cover), then pull the Scanning Unit Support (A) down into place.
The FINE Cartridge Holder moves to the left.

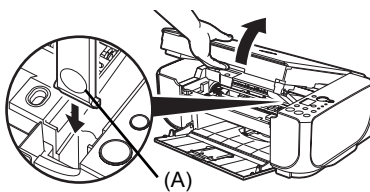

⚠ Caution


- Do not hold the FINE Cartridge Holder to stop or move it.
- Do not touch the metallic parts or other parts inside the machine.

🚫 Important

If the Scanning Unit (Cover) is left open for more than 10 minutes, the FINE Cartridge Holder moves to the right. Close and reopen the Scanning Unit (Cover) to return the holder to the left.

- 3 Remove the empty FINE Cartridge.


(1) Push down the FINE Cartridge.

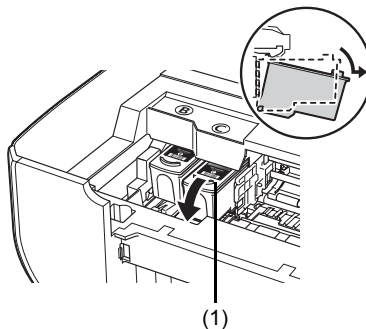

(2) Remove the FINE Cartridge.

🚫 Important

- Handle FINE Cartridges carefully to avoid staining clothing or the surrounding area.
 - Discard empty FINE Cartridges according to the local laws and regulations regarding disposal of consumables.
-

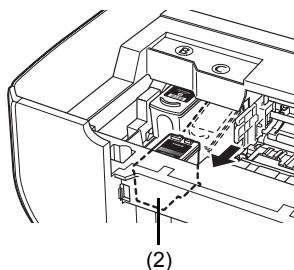


4 Prepare the replacement FINE Cartridge.

- (1) Unpack a new FINE Cartridge and remove the orange protective tape (A) gently.


Important

- Shaking FINE Cartridges may cause ink to spill out and stain clothing or the surrounding area. Handle FINE Cartridges carefully.
- Be careful not to stain your clothes and hands with ink on the removed protective tape.
- Do not reattach the protective tape once you have removed it. Discard it according to the local laws and regulations regarding disposal of consumables.
- Do not touch the electrical contacts or Print Head Nozzles on a FINE Cartridge. The machine may not print out properly if you touch it.

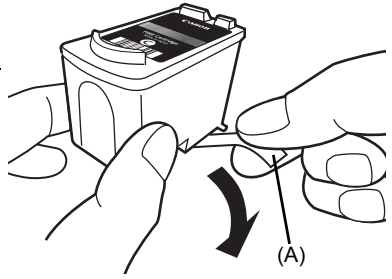

5 Install the FINE Cartridge.


- (1) Insert a new FINE Cartridge all the way into the appropriate slot.
The Black FINE Cartridge should be installed into the left slot (B) and the Color FINE Cartridge should be into the right slot (C).

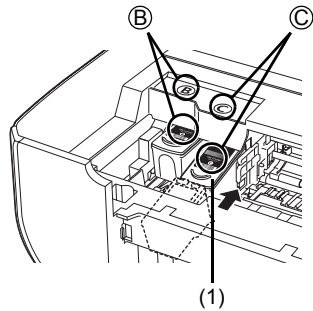

- (2) Push up the FINE Cartridge until it clicks into place.

Important

The machine cannot be used unless both the FINE Cartridges are installed.

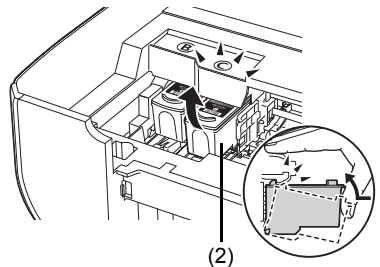

- 6** Lift the Scanning Unit (Cover) slightly to set the Scanning Unit Support back to its original position, and then gently close the Scanning Unit (Cover).
-

⚠ Caution

Be sure to hold the Scanning Unit (Cover) firmly, and be careful not to get your fingers caught.

📖 Note

- If the error code is still displayed after the Scanning Unit (Cover) is closed, see “An Error Code Is Displayed on the LED” on page 44.
 - When you start printing after replacing the FINE Cartridge, Print Head Cleaning is performed automatically. Do not perform any other operations until Print Head Cleaning finishes.
 - If the straight line is misaligned or the Print Head position is misaligned, align the Print Head position.
See “Aligning the Print Head” on page 31.
-

Keeping the Best Printing Results

To avoid drying of the Print Head and clogging of the nozzles, note the following.

📖 Note

- Ink may blur depending on the paper in the following cases:
 - Printed area is traced with a highlight pen or paint-stick.
 - Printed area is stained with water or sweat.
 - If the print head nozzles get clogged, printouts will become faint or particular colors will not be printed properly. For details, see “When Printing Becomes Faint or Colors Are Incorrect” on page 26.
-

■ When You Turn Off the Machine

Follow the procedure below to turn off the machine.

- (1) Press the **ON** button to turn off the machine.
- (2) Confirm that the **Power** lamp has gone out.
This takes a few seconds or as long as around 30 seconds.
- (3) Unplug the power plug from the wall outlet.
If you are using a power outlet strip, you can switch it off instead.

When you press the **ON** button to turn off the machine, the machine automatically puts a protective cap on the Print Head to prevent the ink from drying. If you remove the power plug or switch off the power outlet strip before the **Power** lamp goes out, this capping will not be done properly, causing the Print Head to dry and clog.

■ When You Are Not Using the Machine for a Long Time

When you are not using the machine for a long time, print or copy in both black & white and in color, or perform Print Head Cleaning, about once a month to prevent degradation of the Print Head.

Numerous nozzles are installed in the Print Head for high-precision printing. Just as the uncapped tip of a ballpoint pen or marker becomes dry and unusable if it is not used for a long period of time, the print head nozzles become blocked by dried ink. Periodically printing or cleaning the Print Head can prevent this blockage.

If you have not used the machine for a long time, print out the nozzle check pattern to check the print head condition before printing. See “Printing the Nozzle Check Pattern” on page 27.

Cleaning Your Machine

This section describes the cleaning procedure that is needed to maintain your machine.

Caution

- Do not use tissue paper, paper towels, or similar materials for cleaning so as not to scratch the surface. Paper tissue powders or fine threads may remain inside the machine and cause problems such as Print Head blockage and poor printing results. Make sure to use a soft cloth.
 - Never use volatile liquids such as thinners, benzene, acetone, or any other chemical cleaner to clean the machine, as this may cause a malfunction or damage the machine's surface.
-

■ **Wiping Off Dirt on the Machine**

Be sure to use a soft cloth such as eyeglasses cleaning cloth and wipe off dirt on the surface with it gently. Smooth out wrinkles on the cloth if necessary before cleaning.

Caution

- Be sure to turn off the power and disconnect the power plug before cleaning the machine.
 - Do not use tissue paper, rough-textured cloth, or similar materials, as this may scratch the surface.
-

■ **Cleaning the Platen Glass and Document Cover**

With a clean, soft, lint-free cloth, wipe the Platen Glass (A) and the inner side of the Document Cover (white sheet) (B) gently. Make sure not to leave any residue, especially on the Platen Glass.

Caution


Be sure to turn off the power and disconnect the power plug before cleaning the machine.

Important

The inner side of the Document Cover (white sheet) (B) is easily damaged, so wipe it gently.

Note


If the Document Cover comes off, see "The Document Cover Comes Off" on page 58 and attach it.

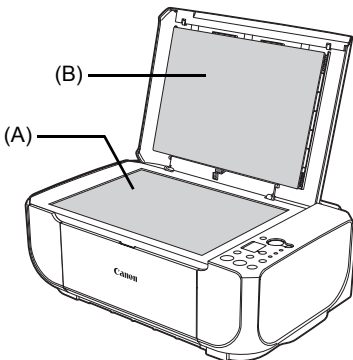

■ Cleaning the Paper Feed Roller (Roller Cleaning)

Clean the paper feed roller if paper is not fed properly. Cleaning the paper feed roller will wear the roller, so perform this only when necessary.

- 1 Make sure that the machine is turned on, and then remove any paper from the Rear Tray.
- 2 Open the Paper Output Tray, then open the Output Tray Extension.
- 3 Clean the paper feed roller.
 - (1) Press the **Maintenance** button repeatedly until **b** appears.




- (2) Press the **Black** or **Color** button.
The Paper Feed Roller will rotate as it is cleaned.

- 4 Repeat step 3 twice.
- 5 Make sure that the paper feed roller stops rotating, then load three or more sheets of A4 or Letter-sized plain paper in portrait orientation in the Rear Tray.
Set the Paper Thickness Lever to the left. For details on the Paper Thickness Lever, refer to "Front View" in "Main Components" of the *User's Guide* on-screen manual.
- 6 Repeat step 3 three times.

The paper cleans the paper feed roller as it feeds through the machine.

If the problem is not resolved, turn off the machine, unplug the power plug, and then wipe the paper feed roller (A) located on the right side inside the Rear Tray with a moistened cotton swab or the like. Rotate the roller (A) manually as you clean it. Do not touch the roller with your fingers; rotate it with the cotton swab. If this does not solve the problem, contact your Canon service representative.

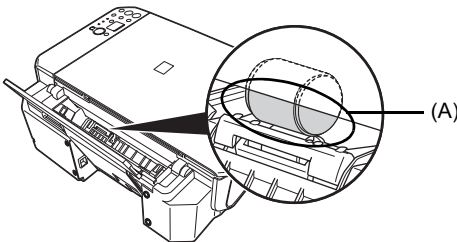

■ Cleaning the Inside of the Machine (Bottom Plate Cleaning)

This section describes how to clean the inside of the machine. If the inside of the machine becomes dirty, printed paper may get dirty, so we recommend performing cleaning regularly.


Important

Do not perform any other operation while the bottom plate is being cleaned.

- 1 Make sure that the machine is turned on, and then remove any paper from the Rear Tray.
- 2 Open the Paper Output Tray, then open the Output Tray Extension.
- 3 Fold a single sheet of A4 or Letter-sized plain paper in half widthwise, and then unfold the paper.
- 4 Load this and only this sheet of paper in the Rear Tray with the open side facing up.
Set the Paper Thickness Lever to the left. For details on the Paper Thickness Lever, refer to "Front View" in "Main Components" of the *User's Guide* on-screen manual.

5 Perform bottom plate cleaning.

- (1) Press the **Maintenance** button repeatedly until **J** appears.




- (2) Press the **Black** or **Color** button.

The paper cleans the inside of the machine as it feeds through the machine.

Check the folded part of the ejected paper. If it is smudged with ink, perform Bottom Plate Cleaning again.

If the problem is not resolved after performing Bottom Plate Cleaning twice, the protrusions inside the machine may be stained. Clean them according to instructions. See "Cleaning the Protrusions Inside the Machine" on page 42.

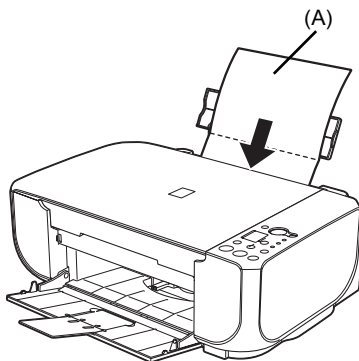

(A) Load the paper after unfolding it.

Note


When performing Bottom Plate Cleaning again, make sure to use a new piece of paper.

■ Cleaning the Protrusions Inside the Machine

If protrusions inside the machine are stained, wipe off any ink from the protrusions using a cotton swab or the like.

⚠ Caution

Be sure to turn off the power and disconnect the power plug before cleaning the machine.

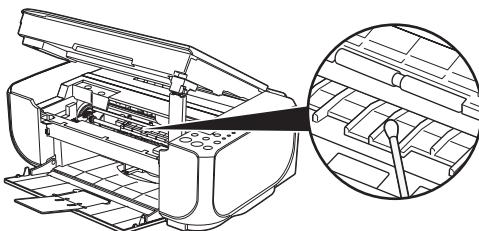

Troubleshooting

This section describes troubleshooting tips for problems you may encounter when using the machine.

Note

This section mainly describes the methods of machine operation for troubleshooting. To handle problems using your computer, refer to "Troubleshooting" in the *User's Guide* on-screen manual. For details on how to view the on-screen manuals, see "Reading the On-screen Manuals" on page 60.


- "An Error Code Is Displayed on the LED" on page 44
- "LED Cannot Be Seen At All" on page 46
- "Cannot Install the MP Drivers" on page 47
- "Cannot Connect to Computer Properly" on page 48
- "Print Results Not Satisfactory" on page 49
- "Print Results Not Satisfactory When Copying" on page 52
- "Printing Does Not Start" on page 53
- "Paper Does Not Feed Properly" on page 53
- "Paper Jams" on page 55
- "Message Appears on the Computer Screen" on page 56
- "The Document Cover Comes Off" on page 58
- "Scanning Problems" on page 58

If an Error Occurs When the Machine Is Connected to a Computer

When an error occurs in printing such as the machine is out of paper or paper is jammed, a troubleshooting message is displayed automatically. Take the appropriate action described in the message.

The message may vary depending on the version of your operating system.

Windows

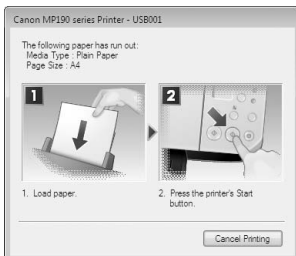


Macintosh



An Error Code Is Displayed on the LED

If an error code is displayed on the LED, take the corresponding action described below.

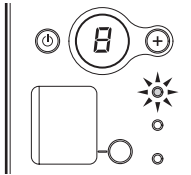

■ Alarm Lamp Is Lit Orange



When a printer error occurs, the **Alarm** lamp is lit orange. The number displayed on the LED indicates the type of error that has occurred. Check the error code displayed on the LED and take the appropriate action to correct the error.


E and number (error code) are alternately displayed on the LED.

Error Code	Cause	Action
E, 2	The machine is out of paper. / Paper does not feed.	Reload the paper correctly and press the Black or Color button.
E, 3	Paper Output Tray is closed. / Paper jam.	If the Paper Output Tray is closed or not opened fully, open it fully. The machine resumes printing. If opening the Paper Output Tray fully does not resolve the problem, the paper may be jammed. Remove the jammed paper, reload paper properly in the machine, and then press the Black or Color button. See "Paper Jams" on page 55.
E, 4/ E, 5	The FINE Cartridge cannot be recognized.	The FINE Cartridge may not be installed properly, or the Cartridge may not be compatible with this machine. Open the Scanning Unit (Cover), and then make sure that the FINE Cartridges are installed properly and that the installed FINE cartridges are compatible with the machine. If the error is not resolved, the Print Head may be damaged. Contact your Canon Service representative.
E, 7	FINE Cartridge is not installed in the correct position.	Make sure that each FINE Cartridge is installed in the correct position. See "Replacing a FINE Cartridge" on page 33.
E, 8	Ink absorber is almost full.	The machine has a built-in ink absorber to hold the ink used during Print Head Cleaning, for example. This error code indicates that the ink absorber is nearly full. Press the Black or Color button to cancel the error so you can continue printing. However, because printing is disabled once the ink absorber becomes completely full and until the ink absorber is replaced, you are recommended to contact your Canon service representative as early as possible. (You will need to replace a particular part of the machine.)

Error Code	Cause	Action
E, 1, 3	Ink level cannot be detected.	<p>Ink may have run out.</p> <p>The function for detecting the remaining ink level will be disabled since the ink level cannot be correctly detected.</p> <p>If you want to continue printing without this function, press the Stop/Reset button for at least 5 seconds.</p> <p>Canon recommends to use new genuine Canon cartridges in order to obtain optimum qualities.</p> <p>Please be advised that Canon shall not be liable for any malfunction or trouble caused by continuation of printing under the ink out condition.</p> <p> Note</p> <p>If the function for detecting the remaining ink level is disabled, the followings are observed:</p> <ul style="list-style-type: none"> ● On the machine, the ink lamp flashes. ● On the printer status monitor (Windows) and Canon IJ Printer Utility (Macintosh), the FINE Cartridge is displayed in gray. <p>See "Getting the Ink Status Information" on page 33.</p>
E, 1, 4	The FINE Cartridge cannot be recognized.	The FINE Cartridge may not be compatible with this machine. Install the appropriate FINE Cartridge. See "Replacing a FINE Cartridge" on page 33.
E, 1, 5	The FINE Cartridge cannot be recognized.	<p>The FINE Cartridge may not be installed properly.</p> <p>Open the Scanning Unit (Cover) and install the FINE Cartridge properly.</p> <p>If the error is not resolved, the FINE Cartridge may be damaged. Contact your Canon Service representative.</p>
E, 1, 6	Ink has run out.	<p>Ink has run out.</p> <p>Replace the ink cartridge and close the Scanning Unit (Cover).</p> <p>If printing is in progress and you want to continue printing, press the Stop/Reset button for at least 5 seconds with the ink cartridge installed. Then printing can continue under the ink out condition.</p> <p>The function for detecting the remaining ink level will be disabled.</p> <p>Replace the empty ink cartridge immediately after the printing. The resulting print quality is not satisfactory, if printing is continued under the ink out condition.</p> <p> Note</p> <p>If the function for detecting the remaining ink level is disabled, the followings are observed:</p> <ul style="list-style-type: none"> ● On the machine, the ink lamp flashes. ● On the printer status monitor (Windows) and Canon IJ Printer Utility (Macintosh), the FINE Cartridge is displayed in gray. <p>See "Getting the Ink Status Information" on page 33.</p>
E, 2, 0	The size of the document cannot be correctly detected or the document is too small when the Fit-to-Page copying is selected. / Scanning the Print Head Alignment Sheet has failed.	<ul style="list-style-type: none"> ● The size of the document cannot be correctly detected or the document is too small when the Fit-to-Page copying is selected. <p>Make sure the document meets the requirements and correctly loaded on the Platen Glass. Then reload the document and press the Black or Color button.</p> <p>See "Loading Original Documents" on page 11.</p> <ul style="list-style-type: none"> ● Scanning the Print Head Alignment Sheet has failed. Make sure all required boxes on the head alignment sheet are filled in, and that the sheet is set in the correct position and orientation on the Platen Glass. <p>If the error is not resolved, connect the machine to the computer and align the Print Head on the printer driver. For details, refer to "Aligning Print Head on the Computer" in the <i>User's Guide</i> on-screen manual.</p>

■ Power Lamp Flashes Green and Alarm Lamp Flashes Orange Alternately

The **Power** and **Alarm** lamps flash alternately as shown below.

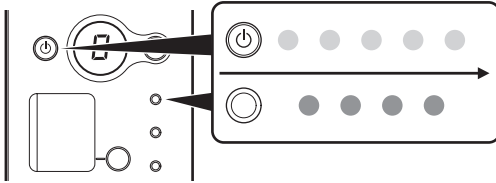

Disconnect the USB cable from the machine, turn the machine off, then unplug the machine from the power supply. Plug the machine back in and turn the machine back on.




If the problem is not resolved, contact your Canon Service representative.



Error Code	Cause	Action
E, 2, 2	The FINE Cartridge Holder does not move.	<p>Cancel printing, turn off the machine, then remove the protective material from the FINE Cartridge Holder or paper jam that is preventing the FINE Cartridge Holder from moving.</p> <p>⚠ Caution Be careful not to touch the components inside the machine. The machine may not print out properly if you touch it.</p>
E, 2, x E, 3, x E, 4, x	An error requiring servicing might have occurred.	Turn off the machine, and unplug the power plug of the machine from the power supply. Then, plug the power plug of the machine back in, and turn on the machine again. If the same error occurs, contact your Canon Service representative.

LED Cannot Be Seen At All

Cause	Action
The machine is not powered on or the LED is in the screen-saver mode.	<ul style="list-style-type: none"> ● If the Power lamp is off The machine is not powered on. Connect the power plug and press the ON button. The machine will power on and the LED will light. ● If the Power lamp is lit The LED may be in the screen-saver mode. On the Operation Panel, press a button other than the ON button.


Cannot Install the MP Drivers

Cause	Action
<p>Windows</p> <p>Unable to proceed beyond the Printer Connection screen.</p>	<p>If you were unable to proceed beyond the Printer Connection screen, follow the procedure below to reinstall the MP Drivers.</p> <p>Note</p> <p>In Windows Vista, "The printer is not detected. Check the connection." may be displayed depending on the computer you use. In this case, wait for a while. If you still cannot proceed to the next step, follow the procedure below to reinstall the MP Drivers.</p>  <p>(1) Click Cancel on the Printer Connection screen.</p> <p>(2) Click Start Over on the Installation Failure screen.</p> <p>(3) Click Back on the screen that appears next.</p> <p>(4) Click Exit, then remove the CD-ROM.</p> <p>(5) Turn the machine off.</p> <p>(6) Restart your computer.</p> <p>(7) Make sure you have no application software running.</p> <p>(8) Follow the procedure described in your setup sheet to reinstall the MP Drivers.</p>
<p>Installation does not start automatically when the <i>Setup CD-ROM</i> is inserted into your computer's disc drive.</p>	<p>Windows</p> <p>(1) Click Start then Computer.</p> <p>In Windows XP, click Start then My Computer.</p> <p>In Windows 2000, double-click the My Computer icon on the desktop.</p> <p>(2) Double-click the CD-ROM icon  on the displayed window.</p> <p>If the contents of the CD-ROM are displayed, double-click MSETUP4.EXE.</p> <p>Macintosh</p> <p>(1) Double-click the CD-ROM icon  on your desktop to start installation.</p> <p>Note</p> <p>If the CD-ROM icon is not displayed, try the followings:</p> <ul style="list-style-type: none"> ● Remove the CD-ROM from your computer, then insert it again. ● Restart your computer. <p>If the icon is still not displayed, try different discs and see if they are displayed. If other discs are displayed, there is a problem with the <i>Setup CD-ROM</i>. Contact a Canon Service representative.</p>

Cause	Action
Installation procedure not followed correctly.	<p>Follow the procedure described in your setup sheet for proper installation.</p> <p>If the MP Drivers were not installed correctly, uninstall the MP Drivers, restart your computer, and then reinstall the MP Drivers. Refer to the <i>PC Printing Guide</i> on-screen manual.</p> <p></p> <p> Note</p> <p>If the installer was forced to be terminated due to a Windows error, the system may be in an unstable condition and you may not be able to install the MP Drivers. Restart your computer before reinstalling.</p>

Cannot Connect to Computer Properly

■ Printing or Scanning Speed Is Slow / Hi-Speed USB Connection Does Not Work

Cause	Action
Your system environment is not fully compatible with Hi-Speed USB.	<p>If your system environment is not fully compatible with Hi-Speed USB, the machine will operate at a lower speed provided under USB 1.1. In this case, the machine operates properly but printing or scanning speed may slow down due to communication speed.</p> <p>Check the following to ensure that your system environment supports Hi-Speed USB connection.</p> <ul style="list-style-type: none"> ● The USB port on your computer supports Hi-Speed USB connection. ● The USB cable, and the USB hub if you are using one, support Hi-Speed USB connection. <ul style="list-style-type: none"> Be sure to use a certified Hi-Speed USB cable. We recommend the cable to be no longer than around 10 feet / 3 meters. ● The operating system of your computer supports Hi-Speed USB connection. <ul style="list-style-type: none"> Obtain and install the latest update for your computer. ● The Hi-Speed USB driver operates properly. <ul style="list-style-type: none"> Obtain the latest version of the Hi-Speed USB driver compatible with your hardware and install it on your computer. <p> Important</p> <p>For details on Hi-Speed USB of your system environment, contact the manufacturer of your computer, USB cable, or USB hub.</p>



■ “This device can perform faster” Message Is Displayed

Cause	Action
Your system environment is not fully compatible with Hi-Speed USB.	<p>Your system environment is not compatible with Hi-Speed USB.</p> <p>See “Printing or Scanning Speed Is Slow / Hi-Speed USB Connection Does Not Work” on page 48.</p>

Print Results Not Satisfactory

If the print result is not satisfactory such as white streaks, misaligned lines, and uneven colors, confirm the paper and print quality settings first.

● Check1: Do the page size and media type settings match the size and type of the loaded paper?

When these settings are incorrect, you cannot obtain a proper print result. If you are printing a photograph or an illustration, incorrect paper type setting may reduce the quality of printout color. Also, if you print with an incorrect paper type setting, the printed surface may be scratched. In borderless printing, uneven coloring may occur depending on the combination of the paper type setting and the loaded paper.

● Check2: Did you set the print quality setting appropriately?

Select a print quality option suitable to the paper and image for printing. If you notice blurs or uneven colors, increase the print quality setting and try printing again.

The method to confirm the paper and print quality settings differs depending on what you do with your machine.

To copy by operating the machine	Confirm by using the Operation Panel on the machine. See "Making Copies" on page 20.
To print from a computer	Confirm by using the printer driver. Refer to the <i>PC Printing Guide</i> on-screen manual.

● Check 3: If the problem is not resolved, there may be other causes.

See also the sections below:

- "Colors Are Unclear" on page 49
- "Printing Does Not Start/Printing Is Blurred/Colors Are Wrong/Straight Lines Are Misaligned" on page 50
- "White Streaks" on page 50
- "Printed Paper Curls or Has Ink Blots" on page 50
- "Printed Surface Is Scratched/Paper Is Smudged" on page 51
- "Colors Are Uneven or Streaked" on page 52


■ Colors Are Unclear

Note

Printed colors may not match screen colors due to basic differences in the methods used to produce colors.
Color control settings and environmental differences can also affect how colors appear on the screen.

Cause	Action
Color correction is not enabled.	When printing photographs or other graphics, enabling color correction may improve color. Refer to "Print Results Not Satisfactory" in the <i>User's Guide</i> on-screen manual.

■ Printing Does Not Start/Printing Is Blurred/Colors Are Wrong/Straight Lines Are Misaligned

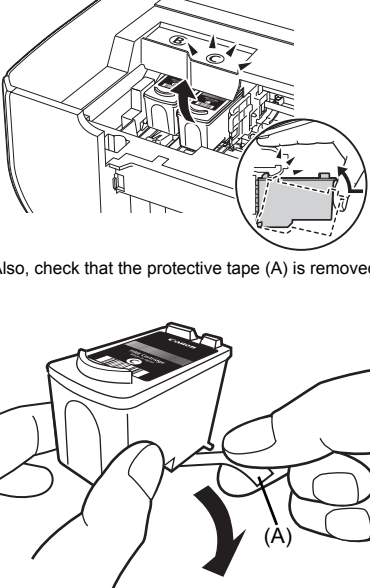Cause	Action
The media is loaded with the wrong side facing upwards.	<p>When using paper with one printable surface, make sure the paper is loaded with the printable side facing up.</p> <p>Printing on the wrong side of such paper may cause unclear prints or prints with reduced quality.</p> <p>Refer to the instruction manual supplied with the paper for detailed information on the printable side.</p>
FINE Cartridge is not installed properly.	<p>Remove the FINE Cartridge, then reinstall it.</p> <p>The print result may be improved by reinstalling the FINE Cartridge.</p>  <p>Also, check that the protective tape (A) is removed.</p>
Print Head nozzles are clogged.	See "When Printing Becomes Faint or Colors Are Incorrect" on page 26 and perform any necessary maintenance operation.
Print Head is misaligned.	<p>If you did not align the Print Head after installation, straight lines may be printed misaligned. Make sure to align the Print Head after you install it.</p> <p>See "Aligning the Print Head" on page 31 to perform Print Head Alignment using the Operation Panel.</p>



■ White Streaks


Cause	Action
Print Head nozzles are clogged.	See "When Printing Becomes Faint or Colors Are Incorrect" on page 26 and perform any necessary maintenance operation.

■ Printed Paper Curls or Has Ink Blots

Cause	Action
Paper is too thin.	When printing data with high color saturation such as photographs or images in deep color, we recommend using Photo Paper Pro or other Canon specialty paper. See "Media Types You Cannot Use" on page 14.

■ Printed Surface Is Scratched/Paper Is Smudged

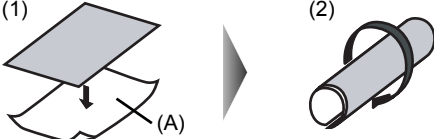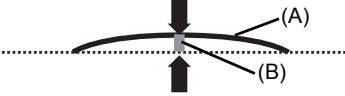Cause	Action
Printing on inappropriate type of paper.	<ul style="list-style-type: none"> ● Check to see if the paper you are printing on is not too thick or curled. See "Media Types You Cannot Use" on page 14 to make sure that the paper you are using is suitable. If the paper is curled, see "Paper is curled." on page 51 to correct paper curl. ● When performing Borderless Printing, print quality may be reduced at the top and bottom edges of the paper. Make sure that the paper you are using is suitable for Borderless Printing. For details, refer to "Printing Area" in the <i>User's Guide</i> on-screen manual.
Paper is curled.	<p>For Plain Paper</p> <p>Turn the paper over and reload it to print on the other side.</p> <p>Leaving the paper loaded in the Rear Tray for a long time may cause the paper to curl. If this happens, load the paper with the other side facing up. It may resolve the problem.</p> <p>We recommend putting unused paper back into the package and keep them on a level surface.</p> <p>For Other Paper</p> <p>If you are using paper with either any of the corners or the whole printing surface curled, the paper may become dirty, not feed properly, or both. Use such paper after correcting paper curl as follows.</p> <p>(1) With the printing side (A) facing up, cover the paper with a fresh sheet of plain paper to avoid staining or scratching the surface.</p> <p>(2) Roll up the paper in a direction opposite to paper curl as seen below.</p>  <p>(3) Check to see that the paper curl is within approximately 0.08 to 0.2 inches / 2 to 5 mm (B) in height.</p>  <p>We recommend printing curl-corrected paper one sheet at a time.</p> <p>Note</p> <p>Depending on the media type, the paper may be smudged or may not be fed properly even if it is not curled. In such case, follow the procedure described above in "For Other Paper" to curl the paper before printing. This may improve the print result.</p>
Inappropriate Paper Thickness Lever setting.	<p>Adjust the position of the Paper Thickness Lever according to the type of paper you are printing on.</p> <p>See "Paper Handling" on page 13.</p> <p>Depending on the printing content, the printing surface may become scratched even for the types of paper to set the lever to the left. In this case, set the Paper Thickness Lever to the right.</p> <p>* Reset the Paper Thickness Lever to the left when you finish printing. If the lever is not set back to the left, the inside of the machine is more likely to get dirty due to the wider clearance between the print head and the loaded paper. It may also reduce print quality.</p>

Cause	Action
Printing beyond the recommended printing area.	If you are printing beyond the recommended printing area of your printing paper, the lower edge of the paper may become stained with ink. Resize your original document in your application software. For details on recommended printing area, refer to "Printing Area" in the <i>User's Guide</i> on-screen manual.
Paper Feed Roller is dirty.	Clean the Paper Feed Roller. Cleaning the Paper Feed Roller will wear the roller, so perform this procedure only when necessary. For details on cleaning, see "Cleaning the Paper Feed Roller (Roller Cleaning)" on page 41.
Inside of the machine is dirty.	When performing duplex printing, if the specified page size does not match the actual size of paper loaded in the Rear Tray, the inside will become stained with ink, causing printed paper to become smudged. Perform the Bottom Plate Cleaning to clean the inside of the machine. For details on cleaning, see "Cleaning the Inside of the Machine (Bottom Plate Cleaning)" on page 41.  Note To prevent the inside of the machine from getting stained, set the page size correctly.
Printing graphics with the intensity setting set too high.	Especially if you are using plain paper to print images with high intensity, the paper may absorb too much ink and become wavy, causing paper abrasion. When printing from your computer, refer to "Print Results Not Satisfactory" in the <i>User's Guide</i> on-screen manual.

■ Colors Are Uneven or Streaked



Cause	Action
Print Head nozzles are clogged.	See "When Printing Becomes Faint or Colors Are Incorrect" on page 26 and perform any necessary maintenance operations.
Print Head is misaligned.	See "Aligning the Print Head" on page 31 to perform Print Head Alignment using the Operation Panel.

Print Results Not Satisfactory When Copying

Cause	Action
The original document is not loaded correctly.	Check that the original is loaded correctly on the Platen Glass. See "Loading Original Documents" on page 11.
The original document is not loaded with the side to be copied faced down.	When loading the original on the Platen Glass, the side to be copied should be faced down.
The original document is a printout from this machine.	Print quality may be reduced if you copy a printout. Instead of copying a printout, print the original directly from your computer.
The Platen Glass or the inner side of the Document Cover is dirty.	Clean the Platen Glass and the inner side of the Document Cover. See "Cleaning the Platen Glass and Document Cover" on page 40.

If these do not resolve the problem, also see "Print Results Not Satisfactory" on page 49.

Printing Does Not Start

Cause	Action
<p>Unnecessary print jobs are left in queue. / Computer problems.</p>	<p>Restarting your computer may solve the problem. If there are any unnecessary print jobs, follow the procedure below to delete them.</p> <p>Windows</p> <ol style="list-style-type: none"> (1) Open the printer properties dialog box. Refer to "Opening the Printer Properties Dialog Box Directly from Control Panel" in "Opening the Printer Properties Dialog Box (Windows)" of the <i>User's Guide</i> on-screen manual. (2) Click the Maintenance tab and then View Printer Status. The printer status monitor is displayed. (3) Click Display Print Queue. (4) Select Cancel All Documents on the Printer menu. You may not be able to select this depending on the privileges of the account. (5) When the confirmation message is displayed, click Yes. The print jobs are deleted. <p>Macintosh</p> <ol style="list-style-type: none"> (1) Click the printer icon in the Dock to display the list of print jobs in progress. (2) Select the print job to delete and click . The print jobs are deleted.
<p>The machine is not ready.</p>	<p>Check if the Power lamp is lit green. If the Power lamp is off, turn the machine on. While the Power lamp is flashing green, the machine is initializing. Wait until the Power lamp stops flashing and remains lit green.</p> <p> Note When printing large data such as a photo or graphics, it may take longer to start printing.</p>

Paper Does Not Feed Properly


Cause	Action
<p>Printing on inappropriate type of paper.</p>	<p>Check to see if the paper you are printing on is not too thick or curled. See "Media Types You Cannot Use" on page 14 to make sure that the paper you are using is suitable. If the paper is curled, see "Paper is curled." on page 51 to correct paper curl.</p>
<p>Paper Feed Roller is dirty.</p>	<p>Clean the Paper Feed Roller. Cleaning the Paper Feed Roller will wear the roller, so perform this procedure only when necessary. For details on cleaning, see "Cleaning the Paper Feed Roller (Roller Cleaning)" on page 41.</p>
<p>Paper not loaded properly.</p>	<p>Make sure of the following when you load paper in the machine.</p> <ul style="list-style-type: none"> ● When loading two or more sheets of paper, align the edges of the sheets before loading. ● Always load the paper in portrait orientation in the Rear Tray, regardless of the printing orientation. ● Load the paper with the print side facing UP. Align the paper stack against the right side of the Rear Tray and slide the Paper Guide so that it just touches the left edge of the stack. <p>For details on loading paper, see "Loading Paper" on page 15.</p>

Cause	Action
Too much paper loaded.	<p>Make sure that the paper stack does not exceed the paper support load limit. However, proper feeding of paper may not be possible at this maximum capacity depending on the type of paper or environmental conditions (either very high or low temperature and humidity).</p> <p>In such cases, reduce the sheets of paper you load at a time to around half of the paper support load limit.</p> <p>For details on loading paper, see "Loading Paper" on page 15.</p>
Foreign object in the Rear Tray.	<p>Make sure that there are no foreign objects in the Rear Tray.</p>
Envelopes not prepared nor loaded properly.	<ul style="list-style-type: none"> ● When printing on envelopes, see "Loading Envelopes" on page 17, and prepare the envelopes before printing. <p>Once you have prepared the envelopes, load them in the machine in portrait orientation. If the envelopes are placed in landscape orientation, they will not feed properly.</p> <ul style="list-style-type: none"> ● Set the Paper Thickness Lever to the right.

Paper Jams


Important

When you turn off the machine to remove the jammed paper, cancel the print job before turning off the machine. See "Printing from Your Computer" in the *User's Guide* on-screen manual.

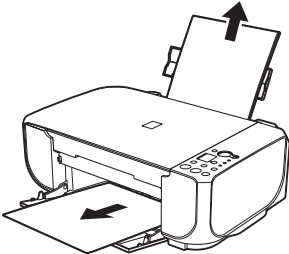Cause	Action
Paper jammed in the Paper Output Slot or the Rear Tray.	<p>Remove the paper following the procedure below.</p> <p>(1) Slowly pull the paper out, either from the Rear Tray or from the Paper Output Slot, whichever is easier.</p>  <p>● If the paper tears and a piece remains inside the machine, turn the machine off, open the Scanning Unit (Cover) and remove the paper. * Be careful not to touch the components inside the machine. After removing all paper, close the Scanning Unit (Cover), and turn the machine back on.</p> <p>● If you cannot pull the paper out, turn the machine off and turn it back on. The paper will be ejected automatically.</p> <p>(2) Reload the paper in the machine, and press the Black or Color button on the machine.</p> <p>If you turned off the machine in step (1), all print jobs in queue are canceled. Reprint if necessary.</p> <p>Note</p> <ul style="list-style-type: none">● For details on how to load paper, see "Loading Printing Paper" on page 12.● When reloading the paper in the machine, see "Paper Does Not Feed Properly" on page 53 to confirm that you are using the correct paper and are loading it into the machine correctly. <p>If you cannot remove the paper or the paper tears inside the machine, or if the paper jam error continues after removing the paper, contact your Canon Service representative.</p>

Message Appears on the Computer Screen

■ Service Error 5100 Is Displayed

Cause	Action
Movement of the FINE Cartridge Holder is blocked.	Cancel printing from your computer, turn off the machine. Then clear the paper jam or foreign object that is preventing the FINE Cartridge Holder from moving.  Important Be careful not to touch the components inside the machine. The machine may not print out properly if you touch it.



■ Writing Error/Output Error/Communication Error

Cause	Action
The machine is not ready.	Confirm that the Power lamp is lit green. If the Power lamp is off, turn the machine on. While the Power lamp is flashing green, the machine is initializing. Wait until the Power lamp stops flashing and remains lit green. If the Alarm lamp is lit orange, an error may have occurred on the machine. For details on how to resolve the error, see "An Error Code Is Displayed on the LED" on page 44.
The machine is not connected properly.	Make sure that the USB cable is securely plugged into the machine and the computer. <ul style="list-style-type: none"> ● If you are using a relay device such as a USB hub, disconnect it, connect the machine directly to the computer, and try printing again. If printing starts normally, there is a problem with the relay device. Consult the reseller of the relay device for details. ● There could also be a problem with the USB cable. Replace the USB cable and try printing again.
Printer port setting does not match the computer's interface connecting the machine.	Check the printer port settings. * In the following instruction, " XXX " signifies your machine's name. <ol style="list-style-type: none"> (1) Log into a user account with the administrator privilege. (2) Click Control Panel, then Printer under Hardware and Sound. In Windows XP, click Control Panel, Printers and Other Hardware, then Printers and Faxes. In Windows 2000, click Control Panel then Printers. (3) Right-click the Canon XXX icon, then select Properties. (4) Click the Ports tab to confirm the port settings. Make sure that a port named USBnnn (where "n" is a number) with Canon XXX Printer appearing in the Printer column is selected for Print to the following port(s). If the port setting is not correct, reinstall the MP Drivers or change the port setting according to the interface you are using.
MP Drivers are not installed properly.	The MP Drivers may not be installed properly. Uninstall them following the procedure described in the <i>PC Printing Guide</i> on-screen manual and reinstall them following the procedure described in your setup sheet.

■ Error Number: 300 Is Displayed

Cause	Action
The machine is not ready.	<p>Confirm that the Power lamp is lit green.</p> <p>If the Power lamp is off, turn the machine on.</p> <p>While the Power lamp is flashing green, the machine is initializing. Wait until the Power lamp stops flashing and remains lit green.</p> <p>If the Alarm lamp is lit orange, an error may have occurred on the machine. For details on how to resolve the error, see "An Error Code Is Displayed on the LED" on page 44.</p>
Machine is not connected properly.	<p>Make sure that the USB cable is securely plugged into the machine and the computer.</p> <ul style="list-style-type: none"> ● If you are using a relay device such as a USB hub, disconnect it, connect the machine directly to the computer, and try printing again. If printing starts normally, there is a problem with the relay device. Consult the reseller of the relay device for details. ● There could also be a problem with the USB cable. Replace the USB cable and try printing again.
Your machine is not selected in Printer on the Print dialog box.	<p>Select your machine's name in Printer on the Print dialog box.</p> <p>If your machine's name does not appear in Printer, follow the procedure below to check that the driver for your machine is installed to your computer.</p> <p>(1) Select Print & Fax Preferences in Printer.</p> <p>In Mac OS X v.10.3.9, select Edit Printer List in Printer.</p> <p>(2) Check that your machine's name is displayed in the list of printers and that the check box is selected.</p> <p>(3) If your machine's name is not displayed, click Add(+) to add the machine.</p> <p>If you cannot add the machine, follow the procedure described in your setup sheet to reinstall the MP Drivers.</p>

■ Error Number: 1700/1710 Is Displayed

Cause	Action
The ink absorber is almost full.	See "E, 8" (Ink absorber is almost full.) in "An Error Code Is Displayed on the LED" on page 44.



■ Ink Info Number: 1688 Is Displayed

Cause	Action
Ink has run out.	See "E, 1, 6" (Ink has run out.) in "An Error Code Is Displayed on the LED" on page 44.

■ Ink Info Number: 1686 Is Displayed

Cause	Action
Ink level cannot be detected.	See "E, 1, 3" (Ink level cannot be detected.) in "An Error Code Is Displayed on the LED" on page 44.

The Document Cover Comes Off

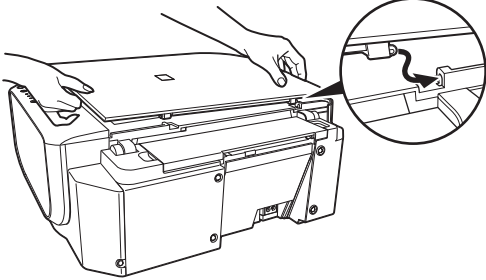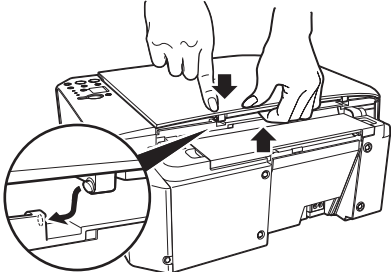Cause	Action
The Document Cover was opened too hard.	<p>If the Document Cover is opened too hard, it may come off. Reattach it according to the following procedure.</p> <p>(1) Insert the protrusion on one side of the Document Cover hinge into the holder.</p>  <p>(2) Hold the middle of the Document Cover and press down above the second protrusion as shown in the figure below to reattach the Document Cover.</p> 

Scanning Problems

■ ScanGear Won't Start

Cause	Action
The scanner driver (ScanGear) is not installed.	Follow the procedure described in your setup sheet to reinstall the MP Drivers.

■ Other Scanning Troubles

Refer to the *Scanning Guide* on-screen manual.

Appendix

How to Use the Documentation Provided



Printed Documentation

Setup Sheet

Be sure to read this sheet first.

This sheet includes instructions for setting up your machine and getting it ready for use.



Quick Start Guide (This guide)

Read this guide when starting to use the machine.

After following instructions in your setup sheet, we recommend you read this guide to familiarize yourself with the basic operation of some of the main functions that can be performed on your machine.



On-screen Manuals

User's Guide

Read this guide when starting to use the machine.

If the *Quick Start Guide* does not provide you enough information please refer to the *User's Guide* which can be installed from the *Setup CD-ROM*. This guide provides detailed instructions for:

- copying
- printing from your computer
- scanning

Additional guides are also available for advanced features.

Scanning Guide

Refer to this guide for full instructions on scanning operation and settings.

PC Printing Guide

Refer to this guide for full instructions on printer driver setting.

PC Photo Printing Guide

Refer to this guide for instructions on using the various application software included on the *Setup CD-ROM*.

Reading the On-screen Manuals

For detailed instructions on installing the on-screen manuals, refer to your setup sheet.

You can view the on-screen manuals in the following way:

Windows

To view the on-screen manual, double-click the **XXX On-screen Manual** shortcut icon on the desktop, or click **Start > All Programs** (or **Programs**) > **Canon XXX Manual > XXX On-screen Manual** (where “**XXX**” is your machine’s name).

System Requirements

Browser: Windows HTML Help Viewer

Note

- Microsoft® Internet Explorer 5.0 or later must be installed.
 - The on-screen manual may not be displayed properly depending on your operating system or Internet Explorer version. We recommend that you keep your system up to date with Windows Update.
-

Macintosh

To view the on-screen manual, double-click the **XXX On-screen Manual** alias (where “**XXX**” is your machine’s name) on the desktop.


System Requirements

Browser: Help Viewer

Note

- The on-screen manual may not be displayed properly depending on your operating system. We recommend that you keep your system up to date.
 - We recommend using Safari as your Web browser to view the HTML format on-screen manuals. If Safari is not installed on your computer, download it from Apple Inc. website and install it.
-

Solution Menu (Windows Only)

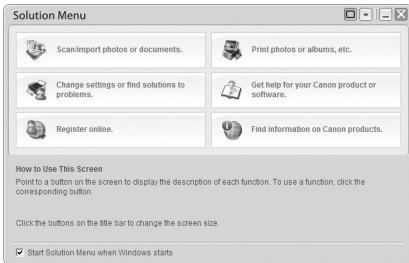

This menu screen helps you to easily launch bundled applications or on-screen manuals. Also, you can easily access useful web sites to get tips on how to use your machine. Experience how easy it is to launch menu items by using the menu screen that appears automatically when your computer starts up. For details, refer to the *Introduction to Solution Menu* on-screen manual.

My Printer (Windows Only)



This application helps you to operate this machine. Use this application to open the printer driver or the status monitor screen and confirm or change both the printer settings or status. Also, this application has a menu to provide troubleshooting tips when problems arise. Double-click the icon on the desktop and experience how easy operating the machine can be.

Specifications

General Specifications	
Printing resolution (dpi)	4800 (horizontal)* x 1200 (vertical) * Ink droplets can be placed with a pitch of 1/4800 inch at minimum.
Interface	Hi-Speed USB* * A computer that complies with Hi-Speed USB standard is required. Since the Hi-Speed USB interface has full backward compatibility with USB Full-Speed (USB 1.1), it can be used at USB Full-Speed (USB 1.1).
Print width	8 inches / 203.2 mm max. (for Borderless Printing: 8.5 inches / 216 mm)
Acoustic noise level	Approx. 42 dB (A) * When printing in the default print quality mode on Photo Paper Plus Glossy II.
Operating environment	Temperature: 5 to 35°C (41 to 95°F) Humidity: 10 to 90% RH (no condensation)
Storage environment	Temperature: 0 to 40°C (32 to 104°F) Humidity: 5 to 95% RH (no condensation)
Power supply	AC 100-240 V, 50/60 Hz
Power consumption	Printing (Copy): Approx. 13 W Standby (minimum): Approx. 1.1 W OFF: Approx. 0.8 W
External dimensions	Approx. 17.7 (W) x 13.9 (D) x 6.7 (H) inches / Approx. 451 (W) x 353 (D) x 169 (H) mm * With the Paper Support and Paper Output Tray retracted.
Weight	Approx. 5.8 kg (Approx. 12.8 lb.) * With the FINE Cartridges installed.
Canon FINE Cartridges	Nozzles: Black: 320 nozzles Cyan/Magenta/Yellow: 384 x 3 nozzles

Copy Specifications	
Multiple copy	1 - 9, 20 pages

Scan Specifications	
Scanner driver	TWAIN / WIA (Windows Vista and Windows XP only)
Maximum scanning size	A4/Letter, 8.5" x 11.7" / 216 x 297 mm
Scanning resolution	Optical resolution (horizontal x vertical) max: 600 dpi x 1200 dpi Interpolated resolution max: 19200 dpi x 19200 dpi
Gradation (Input/Output)	16bit/8bit 48bit/24bit (RGB each 16bit/8bit)

Minimum System Requirements

Note

Conform to the operating system's requirements when higher than those given here.

	Windows	Macintosh
Operating System	Windows Vista	Mac OS X v.10.5
Processor	1 GHz processor	Intel processor, PowerPC G5, PowerPC G4 (867 MHz or faster)
RAM	512 MB	512 MB
	Windows XP SP2	Mac OS X v.10.4
	300 MHz processor	Intel processor, PowerPC G5, PowerPC G4, PowerPC G3
	128 MB	256 MB
	Windows 2000 Professional SP4	Mac OS X v.10.3.9
	300 MHz processor	PowerPC G5, PowerPC G4, PowerPC G3
	128 MB	128 MB
	Note: Operation can only be guaranteed on a PC with Windows Vista, XP or 2000 pre-installed.	Note: Hard Disk must be formatted as Mac OS Extended(Journaled) or Mac OS Extended.
Browser	Internet Explorer 6.0 or later	Safari
Hard Disk Space	650 MB	750 MB
	Note: For bundled software installation.	Note: For bundled software installation.
CD-ROM Drive	Required	
Display	XGA 1024 x 768	

- Some functions may not be available with Windows Media Center.
- To upgrade from Windows XP to Windows Vista, first uninstall software bundled with the Canon inkjet printer.

Additional System Requirements for On-Screen Manuals

Windows	Macintosh
Browser: Windows HTML Help Viewer	Browser: Help Viewer
Note: Microsoft Internet Explorer 5.0 or later must be installed. The on-screen manual may not be displayed properly depending on your operating system or Internet Explorer version. We recommend that you keep your system up to date with Windows Update.	Note: The on-screen manual may not be displayed properly depending on your operating system or Help Viewer version. We recommend that you keep your system up to date with Software Update.

Specifications are subject to change without notice.

Legal Limitations on Use of Your Product and Use of Images

It may be unlawful to make copies of, scan, print, or use reproductions of the following documents. The list provided is non-exhaustive. When in doubt, check with a legal representative in your jurisdiction.

- Paper money
- Money orders
- Certificates of deposit
- Postage stamps (canceled or uncanceled)
- Identifying badges or insignias
- Selective service or draft papers
- Checks or drafts issued by governmental agencies
- Motor vehicle licenses and certificates of title
- Traveler's checks
- Food stamps
- Passports
- Immigration papers
- Internal revenue stamps (canceled or uncanceled)
- Bonds or other certificates of indebtedness
- Stock certificates
- Copyrighted works/works of art without permission of copyright owner

Users in the U.S.A.

■ Regulatory Information

FCC Notice (U.S.A. Only)

For 120V, 60Hz model

Model Number: K10320

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Use of a shielded cable is required to comply with Class B limits in Subpart B of Part 15 of the FCC Rules.

Do not make any changes or modifications to the equipment unless otherwise specified in the manual. If such changes or modifications should be made, you could be required to stop operation of the equipment.

Canon U.S.A., Inc.
One Canon Plaza
Lake Success, NY 11042
1-516-328-5600

■ Canon U.S.A., INC. LIMITED WARRANTY --- (U.S.A. Only)

The limited warranty set forth below is given by Canon U.S.A., Inc. ("Canon USA") with respect to the new or refurbished Canon-brand product ("Product") packaged with this limited warranty, when purchased and used in the United States only.

The Product is warranted against defects in materials and workmanship under normal use and service (a) for a period of ninety (90) days from the date of original purchase when delivered to you in new condition in its original container or (b) for 30 days from the date of original purchase for refurbished Products. Product returned to a Canon USA repair facility or a Canon USA Authorized Service Facility ("ASF"), and proven to be defective upon inspection will be (a) repaired utilizing new, remanufactured, repaired and/or recycled parts (b) exchanged for new or; (c) exchanged for a refurbished Product, as determined by the Canon USA repair facility or the ASF.

Warranty repair or replacement shall not extend the original warranty period of the Product. A dated proof of purchase is required at the time of warranty service. A copy of your dated bill of sale will satisfy this requirement. This warranty does not cover any accessories, or any consumables, such as paper or ink cartridges, as to which there shall be no warranty or replacement.

This limited warranty shall only apply if the Product is used in conjunction with compatible computers, peripheral equipment and software. Canon USA shall have no responsibility for such items except for compatible Canon brand peripheral equipment covered by a separate warranty ("Separate Warranty"). Repairs of such Canon brand peripheral equipment shall be governed by the terms of the Separate Warranty. Non-Canon brand equipment and software that may be distributed with the Product are sold "as is" and without warranty of any kind by Canon USA, including any implied warranty regarding merchantability or fitness for a particular purpose, and all such warranties are disclaimed. The sole warranty, if any, with respect to such non-Canon brand items is given by the manufacturer or producer thereof.

This limited warranty covers all defects encountered in normal use of the Product and does not apply in the following cases:

- (a) Loss of or damage to the Product due to abuse, neglect, mishandling, improper packaging by you, alteration, accident, electrical current fluctuations, improper use, failure to follow operating or maintenance instructions in, or environmental conditions prescribed in, Canon USA's user's manual or other documentation, or services performed by someone other than a Canon USA repair facility or ASF. Without limiting the foregoing, dropping the Product, scratches, and abrasions will be presumed to have resulted from misuse, abuse or failure to operate the Product as set forth in the user's manual or other documentation for the Product.
- (b) Use of parts, media, software or supplies (other than those sold by Canon USA), including non-Canon ink cartridges or refilled ink cartridges, that cause damage to the Product or cause abnormally frequent service calls or service problems.
- (c) If the Product has had its serial number or dating defaced, altered or removed.

ANY SYSTEM SOFTWARE (WHETHER FACTORY LOADED ON THE PRODUCT OR CONTAINED ON THE SOFTWARE DISKETTES OR CD-ROMS ENCLOSED WITH, OR ACCOMPANYING, THE PRODUCT), AND ANY UTILITY SOFTWARE, DISTRIBUTED WITH OR FOR THE PRODUCT, IS SOLD "AS IS" AND WITHOUT WARRANTY BY CANON USA. THE SOLE WARRANTY WITH RESPECT TO SUCH SOFTWARE IS CONTAINED IN THE SOFTWARE MANUFACTURER'S LICENSE AGREEMENT DISTRIBUTED THEREWITH, INCLUDING ANY LIMITATIONS AND DISCLAIMERS THEREON. PLEASE CONTACT CANON USA IMMEDIATELY IF YOU HAVE NOT RECEIVED A COPY OF THE SOFTWARE MANUFACTURER'S LICENSE AGREEMENT.

NO IMPLIED WARRANTY, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, APPLIES TO THE PRODUCT AFTER THE APPLICABLE PERIOD OF THE EXPRESS LIMITED WARRANTY STATED ABOVE, AND NO OTHER EXPRESS WARRANTY OR GUARANTEE, EXCEPT AS MENTIONED ABOVE, GIVEN BY ANY PERSON OR ENTITY WITH RESPECT TO THE PRODUCT SHALL BIND CANON USA, OR ITS ASF. (SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU.) CANON USA SHALL NOT BE LIABLE FOR LOSS OF REVENUES OR PROFITS, INCONVENIENCE, EXPENSE FOR SUBSTITUTE EQUIPMENT OR SERVICE, STORAGE CHARGES, LOSS OR CORRUPTION OF DATA, OR ANY OTHER SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES CAUSED BY THE USE, MISUSE, OR INABILITY TO USE THE PRODUCT REGARDLESS OF THE LEGAL THEORY ON WHICH THE CLAIM IS BASED, AND EVEN IF CANON USA OR ITS ASF HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. NOR SHALL RECOVERY OF ANY KIND AGAINST CANON USA OR ITS ASF BE GREATER IN AMOUNT THAN THE PURCHASE PRICE OF THE PRODUCT CAUSING THE ALLEGED DAMAGE. WITHOUT LIMITING THE FOREGOING, YOU ASSUME ALL RISK AND LIABILITY FOR LOSS, DAMAGE OR INJURY TO YOU AND YOUR PROPERTY AND TO OTHERS AND THEIR PROPERTY ARISING OUT OF THE POSSESSION, USE, MISUSE, OR INABILITY TO USE THE PRODUCT SOLD BY CANON USA NOT CAUSED SOLELY AND DIRECTLY BY THE NEGLIGENCE OF CANON USA, OR ITS ASF. (SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE EXCLUSION OR LIMITATION MAY NOT APPLY TO YOU.) THIS LIMITED WARRANTY SHALL NOT EXTEND TO ANYONE OTHER THAN THE ORIGINAL

PURCHASER OF THE PRODUCT OR THE PERSON FOR WHOM IT WAS PURCHASED AS A GIFT, AND STATES YOUR EXCLUSIVE REMEDY.

Canon USA offers a range of customer technical support* options:

- Interactive troubleshooting, e-mail technical support, the latest driver downloads and answers to frequently asked questions (www.canontechsupport.com)
- Toll-free live technical support Monday-Friday (excluding holidays) at 1-800-828-4040
- Telephone Device for the Deaf (TDD-1-866-251-3752)
- Repair or Exchange Service Options:
In the event service is required for the Product during the limited warranty period, Canon USA offers two hardware support options:

Authorized Service Facility Carry-In / Mail-In Service

Canon USA's Carry-In/Mail-In Service provides repair or exchange, at Canon USA's option, through Canon USA's Authorized Service Facility (ASF) network. The name and telephone number of the ASF(s) near you may be obtained from Canon USA's Web site at www.canontechsupport.com or by calling the Canon USA Customer Care Center at 1-800-828-4040, or any time while speaking to a technical support person. A Product covered by this limited warranty will be repaired or exchanged, as determined by Canon USA, and returned without charge by the ASF.

InstantExchange Service **

A Canon Customer Care Center or ASF technician will attempt to diagnose the nature of the problem and, if possible, correct it over the telephone. If the problem cannot be corrected over the telephone, and you elect the InstantExchange option, a reference number will be issued to you. You will be asked for the Product serial number and other information pertaining to your Product and for a ship-to location for the replacement Product (must include street address).

The Canon USA repair facility will ship out the replacement Product prepaid by Canon USA. After receipt of the replacement Product (with instructions and a prepaid waybill), follow the enclosed instructions on how to ship your product to the Canon USA repair facility. Your Product must be returned in the shipping carton in which the replacement Product was packed and include the reference number, A COPY OF YOUR DATED PROOF OF PURCHASE (BILL OF SALE), and a complete explanation of the problem. DO NOT INCLUDE ANY OTHER ITEMS WITH THE YOUR PRODUCT IN THE RETURN SHIPPING CARTON, AND BE SURE TO RETAIN YOUR PRINthead, INK CARTRIDGE(S) AND TANK(S).

InstantExchange Service exchanges your Product with a replacement Product, which will normally be shipped the same day if your request for this service is by 3 p.m. E.T. Monday through Friday, except holidays. Canon USA does not guarantee same day shipment in the event of the occurrence of factors beyond its reasonable control. The replacement Product you receive may be a refurbished or reconditioned unit and will be covered for the balance of the period remaining on your original limited warranty. NOTE THAT BY USING THIS SERVICE YOU WILL KEEP THE REPLACEMENT PRODUCT THAT IS SENT TO YOU. CANON USA WILL RETAIN THE PRODUCT THAT YOU ORIGINALLY PURCHASED, WHICH SHALL BECOME THE PROPERTY OF CANON USA. InstantExchange warranty program service is available only during the express limited-warranty period for your Product and only in the continental United States, Alaska and Hawaii during such period.

This limited warranty gives you specific legal rights, and you may also have other rights, which vary from state to state.

* Support program specifics are subject to change without notice.

** InstantExchange warranty service is subject to the availability of refurbished or new replacement units.

Canon U.S.A., Inc.
One Canon Plaza
Lake Success, NY 11042
USA

©2008 Canon U.S.A., Inc. Canon is a registered trademark of Canon Inc. in the United States and may also be a registered trademark in other countries.

Index

A

Appendix 59

B

Before Using the Machine 6

C

Canon U.S.A., INC. LIMITED WARRANTY - U.S.A.
only 65

Cleaning

exterior 40

inside 41

platen glass and document cover 40

protrusions inside the machine 42

roller 41

Copying 20

E

Error Code 44

H

Handling the Original Document 11

L

Legal Limitations on Use of Your Product and Use
of Images 64

Loading Original Documents 11

Loading Printing Paper

envelopes 17

paper 15

recommended paper and requirements 13

small-sized paper 19

M

Maintenance Codes 25

Media

cannot use 14

specialty 12

Media Type 13

N

Nozzle Check Pattern

examining 28

printing 27

O

Operation Panel 7

P

Print Head

aligning 31

cleaning 29

deep cleaning 30

Printing from Your Computer

Macintosh 23

Windows 22

R

Replacing a FINE Cartridge 33

ink status information 33

Routine Maintenance 25

S

Safety Precautions 3

Scanning Images 24

Specialty Media 12

Specifications 62

T

Troubleshooting 43

Turning off the Machine 9

Turning on the Machine 9

Ordering Information

Description	Order #
FINE Cartridges	
PG-30 Black	1899B002
CL-31 Color	1900B002
PG-40 Black	0615B002
CL-41 Color	0617B002

Call **1-800-OK-CANON** to locate a dealer near you, or visit the Canon eStore at www.canonestore.com.

The following FINE Cartridges are compatible with this product.



For information on product specifications, please visit our website at www.usa.canon.com

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>