

Model SR5000

➤ *Owner's Guide*

limited lifetime consumer warranty

This Ungo Pro Security system is warranted against defects in material and workmanship. The main unit is covered by this limited lifetime warranty. This Limited Lifetime Warranty applies to Ungo Pro Security systems that have been installed by an authorized Ungo Pro Security dealer. This warranty is to the Original Purchaser ("Owner") and to the original vehicle in which it was installed into. This warranty is not transferable to any subsequent owner(s) of the product(s).

Warranty Program:

Main Unit	Limited Lifetime
Remote Controls	One year from date of purchase
Siren	One year from date of purchase
Shock Sensor	One year from date of purchase
LED	One year from date of purchase
Override Switch	One year from date of purchase

The Warranty does not cover batteries or products deemed damaged through alterations or installation. It also does not cover products mishandled, misused, neglected, abused, water damaged, or with removed/altered serial numbers.

PROOF OF PURCHASE WILL BE REQUIRED FOR WARRANTY SERVICE OF THIS PRODUCT.

This warranty does not cover the costs incurred for removal or reinstallation of the main unit and/or any damage to the vehicle or the vehicle's electrical system.

The sole responsibility of Clarion Corporation of America ("Clarion") under this Warranty shall be limited to the repair or replacement of the product, at the sole discretion of Clarion.

If it becomes necessary to send the product or any defective part to Clarion, the product must be shipped in its original carton or equivalent carton, fully insured, with shipping charges prepaid. Clarion will not assume any responsibility for any loss or damage incurred in shipping.

ALL IMPLIED WARRANTIES EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW SHALL HAVE NO GREATER DURATION THAN THE WARRANTY PERIOD SET FORTH ABOVE. UNDER NO CIRCUMSTANCES SHALL CLARION CORPORATION BE LIABLE FOR ANY LOSS OR DAMAGE, DIRECT OR CONSEQUENTIAL, ARISING OUT OF THE USE OR INABILITY TO USE OF THE PRODUCT. BECAUSE SOME STATES DO NOT ALLOW LIMI-

TATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS OR EXCLUSIONS OR LIMITATIONS OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, THE ABOVE LIMITATIONS OR EXCLUSIONS MAY NOT APPLY TO YOU.

THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE THE OTHER RIGHTS, WHICH VARY FROM STATE TO STATE.

Should you have any difficulties with the performance of this product during warranty, please call: 1-800-GO-CLARION or visit your local Ungo Pro Security dealer. You may also contact the National Service Manager at the following address below for additional service help you may need.

Clarion Corporation of America
Attn: National Service Manager
661 W. Redondo Beach Blvd.
Gardena, Ca 90247

table of contents

limited lifetime consumer warranty	i
transceiver diagram	2
standard transceiver configurations	3
what is included	4
important information	4
warning! safety first	5
system maintenance	7
fcc/id notice	8
caution	8
transceiver functions	8
standard button configurations	8
standard icon configurations	10
function button configurations	14
remote operation	16
system signal paging features	16
using your system	17
active arming	17
passive arming	18
vehicle protection	19
warning response description	20
triggered response description	20
arming/disarming while driving	22
remote sensor bypass	23
disarming	24
silence alarm without disarming	24
disarming without a transceiver (emergency override)	25
silent arm/disarm	26
panic mode	27
override mode	27
remote engine start	28
override take-over	31
setting the clock	31
temperature check mode	32
safety features	33
starter anti-grind circuitry	33
disabling the remote engine start system	33
over and under rev protection	34
shut down inputs	34
false alarm prevention circuitry	34
diagnostics	36
arming diagnostics	36
disarming diagnostics	36
system status chirps	37
table of zones	38
interpreting zone diagnostics	38
anti-code grabbing	39
individual recognition	40
power-up	41
power saver mode	41
programming options	42
security & convenience expansions	45
glossary of terms	46

transceiver diagram



standard transceiver configurations

1	Vehicle Interior Temperature Indicator
2	Numeric Display
3	AM/PM Indicator
4	Alarm Clock Mode Indicator
5	Timer Function Indicator
6	Transmit Range Indicator
7	Transmission Indication
8	Vibrate/Beep Mode Indicator
9	Power Saver Mode Indicator
10	Remote Engine Start Timer Mode Indicator
11	No Function
12	No Function
13	Full Trigger Shock Sensor Indicator
14	Hood/Trunk Open or Trigger Indicator
15	Parking Light Indicator
16	Door Open or Trigger Indicator
17	Arm/Lock Button
18	Disarm/Unlock Button
19	Remote Engine Start Indicator
20	Hood/Trunk Open or Trigger Indicator
21	Panic Mode Button
22	Override Mode Indicator
23	Remote Start Neutral Safety Wire Shutdown Indicator
24	Battery Level Indicator
25	Auxiliary Button
26	No Function
27	Silent Arm/Disarm Mode Indicator
28	Audible Chirp Indicator
29	Arm/Disarm Indicator
30	Function Button
31	Celsius/Fahrenheit Indicator

what is included

- Control module
- A.S.K. Receiver
- One four-button two-way transceiver
- One four-button remote
- Two-stage shock sensor
- Six-tone programmable siren
- Red status LED indicator light
- Push-button override switch
- Your warranty registration
- Starter Kill
- Shut-down toggle switch

important information

Congratulations on the purchase of your combination remote engine start alarm system. Due to the complexity of this system, it must only be installed by an authorized dealer. Installation of this product by anyone other than an authorized dealer voids the warranty.

By carefully reading this Owner's Guide prior to using your system, you will maximize the use of this system and its features.

→ **warning! safety first**

The following safety warnings must be observed at all times:

warning! THIS SYSTEM PROVIDES REMOTE NOTIFICATION OF SECURITY SYSTEM TRIGGER EVENTS. CONTACT POLICE OR SECURITY PERSONNEL IMMEDIATELY. NEVER CONFRONT A CAR THIEF OR VANDAL.

- Due to the complexity of this system, installation of this product must only be performed by an authorized dealer.
- When properly installed, this system can start the vehicle via a command signal from the transceiver. Therefore, never operate the system in an enclosed area or partially enclosed area without ventilation (such as a garage). When parking in an enclosed or partially enclosed area or when having the vehicle serviced, the remote engine start system must be disabled using the installed toggle switch. It is the user's sole responsibility to properly handle and keep out of reach from children all transceiver to assure that the system does not unintentionally remote engine start the vehicle. **THE USER MUST INSTALL A CARBON MONOXIDE DETECTOR IN OR ABOUT THE LIVING AREA ADJACENT TO THE VEHICLE. ALL DOORS LEADING FROM ADJACENT LIVING AREAS TO THE ENCLOSED OR PARTIALLY ENCLOSED VEHICLE STORAGE AREA MUST AT ALL TIMES REMAIN CLOSED.** These precautions are the sole responsibility of the user.

- Use of this product in other than a fuel injected automatic transmission vehicle is contrary to its intended mode of operation may result in property damage, personal injury, or death. (1) Never remotely start the vehicle with the vehicle in gear, and (2) Never remotely start the vehicle with the keys in the ignition. The user must also have the neutral safety feature of the vehicle periodically checked, wherein the vehicle must not remotely start while the car is in gear. This testing should be performed by an authorized dealer in accordance with the Safety Check outlined in the product installation guide. If the vehicle starts in gear, cease remote start operation immediately and consult with the authorized dealer to fix the problem.
- After the remote start module has been installed, contact your authorized dealer to have him or her test the remote start module by performing the Safety Check outlined in the product installation guide. If the vehicle starts when performing the Neutral Safety Shutdown Circuit test, the remote start unit has not been properly installed. The remote start module must be removed or the installer must properly reinstall the remote start system so that the vehicle does not start in gear. All installations must be performed by an authorized dealer. **OPERATION OF THE REMOTE START MODULE IF THE VEHICLE STARTS IN GEAR IS CONTRARY TO ITS INTENDED MODE OF OPERATION. OPERATING THE REMOTE START SYSTEM UNDER THESE CONDITIONS MAY RESULT IN PROPERTY DAMAGE**

OR PERSONAL INJURY. YOU MUST IMMEDIATELY CEASE THE USE OF THE UNIT AND SEEK THE ASSISTANCE OF AN AUTHORIZED DEALER TO REPAIR OR DISCONNECT THE INSTALLED REMOTE START MODULE. UNGO WILL NOT BE HELD RESPONSIBLE OR PAY FOR INSTALLATION OR REINSTALLATION COSTS.

→ **system maintenance**

This system needs no specific maintenance beyond transceiver battery replacement. The transceiver is powered by a 1.5V AAA battery.

The Battery Level indicator has three level indicators that serve as a visual indication of battery charge. When the battery reaches a low charge level that requires replacement, the transceiver will generate a single notification chirp, and the Battery Level indicator will flash continuously.



Battery Replacement

Gently pull the battery cover release tab, then slide the door down to expose the battery and remove the expired battery. Place the new battery into the transceiver observing the correct polarity. When power is returned the transceiver will light all icons in the LCD and generate all beeper tones once.

→ **fcc/id notice**

This device complies with Part 15 of FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesirable operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this device.

→ **caution**

This product is designed for fuel-injected, automatic transmission vehicles only. Use of this product in a standard transmission vehicle is dangerous and contrary the product's intended use.

transceiver functions

The transceiver buttons are used to send commands to the system. The descriptions below reflect the standard configuration for this system. The buttons can be custom configured for the user's specific needs by the installer.

→ **standard button configurations**



Button

The System Arm/Lock and Remote Sensor Bypass functions are controlled by pressing this button for one second.



Button

The System Disarm/Unlock and the capability to silence the alarm without disarming. These functions are controlled by pressing this button for one second.



Button

Channel 2 output is controlled by pressing this button for three seconds. Hold the button down continuously while accessing Channel 2 output.



Button

The panic feature is controlled by pressing this button for two seconds. Press again to disable panic mode.



Button

The LCD backlighting will turn on when pressed for less than one second; when held for more than five seconds the transceiver will enter adjustment mode allowing the setting of the clock, timer mode, and audible melody selection. For more information, please refer to the *Function Button Configurations* section of this guide.



and



Buttons

The remote engine start function of the system is controlled by pressing these buttons simultaneously for one second.



and



Buttons

When pressed simultaneously these buttons activate remote engine start timer mode, engaging the remote engine start function every 24 hours.

and Buttons

When pressed simultaneously these buttons display the internal temperature of the vehicle on the LCD.

and Buttons

The numeric display toggles between the time of the day and the alarm clock when these buttons are pressed simultaneously.

and Buttons

Press these buttons simultaneously to activate the parking timer. Each additional press will toggle through the available options (10 min., 20 min., 30 min., 1 hour, 1.5 hours, 2 hours, and off).

and Buttons

When pressed simultaneously these buttons toggle between beep notification and vibrate notification.

and Buttons

When pressed simultaneously these buttons activate battery saver mode, which will drop power consumption on the transceiver battery to zero when the alarm is inactive or disarmed.

→ **standard icon configurations**

Icon

The vehicle interior temperature icon displays the temperature of the inside of the vehicle when prompted.

Icon

The numeric display icon will show the hours and minutes.



Icon

The AM/PM icon indicates the time before or after noon.



Icon

The alarm clock mode icon indicates that the alarm clock mode is active.



Icon

The timer function icon flashes during timed functions including parking timer.



Icon

The transmit range indicator icon stays visible as long as the system is within operating range.



Icon

The remote transmission indicator icon displays when the transceiver is transmitting a signal.



Icon

The vibrate/beep mode icon appears when the transceiver is set to vibrate mode.



Icon

The power saver mode can be turned on or off with the transceiver. This icon displays the status.



Icon

The remote engine start timer mode icon indicates the 24-hour autostart feature is active and automatically remote starts 24 hours from the time activated.



Icon

This icon has no function.



Icon

No function.



Icon

The full trigger shock sensor icon indicates that the shock sensor has been triggered by a hard shock.



and  **Icons**

The hood/trunk open or trigger icon illuminates when the hood or trunk trigger has been activated or the hood or trunk is open, and bypasses those zones until it is closed.



Icon

The parking light icon will flash twice when armed or disarmed. The icon also flashes during WarnAway and at the beginning and end of remote engine start cycles.



Icon

The door open or trigger icon illuminates when the door trigger has been activated or the door is open, and bypasses that zone until it is closed.



Icon

The remote start icon indicates when the vehicle is remotely started.



Icon

The override mode icon appears when the system is in override.



Icon

The remote engine start safety shut down icon indicates the vehicle may be in gear or other unsafe condition inhibiting remote start operation.



Icon

The battery level icon indicates the level of power remaining in the battery.



Icon

No function.



Icon

The silent arm/disarm icon appears when the system has been armed or disarmed in the silent mode.



Icon

Chirps are enabled.



Icon

The arm icon appears when the vehicle is armed and locked. The disarm icon appears when the vehicle is disarmed and unlocked.



Icon

Celsius/Fahrenheit icon indicates the current mode of the displayed temperature either in Celsius or Fahrenheit.


→ function button configurations

Function	Button	Icon	Audible Indication
Lamp On (10 sec)			
Power-Saver Mode*	+		Melody
Beep/Vibrate Mode	+		4 Vibrations/ 1 Beep
Time Adjust Mode (hour)**	for 5 Seconds		2 Beeps
Time Adjust Mode (min)**	1 Time***		
Alarm Clock Set Mode (hour)**	2 Times***		
Alarm Clock Set Mode (min)**	3 Times***		
Alarm Clock Music or Power on Music Selection**	4 Times***		5 Selections 1/2/3/4/5
Alarm Clock Adjust Mode (on/off)**	5 Times***		
Timer Count Down Adjust Mode (hour)**	6 Times***		

Timer Count Down Adjust Mode (min)**		7 Times***				
Timer Count Down Ending Melody Selection 1**		8 Times***			5 Selections 1/2/3/4/5	
RS Timer Count Down Mode (on/off)*		9 Times***				
Remote Start On Melody Selection 2		10 times***			5 Selections 1/2/3/4/5	
10 Min Parking Count Down Mode		+	1 Time			Melody
20 Min Parking Count Down Mode		+	2 Times			Melody
30 Min Parking Count Down Mode		+	3 Times			Melody
60 Min Parking Count Down Mode		+	4 Times			Melody
90 Min Parking Count Down Mode		+	5 Times			Melody
120 Min Parking Count Down Mode		+	6 Times			Melody
Parking Count Down Off Mode		+	7 Times			Melody
Alarm Clock Mode On/Off****		+				Melody
Celsius/Fahrenheit Select Mode		+	+		or	Melody

* This function will operate in the disarmed state only.

** The button will advance the selection upward. The button will advance the selection downward or select the off setting.

*** Be sure to hold  down for five seconds prior to entering timer clock adjust mode operation.

**** Press once to have the alarm clock on. Press twice to have the alarm clock off.

remote operation

The 554 remote start system operates at 434 MHz and incorporates an A.S.K. out-board two-way transceiver. The high frequency combined with Binary Data communication achieves superior range with two-way communication.

system signal paging features

A page is the signal the control module sends to the transceiver as confirmation of receipt of a command or alarm system status.

When the transceiver receives a page it will generate a page notification to the user (notifications are audible beeps or transceiver vibration) and the LCD icons will display the current system status.

Command Page


When a command (arm/disarm, remote start, or auxiliary channel) from the transceiver is sent and received, the system will send a command page back to confirm receipt.

Page Recognition Mode

The transceiver will leave a zone icon illuminated when it has received a triggered response and will wait for violation recognition. To clear the LCD information and alarm page alerts, turn the ignition on and then off

using your system

→ active arming

Press  for one second to arm the system. The vehicle's lights will flash once, the doors will lock, the siren will chirp once, and while the system is armed, the status LED will blink approximately once per second to indicate the system is actively protecting the vehicle.

The transceiver will beep once (or vibrate). The arm icon (29) will appear and remain displayed on the LCD.

Open Zone Notification

If the siren chirps again, the transceiver beeps again, and the status LED blinks in a pattern, a protected entry or sensor input is active and its icon will be displayed on the transceiver LCD. This is called open zone notification. Refer to the *Diagnostic* section of this manual for further information.

→ passive arming

The system can be programmed to arm automatically. This is called passive arming. In passive arming mode the system will arm itself 30 seconds after the user exits the vehicle and closes all protected entry points.

Passive arming sequence

1. Turn the ignition off and exit the vehicle.
2. Close all protected entry points (doors, hood, trunk).
3. The status LED will blink at twice its normal rate indicating the system has begun the 30 second countdown.
4. After 20 seconds the siren will chirp once (unless programmed off) as an audible indication that the system is about to arm.
5. At 30 seconds the system will fully arm itself. At this time the lights will flash and the doors will lock (if programmed for passive locking).

The LED will flash and transceiver's arm icon (29) will appear and remain displayed on the LCD. However, the transceiver will not chirp or vibrate confirmation.

note: The system will not passively arm if a protected entry or sensor is active; unless forced passive arming has been programmed on. Refer to the *Programming Options* section for information about forced passive arming.

→ vehicle protection

Following are descriptions of the many ways this system protects the vehicle. Included are descriptions of the types of alarm pages and how to interpret them.

- **Door Locks (if available)** - The system will automatically lock the vehicle doors when armed.
- **Starter Kill** - The starter kill will prevent the vehicles starter motor from cranking when armed.
- **Status LED** - The status LED blinks approximately once per second as a visual deterrent to potential vehicle theft.
- **Warning** - Light impacts trigger the warning signal. When triggered, the siren chirps and the parking lights flash for a few seconds.
- **Triggered Sequence** - Heavy impacts trip a Triggered Sequence. The sequence consists of the siren sounding continuously and the parking lights flashing for the programmed duration.
- **Progressive Response** - If a door is opened, the system will immediately start chirping the siren and flashing the parking lights. Three seconds later, the siren output changes to a continuous blast. This progressive response gives you time to disarm the system with your transceiver if you inadvertently open the door while the system is armed, while still providing instant response (even if the door is immediately closed).
- **Ignition Trigger** - Turning on the ignition key will trip the same progressive response as opening a door.

→ warning response description

A warning Response consists of an alarm page along with the responses described below.

- **Shock Sensor** - Light impacts to the vehicle will flash the vehicle lights and chirp the siren for a few seconds.
- **Remote Control Notification** - Ten quick beeps (or one vibration).
- **Remote Control LCD** - The full trigger alert icon (28) will dimly illuminate for two seconds
- The transceiver will enter Page Recognition Mode and operate alarm page alerts.

note: Icons 13 and 14 represent alarm system zone inputs. For more information about icons and the zones they represent refer to the *Standard Remote Configurations* section.

→ triggered response description

A triggered response can be activated by any of the triggers listed below and consists of an alarm page along with the response described for each trigger. The default triggered response duration is 30 seconds but can be programmed from 1-180 seconds by your installer with the Pro Security Programmer.

- **Sensor Trigger** - Heavy impacts to the vehicle will instantly sound the siren and flash the lights for the programmed duration and report Zone 2.

- **Door Trigger** - If a door is opened the siren will chirp for three seconds, then the siren will sound and the lights will flash for the programmed duration and report Zone 3. The three seconds allow the user time to disarm the system with a minimum of noise should a door be opened inadvertently while the system is armed.
- **Hood Trigger** - Opening the hood will sound the siren, flash the lights for the programmed duration, and report Zone 1.
- **Trunk Trigger** - Opening the trunk (if connected) will instantly sound the siren and flash the lights for the programmed duration and report Zone 4.
- **Ignition Trigger** - If the ignition is turned on the siren will chirp for three seconds, then the siren will sound and the lights will flash for the programmed duration and report Zone 5.

When a triggered response is activated the transceiver will:


- Repeat four quick beeps (or vibrate) for 15 seconds.
- The zone icons will turn on and remain on until the ignition is turned on and then off, clearing the page alert.
- The transceiver will enter page recognition mode and generate alarm page alerts.

note: Icons 13, 14, 16, and 20 represent alarm system triggered sequence zone inputs. For more information about icons and the zones they represent refer to the *Standard Remote Configurations* section.

→ **arming/disarming while driving**


The alarm system can operate while the vehicle is being driven for added safety when driving through areas of questionable security. The alarm will only respond to the door trigger inputs and the starter kill will be activated.

Arming while driving

Press  for two seconds while the vehicle is running. The vehicle's siren will chirp, the lights will flash, and the doors will lock (if unlocked). Then an open zone notification chirp will be heard and the status LED will blink in a pattern of five indicating the ignition is on.



The transceiver will beep once (or vibrate), and the arm icon (29) will be displayed on the LCD.







Disarming while driving

Press  on the transceiver or simply turn off the ignition to disarm the system. The lights will flash twice, the doors will unlock, the siren will chirp twice, and the status LED will turn off. The transceiver will beep twice (or vibrate). The disarm icon (29) will be displayed on the LCD.

note: If the transceiver received a warning or triggered response page while armed, the first press of the unlock button will clear the page alert. A second press will turn the siren off, and a third press will disarm the system.


→ remote sensor bypass

Remote Sensor Bypass allows you to select which of the system's inputs or sensors will be active and which will be bypassed when the system is armed. (See *Table of Zones* section of this guide.) Pressing  (only in standard configuration) again within five seconds of arming the system will activate the Remote Sensor Bypass feature. Each press of  will select a different security level, and the transceiver will beep or vibrate once and the arm icon (29) will flash on the LCD. The system will respond as follows.

- Press  once: The siren chirps once and the system is armed.
- Press  a second time within five seconds: The siren chirps twice followed by a long chirp. Zone 2 is now bypassed.
- Press  a third time within five seconds: The siren chirps three times followed by a long chirp. Zone 4 is now bypassed.
- Press  a fourth time within five seconds: The siren chirps four times followed by a long chirp. Zones 2 and 4 are now bypassed.
- Press  a fifth time within five seconds: The siren chirps five times followed by a long chirp. All input zones, except the ignition, are now bypassed.
- Continued pressing of  will begin the Remote Sensor Bypass cycle over again.



note: Remote Sensor Bypass only applies to a single arming cycle. Once the system is disarmed and then re-armed, all the zones will be active again.


→ **disarming**

Press  to disarm the system. The vehicle's lights will flash twice, the doors will unlock, the siren will chirp twice and the status LED will turn off. The transceiver will beep twice (or vibrate), and the disarm icon (29) will be displayed on the LCD.

If the siren chirps and the transceiver beeps four or five times when disarming, the system is reporting a triggered response or the false alarm prevention circuitry was activated while armed. Refer to the Diagnostic section of this manual for information about disarm diagnostics and how to interpret them.

→ **silence alarm without disarming**

This a feature makes it possible to silence and reset the system while it is triggered, without disarming the system. If the system is triggered and the siren has been sounding for longer than six seconds, press any button on the transceiver to stop the page, then press  on the transceiver to stop the trigger and return the unit to the armed state. The system will not disarm, but rather reset. This prevents you from disabling the system should you wish to disarm it without visually checking the vehicle. Pressing  after resetting the system will disarm the system.


Pressing any button to clear the transceiver page and  within the first six seconds will stop the trigger response and disarm the system. The six second timer is there for your convenience in case the system was accidentally triggered.

→ **disarming without a transceiver (emergency override)**

If your transceiver is lost or damaged, you can manually disarm your vehicle security system. To disarm the system without a transceiver, you must have the vehicle's ignition key and know where the override switch is located. Be sure to check with your installer at the time of installation for both the location and the preset response (1-5 presses) of the override switch.




To disarm the security system, turn the ignition to the ON position. Press the override switch the preset number of times (one to five times) within five seconds. The factory preset is one. After five seconds, the system will disarm. If the system does not disarm, you may have waited too long; turn the ignition off and on and try again.

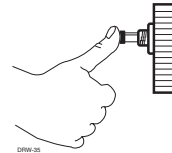

Location of override switch _____
Number of Presses _____



important! The override switch can be programmed to respond to 1-5 presses for the disarm function. You must check with the installer to verify the programming for your individual unit.

→ **silent arm/disarm**

To temporarily turn off the arm or disarm chirps, use silent arm/disarm. Simply press  for less than one second before arming or disarming, and the confirmation chirp(s) will be eliminated for that one operation only. When silent arm/disarm has been used the silent arm/disarm mode icon will indicate silent arm/disarm. If you want the arm/disarm chirps turned off permanently, your dealer can do this for you.

note: The warning response to lighter impacts is bypassed if the system is armed using silent arm/disarm. This ensures that no chirps will be emitted by the siren in an area you want chirp-free. The system is still fully capable of triggering. Only the warning response is bypassed.

→ panic mode

If you are threatened in or near your vehicle, you can attract attention by triggering the system with your transceiver. Just press  for two seconds, and you will enter panic mode. The siren will sound and the parking lights will flash. To stop panic mode press  on the transceiver again.

note: Once panic mode has been entered, the siren will sound for 30 seconds.

The transceiver will beep (or vibrate) continuously when the system enters panic mode. The transceiver will not generate a page notification when panic mode is exited.


→ override mode

You can prevent your security system from passive arming by using override mode. This is very useful when washing the vehicle or having it serviced. In override mode, the security system will not arm, even with the transceiver, but all convenience functions (door locks, trunk release, remote starting, etc.) will continue to work normally.

To enter or exit override mode:






1. Turn the ignition on.
2. Turn the ignition off.
3. Press and release the override switch within 10 seconds.



The status LED will light solidly if you are entering override mode, and it will go out if you are exiting override mode.

The transceiver will not generate a page notification when entering or exiting override mode using the override switch.

To enter or exit override mode using the transceiver:

1. Open any vehicle door.
2. Press .
3. Press .
4. Press  again.



The status LED will light solidly if you are entering override mode, and it will go out if you are exiting override mode. The transceiver will generate alarm/disarm page notifications since the observing buttons are used when entering and exiting override mode. The status LED is the only way to ensure the system has entered/exited override mode.

 **remote engine start**

This feature allows you to remotely start and run your vehicle for a programmable period of time. This makes it possible to warm up the engine, as well as adjust the interior temperature of the vehicle with the climate control system. If interior heating or cooling is desired, the climate controls must be preset, and the fan blower must be set to the desired level prior to remote starting the vehicle.

important! (1) Never remote start your vehicle when the keys are in the ignition, except when performing Override Take-Over, and (2) Never start the vehicle if it is not in either PARK or NEUTRAL.

To remote start the vehicle:

1. Simultaneously press  and  on the transceiver for one second.
2. The parking lights will flash to confirm that the vehicle will attempt to start.
3. A remote start page notification with a unique melody (or vibration) will be generated and the LCD will display the remote start (19) icon as long as the vehicle is running.

note: The transceiver will generate a Page Notification with a different unique two-tone beep (or vibrate) and the remote start (19) icon will turn off when the remote start shuts down.


4. In gasoline vehicles, the engine will start four seconds after the parking lights flash. In diesel vehicles, the engine will start when the WAIT-TO-START indicator on the vehicle's dash goes out.
5. Once the vehicle has started, it will run for the pre-programmed period of time (either 12, 24, or 60 minutes - see *Programming Options* section of this guide) or until a shut-down input is triggered. When using the Pro Security Programmer, the run time can be programmed from 1-60 minutes.

important! It is unsafe to operate a vehicle's motor in a garage or other closed off area. Breathing the exhaust from the vehicle is hazardous to your health. Never activate the remote engine start in an enclosed space.

When you are ready to drive the vehicle:





1. Insert the ignition key and turn it to the ON (not the START) position.
2. Press the brake pedal.



note: If the brake pedal is pressed before the key is in the ON position, the engine will shut down.

To shut down the remote start and turn off the engine:

While the vehicle is running during remote start operation, the system will monitor the vehicle and will automatically shut down the engine if the system receives any of the following shutdown inputs:



- The brake pedal is pressed.
- The hood is opened.
- The shutdown toggle switch is put into the OFF position.
- The pre-programmed run time (12, 24, or 60 minutes) has elapsed.
- Transceiver buttons  and  are pressed again to start the vehicle.

The transceiver will generate a page notification with a unique melody (or vibrate) and the remote start icon (19) will turn off when the remote start shuts down.

→ **override take-over**





The Override Take-Over feature allows the vehicle to remain running after the key has been removed from the ignition. This feature is useful for occasions when you wish to exit and lock the vehicle for short periods of time, but would like to leave the motor running and the climate controls on.



To perform Override Take-Over:

1. Before turning off the engine, simultaneously press and release  and  on the transceiver. A remote start page notification with a unique melody (or vibration) will be generated and the LCD will display the remote start icon (19) as long as the vehicle is running. Then wait three seconds.
2. Turn the ignition key to the OFF position. (The engine will stay running.)
3. The engine will run until the pre-programmed time elapses or a shut-down input is received. (See the previous *remote engine start* section for a complete list of shut-down inputs.)



note: This feature will not work if the brake pedal is pressed or if any shut down input is active.

→ **setting the clock**

To set the clock press and hold  for five seconds, the transceiver will chirp twice and the hour selection will start flashing. Immediately press  to advance the hour selection or  to reverse the hour selection. Once the correct hour is displayed press  again and the minute selection will start flashing.

Then press  to advance the minute selection or  to reverse the minute selection. Once the correct time is displayed simply stop pressing any buttons for 10 seconds and the transceiver will automatically exit the clock mode.

temperature check mode

This system will report the interior temperature of your vehicle with the press of two buttons. To activate the temperature display press  and  simultaneously. You will hear a melody and the interior temperature will appear on the LCD screen for five seconds.

note: If the ignition is on, the temperature check clock-mode will not work.

safety features

This system has several important safety features to ensure proper operation of the motor and prevent accidental damage to the engine or its components.

→ **starter anti-grind circuitry**

Whenever the vehicle is remote started, advanced anti-grind circuitry prevents the starter from engaging, even if the key is turned to the start position. This prevents damage to the starter motor if the key is turned to the start position during remote start operation.

note: Anti-grind circuitry only works when the remote start system is operating the motor and the starter kill relay is installed.

→ **disabling the remote engine start system**

This feature allows your system's remote start unit to be temporarily disabled to prevent the vehicle from being remote started accidentally. This feature is useful if the vehicle is being serviced or stored in an enclosed area. To disable the remote start, move the shutdown toggle switch to the OFF position. The switch can be installed in a location of your choice. Check with your installer for recommended locations.

Location of Shutdown Switch _____

→ **over and under rev protection**

The system monitors the engine speed and will automatically shut the engine off if the RPMs rise above or fall below the programmed levels. This feature prevents damage to the motor due to fuel delivery system failures or other problems which may cause the engine to race.

note: The system uses a wire connected to the vehicle to sense engine speed. This wire must be connected in order for over and under rev protection to work.

→ **shut down inputs**

This security system uses several inputs to shut down the remote start operation of the motor or prevent remote start if certain inputs are active. The two most important are hood and brake inputs. The hood input will prevent the motor from starting, as well as shut it down, any time the hood is opened. The brake pedal will shut down the motor at any time during remote start operation, as well as preventing the remote start from activating while it is being pressed.

→ **false alarm prevention circuitry**

Your system has false alarm prevention circuitry. It prevents annoying repetitive trigger sequences due to faulty door pin switches or environmental conditions such as thunder, jackhammers, airport noise, etc.

Example

If the alarm triggers three times within a 60-minute period and each time the same sensor or switch triggers the alarm, false alarm prevention circuitry will interpret those triggers as false alarms. After the third trigger, the false alarm prevention circuitry ignores, or bypasses, that sensor or switch (along with any other sensors or switches sharing the same zone) for 60 minutes.

If the bypassed sensor tries to trigger the security system while it is being bypassed, the 60-minute bypass period will start over. This ensures that a sensor that is continually being triggered will remain bypassed.

The vehicle doors are protected by false alarm prevention circuitry differently. If your security system is triggered by an open door for three full cycles, the system will bypass the doors until the trigger ceases.

note: Arming and disarming the system does not reset this function! The only ways to reset a bypassed zone are for it to not trigger for 60 minutes, or to turn on the ignition. If testing your system, it is important to remember that the false alarm prevention circuitry programming can cause zones to be bypassed and appear to stop working.

diagnostics

The microprocessor at the heart of your system is constantly monitoring all of the switches and sensors connected to it. It is designed to detect any faulty switches and sensors and prevents them from disabling the entire system. The microprocessor will also record and report any triggers that occurred during your absence. Refer to the *System Status Chirps* and *Table of Zones* sections of this guide for diagnostic information.

→ **arming diagnostics**

If the security system is armed at the same time that an input is active (such as a door opening or sensor triggering), the system will generate a open zone notification. This means that the security system ignores the input that was active when the system was armed, until that input ceases. Three seconds after that input ceases, the security system will resume normal monitoring. For example, if your vehicle has an interior light exit delay and you arm your security system before the interior light turns off, you may hear a open zone notification. Once the light turns off, however, the security system resumes normal monitoring.

→ **disarming diagnostics**

Extra chirps that are heard when disarming the system are defined as follows: If four chirps are heard when disarming the system, a triggered response was generated in your absence. If five chirps are heard when disarming the system, a zone was trig-

gered so many times that the false alarm prevention circuitry has bypassed that zone. In either case, the status LED and transceiver LCD will indicate which zone was triggered (see *Table of Zones* section). The security system will retain this information in its memory and chirp four or five times each time it is disarmed, until the next time that the ignition is turned on.

→ system status chirps

The siren will chirp when arming/disarming the system. The pattern of chirps will audibly report the system's status as described below.

Action	Number of Chirps/ Remote Beeps	Description
Arm	1	System armed
Arm	1 (3-second delay), 1	System armed with open zone notification
Disarm	2	System disarmed
Disarm	4	System disarmed with previous alarm
Disarm	5	System disarmed false alarm prevention circuitry active

→ table of zones

A zone is represented by the LED flashes used by the system to identify a particular type of input. Standard input assignments are listed in the following table.

ZONE (Number of LED Flashes)	DESCRIPTION
1	Instant trigger - hood pinswitch
2	Instant trigger - a heavier impact detected by the shock sensor
3	Door switch trigger
4	Instant trigger - for optional sensors
5	Ignition trigger



→ interpreting zone diagnostics

Warning responses are not reported by the arming or disarming diagnostics. If you receive a open zone notification when arming or a previous alarm notification when disarming, look at the LED or transceiver LCD. Active or triggered zones will be indicated by a pattern of blinks by the LED or the transceiver icon will indicate the triggered zone.

Example


If Zone 3 was active or triggered, the LED will blink three times with a two-second pause. Then it will blink three times again, and repeat until the ignition is turned on and the door icon (9) will be displayed on the transceiver.

note: Your system stores the last two triggered zones in memory. If your system has been triggered but the LED has been reset by turning on the ignition, your dealer can still recall the last two zones that were triggered. Contact your dealer for details.

- Arming and disarming diagnostics (including warning responses) are reported by the transceiver on the LCD.
- When an open zone notification is generated during arming the transceiver LCD will flash until the alarm is reset by the ignition.
- To review zones that have been bypassed press  10 seconds after arming the system. The bypassed zones will flash until the alarm is reset by the ignition.
- When a previous alarm notification is generated upon disarming, the triggered zones will flash continuously on the transceiver LCD until reset by the ignition.
- To review the zones that have been triggered press the  button. They flash five times, then turn off.

anti-code grabbing

The receiver and remotes use a mathematical formula called an algorithm to change their code each time the transceiver is used. This technology has been developed to increase the security of the unit. The control unit knows what the next codes should be. This helps to keep the transceiver “in sync” with the control unit even if you use the transceiver out of range of the vehicle. How-

ever, if the transceiver has been pressed many times out of range of the vehicle, or the battery has been removed, it may fall out of sync with the control unit and fail to operate the system. To re-sync the transceiver simply press  several times within range of the vehicle. The alarm will automatically re-sync and respond to the transceivers normally.

individual recognition

Individual recognition is a revolutionary new feature. Using a Pro Security Programmer, hand-held programming tool, your dealer can program many of the system settings. The programmer makes it possible to program different settings for each transceiver that is used with the system. Then, whenever a specific transceiver is used, the system will recall the settings assigned to that transceiver. Individual recognition lets up to four users of the system have different settings that meet their specific needs. It is almost like having four separate alarms in your vehicle, one for each user.

note: Individual recognition cannot be programmed without a Pro Security Programmer and the necessary software. Check with your dealer for more information.

power-up

This system will store its current state to non-volatile memory. If power is lost and then reconnected the system will recall the stored state from memory. This means if the unit is in override mode and the battery is disconnected for any reason, such as servicing the car, when the battery is reconnected the unit will still be in override mode. This applies to all states of the system including arm, disarm, and override mode.

power saver mode

Your system will automatically enter power saver mode while armed or in override mode, after a period of time in which no operation has been performed. This lowers the current draw on the vehicle's battery. Power saver mode takes over under the following conditions:

- Power saver when the system is armed: After the system has been armed for 24 hours the LED will flash at half its normal rate, decreasing the system's current draw.
- Power saver in override mode: When the system enters override mode the LED illuminates steadily. If the vehicle is not used (ignition is not turned on) for a one hour period while the system is in override mode, the LED will shut off. If the system remains in override mode, the LED will come back on the next time the ignition is turned on and then back off.

programming options

Programming options control your system's normal, operational set-up. Most options do not require additional parts, but some may require installation labor.

The following is a list of the programmable options, with the factory settings in Bold.

- **Active** arming (transceiver only) or passive arming (automatic arming 30 seconds after the last door has been closed).
- Arming/disarming siren chirps **on** or off.
- The ignition controlled door lock feature **on** or off: When this feature is programmed on, the doors will lock three seconds after the ignition is turned on, and unlock when the ignition is turned off. If your installer is programming the security system with the Pro Security Programmer, ignition lock and unlock are independent features that can be programmed separately.
- Passive door locking (with passive arming) or **active door locking** (only when arming with the transceiver). Passive locking allows the vehicle's doors to lock when the security system passively arms (after the 30-second countdown). This feature only works if passive arming has been programmed.
- Panic mode **enabled**/disabled when the ignition is turned on. (Some states have laws against sirens sounding in moving cars.)

- Forced passive arming **on** or **off**. If your security system is programmed for passive arming and the forced passive arming feature has been programmed on, the system will passively arm after one hour, even if a protected entry has been left open. Forced passive arming ensures that the system will be armed if a door has accidentally been left ajar when leaving the vehicle.

note: When the system passively arms after one hour, the entry point that has been left open, and anything connected to the same zone, is bypassed and cannot trigger the system. However, the remaining inputs to the system are fully operational.

- Full trigger response **30** or **60** seconds: This determines how long the full triggered sequence lasts. Some states have laws regulating how long a security system can sound before it is considered a nuisance. If your installer is programming the security system with the Pro Security Programmer, the full triggered response can be programmed for any duration ranging from 1 to 180 seconds.
- Automatic Engine Disable (AED) **on** or **off**. The purpose of this feature is to protect the vehicle from being stolen at all times, regardless of whether or not the alarm is armed. If AED is programmed on, the starter of the vehicle will be disabled 30 seconds after the ignition is turned off. Once the key is turned off, the LED will flash slowly (one-half its normal armed rate) to indicate the AED arming cycle. Thirty seconds later, the starter will be disabled. To start the

car, it will be necessary to disarm the system with the transceiver. It is also possible to disarm the AED feature by turning the ignition key to the RUN position and pressing the override switch the programmed number of times. AED is also disabled when the system is in override mode.

note: This feature will only function if the starter kill relay has been installed.

- Siren tones and arm/disarm chirp volume. The output of the siren consists of six different tones in sequence. Any of these tones can be eliminated by the dealer, resulting in a unique, easily identifiable siren sound. The arm/disarm chirps can be either full volume or **6 decibels quieter** than the full alarm blast.
- Using the Pro Security Programmer, the engine can be programmed to run for any duration ranging from 1 to 60 minutes. **12 minutes** is the default. After the programmed run time, the engine will shut down and will not restart, unless in Timer Mode.
- While the remote start system is running the engine, the parking lights of the vehicle can **flash on and off** or come on and light steadily.

security & convenience expansions

Listed below are some of the many expansion options available. Please consult your dealer for a complete explanation of all the options available to you.

Audio Sensor: Metal on glass, glass cracking, and breaking glass produce distinctive acoustic signatures. The audio sensor uses a microphone to pick up sounds, then analyzes them with proprietary acoustic software to determine if the glass has been struck.

Backup Battery: The keeps the system armed, triggers the alarm and keeps the starter interrupt active if main battery is disconnected.

Hood Lock: Prevents the vehicle's hood from being opened without a key, keeping thieves away from the system's siren, the battery connections, and other components under the hood.

Field Disturbance Sensor: An invisible dome of coverage is established by installing the "radar" sensor. Your system can react to any intrusions into this field with the full triggered sequence.

Power Locks: This system offers lock outputs that can control some manufacturers' power door lock systems. For other systems, additional parts may be required.

Power Trunk Release: The accessory output of the system can operate a factory power release for the vehicle's trunk or hatch. Although the on-board relay can control most power trunk re-

leases, sometimes an optional relay is required. If the factory release is not power-activated, a trunk release solenoid can often be added.

Power Window Control: Power window control can be provided by one of two systems. The first system provides control that will roll up two windows automatically when the system is armed, or roll two windows down by using the remote. The second system will roll two windows both up and down. This second system also provides one touch switch operation.

glossary of terms

Control Unit: The “brain” of your system. Usually hidden underneath the dash area of the vehicle. The control unit houses the microprocessor which monitors your vehicle and controls all system functions.

Starter Kill: An automatic switch controlled by your system that prevents the vehicle’s starter from cranking whenever the system is armed. The vehicle is never prevented from cranking when the system is disarmed, in override mode, or if the starter interrupt switch itself fails. Your system has feature-ready circuitry for the starter interrupt, however installation may require additional labor.

Input: A physical connection to the system. An input can be provided by a sensor, pinswitch or by existing systems in the vehicle, such as ignition or courtesy lights.

LED: A blue light mounted at a discretionary location inside the vehicle. It is used to indicate the status of your system and as a visual deterrent.

Protected Entry: A protected entry is a door, hood, trunk, sliding window, camper door or any other opening into the vehicle that can be connected to the alarm with a switch.

Shock Sensor: This system has a dual zone shock sensor. This sensor is mounted in the vehicle and designed to pick up impacts to the vehicle or glass. Lighter impacts will generate a warning response while harder impacts will generate a full-trigger response.

Remote Control: A hand-held device that operates the various functions of your system and communicates system status.

Triggered Sequence: This is what happens when the alarm “goes off” or “trips.” The triggered response of your system consists of the siren sounding and parking lights flashing for the programmed duration.

Override Switch: A small push button mounted at a discretionary location inside the vehicle. It is used to override the starter interrupt when a transceiver is lost or damaged, or to enter or exit override mode and for programming when the Pro Security Programmer is not available.

Warning Response: Lighter impacts to the vehicle will generate the warning response. It consists of several seconds of siren chirps and parking light flashes.

Zone: A zone is a separate input that the alarm can recognize as unique. Each input to the system is connected to a particular zone. Often two or more inputs may share the same zone.

Get Started Get Protected



Ungo Pro Security
661 W. Redondo Beach Blvd.
Gardena, Ca. 90247

800-GO-CLARION

© 2003 Directed Electronics, Inc. GSR5000_11-03

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>