



CB RADIO AE 5090



OPERATING MANUAL

www.albrecht-online.de

Index

Important note	3
Introduction	3
Accessories included	4
Safety Precautions	4
Front view	5
LC Display	5
Rear view	5
Country switch setting before Installation	6
Installation of the radio	7
Power supply	7
Antenna connection	8
Operation	9
Before switching on	9
Switching on and adjusting volume	9
Selecting the operating channel	9
Field intensity meter (S-meter)	9
RF Gain setting	10
Adjusting squelch (muting) and ASC	10
ASC Noise and Interference Reduction	10
AM / FM mode switch	11
Special interest channels	11
MEMO Modus	12
Recall direct channels	12
Programming one of the 5 direct channels	12
Switching back to normal channel operation	13
Channel scan	13
Dual Watch	13
Transmitting and correct use of microphone	14
Bar graph switching between POWER and MOD	14
MIC Gain setting	14
External sockets	15
External loudspeaker	15
External S-meter	15
Microphone socket	15
Service and Warranty information	16
Legal Information	17
Albrecht Radio Passport	17
Declaration of Conformity	18
Technical Details	19
Service contacts	19

Important Note

Your Albrecht AE 5090 corresponds to the latest European CB standards. As a unique feature, it has a country switch which allows selecting the operation mode according to the country, where You intend to use the radio. Please make sure that You put the country switch on the front side of the radio into the correct position **before installing and connecting** the power supply!

- 40 FM** 40 channels FM / 4 Watt (former "CEPT" settings with 40 Channels FM according to EN 300 135-2). This mode is free of charges and licences in nearly all European countries (except Italy, You must have a licence there for any kind of CB radio).
- 80/40** **For Germany only:** 80 channels FM / 4 Watt, 40 channels AM / 1 Watt. You need no licence to operate the radio in this mode, but in certain border regions base stations transmitting on channels 41 to 80 in FM is not allowed (or special licence should be applied for).
- 40/40** 40 channels FM / 4 Watt, 40 channels AM / 1 Watt. Latest European Standard EN 300 433-2, not yet applied in all countries. In Belgium, Italy, Spain and Switzerland You need a licence to operate the radio, while it is already free of charges and licence in France, Finland, Germany, the Netherlands and Portugal.

Introduction

Your new Albrecht CB Radio AE 5090, developed and manufactured in accordance with the latest CB regulations, offers you:

- 40 channels FM / 4 watt or
- 80 channels FM / 4 watt / 40 channels AM / 1 Watt or
- 40 channels FM / 4 Watts / 40 channels AM / 1 Watt
- Channel selection knob on the radio set and UP/DOWN buttons on the microphone
- Scan modes for up and down frequencies and Dual watch
- 5 freely programmable memory positions for stored stations
- Direct Access Key Channel 9
- Multifunction LCD display
- 6-pole microphone socket, suitable for amplifier microphones, selective calling systems or Packet Radio modems/TNC's
- Socket for external S-meter

- Socket for external loudspeaker
- Rugged , noise-reduced dynamic “Trucker” microphone
- Conventional Squelch + additional ASC noise reduction system

Please read this operating manual through carefully. This will enable you to make use of all the functions your new CB Radio has to offer as soon as possible.

Accessories included

Your AE 5090 comes operational with the following accessories:

- mobile mount
- 2 knurled screws for the mobile mount
- 2 rubber washers for the mobile mount
- DC plug-in power cable with looped-in fuse
- spare fuse
- noise-reduced dynamic hand-held microphone with UP/DOWN buttons
- microphone hanger
- various screws to fasten the radio and microphone fixing devices
- User manual with circuit diagram and Radio Passport


Safety Precautions

People with pacemakers are recommended as a precaution to consult their doctor before operating the CB radio. Not all types of pacemakers are sufficiently protected from radiation from a nearby transmitter, so do not assume it is safe to start operation without checking! Please remember that you are in the immediate vicinity of a transmitting aerial, particularly when used as a mobile. If your doctor, or the manufacturer of the pacemaker, has recommended keeping a certain safe distance from the aerial, then please follow their instructions!


Do not transmit without connecting the aerial and never touch the aerial during transmission!

Please also take road safety into account! CB Radio (even when only receiving, particularly when volume is turned up) can divert your attention from the road! Road safety is of course to be given priority! Therefore only use your ALBRECHT AE 5090 when the traffic situation enables it to be used safely.


Front view

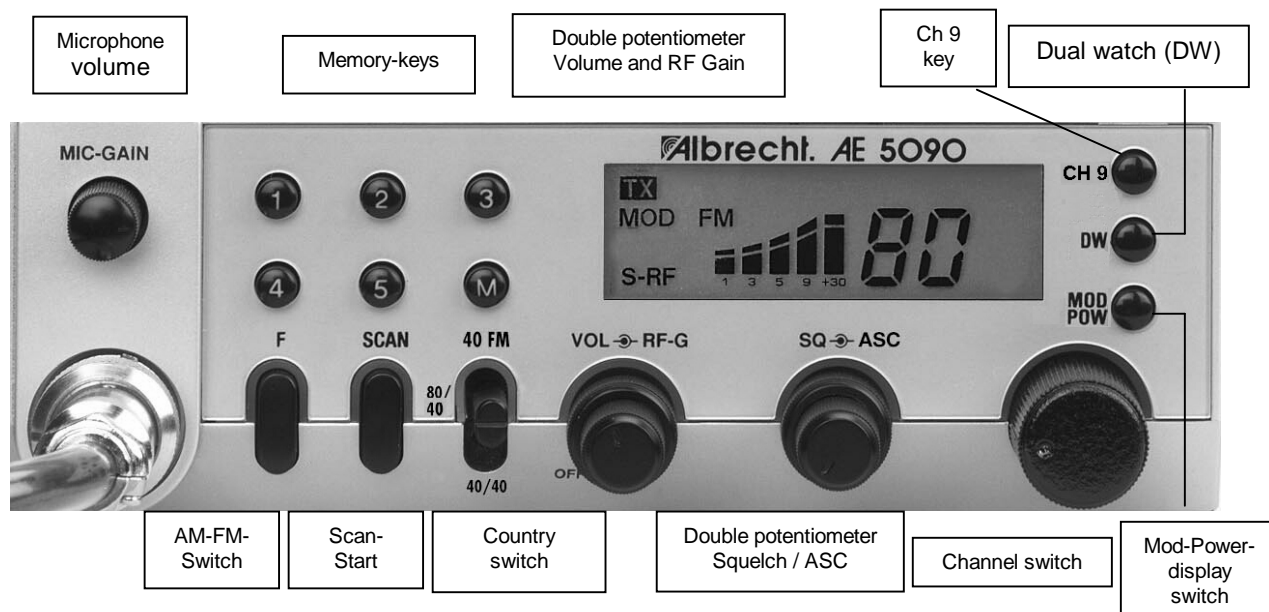

LC Display

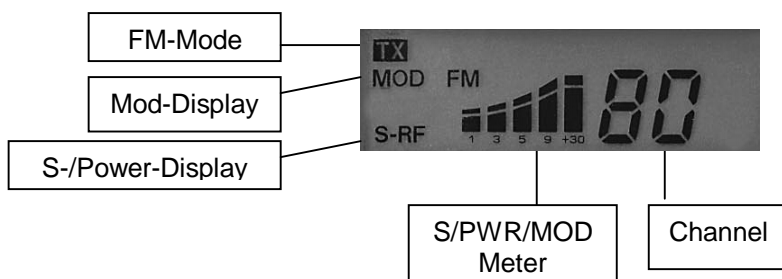

Rear view

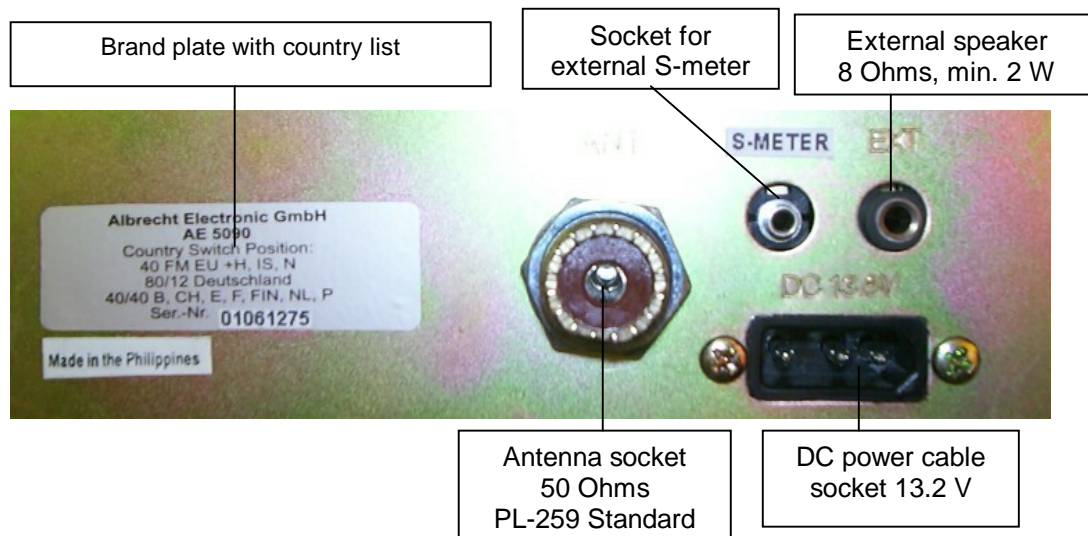

Country switch setting before installation



Before You switch on Your new CB radio, You should preset the country switch on the front panel of the radio according to the local authority requirements. If You are not sure and if You should not have any individual CB licence issued by the telecommunications authority of the country where You live, You should use the factory default setting of the switch: This is the left position on the picture, 40 FM. Please consult our Radio Passport (see the

chapter “Legal Information” later in this manual)

40 FM This is former “CEPT” mode, the (upper) position which is allowed in most countries. Here the radio works on the international 40 Channels in FM mode. The Function switch F on the front side is disabled in this mode. (Caution: In Italy You need a licence, even for this mode!)

80/40 This position (medium switch position) is only allowed to be used in Germany, no individual licence is necessary. Restrictions are still in force in the border regions to other countries (except to Czechia), where transmitting on channels 41 – 80 is not allowed or only with a special licence.

40/40 This lowest switch position can be used in those countries, where already all 40 international channels are allowed to be used in AM and FM. AM was traditionally used by CB from the beginning in the early 60’s in USA, and it is still the preferred mode of all truck drivers in the world. Please use this mode only in countries according to the list in the Radio Passport, and please apply for an individual licence where requested.

Re- Programming to another country code

This is possible at any time, even after installation and when the radio is in use:

- Just switch to the desired new position

Note: Please follow the national regulation. Never use a switch position which is not allowed in Your country.

Installation of the radio

You can either operate your ALBRECHT AE 5090 in the car or at home as a base station. For installation as a mobile station in the car, a mobile mount device is enclosed. Mount the set in such a way that it is not exposed to direct sunlight if possible, as this would lead to an increase in the temperature and can decrease the (set's) working life. The set should also not be installed near a heater. Mount the set in such a way that it is exposed to as little vibration as possible.

The mobile fixing device should be attached to the dashboard, the tunnel slot or to any other suitable place using the enclosed tapping screws. Do not install the set in a place where it could cause injuries in the case of an accident (be particularly careful to ensure free leg movement). Take care not to damage any underlying wires during installation!

Then insert the radio into the mobile mount. Secure the set with the large knurled screws (using the enclosed plastic washers) firmly at the required angle.

Also mount the microphone hanger using the enclosed screws in an easily-accessible place.

In order to prevent interference to the vehicle electronics from transmission in the vehicle, please make sure to take any mounting instructions from the vehicle manufacturer for radios and antennas into account.

Power supply

Your AE 5090 receives power from the 2 pin plug-in cable.

The red and black wires in the cable are for the power supply. The cable has a looped-in fuse.

However, You can choose from two methods when connecting to the power supply (red and black):

Example 1

The Radio should be able to be switched on and off at any time using the volume / on/off switch.

Connect up the red wire to the positive pole on the vehicle battery (or elsewhere in the vehicle's electrical system with permanent plus) or to a 12 Volt external power supply unit.

Example 2

The set should be automatically switched on and off with the ignition.

Attach the red wire to a part of the vehicle electrical system which is interconnected to the ignition.

Connect up the black wire to the negative pole on the vehicle battery or the power unit or to a well-conductive part of the car body.

An non volatile flash memory keeps the channel and country information stored even if the radio is not connected to power.

Note for all connecting methods:

For EMC reasons, the cable used to connect to the power supply should be no longer than 3 metres.

If you wish to operate your set at home from the mains supply then please only use a stabilized power pack with at least 2 amps permanent current-carrying capacity. Under no circumstances should you use a car battery charger, as these are not stabilized and during open circuit reach such high voltage levels that your radio set could be destroyed.

In any case, please set the country switch on the front panel to the correct country position before you plug in the DC cable! A reset procedure will not be necessary if the power cable had been unplugged for more than 10 seconds.

If in base station use it is important to you that the stored stations are kept even after switching off and on again, then please do not switch the external power supply power unit off when you switch your set off for a short time. Only use the on/off switch on the set itself.

Never repair a blown fuse with silver paper or with aluminium foil! If the fuses keep blowing, then please give your radio set to your servicing dealer to be repaired or hand it in to Albrecht's service station.

The maximum allowed voltage variation for this radio is up to 15.6 volts. Never exceed this voltage under no circumstances! The transmitting stages for your AE 5090 are electronically stabilized, and therefore it is impossible to increase output by means of excessive supply voltage. Such attempts may lead to serious damage to the radio set but will never increase output power!

Antenna connection

Connect your CB antenna to the ANT socket on the rear side of your ALBRECHT AE 5090. Most CB antennas must be tuned to best radiation during installation to give highest effective communication range. CB specialists do that job with a standing wave meter to check and adjust the aerial. Tune the aerial to the best standing wave ratio (SWR) on an intermediate channel e.g. using Channel 1 in 80/12 mode (26.965 MHz) or Channel 20 in all other modes.

On this channel you should attain a SWR of approx. 1.5 or less. If the SWR deteriorates on the highest (Channel 40) and lowest (Channel 41) channels up to a value of 2.5, then your aerial is still acceptable. SWR above 3 is too bad for good communication range. A bad SWR may also indicate that there is perhaps an

installation error or missing ground. Problems may be caused through missing ground, especially in boats and motor homes with fiber glass body. For these cases, Albrecht offers a special connecting cable with matching box as “artificial ground” (AKM 27)

Some antennas, like “Gamma II” are broadbanded and do not need any retuning during installations.

Even if your AE 5090 has a particularly robust transmitter high-level stage which can even withstand mismatching of SWR=3, you should still never transmit without an antenna!

Operation

Before switching on

- Turn SQUELCH and ASC control left (counterclockwise) as far as possible

Switching on and adjusting volume

The on/off switch is combined in the VOLUME control. To switch on:

- Turn VOLUME control (the inner knob) from OFF position slightly clockwise. LC display and buttons are illuminated. Then turn further until desired volume is reached.

Selecting the operating channel

On the radio set:

- With the rotary channel knob You can continuously select channels. The present channel is displayed.

On the microphone:

- Press the \bar{U} or \bar{U} button on the microphone briefly, to switch up or down a channel.
- Press the respective button longer to run up or down through the channels. The present channel is displayed.

Field intensity meter (S-meter)

On the bar graph display You can see approximately how strong the receiving signal is.

The scale under the bar display (S1 to +30) helps with orientation for an input signal in the stages S1 to S9+30dB.

Please note: the field intensity meter only registers a signal when the muting control has opened.

RF Gain setting

You can adjust the overall-sensitivity of Your receiver with the RF gain knob, which is combined with the volume knob (outer ring). Normally, RF gain should be in the full clockwise position. Sometime You may desire to listen only to nearby stations. Or You may receive much interference signals. In such cases You can reduce the sensitivity of Your receiver by turning the knob more counter clockwise.

Please note: Squelch and ASC settings may require re-adjusting in low sensitivity position.

Adjusting SQUELCH (muting) and ASC

Particularly in FM, noise can be a nuisance on a free channel. To suppress as much noise as possible, Your radio is equipped not only with an ordinary muting control (**SQUELCH**) like all CB radios have, but has also a preinstalled **ASC** circuit (patented by GPE). Both circuits can be preset and adjusted independent of each other. Please be careful with the squelch circuit: it may suppress noise, but if turned too tight, it can also suppress weaker signals.

There is a double potentiometer for both SQUELCH and ASC setting. The inner ring is for SQUELCH, the outer ring is for ASC.

This is how to adjust the signal strength required to switch on the loudspeaker, using the (inner) SQUELCH control knob:

The further the control knob is turned to the right, the stronger a signal has to be in order to be audible through the loudspeaker.

In order to adjust the set to be the most sensitive to incoming signals, switch to a free channel:

- Use the rotary switch or the microphone buttons to find a free channel, where no signal is displayed.
- Then turn the SQUELCH control carefully to the right until the noise just about disappears.

Now the loudspeaker stays off when on a free channel but it switches back on when receiving even very faint signals.

The muting adjustment is particularly important during channel scanning. In this mode the point to which the set is adjusted decides whether scanning is stopped at the signal or not. Therefore you should test the various muting settings for various signal strengths and get to know this function.

ASC Noise and Interference Reduction

While the Squelch opens and closes statically at a certain preadjusted value of the incoming signal, not taking into account interference signals, the ASC circuit works very smooth and dynamically. If interference signals suddenly appear, ASC automatically varies the threshold point to a safer adjustment and returns to the old adjustment when interferences are disappearing again.

An example:

You have adjusted the **SQUELCH** carefully to the most sensitive point while the engine of Your car was still off. Now You start the engine and switch on the windshield wiper The squelch circuit will immediately regard the interference of the

engine or wiper as a signal and will open, because the squelch cannot distinguish between a wanted signal and an unwanted interference.

If You would have preset the **ASC** at switched-off engine before, the interference coming from the wiper motor would be detected and the ASC circuit would shift the threshold point so long automatically, until the interference will disappear.

The radio will remain muted, but stay on the highest sensitivity level during the whole procedure studied in this example.

That means: in most cases You only need to adjust the ASC knob to Your needs only once before starting. The setting will be maintained during travelling. The switching point is no sudden on-off point like the squelch, but a more smooth gliding effect between on and off. The best point is, where the background noise is just becoming so weak, that it does no more disturb You. A small background noise may remain.

Please do not turn the ASC knob too much into full clockwise direction. If You intend to suppress weaker signals which You do not like to hear, use the inner Squelch knob for this purpose and not the ASC knob. A symptom for too much closed ASC potentiometer is when weak speech still comes through, but louder speech no more.

AM / FM mode switch

In the two programming modes 40/40 and 80/40, FM modulation is available on all channels, but AM only on the 40 international CB channels. On these 40 channels you can switch between AM and FM using the function button F. The display shows either AM or FM accordingly.

When you switch on the set the first time it operates on FM.

Please note that in 80/40 mode, 41-80 it is not possible to operate on AM. If your radio is set to AM and you choose an FM channel, the radio will automatically switch from AM to FM. This is indicated by the FM symbol on the display starting to blink. If you switch back to a channel permissible on AM, the radio will switch back to AM.

Special interest channels

There are a few channels which have established themselves for certain purposes:

Channel 1	Call channel on FM
Channel 9	Call and emergency channel, also Trucker channel on AM in Germany
Channel 16	Water sport channel
Channel 19	Trucker channel on AM in France, Spain and Italy
Channel 24/25	Data transfer (Packet Radio, Germany only)
Channel 40	Calling channel in Switzerland

Some recommendations are being worked out by the CB clubs for the new channels 41 to 80 in Germany. To find out which channels are suitable for special purposes, please get in touch with the respective groups or check in CB magazines.

MEMO Modus

Using the 5 direct channel buttons You can switch at any time from the present channel (normal channel modus) to the 5 programmable stored stations (MEMO modus) and switch back again.

Recall direct channels

- Press one of the 5 direct channel buttons briefly. The unit will switch to the pre programmed channel. The channel number and the button number will displayed.

The manufacturer has pre-programmed your AE 5090 for some commonly-used channels:

- Channel 1 recommended call channel on FM
- Channel 4 recommended as call channel for AM
- Channel 9 international calling and emergency channel

In Germany particularly this Channel 9 (in AM) is also used by all truck drivers. This means: a large number of stations are listening in. If the worst comes to the worst (e.g. in case of accident etc.) there is a good chance that someone will be listening.

To call other stations, who you know are listening in on channel 9, you can also use this channel. Call up the desired station on channel 9. As soon as contact has been made, agree on a free channel for your conversation and then channel 9 will be free again for other calls.

An emergency channel can of course only work if as many stations as possible are listening in. Therefore listen in to this channel as often as possible.

- Channel 19: Trucker channel in France, Spain and Italy (in AM).
- Channel 40

Programming one of the 5 direct channel buttons

You can re-programme each of the 5 numbers of the memory positions to any desired channel (e.g. private channels or club channels):

- Choose when in normal modus the desired channel and the modulation mode AM or FM (where allowed).
- Press the **M** button briefly (ME for Memory Enable appears on the display)
- Within the next 5 seconds press the desired direct channel button (1 to 5)

The desired channel is now stored on the direct channel button selected. You will see both channel number (large) and direct button number (small) in the display.

The station will remain stored as long as the power supply is not interrupted or until You make a reset procedure for country switching.

Please note that the German channels 41-80 can only be stored and recalled from Memory in the 80/40 mode!

Switching back to normal channel selection

- Simply turn the rotary knob or press up or down on microphone.
- The display of direct button numbers disappears and the channel selection works again via microphone or rotary knob.

Channel scan

Your AE 5090 has an automatic channel scan, which can be used for all channels. First choose the mode of operation (normal channel modus or MEMO modus). Adjust the muting control to the point at which the receiver should open (see also 'Adjusting squelch').

Start channel scan

- Briefly press the button SCAN.
- SCAN appears on the display and the channel scan starts almost immediately by scanning all the channels down the frequencies.
- The scan is stopped at each signal worth receiving and you can listen in to the conversation.

If you leave the set alone it will re-start the scan after about 5 seconds and continue to search for channels in use.

Stop channel scan

- You can stop the scan at any time by pressing the SCAN button a second time.
- Pressing the transmission button will also automatically stop the scan modus.

Change direction of scan

As a special function of the AE 5090 you can also change the direction in which scanning takes place:

- Press the ∇ button on microphone during the scan or turn the rotary knob slightly to the left: the scan direction will change, i.e. from higher to lower channel numbers.

Dual Watch

The transceiver can also observe two channels. This feature is useful when You like to stay on Your preferred "house" channel, but observe another channel at the same time.

- Select Your house channel with rotary knob or up/down.
- Press **DW** briefly. **DW** will appear in the display.
- Select the other channel with channel knob or Up Down.

You will now hear the selected last channel (see number in display). Your receiver switches now automatically again and again for a short moment to Your preferred house channel. If a signal should be detected there, Dual Watch will stop switching and You will hear the signal, otherwise it will go back to the other channel.

Direct channel 9 access

Just press the button and the channel will be changed to the international calling- and emergency channel 9. Channel display will be blinking. To go back to the original channel, just press knob once more.

Transmitting and correct use of microphone

With the transmission button (Push To Talk) on the side of the microphone you can switch between receiving and transmitting:

- Press PTT button to transmit.
The display shows TX .
- Release PTT button again to switch back to receiving.

Before transmitting the first time, make sure that the MIC gain potentiometer above the mic socket is in the full clockwise position. When the transmission PTT button is pressed, you can speak from a distance of about 5-10 cm into the microphone. The modulation amplifier of your AE 5090 is sensitive enough and enables you in most cases to speak with even more distance, depending on how loud your voice is. An automatic regulator ensures that your partner always hears your signal at the same volume.

It is best to test the best distance from the microphone for yourself with the help of another station.

Bar graph switching between POWER and MOD

During transmitting, You will normally see the bar graph of the S-meter in the display as indicator for Your transmitter output power.

- Alternatively You may now switch with the **MOD-PWR** button to Modulation display instead of Power display. The display shows **MOD** now.
- This will show your modulation volume in the display and will help to check and adjust the microphone.
- You can toggle with the switch between MOD and POWER display

MIC Gain setting

For dynamic microphones, the full clockwise position of the MIC gain knob above the mic socket will be optimised. If You should use amplified microphones, or if You speak with a very loud voice or in high surrounding sound environment, we recommend to readjust the potentiometer more to counter clockwise positions.

External sockets

External loudspeaker

Depending on the surrounding noise, it can be advisable to hook up an external loudspeaker. Usual commercial radio loudspeakers with 4-8 ohms impedance and 2-4 W minimum output can be plugged in.

The cable can be up to 3 metres long. For car loudspeakers, make sure to use a two-pin 3.5 mm jack plug and ensure that none of the loudspeaker connections are attached to the vehicle chassis.

External S-meter

On the back, your AE 5090 has an S-Meter socket on the rear side, which allows you to connect up an external S-Meter to show the relative signal strength. This gives more exact information than the bar display. Please ask your authorized dealer about external S-meters. The S-meter should be installed near the radio set using a cable no longer than 3 metres. You need a 2.5 mm jack plug to connect it up. The polarity is positive, i.e. the positive pole of the S-meter is connected to the inner pin, and the negative pole is on the outside.

Microphone socket

The 6-pole microphone socket on the front side is wired according to the well-known Albrecht specifications, which also meet the recommendations issued by the German manufacturers of CB radios.

Apart from the rugged dynamic "Trucker microphone" included in the package, you can also hook up other microphones and accessories.

The microphone socket has been tested and is suitable for nearly all kind of microphones, even those with amplifiers or selective calling devices. According to the latest regulations you are also allowed to plug in modems or so-called TNC`s for data transfer (Packet Radio). However, this type of data transfer is only permitted on certain channels and only for non-commercial use.

Special regulations apply to data transfer abroad. In Switzerland, for example, Packet Radio is permitted on channels 21-25, but only with a call signal granted by the authorities. In some other European countries Packet Radio is not allowed at all.

Service and Warranty informations

Troubleshooting

Check at first the power supply and the fuse. A problem may be caused through power supply, when no light appears after switching on. If the unit works in a strange way, disconnect the power supply cable, while the radio remains switched on, wait some time (minimum 10 seconds), and then reconnect power again.

Check the microphone and antenna connector. We think You cannot do more in case of a problem. Please ask Your dealer or consult our service hints in the Internet. If You should return the radio to Your dealer for repair, do not forget to describe the problem as exactly as possible.

European 2 years warranty

The distributor, dealer or retail shop where You bought the radio warrants to the original retail purchaser of this product that should this product or any part of it, under normal use and conditions, be proven defective in material or workmanship within 2 years from the date of original purchase, such defect(s) will be repaired or replaced with new or reconditioned product without charge for parts and repair labor. To obtain repair or replacement within the terms of this warranty, the product is to be delivered with proof of warranty coverage (e.g. a copy of Your bill of sale), specification of defect(s), to the distributor, dealer or his authorized repair centre.

Liability for communications range of this product is disclaimed. The warranty does not apply to any product or part thereof which, has suffered or been damaged through alteration, improper installation, mishandling, misuse, neglect, accident, or by removal or defacement of the factory serial number label(s). The warranty does not apply to accessory parts or problems caused through not authorized or not recommended accessories like other than the supplied microphone, external antennas, external power supplies and overvoltage caused through external power supplies, lightning or overvoltage defects via antenna or other cables, broken or damaged acrylic glass windows and cabinet parts.

Please contact the dealer or person where You have purchased Your CB radio.

Where to find service hints and service documentation

The complete technical documentation is updated regularly. You can download the latest versions of user manuals, technical documents and the original signed conformity declaration, as well as service hints or FAQ's any time from our server under

<http://www.albrecht-online.de/service>

If You should have a problem, please have a look to the service hints or frequently asked questions (FAQ) before You send Your CB radio back to the service centre.

Electronic Waste Disposal regulations

The European WEEE directive requests that defective or no more used electronics items may only be disposed in dedicated collection and recycling centres.

It is no more allowed to put electronic items into the normal household trash bin.

The attached crossed trash bin logo remembers that You should follow the regulations! Disposal of electronics items is free of charge for the end user.



Legal Information

The radio may be used in European Countries only according to following information, which we publish as "Radio Passport". Because the number of countries allowing the new AM standard is changing, the latest version of this radio passport is published on our Internet Web server and may be downloaded any time. (<http://www.albrecht-online.de/service>)



ALBRECHT RADIO PASSPORT AE 5090

This CB radio complies to the latest European regulations (R&TTE directive and European harmonised standards) and has been notified in the countries according to following table: (as of March 2006):

Country	Country switch position	Licence and operating conditions
Operation only with individual licence		
Austria	40 FM	Austria does not accept radios with country switches, please do not use in Austria or ask Your dealer for a limited 40 CH FM version AE 5090FM!
Belgium	40/40 and 40 FM	Residents in Belgium need licence
Great Britain (UK)	40 FM	Residents of UK need CB licence
Italy	40/40 and 40 FM	Licence and regular charges for all CB radios
Switzerland	40/40 and 40 FM	Licence and monthly charges
Spain	40/40 and 40 FM	Licence and regular charges
Operation without licence and charges allowed		
Belgium	40FM 40/40	Free for short-time travellers up to 1 month Home country licence /Circulation Card accepted for travellers
Denmark	40 FM	Free of licence and charges for all users
Finland	40/40 and 40 FM	Free of licence and charges for all users (Circulation Card)
France	40/40 and 40 FM	Free of licence and charges for all users
Germany	80/40, 40/40, 40 FM	Free of licence and charges for all users except in some border regions for base stations using channels 41-80 (except border to CZ).
Greece	40 FM	Free of licence and charges for all users
Hungary	40 FM	Free of licence and charges for all users
Iceland	40 FM	Free of licence and charges for all users
Ireland	40 FM	Free of licence and charges for all users
Luxembourg	40 FM	Free of licence and charges for all users
Netherlands	40/40 and 40 FM	Free of licence and charges for all users
Norway	40 FM	Free of licence and charges for all users
Portugal	40 /40 and 40 FM	Free of licence and charges for all users
Spain	40 FM and 40/40	Free of licence and charges for travellers with Circulation Card
Sweden	40 FM	Free of licence and charges for all users
Switzerland	40 FM and 40/40	Free of licence and charges for travellers with Circulation Card
United Kingdom UK	40 FM	Free of licence and charges for travellers

Important Note: Please respect the licence conditions in the above listed countries and do not use the radio without licence, where necessary. For travelling with Your radio, we recommend to provide a copy of Your home country licence document and this Radio Passport together with the radio. The above list is based on public available information, while country specific requirements may change without notice during the harmonisation process in Europe, we recommend to ask local authorities before travelling.

Declaration of Conformity / Konformitätserklärung



We hereby declare that our product: / Wir erklären hiermit, dass unser Produkt

CB-Radio Albrecht AE 5090

satisfies all technical regulations applicable to the product within the scope of EU Council Directives, European Standards and national frequency applications:/ alle technischen Anforderungen im Geltungsbereich der EU Richtlinien, europäischer Normen und nationaler Frequenzanwendungen einhält:

73/23/EEC, 89/336/EEC and 99/5/EC

EN 300 135 -2 / EN 300 433-2

EN 301 489-1, EN 301 489-13, EN 60 950

All essential radio test suites have been carried out. /

Alle für das Produkt vorgeschriebenen Funktestreihen wurden durchgeführt.

This declaration is issued under our sole responsibility. Basing on not harmonized frequency applications, the CB radio may be used only in listed countries according to selected channel programming. An **individual license** for operating this radios in AM+FM on 40/40 channels in **B, CH, E, and I** is requested.

In **D** (where 80/12, 80/40, 40/12 or 40 / 40 FM/AM channels are allowed) , **F, FIN, NL** and **P** the CB operation on 40 / 40 channels in AM + FM is **free of license** and free of charges. If the radio is programmed to **40 FM** only, it may be used **without license** and free of charge in **D, DK, F, FIN, GB, GR, H, IRL, IS, L, N, NL, P, S** except Austria, where radios with country switches are generally not allowed, and Italy, where individual license is requested). Residents of Belgium, Spain, Switzerland and Great Britain (UK) need a CB license in their home country, while travellers from other European countries may use their CB radios during travelling in these countries free of licence and charges. In Belgium, Finland, France, Portugal, Spain, Switzerland (+ Liechtenstein) the Circulation Card for travelers is accepted as well.

Diese Erklärung wird unter unserer alleinigen Verantwortung abgegeben. Die oben genannten Funkgeräte dürfen wegen der nicht harmonisierten Frequenzanwendungen in AM+FM in den Ländern **B, CH, E, und I** nur mit gültiger **CB-Funkgenehmigung** benutzt werden. In **D** (max. 80 FM / 40 AM Kanäle), **F, Fin, NL** und **P** (40 / 40 Kanäle) ist der **CB-Funk anmelde- und gebührenfrei**. Dabei ist in Deutschland mit der Programmierung 80 FM der **ortsfeste** Sendebetrieb auf den Kanälen 41-80 in bestimmten Regionen entlang der Grenzen (außer zu CZ) nicht oder nur mit Sondergenehmigung gestattet.

Mit der Programmierung **40 FM** können die Geräte in **D, DK, F, FIN, GB, GR, H, IRL, IS, L, N, NL, P, S** (außer Österreich, dort sind Funkgeräte mit Länderumschaltung generell nicht erlaubt und Italien, dort ist auch CB Funk auf 40 Kanälen FM genehmigungspflichtig) anmelde- und gebührenfrei benutzt werden. Bewohner von Belgien, Großbritannien, Spanien und der Schweiz benötigen in Ihrem Heimatland eine Genehmigung (CB Lizenz). Reisende aus anderen europäischen Ländern dürfen in Großbritannien Ihre Geräte frei benutzen, In Belgien, Finnland, Frankreich, Portugal, Spanien, der Schweiz und Liechtenstein wird darüber hinaus für Reisende aus Deutschland auch die Circulation Card für mitgebrachte Funkgeräte (für 40 Kanäle AM und FM) anerkannt.

ALAN Electronics GmbH declara, bajo su responsabilidad, que este aparato cumple con lo dispuesto en la Directiva 99/05/CE, del Parlamento Europeo y del Consejo de 9 de marzo de 1999, transpuesta a la legislación española mediante el Real Decreto 1890/2000, de 20 de noviembre"

Point of contact/Ansprechpartner: Dipl.-Phys. Wolfgang Schnorrenberg

Place and date of issue:

Lütjensee, 12.1.2006

(Signature)

Dipl.-Phys. Wolfgang Schnorrenberg
ALAN Electronics GmbH

This Declaration of Conformity and the Albrecht Radio Passport will be re-issued when necessary and can be downloaded any time from www.hobbyradio.de . The Circulation Card issued by Bundesnetzagentur can be downloaded as well.

Technical Details

Microphone socket wiring

Pin 1	Low frequency microphone
Pin 2	PTT-RX (on ground for reception)
Pin 3	PTT-TX (on ground for transmitting)
Pin 4	up/down
Pin 5	Ground
Pin 6	12 volt for pre-amplifier etc.

Packet Radio

Pin 1	Audio input transmitter
Pin 2	Audio output reception
Pin 3	PTT
Pin 5	Ground

Transmitter

Transmitting power	4 Watt FM 1 Watt AM
Modulation sensitivity	1.5 mV at 600 Ohms
Harmonic and spurious radiations	-90 dBc = 4 nW
Max. frequency deviation	2.0 kHz
AM modulation degree	90%

Receiver

Sensitivity (FM) (SINAD)	better + 3dbmV EMK for 20 dB
Sensitivity (AM) (SINAD)	better + 3dbmV EMK for 12 dB
Adjacent channel selection	better 66 dBmV EMK
Intermodulation rejection	better 60 dBmV EMK
Image rejection	better 48 dB (EN 300 433-1)
Audio output power	2 Watt to 8 Ohm load

© Alan Electronics GmbH, 2006

www.albrecht-online.de

Service-Hotline: (+49) 6103 9481 30

Service-Fax: (+49) 6103 9481 60

e-mail: service@alan-germany.de

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>