


2.5" TFT MPEG4 MOVIE PLAYER with FM TUNER

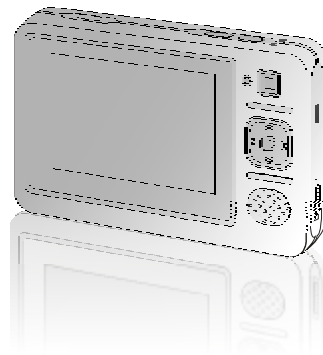

Coby Electronics Corp.
56-65 Rust Street
Maspeth, NY 11378

www.cobyusa.com
www.ecoby.com

Please read this manual before operation

Technical Support Hours
Monday-Friday 8:30 AM - 8:30 PM EST, 1-800-681-2629 or 718-416-3197
Saturday-Sunday 9:00 AM - 5:30 PM EST, 1-800-727-3592
Or Send E-Mail to: techsupport@cobyusa.com


Contents

FEATURES	3
PACKAGE CONTENTS	4
SAFETY INSTRUCTIONS	5
LOCATION OF CONTROLS	7
GETTING STARTED	8
Hold Function	8
Turning Power On or Off	8
Selecting an Item from the Menu	9
Menu list	9
FLASH MOVIE	11
Playing Flash Movies	11
Mouse Mode	11
Operation	12
MUSIC	13
Playing Music	13
Operation	15
Playback Menu	16
Update ID3 Database	18
Lyric	20
VIDEO	21
Playing Videos	21
Operation	22
PHOTO	23
Viewing Pictures	23
Operation	24
Photo Menu	24
BROWSE	27
Favorite	29
Copy/Paste	29
Delete	30
Rename	31


Contents

RECORDING	33
Voice Recording	34
Line-in Recording	35
FM Recording	36
Operation	37
Recording Quality	38
Playing Recorded Files	39
SETUP	40
Backlight	40
Language	40
Power Down	40
Format	40
Version	40
Upgrade	41
Speaker	41
GAME	42
Block	42
Box	42
E-BOOK	43
Reading E-books	43
Operation	43
RADIO	44
Listening to the Radio	44
Operation	44
Menu	48
FM Preset Document	50
OTG BACKUP	51
SD CARD	52
OTHER FUNCTIONS	54
Installing Fonts Library	54
Setting the Background picture	54
Setting the Startup Image	54
TROUBLESHOOTING	55

- 2.5" TFT-LCD: 16M full-color display
- Built in 1GB Flash Memory with Expansion Slot for SD Card(max. 2GB)
- Built-in Microphone and Speaker
- Video Format: AVI . Other file formats can be converted to AVI format with the supplied software
- Audio Format: MP3, WMA, WAV
- Picture Viewer: JPG, BMP, GIF
- Text Viewer: .TXT file
- Flash Viewer(SWF)
- Digital FM Tuner with 20 preset stations
- Recording Source : Microphone, Line-in and FM
- Built in games (Block and box)
- USB OTG(On-The-Go)
- Power: Built-In 3.7V Rechargeable Li-ion Battery
- Upgradable Firmware (You can upgrade the software when it becomes available. Please check our website www.cobyusa.com for upgrades.)

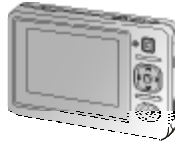


MP3 Player




USB Cable




User's Manual

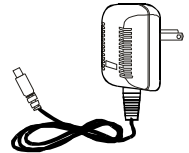

A/C Adapter

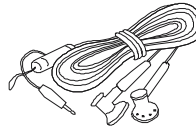


Earphones w/neck strap



Audio Cable



Installation CD



Host Cable

Safety Instructions


1. Read these instructions carefully.
2. Keep these instructions for future reference.
3. Heed all warnings.
4. Follow all instructions.
5. Do not expose to water or moisture.
6. Clean only with a dry cloth.
7. Keep objects away from ventilation openings. Do not block any ventilation openings at any time.
8. Do not install near any heat sources such as stoves, radiators, amplifiers or any apparatus that produce heat.
9. Do not force the power plug in the wall outlet. A polarized plug has two blades with one wider than the other. The wide blade is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Place the power cord so that it is protected from being walked on, pinched by objects, torn and exposed to liquids, especially at plugs, convenience receptacles, and the point where they exit from the product.
11. Only use attachments/accessories specified by the manufacturer.
Use of attachments/accessories not recommended by the product manufacturer may cause hazards.
12. Use only with a cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.

Safety Instructions

13. Unplug the apparatus during lightning storms or when unused for long periods of time.
14. Do not use this apparatus near water, and no objects filled with liquids, such as vases, shall be placed on the apparatus.
15. Do not use headphones/earphones while cycling, driving or operating any motorized vehicle.
16. Do not use headphones/earphones at high volume.
17. Do not drop or subject the device to impact.
18. Keep the player away from strong magnets. Damage to your player may result from magnets such as those found in CRT TVs, monitors and speakers.
19. Data can be damaged because of physical impact. Users are responsible for creating backup data, and we are not responsible for any damaged data.
20. When you upload or download files using the USB cable, do not disconnect the USB cable or turn off the device. Data in HDD can be damaged.
21. Refer all servicing to authorized service personnel.

For recycling or disposal information about this product, please contact your local authorities or the Electronics Industries Alliance: www.eiae.org

WARNING: Handling the cord on the earphones will expose you to lead, a chemical known to the State of California to cause [cancer, and] birth defects or other reproductive harm.
Wash hands after handling.

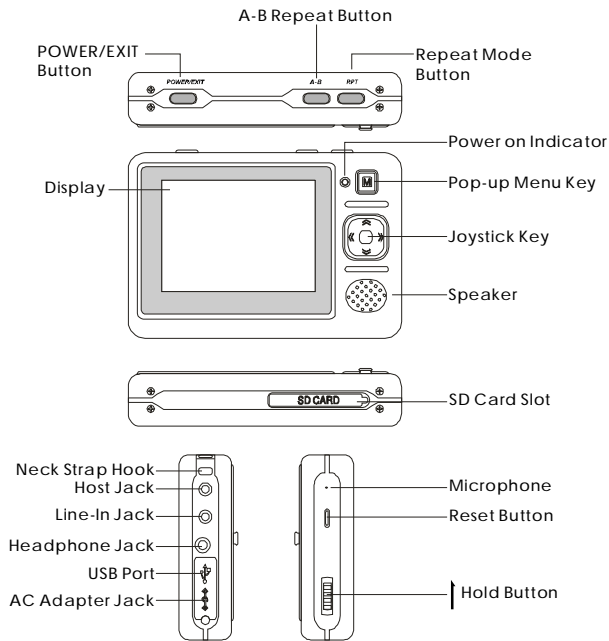

HOLD FUNCTION

Hold Off: Slide the HOLD switch in the opposite direction of the arrow symbol to unlock the player.

Hold On: Slide the HOLD switch in the direction of the arrow to disable all functions. The hold symbol will be displayed in the upper-right corner of the screen.

TURNING POWER ON OR OFF

Power On: Press and hold the POWER/EXIT button to turn on the power.

Power Off: Press and hold the POWER/EXIT button to turn off the power. "Keep holding to power off" will be displayed.



NOTE:

- If the player does not turn on after pressing the button, please check the HOLD switch and/or recharge the battery.
- If "no disk" appears during start-up, please restart the player. If the message still appears, please format the player with your PC. If all the operations above fail, please contact technical support.

1-800-681-2629 or 718-416-3197

Monday to Friday 8:30 AM - 8:30 PM EST

Saturday and Sunday 9:00 AM - 5:30 PM EST


You can also reach us by e-mail at techsupport@cobyusa.com

SELECTING AN ITEM FROM THE MENU

1. Press the joystick up/down/left/right to select an item from the menu list.
2. Press the joystick (OK button) to enter the selected mode.
3. Press the EXIT button to return to the previous menu. Press and hold the EXIT button to return to the main menu.



Menu List

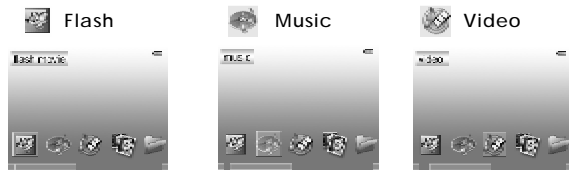

PLAYING FLASH MOVIES (SWF FILE)

1. Enter the flash movie mode.



2. Select a file using the joystick.

3. Press the joystick (OK button) to start playing the flash file.

NOTE:


- The default directory for flash files is "flash". If the folder does not exist, the system will automatically create the folder.
- The player supports files that are Macromedia Flash 5 or older. (It does not support Java script). The extension of flash files is SWF.

MOUSE MODE

Enter the mouse mode

Press the MENU button to enter the mouse mode while playing a flash movie.

The mouse icon (^) will appear on the screen.

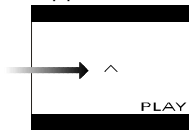

Moving the mouse

Press the joystick up/down/left/right to move the mouse.

Clicking the mouse

Move the mouse to the active area or button.

Press the joystick (OK button) to click the button.

Exit the mouse mode

Press the MENU button to exit the mouse mode. The mouse icon will disappear.

OPERATION

Pause

1. Press the joystick (OK button) to pause.

2. Press the joystick (OK button) again to resume.

NOTE:

You cannot pause the file by pressing the OK button when in the mouse mode.

Volume

Press the joystick up/down to adjust the volume.

Previous/Next


Press the joystick left/right to play the previous/next flash file.

PLAYING MUSIC (WMA and Mp3 files)

1. Enter the music mode.



2. Select a file using the joystick (press the joystick left/right to display the previous/next page of files/folders).

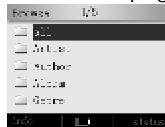

3. Press the joystick (OK button) to start playing the file.



NOTE:


The default music directory is "Music". If the folder does not exist, the system will automatically create the folder. If the selected song cannot be played, the next song will be played automatically.

Music File Browser



Update database

Playback Screen

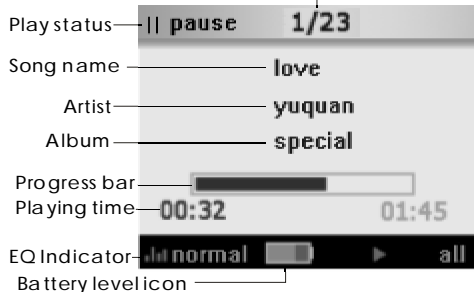

Add favorites
Play Speed
Turn on lyrics
Save Power

OPERATION

Play/Pause

During playback, press the joystick (OK button) to pause playback. Press it again to resume playback.

Volume

Press the joystick up/down to adjust the volume.

Previous/Next

Press the joystick left/right to play the previous/next song.

Fast Backward/Forward

Press and hold the joystick left/right to fast backward/forward.

Equalizers

Press and hold the A-B button to switch the equalizer setting: normal, rock, jazz, classic, pop.

Play mode

Press the RPT button to switch play modes.

one: Repeat the current song.


all: Play all music files in the current directory in order and repeat.

random: Randomly play all music files in the current directory.

A-B Repeat

1. Press the A-B button at the place from which you want to repeat the audio segment.

"A-" will appear at the bottom of the screen.

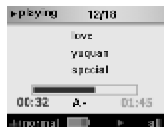

2. Press the A-B button at the place where you want to end the repeating audio segment.
"A-B" will be displayed at the bottom of the screen, and the segment will play repeatedly.
3. Press the A-B button to end the A-B repeat and resume normal playback.

Exit

- Press the EXIT button to return to the previous menu.
- Press and hold the EXIT button to return to the main menu.

PLAYBACK MENU

Press the MENU button in the playback screen, and the playback menu will appear: Add favorites, Play Speed, Turn on/off lyrics, Save Power, EQ, Repeat mode.



ADD FAVORITE <On-The-Go Playlist>

1. Select "Add favorites" from the playback menu.
2. Press the joystick (OK button) to add the current song to the favorites.



See the "Favorites" section for more information.
Play Speed

1. Select "Play Speed" from the playback menu.
2. Press the joystick (OK button).
3. Press the joystick left/right to select the play speed (70%-130%)

NOTE: 100% is normal speed.

Turn On/Off Lyrics

1. Select "Turn on/off lyrics" from the playback menu.
 2. Press the joystick (OK button) to turn on/off lyrics.
- See the "Lyrics" section for more information.

Save Power

1. Select "Save Power" from the playback menu.
2. Press the joystick (OK button) to turn off the LCD.

NOTE:

Only the joystick left/right (previous/next), joystick up/down (volume up/down) and HOLD buttons can be used if any other button is pressed, the LCD will turn back on.

EQ

1. Select "EQ" from the playback menu.
2. Press the joystick (OK button).
3. Use the joystick to select the equalizer setting (normal, rock, jazz, classic, pop).
4. Press the joystick (OK button).

Repeat Mode

1. Select "Repeat mode" from the playback menu.
2. Press the joystick (OK button).
3. Use the joystick to select the repeat mode (one, all, random).
4. Press the joystick (OK button).

FILE BROWSER MENU

Press the MENU button in the "Music" folder (or sub-folders), and the file browser menu will appear: favorite, copy, paste, delete, rename, new folder.

See the "Browse" section for more information.

UPDATE ID3 DATABASE

1. Press the MENU button, and "Update database" will appear.
2. Press the joystick (OK button) to update the ID3 database of the player.

Update database

NOTE:

Updating the database sorts all the music in the "Music" folder using ID3 tag information: Artist, Author, Album and Genre. If you delete, add or move music files in the player, please update the ID3 database.

All music files/folders can still be found in the "Music" folder.

FAVORITES

Press the RPT button in the "Music" folder (or sub-folders), and the favorites list will appear.

Press the MENU button to display the favorites menu: to top, to bottom, delete.

to top: Moves the selected file to the top of the favorites list.

to bottom: Moves the selected file to the bottom of the favorites list.

delete: Deletes the selected file from the favorites list.

Select a file and press the joystick to begin playback.



NOTE:

Files in the "Music" folder (and sub-folders) that are in the favorites list will have a blue music note instead of green.

When a file is added to the favorites list, it will be added to the end of the list.

The player will automatically create Mplist.txt and save it in the "Sys" folder of disk.

LYRIC

Get LRC files

You can download LRC files from the internet or create your own LRC files with an LRC editor.

Save the LRC files

Copy LRC files to the directory where the songs are and make sure they have the same name.

Ex. song.mp3 and song.lrc

PLAYING VIDEOS (AVI files)

1. Enter the video mode



2. Select a file using the joystick (press the joystick left/right to display the previous/next page of files/folders.)



3. Press the joystick (OK button) to start playing the file.



NOTE:

The default video directory is "Mp4". If the folder does not exist, the system will automatically create the folder. The extension of video files is AVI, and they are encoded in XVID/MPEG-4. You can use the included software to convert other formats (WMV, ASF, MPG, etc.) to AVI.



OPERATION*Play/Pause*

During playback, press the joystick (OK button) to pause playback. Press it a gain to resume playback.

When a video file is paused, the time information will be displayed on the bottom of the screen.



Press the PLAY button
while playing

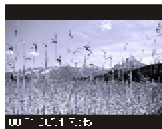*Volume*

Press the joystick up/down to adjust the volume.

Previous/Next

Press the joystick left/right to play the previous/next video.

Fast Backward/Forward

Press and hold the joystick left/right to fast backward/forward.

Press the joystick (OK button) to resume normal playback.

Stop

Pause the video, and press the EXIT button to stop the video and return to the file browser.

You can also press and hold the EXIT button.

FILE BROWSER MENU

Press the MENU button in the "Mp4" folder (or sub-folders), and the file browser menu will appear: favorite, copy, paste, delete, rename, new folder. See the "Browse" section for more information.

Press the A-B button to see the file/folder information (name, size, date, type). Press the EXIT button to return to the file browser.

Viewing Pictures (JPEG, BMP and GIF files)

1. Enter the photo mode.



2. Select a file using the joystick (press the joystick left/right to display the previous/next page of files/folders).



3. Press the joystick (OK button) to view the file.



NOTE: The default photo directory is "Photos". If the folder does not exist, the system will automatically create the folder. The file size must be less than 6MB. JPG and BMP files must be 24 bit. Animated GIF files are supported.

OPERATION

Previous/Next

Press the joystick left/right to display the previous/next image.

Zoom

- Press the RPT button to enter the zoom mode.
 - Press the RPT button to zoom in.
 - Press the A-B button to zoom out.
 - Press the joystick left/right/up/down to move the zoomed image.
 - Press the joystick (OK button) to exit the zoom mode.
- NOTE: GIF files cannot be zoomed.

Slide show

- Press the joystick (OK button) to start the slide show.
- Press the joystick left/right to display the previous/next image.
- Press the joystick (OK button) to pause/resume the slide show.
- Press the EXIT button to return to the file browser.

PHOTO MENU

Press the MENU button when a photo is displayed, and the photo menu will appear: delete, slideshow, delay, transition, file info.



Delete

1. Select "delete" from the photo menu.
2. Press the joystick (OK button) to delete the current image.
3. Select "YES", and press the joystick (OK button).



Slide show

1. Select "slideshow" from the photo menu.
2. Press the joystick (OK button) to turn the slideshow on/off.

Delay

1. Select "delay..." from the photo menu.
2. Press the joystick (OK button).
3. Select the time (1s, 2s, 3s, 5s, 10s) that you want an image to be displayed during the slideshow, and press the joystick (OK button).



Transition

1. Select "transition" from the photo menu.
 2. Press the joystick (OK button) to turn transitions on/off.
- NOTE: When transition is off, the previous/next image will start to be displayed from left to right. When transition is on, the previous/next image will start to be displayed from the top, bottom, middle, etc.

File Info

1. Select "file info" from the photo menu.
2. Press the joystick (OK button) to display the Exchangeable Image File Format (EXIF) data .
3. Press the joystick (OK button) to switch the color of the text (white, black).

NOTE:

Most digital cameras use the EXIF format. It displays information such as: camera manufacturer, camera mode, time, resolution, etc.

EXIF 2.0 is supported

BMP/GIF files have no EXIF information.

The EXIF information :

Make-Camera Manufacturer
 Mode-Camera Model
 Datime-Date/Time
 Version-EXIF Version
 WidxHei -Width x Height
 xResolu-X Resolution
 yResolu -Y Resolution
 FlashUs -Flash Used
 FocusLe -Focal Length
 CCDWidt - CCD Width
 ISO_Equ - Iso Speed
 Exposur - Exposure Program
 ExpTime-Exposure Time
 Apertur-Aperture Value
 ExpBias-Exposure Bias
 MeterMo-Metering Mode
 Encode -JPEG Process

FILE BROWSER MENU

Press the MENU button in the "Photos" folder (or sub-folders), and the file browser menu will appear: favorite, copy, paste, delete, rename, new folder. See the "Browse" section for more information.


BROWSE

- You can view all of the files/folders in the player through the browser.
- You can playback music or videos and view images or text files directly in the browser.
- You can also copy/paste files/folders, delete files/folders or create new folders in the browser.

1. Enter the browse mode.




2. Select a file using the joystick (press the joystick left/right to display the previous/next page of files/folders).

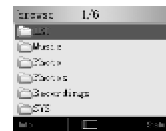

3. Press the joystick (OK button) to start playing/viewing the file.

BROWSE FILE

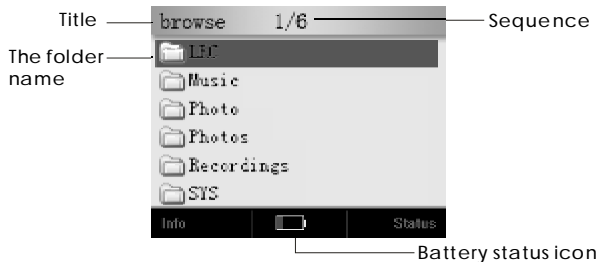

Pop-up Menu (MENU) :



- Press the MENU button to display this interface when you view the folders.

FAVORITE

1. Select the audio file that you want to add/remove to/from the favorites list, and press the MENU button.
2. Select "favorite" from the menu, and press the joystick (OK button).

NOTE: Files that are in the favorites list will have a blue music note instead of green. Only music files can be added to the favorites list.

COPY/PASTE

1. Select the file that you want to copy in the browser, and press the MENU button.



2. Select "copy" from the menu, and press the joystick (OK button). The clipboard icon will be displayed at the top right corner.



3. Enter the folder where you want to copy the file to, and press the MENU button.

4. Select "paste" from the menu, and press the joystick (OK button).



DELETE

1. Select the file/folder that you want to delete, and press the MENU button.



2. Select "delete" from the menu, and press the joystick (OK button).



3. Select YES and press the joystick (OK button).



- Press the A-B button to see the file/folder information (name, size, date, type).
- Press the EXIT button to return to the file browser.

RENAME

1. Select the file/folder that you want to , and press the MENU button.
2. Select "rename" from the menu, and press the joystick (OK button). A keyboard will be displayed.




3. Use the keyboard to enter the new name.



4. Press and hold the joystick (OK button) when you are finished. Press the EXIT button to cancel

*Using the keyboard**Layout of the keyboard*

You can enter characters or numbers using the keyboard. There are 12 buttons : 10 alphanumeric buttons, a mode button and a backspace button.



Switching the input mode

1. Use joystick to select MODE .
2. Press the joystick (OK button) to switch the input mode:
En(capital), en(lowercase) and Nu(number)

Entering letters

1. Switch to EN or en input mode.
2. Use the joystick to select a button (for example, select the 5 button for M, N or O)
3. Press the joystick (OK button).
4. Press the joystick left/right to select the character.
5. Press the joystick (OK button) to enter the character . The character will appear in the new name box.
6. Press the EXIT button to cancel that character.

Entering numbers

1. Switch to Nu input mode.
2. Use the joystick to select a button.
3. Press the joystick (OK button) to enter the number. The number will appear in the new name box.


Deleting letters/numbers

1. Select the BACKSPACE button and press the joystick (OK button) to delete the typed letter /number.

Ending/Canceling the input

1. Press and hold the joystick (OK button) to finish renaming the file/folder.
2. Press the EXIT button to cancel renaming the file/folder.

RECORDING

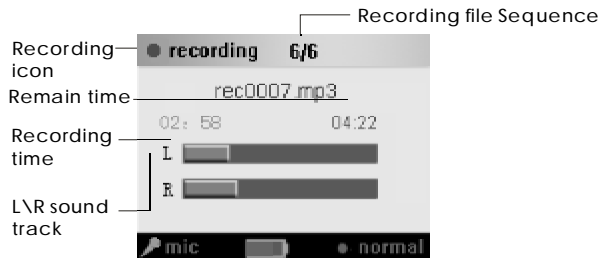

Recording quality



VOICE RECORDING

1. Enter the record mode.



2. Press the A-B button to select "mic".



3. Press the RPT button to select the recording quality (normal, good, better, best).



4. Press the joystick (OK button) to start recording.

LINE-IN RECORDING


1. Using the supplied audio cable, connect the LINE-IN jack of the player to the LINE-OUT (or earphone) jack of an external device.

2. Press the A-B button to select "line in".

3. Press the RPT button to select the recording quality (normal, good, better, best). Best is recommended.

4. Begin playback on the external device, and press the joystick (OK button) to start recording. You can listen with earphones while recording.

NOTE: Maximum volume of the external device is recommended.

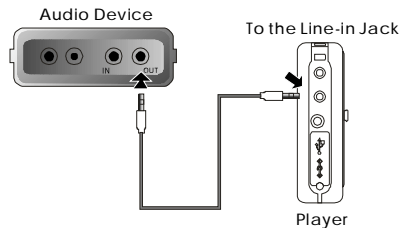

FM RECORDING

1. Enter the record mode.
2. Press the MENU button, and select "source select".
3. Press the joystick (OK button) and select "fm".



4. Press the joystick (OK button) and tune to the radio station that you want to record. Please see the radio section for more information.
5. Press the EXIT button.
6. Press the RPT button to select the recording quality (normal, good, better, best). Good is recommended.
7. Press the joystick (OK button) to start recording.



OPERATION

STOP RECORDING

Press and hold the joystick (OK button) to stop and save the recording. You can also press and hold the EXIT button to save and quit.

PAUSE/RESUME RECORDING

During recording, press the joystick (OK button) to pause the recording. Press it again to resume the recording.

CANCEL RECORDING

1. Pause the recording, and press the MENU button.
2. Select "cancel current" and press the joystick (OK button) to cancel the current recording.

NEW RECORDING

1. Pause the recording, and press the MENU button.
2. Select "save and new", and press the joystick (OK button) to save the current recording and start a new one.

NOTE:

- Only the OK, EXIT, HOLD buttons can be used while recording.
- If the memory is full or power is low, the player will stop recording automatically.

RECORDING QUALITY

• Mic/FM:

normal: Recording duration will be about 72 hours. (32kbps)

good: Recording duration will be about 48 hours. (48kbps)

better: Recording duration will be about 36 hours. (64kbps)

best: Recording duration will be about 18 hours. (128kbps)

• Line-In:

normal: Recording duration will be about 36 hours. (64kps)

good: Recording duration will be about 18 hours. (128kbps)

better: Recording duration will be about 14.5 hours. (160kbps)

best: Recording duration will be about 12 hours. (192kbps)

*based on 1GB storage capacity

PLAYING RECORDED FILES

1. Select the recording mode (mic, line-in, fm), and press the MENU button when not recording.
2. Select "play REC file", and press the joystick (OK button) to play the last recorded file in that mode.



3. When playing back recorded files, the operation is similar to the music mode.



NOTE:

- The format for recorded files is mp3.
- The voice files are saved in the "Recordings\mic" folder and are named REC0001.MP3, REC0002.MP3, etc.
- The line-in files are saved in the "Recordings\line_in" folder and are named LIN0001.MP3, LIN0002.MP3, etc.
- The FM files are saved in the "Recordings\fm" folder and are named FM0001.MP3, FM0002.MP3, etc.
- You can also use the browser to play recorded files.
- Recorded files can also be added to the favorites list.

SETTINGS

1. Enter the setup mode.
2. Press the joystick up/down to select a setting: Backlight, language, PowerDown, Format, Version, Upgrade, Speaker.
3. Press the joystick left/right to adjust a setting. Press the joystick (OK button) to perform an action.



BACKLIGHT

Set the time the backlight remains on (off, 5sec, 10sec, 20sec, 30sec, 1min, 5min, on).

LANGUAGE

Set the language (English, German, Spanish, Portuguese).

POWER DOWN

The player will automatically turn off after being idle for a certain amount of time. Set the time the player automatically turns off (never, 1min, 2min, 5min).

FORMAT

Formatting the player will erase all of the data stored on the player. Backup any files that you want to keep before formatting.

VERSION

Display the version information of the player: Firmware Version, DRAM, ROM, ID).

UPGRADE

1. Copy the upgrade file to the "Sys" folder. You can download the file from our website: www.cobyusa.com
2. Connect the AC/DC adapter.
3. Enter the setup mode, and select "Upgrade".



4. Press the joystick (OK button), and select "YES".



5. Press the joystick (OK button) to confirm, and a window showing the progress of the upgrade will be displayed.
6. When the upgrading is finished, the player will automatically turn off. Turn on the player, and the new firmware will be loaded.



SPEAKER

1. Enter the setup mode, and press the joystick up to go to the other settings page.
2. "Speaker" will be selected.
3. Press the joystick left/right to turn the speaker on/off.

Game

To select a game

1. Enter the game mode.
2. Press the joystick up/down to select a game: block, box.
3. Press the joystick (OK button) to start the game.



BLOCK

1. Press the joystick (OK button) to start the game.
2. Use the joystick left, right, down to move the blocks.
3. Press the joystick up to rotate the blocks.
4. Press the MENU button to set the difficulty.
5. Press the EXIT button, select "EXIT" and press the joystick (OK button) to exit the game.

BOX

1. Use the joystick to move the character.
2. Press the MENU button or the joystick (OK button) to display the game menu: restart, next, previous, choice.
3. Press the EXIT button, select "EXIT" and press the joystick (OK button) to exit the game.

READING E-BOOKS (TXT files)

1. Enter the e-book mode.



2. Select a file using the joystick (press the joystick left/right to display the previous/next page of files/folders).
3. Press the joystick (OK button) to start viewing the file.

NOTE:

The default e-book directory is "TXT". If the folder does not exist, the system will automatically create the folder. Only txt files can be viewed in the e-book.

OPERATION

Previous/Next Line

Press the joystick up/down to go to the previous/next line.

Previous/Next Page

Press the joystick left/right to go to the previous/next page.

Jump to a Page

1. Press the MENU button to display the current page and total number of pages.

00003/00015


2. Press the joystick left/right to select a digit.
3. Press the joystick up/down to change the number.
4. Press the joystick (OK button) to jump to that page.

LISTENING TO THE RADIO (FM)

1. Enter the radio mode.



2. The radio will automatically turn on.



NOTE:

Make sure the earphones are connected because it is used as an antenna.

OPERATION

On/Off


1. Press the joystick (OK button) to turn off the radio.
2. Press the joystick (OK button) again to turn the radio back on.

Volume


Press the joystick up/down to adjust the volume.

FM TUNER


Manual search

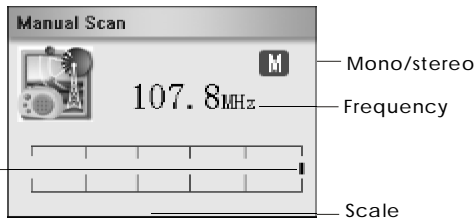


Preset

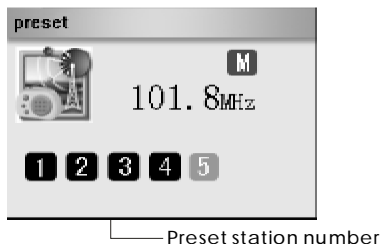

• Press the MENU button

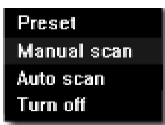

• Press and hold the MENU button



Tuning Down/Up

Press the joystick left/right to tune down/up in manual mode.
Press the joystick left/right to go to the previous/next station in preset mode.

Saving Stations

1. In preset or manual mode, tune to the station that you want to add as a preset, and press and hold the MENU button.


2. Select "save this station", and press the joystick (OK button).



3. Select the preset number that you want to save the station to, and press the joystick (OK button). There are 20 presets (0-19)



4. Select "YES", and press the joystick (OK button).



5. Press the EXIT button to cancel.

Radio

Deleting Stations


1. In preset mode, tune to the preset station that you want to delete, and press and hold the MENU button.
2. Select "delete this station", and press the joystick (OK button).



3. Select "YES", and press the joystick (OK button).

Mono/Stereo

Press the A-B or RPT button (or press and hold the OK button) to switch to mono/stereo. In mono there will be an "M" above "MHz". In stereo there will be an "S" above "MHz".



Exit

Press the EXIT button to exit the radio mode.

If the radio is on when you exit the radio mode, the radio will remain on. You can view photos, play games, browse files and read e-books while the radio is on. The radio will automatically turn off when you play a music/video file.

Radio

MENU

Press the MENU button to display the radio menu: preset, manual scan, auto scan, to save power/ to normal power, turn off.

Preset

1. Select "preset" and press the joystick (OK button).



2. Press the joystick left/right to tune to the previous/next preset station.



Manual Scan

1. Select "manual scan" and press the joystick (OK button).



2. Press the joystick left/right to tune down/up by 0.1MHz increments.

Radio

Auto Scan

1. Select "auto scan" and press the joystick (OK button).
2. The radio will scan the entire FM band and save 20 stations to the presets.

NOTE:

Please adjust the position of the earphones and earphone wire to get the best reception.

To Save Power

1. Select "to save power" and press the joystick (OK button).
2. The LCD will automatically turn off after a few seconds.
3. Select "to normal power" and press the joystick (OK button).
4. The LCD will remain on.

NOTE:

Only the joystick left/right (previous/next), joystick up/down (volume up/down) and HOLD buttons can be used. If any other button is pressed, the LCD will turn back on.

Turn off

1. Select "turn off" and press the joystick (OK button).
2. The radio will turn off and exit the radio mode.

Radio

FM PRESET DOCUMENT

You can store the name and the frequency of the preset radio stations in a document.

Create a document named `fmname.txt`, and add the frequency, name and preset number:

```
[87500] station 1
```

```
[88700] station 2
```

```
...
```

```
[107300] station 20
```

87500 is 87.5 MHz and *station* is the name that you want to enter. 1 refers to preset 0 and 20 refers to preset 19. You can name up to 20 stations.


Transfer the `fmname.txt` file to the "Sys" folder, and restart the player.

NOTE:

If you perform an auto scan the presets will be overwritten. When you restart the player the presets will revert back to those in the `fmname.txt` file.

TRANSFERRING FILES FROM ANOTHER DEVICE


1. Connect the player's HOST jack using the supplied host cable (and another USB cable if necessary) to the other USB device (digital camera, MP3 player, etc.)

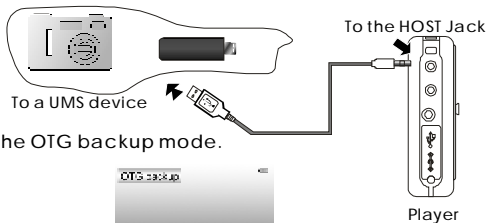

2. Enter the OTG backup mode.




3. Select "YES" and press the joystick (OK button). The LCD will turn off and file transfer will begin.



4. When the transfer is complete, the LCD will turn back on, and a message will be displayed. "Backup Failed" means that the transfer failed. Check the connection and the USB device. The USB device may need to be turned on. "Backup Success" means the transfer completed successfully. The files are in the "Backup" folder

INSERTING THE SD CARD

1. Insert the SD card into the slot as shown below.

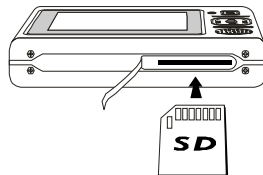

2. In the file browser, you will see "A:". This represents the SD card.
3. Press the SD card, and it will pop out. Make sure the SD card is not in use before ejecting it.

NOTE: The SD card must be formatted to the FAT file system. NTFS is not supported.

USING THE SD CARD

1. In the file browser select "A:", and press the joystick (OK button).
2. Select the file that you want to open, and press the joystick (OK button).

COPY/PASTE

You can copy/paste files to/from the SD card and the player. See the copy/paste page in the browse section for more information.

DELETE/RENAME/NEW FOLDER

You can delete/paste files to/from the SD card. You can also create new folders. See the browse section for more information.

NOTE:

Make sure the SD card is not in use before ejecting it.

INSTALLING FONTS LIBRARY

Some fonts have been pre-installed. If other fonts have to be installed, copy those fonts to the "Sys" folder and restart the player.

NOTE: The system is Unicode, so you should set corresponding language in the setup mode.

SETTING THE BACKGROUND PICTURE

1. Create a bmp file, and name it bg.bmp. The best resolution is 280 x 220 pixels.
2. Copy the bg.bmp file into the "Sys" folder.
3. Restart the player, and you will see the new background image.

SETTING THE STARTUP IMAGE

1. Create a gif (or animated gif) file, and name it logo.gif.
2. Copy the logo.gif file in to the "Sys" folder.
3. Restart the player, and you will see the new startup image.

Troubleshooting

The player does not work

1. Charge the battery.
2. Check the hold switch.

Download failure

1. Check to see if the driver is installed correctly on the PC.
2. Check the connection.
3. Check if the memory is full.
4. Check the battery capacity.

Poor sound quality or no sound

1. Check if the quality of the music file is poor, and download it again.
2. Check if the volume level is at "0", and check if the earphones are properly connected.
3. Reformat the player.

Bad FM reception

1. Adjust the position of the earphones and player.
2. Turn off nearby electric devices.
3. Earphones must be connected because it is used as antenna.

The LCD displays nothing

1. Check if the power is on.
2. Charge the battery.
3. Press the reset button.

If you are still having difficulty please contact technical support.

Monday-Friday 8:30 AM 8:30 PM EST 1-800-681-2629 or 718-416-3197

Saturday and Sunday 9:00 AM 5:30 PM EST 1-800-727-3592

You can also reach us by e-mail at techsupport@cobyusa.com

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>