

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING

KEEP AWAY FROM WATER

DANGER — Any appliance is electrically live even when the switch is off. To reduce the risk of death by electric shock:

1. Always unplug appliance immediately after using.
2. Do not use while bathing or in a shower.
3. Do not place or store appliance where it can fall or be pulled into a tub or sink.
4. Do not place in, or drop into water or other liquid.
5. If an appliance falls into water, unplug it immediately. **Do not reach into the water.**

WARNING — To reduce the risk of burns, electrocution, fire, or injury to persons:

1. This appliance should never be left unattended when plugged in. Do not pull, twist, or wrap line cord around appliance.

2. This appliance should not be used by, on, or near children or individuals with certain disabilities. Unsupervised use could result in fire or personal injury.

3. Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.

4. Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water. Return the appliance to an authorized service center for examination and repair.

5. Keep the cord away from heated surfaces.

6. Never place the appliance on a soft surface, such as a bed or couch, where the air openings may be blocked. Keep the air openings free of lint, hair, and the line. Unplug before storing.

7. Never use while sleeping.

8. Never drop or insert any object into any opening.

9. Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.

10. Do not use an extension cord with this appliance.

11. This curling iron is hot when in use. Do not touch heated surfaces of the appliance. Use handles or knobs. Do not let eyes and bare skin touch heated surface.

12. Do not place the heated iron directly on any surface or on the appliance power cord while it is hot or plugged in.

SAVE THESE INSTRUCTIONS

OPERATING INSTRUCTIONS

This appliance is intended for household use. Use on Alternating Current (60 Hertz) only. Standard appliances are designed to operate at 120 volts AC.

This appliance has a polarized plug (one blade is wider than the other). As a safety feature, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

GETTING STARTED

The iron's multi-attachment feature is designed to provide you with styling versatility for all hair textures. Your special styles combo unit includes a 3/4" curling iron, straightener/ crimper plates, brush sleeve and spiral sleeve attachments — all of these different styling options in one tool.

CURLING BASICS

1. Plug the curling iron cord into any household outlet (120V). The ready dot will let you know when it is ready to begin styling. You can adjust the temperature to high or low depending upon your hair type and styling needs. Never leave your curling iron on and unattended.

2. Section dry hair evenly, and comb each section before curling. Pressing the curl release, place curling iron midway up the hair section, then spread hair evenly between spoon and barrel. Release automatic curl release to hold hair in place. Gently slide curling iron down to hair ends. To avoid crimped ends, make sure they are securely wound under the spoon in the direction of the desired curl.

3. Wind the hair up as far as you want it curled, being careful not to let the iron touch the scalp; when using the brush sleeve, do not roll hair around it more than two times, to avoid tangling. Hold in place for 8-12 seconds, depending on the texture and length of your hair. For tighter, bouncier curls, roll less hair. For looser, free flowing curls, roll more hair.

4. To remove curling iron, unwind the hair and press the automatic curl release. To set the curl, do not comb or brush hair until it cools.

5. If you prefer to use the brush sleeve for more control, be sure to slide it over the curling iron while the iron is cool or off. Use of the hot styling sleeve brush is very easy to master. Roll one section of hair at a time around the hot styling brush from the bottom up. **TO AVOID TANGLING, NEVER ROLL THE HAIR AROUND THE HOT STYLING BRUSH MORE THAN TWO TIMES.** When hair is warm (not hot) to the touch, the curl is set. For hair that is harder to curl, leave the hot styling brush sleeve in place a little longer. A hot styling brush sleeve generally gives a lighter curl than a curling iron — for very hard-to-curl hair, try switching to the curling iron.

6. The hot styling brush sleeve attachment can be used for quick touch-ups without shampooing. After heating the hot styling brush, simply brush the hair back to its original style. To change the style, mist the hair lightly with water before using the hot styling brush. No combing is necessary!

7. For fun spiral, textured curls use the spiral sleeve attachment.

HOW TO CHANGE STYLING HEADS:

Changing styling heads is easy.

1. Make sure appliance is unplugged and cool.
2. Turn locking dial to the right to unlock.
3. Pull attachment straight off.
4. To put new attachment on power handle, make sure counter rest faces in opposite direction of switch and light.
5. Push attachment into power handle.
6. Turn locking dial to the left to lock securely in place.

TO STRAIGHTEN HAIR

To straighten hair, use straightener styling plates. Start with a hair section that is 1" wide and no more than 1/2" thick. Open the barrel and place a hair section between the two hot plates close to your scalp. Trap hair between plates by firmly squeezing the handles together. While maintaining the tension, slowly pull the unit down along the hair section toward end of hair. At the end of the hair section, release the pressure on the handle and allow the hair section to slide out. Continue this process on additional sections of hair until you achieve the hair style you desire.

For extra styling, turn the straightening iron under when nearing the end of the hair section. This will give a nice flip to your hair.

Some experience is necessary when first using this straightening iron. After a few uses, you will learn the ideal way to straighten and style your hair easily.



TO CRIMP HAIR

To create fun, trendy crimp styles use the crimper plates. Start with a hair section that is 2" wide and no more than 1/2" thick. Open the barrel and place a hair section between the two hot plates close to your scalp. Trap hair between plates by firmly squeezing the handles together. While maintaining the tension, slowly pull the unit down along the hair section toward end of hair. At the end of the hair section, release the pressure on the handle and allow the hair section to slide out. Continue this process on additional sections of hair until you achieve the hair style you desire.

Some experience is necessary when first using this crimping iron. After a few uses, you will learn the ideal way to crimp and style your hair easily.



TO WAVE HAIR

For flowing waves, use curling iron. Separate a wider section of hair than you normally do for curling, and roll it as you usually do. For best results, hair should be at least 6-8" long.

FOR TOUSLED HAIR

Create soft, tousled waves by curling each hair section in a random direction. Then, turn head upside down, shake, and gently scrunch hair with fingers. Bring head back to position and repeat for fullest volume.


WIDE WAVES

Pick up a section of hair and place the curling iron under it close to the scalp, making half a turn downward. Remove the curling iron. Working with the same hair section, start where you left off and place the curling iron on top of the hair, curling it up half a turn. Proceed down the same hair section, alternating the curl upward and downward. Repeat procedure with remaining sections of hair. For best results, hair should be about 6-8" long.



FOR SPIRAL CURLS

Attach spiral sleeve to the curling iron barrel by sliding over the barrel when the iron is cool. Work with 1" sections of hair, one at a time. Hold iron horizontally, and wrap hair around the barrel, twisting like a barber pole; continue toward scalp. Leave hair wrapped for approximately 10-15 seconds, when hair is warm to the touch (not hot), the spiral curl is set. For hair that is hard to curl, leave the hot spiral sleeve in place a little longer. Unwind hair from barrel. Repeat procedure, styling small sections at a time, layering the spiral curls as you go, until all hair is curled.

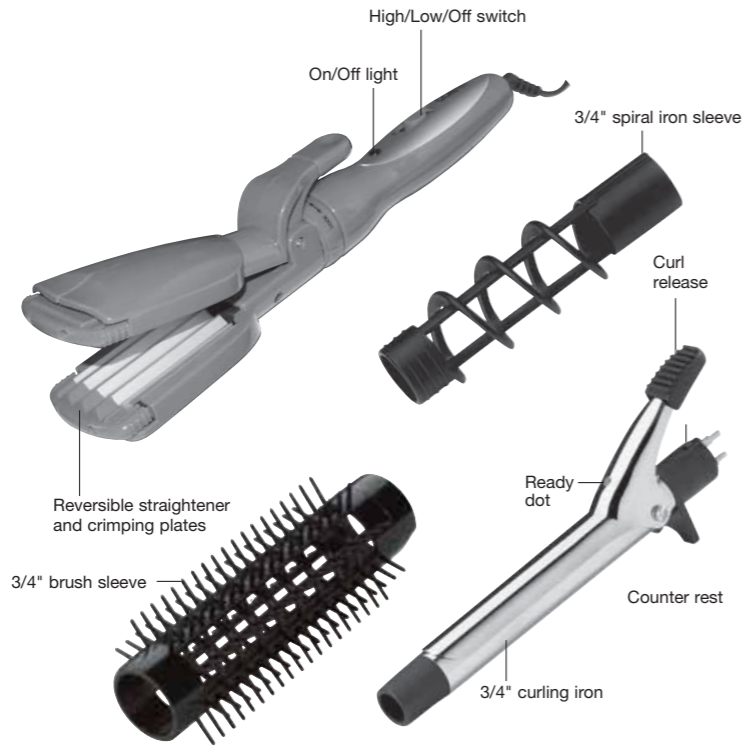

WARNING: The unit will get very hot within a few seconds and should not be placed in contact with the skin when it is turned on.

USER MAINTENANCE

Your curling iron is virtually maintenance-free. No lubrication is needed. Keep all vents and openings clear of dirt and dust. If cleaning becomes necessary, disconnect the curling iron from the power source and wipe exterior with a cloth. If any abnormal condition occurs, unplug the curling iron, allow it to cool, and return it for repair to an authorized service center only. No repairs should be attempted by the consumer.

CAUTION


NEVER allow the power supply cord to be pulled or twisted. Never wrap the cord around the curling iron. Damage will occur at the high flex point of entry into the curling iron, causing it to rupture and short. Inspect the cord frequently for damage. Stop use immediately if damage is visible or if unit stops or operates intermittently.

STORAGE

When not in use, your appliance should be disconnected, allowed to cool and stored in a safe, dry location out of reach of children. Do not jerk or strain cord at plug connections. Do not wrap the line cord around the appliance. Allow the cord to hang or lie loose and straight at the point of entry into the appliance.

**WARNING:
IF YOU THINK
THE POWER IS
OFF WHEN THE
SWITCH IS OFF,
YOU'RE WRONG.**

KEEP AWAY FROM WATER



Everyone knows that electricity and water are a dangerous combination. But did you know that an electric appliance is still electrically live even if the switch is off? If the plug is in the power is on. So when you are not using your appliances, keep them unplugged.

**ALWAYS UNPLUG
SMALL APPLIANCES**

LIMITED ONE-YEAR WARRANTY

Conair will repair or replace, at our option, your appliance free of charge for 12 months from the date of purchase if the appliance is defective in workmanship or materials.

To obtain service under this warranty, return the defective product to the service center listed below, together with your sales slip and \$5.00 for postage and handling. California residents need only provide proof of purchase and should call 1-800-3-CONAIR for shipping instructions. In the absence of a receipt, the warranty period shall be 12 months from the date of manufacture.

ANY IMPLIED WARRANTIES, OBLIGATIONS, OR LIABILITIES, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED IN DURATION TO THE 12-MONTH DURATION OF THIS WARRANTY. Some states do not

allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you.

IN NO EVENT SHALL CONAIR BE LIABLE FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED, WHATSOEVER. Some states do not allow the exclusion or limitation of special, incidental, or consequential damages, so the above limitation may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.



Service Center
Conair Corporation
Service Department
7475 N. Glen Harbor Blvd.
Glendale, AZ 85307

©2008 Conair Corporation
150 Milford Rd.
East Windsor, NJ 08520
7475 N. Glen Harbor Blvd.
Glendale, AZ 85307
www.conair.com
08PC119

Special STYLES

Specially designed to create
multiple styles with
one powerful tool!

Instruction & Styling Guide

For your safety & continued enjoyment of this product, always read the instruction book carefully before using.

CONAIR

5-in-1 Styling Kit

Model CB600TCS

IB-8263

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>