

MTP 15HD RS Series • Setup Guide



This card provides quick start instructions for an experienced installer to set up and operate any of the MTP VGA video and RS-232 transmission systems.

Pre-installation - RS-232 Jumper

The receiver's RS-232 circuits are factory-set to be one-way, transmitter to receiver. If the system has only one **receiver**, jumper JMP 1 on the main board can be set for two-way communication as shown at right.

Installation

Step 1 - Mounting

Turn off or disconnect all equipment power sources and mount the MTP transmitter and up to eight receivers as required.

Step 2 - Transmitter Inputs

- Connect a computer (VGA) video source to the Input connector.
- Connect a VGA monitor to the Monitor connector.
- Plug an RS-232 device into the RS-232 port. Wire the connector as shown below.



Step 3 - TP Cables Between Units

Terminate a TP cable as shown at right. Connect it between the transmitter's Output port and the
receiver's Input port (both ends must match).

NOTE: If the unit is labeled "C7," only CAT 7 cable should be used.

 For daisy-chaining, connect up to eight TP cables between a receiver's Buffered Output port and a daisy-chained receiver's Input port.

Step 4 - Receiver Outputs


- Connect a VGA monitor to the Output connector.
- Plug an RS-232 device into the RS-232 port. Wire the connector as shown in step 2, above.


Step 5 — Receiver DIP Switches

- H Sync and V. Sync switches Set these switches up for positive sync or down for negative sync.
- Composite Sync, (SOG), and Video switches Set these switches as shown in the following table to output the
 indicated format.

Output Format	C Sync	Video				
RGBHV	▼	▼	▼			
RGBS	A .	▼	▼			
RGsB	▼	A	▼			
Component*	▼	▼	A			
S-Video*	▼	▼	A			
Composite*	▼	▼	A .			
NOTE: * Input video format must match.						

- End Unit switch Set this switch up if either of the following is true:
 - The receiver being configured is the only receiver connected to the transmitter.
 - The receiver being configured is the last receiver in a daisy-chained system.

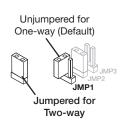



12345678	Pin	T568A Wire Color	T568B Wire Color	
	1	White-green	White-orange	
	2	Green	Orange	
	3	White-orange	White-green	
	4	Blue	Blue	
	5	White-blue	White-blue	
	6	Orange	Green	
A	7	White-brown	White-brown	
Insert Twisted	8	Brown	Brown	
Pair Wires				

NOTE: If you are using Enhanced Skew-Free™
A/V cable, use the TIA/EIA T568A standard only.





MTP 15HD RS Series • Setup Guide

Step 6 - Power

Wire the 2-pole captive screw connectors for the included external 12 VDC power supplies (see image ① on the right). Plug them into all units.

Grounding guidelines

Extron MTP 15HD RS products can be adversely affected by electrostatic discharge (ESD) if they are not grounded correctly.

To prevent malfunctions or product damage, an experienced installer can correctly ground an Extron MTP 15HD RS product in either of two ways:

- Ground the power input port Insert one end of the grounding wire to the negative or ground
 pin on the power input connector (see image ① on the right). Tie the other end of the wire to an
 earth ground.
- Ground the chassis Use a connector hex nut as shown in image ② on the right. Tie the other
 end of the wire to an earth ground.

If you have any questions about how to ground a product in a specific application, contact an Extron technical support specialist.

Step 7 - Pre-Peak, Peaking, and Level

- Transmitter Pre-Peak switch View the image and set the Pre-Peaking switch for the best image quality to correct for long cable runs of the entire system (including all daisy-chained receivers).
- Receiver Peaking control View the image and adjust the Peaking control for the best image. Minimum setting (full counterclockwise) is zero peaking.
- Receiver Level control View the image and adjust the Level control for the best brightness level.

RGB PEAKING

(1)

SECTION A-A


Power Supply Output Cord

2

Step 8 - Skew Compensation (SEQ Receivers)

Pair skew can be measured with test equipment or by viewing a crosshatch test pattern. The SEQ receivers have built-in skew compensation capabilities. Adjust the equalization as follows:

- A. Zero the skew delay for red, green, and blue by using a small screwdriver to press and hold the Select button for 3 seconds. When the Red, Green, and Blue LEDs all go out, release the Select button.
- B. Use UTP cable test equipment or examine the displayed image to determine which video signal (red, green or blue) is shifted furthest to the right.
- Select the furthest left video signal by using a small screwdriver to press and release the Select button until the LED for the left-shifted color (Red, Green, or Blue) lights.
- D. Slowly rotate the Adjust control clockwise until the selected color is properly converged.
- **E.** If the remaining colors are left shifted, repeat steps C and D.



DELAY

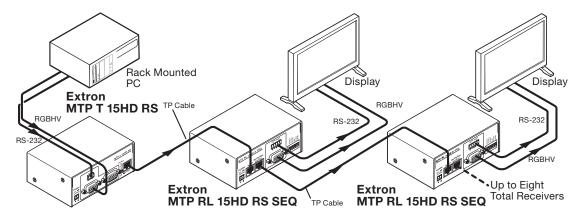


Figure 1. Example of a Typical MTP 15HD RS Application

Extron Headquarters +800.633.9876 Inside USA/Canada Only Extron USA - West Extron USA - East +1.714.491.1500 +1.919.850.1000 +1.714.491.1517 FAX +1.919.850.1001 FAX	Extron Europe +800.3987.6673 Inside Europe Only +31.33.453.4040 +31.33.453.4050 FAX	Extron Asia +800.7339.8766 Inside Asia Only +65.6383.4400 +65.6383.4664 FAX	Extron Japan +81.3.3511.7655 +81.3.3511.7656 FAX	Extron China +4000.EXTRON +4000.398766 Inside China Only +86.21.3760.1568 +86.21.3760.1566 FAX	Extron Middle East +971.4.2991800 +971.4.2991880 FAX	Extron Korea +82.2.3444.1571 +82.2.3444.1575 FAX	Extron India 1800.3070.3777 Inside India Only +91-80-3055.3777 +91 80 3055 3737 FAX		
68-925-50									

Free Manuals Download Website

http://myh66.com

http://usermanuals.us

http://www.somanuals.com

http://www.4manuals.cc

http://www.manual-lib.com

http://www.404manual.com

http://www.luxmanual.com

http://aubethermostatmanual.com

Golf course search by state

http://golfingnear.com

Email search by domain

http://emailbydomain.com

Auto manuals search

http://auto.somanuals.com

TV manuals search

http://tv.somanuals.com