



Please keep this instruction sheet for future reference,  
as it contains important information.

Requires three "AA" batteries (included) for operation.  
Batteries included are for demonstration purposes only.


Adult assembly is required for battery replacement.

Tool required for battery replacement:

Phillips screwdriver (not included).

This toy is surface washable. Wipe with a clean,  
damp cloth. Do not immerse the sound box.


# Battery Replacement

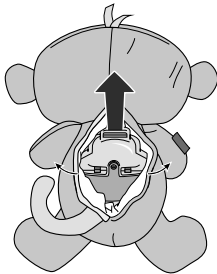

---

**For best performance, we recommend replacing the batteries that came with this toy with three, new "AA" (LR6) alkaline batteries.**

- Open the fasteners on the back of the toy. Remove the sound box from inside the toy.

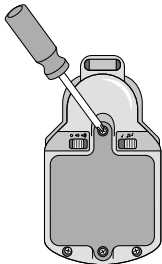

- 
- Loosen the screws in the sound box battery compartment door with a Phillips screwdriver. Remove the door.
  - Remove the exhausted batteries and dispose of them properly.
  - Insert three, new "AA" (LR6) **alkaline** batteries.
  - Replace the battery compartment door and tighten the screws. Do not over-tighten.
  - Fit the sound box back inside the toy. Make sure the button on the sound box is facing the front of the toy.
  - If this toy begins to operate erratically, you may need to reset the electronics. Slide the power/volume switch off and then back on.
  - When sounds or lights from this toy become faint or stop, it's time for an adult to change the batteries.

# Battery Replacement










In exceptional circumstances, batteries may leak fluids that can cause a chemical burn injury or ruin your product. To avoid battery leakage:

- Do not mix old and new batteries or batteries of different types: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Insert batteries as indicated inside the battery compartment.
- Remove batteries during long periods of non-use. Always remove exhausted batteries from the product. Dispose of batteries safely. Do not dispose of this product in a fire. The batteries inside may explode or leak.
- Never short-circuit the battery terminals.
- Use only batteries of the same or equivalent type, as recommended.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the product before charging.
- If removable, rechargeable batteries are used, they are only to be charged under adult supervision.

# Gentle Music & Light



- 
- Open the fasteners on the back of the toy.
  - Slide the power/volume switch to ON with low volume  or ON with high volume .
  - Slide the mode switch to short play  or long play .
  -  **Short Play** - Plays a short tune
  -  **Long Play** - Plays approximately 20 minutes of music.
  - Replace the sound box in the toy and close the fasteners.
  - **Hint:** Make sure the button on the sound box is facing the front of the toy.
  - Press monkey's tummy for soothing lullabies and a glowing light. Press the monkey's tummy again to change the song.
  - **Hint:** The light will stay on for approximately five minutes in long play mode. Press monkey's tummy again to turn the light back on.
  - When you are finished playing with this toy, slide the power/volume switch OFF .

# Consumer Information

?

## CONSUMER ASSISTANCE

1-800-432-5437 (US & Canada)  
1300 135 312 (Australia)

!

## service.fisher-price.com

Fisher-Price, Inc., 636 Girard Avenue, East Aurora, NY 14052.  
Hearing-impaired consumers: 1-800-382-7470.

**Outside the United States:**

Canada: Mattel Canada Inc., 6155 Freemont Blvd.,  
Mississauga, Ontario L5R 3W2; [www.service.mattel.com](http://www.service.mattel.com).

Great Britain: Mattel UK Ltd, Vanwall Business Park,  
Maidenhead SL6 4UB. Helpline: 01628 500303.  
[www.service.mattel.com/uk](http://www.service.mattel.com/uk)

Mattel Europa B.V., Gondel 1, 1186MJ Amstelveen, Nederland.

Australia: Mattel Australia Pty. Ltd., 658 Church Street,  
Locked Bag #870, Richmond, Victoria 3121 Australia.

New Zealand: 16-18 William Pickering Drive,  
Albany 1331, Auckland.

## FCC Statement (United States Only)

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

Note: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference and (2) this device must accept any interference received, including interference that may cause undesired operation.

## ICES-003

- This Class B digital apparatus complies with Canadian ICES-003.
- Operation is subject to the following two conditions: (1) this device may not cause harmful interference and (2) this device must accept any interference received, including interference that may cause undesired operation.

## NMB-003

- Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.
- L'utilisation de ce dispositif est autorisée seulement aux conditions suivantes : (1) il ne doit pas produire de brouillage et (2) l'utilisateur du dispositif doit être prêt à accepter tout brouillage radioélectrique reçu, même si ce brouillage est susceptible de compromettre le fonctionnement du dispositif.



- Protect the environment by not disposing of this product with household waste (2002/96/EC).
- Check your local authority for recycling advice and facilities.

©2012 Mattel. All Rights Reserved.

PRINTED IN CHINA

Y1756pr-0920

Download from [Www.Somanuals.com](http://Www.Somanuals.com). All Manuals Search And Download.

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>