

Hotpoint Service and Spares

FOR SERVICE: If you have a problem with your appliance ring your local Service Office.
FOR SPARES and ACCESSORIES: To purchase spares and accessories send your Accessories Order Form to your Spares Centre. If the accessory or spare part you want is not on the form, contact your Spares Centre for prices and availability.
 Please address all correspondence to Hotpoint Spares Centre or Hotpoint Service Office as applicable.

Service Offices and Spares Centres are open between 8.00am-5.00pm Monday to Friday, except on Public Holidays. 8.30am-12.30pm on Saturdays.

■ Service Office and Spares Centre
 ● Service Office only

- EAST**
- **ESSEX:** Industrial Buildings, Beehive Lane, Charnston, CM2 9TF
Post Codes RM & IG Tel: (0245) 492433
Rembrandt of Essex Tel: (0245) 269331
 - **PETERBOROUGH:** Celia Road, PE2 9JB Tel: (0733) 64741
Spares Administration Dept. Tel: (0733) 556530
- LONDON**
- **WEMBLEY:** 68 East Lane, HA9 7FO Tel: (081) 904 4399
S. Herts and Middlesex Tel: (081) 908 4722
Post Codes N, NW, E, EC Tel: (081) 908 4722
Post Codes W, WC, SE, SW Tel: (081) 908 2511
Tel: (081) 904 0201
- MIDLANDS**
- **BIRMINGHAM:** Westgate, Aldridge, W Midlands, WS9 8UX
Post Codes B Tel: (0922) 743374
All Other Post Codes Tel: (0922) 743376
Tel: (0922) 743377
 - **NOTTINGHAM:** Ashling Street, NG2 3UB For Spares Tel: (0602) 860387
Tel: (0602) 862437/864322 For Spares Tel: (0602) 860387
Tel: (091) 417 3500/419 3535
 - **STOKE:** Sandbeck Lane, LS27 4TW
Tel: (0937) 581261/581444 For Spares Tel: (0937) 581271
- NORTH EAST**
- **WASHINGTON:** 8 Bide House, Tower Road, Glover St, District 11, NE37 2SH
Tel: (091) 417 3500/419 3535
 - **WETHERBY:** Sandbeck Lane, LS27 4TW
Tel: (0937) 581261/581444 For Spares Tel: (0937) 581271
- NORTH WEST**
- **KENDAL:** Mumford House, 26 Hygate, LA9 4SX Tel: (0539) 724483
 - **MANCHESTER:** 44/46 Station Road, Heaton Mersey, Stockport, SK4 3DT
Manchester North Tel: (061) 432 0513
Manchester South Tel: (061) 442 9677
Tel: (061) 432 0255
 - **NETHERTON:** 7 Bridge Way, Mearnsdale Tel: (051) 525 2342/524 2339
- SCOTLAND**
- **ABERDEEN:** Holbeck House, 68 Garden Place, AB1 1UL Tel: (0224) 642283
 - **EDINBURGH:** 35 West Bowling Green Street, Leith, EH6 5NX Tel: (031) 554 1431
West Lodge Road, Birkenswood Estate, PA4 9FN
Tel: (041) 866 6241 For Spares Tel: (041) 866 5611
- SOUTH**
- **LENT:** Larkfield Trading Est, New Hyde Lane, Larkfield, ME20 6SW
CR, TA, ME & TN Kent Post Codes Tel: (0622) 716571
Or, KI, RH, SM Surrey & BH Kent Post Codes (0622) 790707
GU Post Codes in Surrey Tel: Southampton (0703) 667374
Tel: (0622) 716531
 - **SOUTHAMPTON:** Unit R, S. Hemphreys Ind Pk, Salisbury Rd, Tonson, SO4 3SA
Tel: (0703) 861991/861734 For Spares Tel: (0703) 867033
Tel: (0703) 861991/861734 For Spares Tel: (0703) 867033
 - **SUSSEX:** 1 Kingswood, North St, Hailsham, BN27 10Q Tel: (0323) 842733
 - **PLYMOUTH:** 69 Mulvey Place, PL4 6JH Tel: (0757) 262631
- WALES**
- **NORTH:** Conwy Rd, Llandudno Junction, LL31 9PE Tel: (0492) 573536
 - **SOUTH:** 18 Western Ave, Bridgend Ind Estate, Bridgend, CF31 3SL
Post Codes CF, SA & SY23-25 Tel: (0656) 664121
Post Codes RS, GI, (Ind 55), HR, SY15-18 1D1 & NP Tel: (0656) 655554
Tel: (0656) 766111

IRELAND

- **NORTHERN:** 236 Ormeau Road, Belfast, BT7 2FZ
Tel: (0232) 647111
- **EIRE:** 49 Always Ind Estate, Dublin 17
Tel: Dublin 426088
Tel: Dublin 426836

CHANNEL ISLANDS - Service provided by Agents
 Normal Guarantees apply and all Service Schemes are available

JERSEY:
 19 Don Street, St. Helier
 Tel: (0534) 21625
 or
 Clos D'Ormes, Pontic, St Clements Tel: (0534) 54808

GUERNSEY & SAAR:
 Valpys Street, Grande Rue, St Martin's, Guernsey Tel: (0481) 38422
 or
 Barras Lane, Vale Tel: (0481) 51610
 32 High Street, Tel: (0481) 822986

ISLE OF MAN - Service provided by Agents
 Normal Guarantees apply and all Service Schemes are available

from
 5 Durngill St, Douglas
 Tel: (0624) 673233
 or
 Tomcoe Works, Cornbourne Village, Douglas
 Tel: (0624) 676066
 17 Ridgeway Street, Douglas
 Tel: (0624) 28811/28448

SHETLAND, ORKNEY & WESTERN ISLES -
 Service provided by Agents. Normal Guarantees apply, but
 Service Schemes are NOT available.

SHETLAND:
 Fort Road, Lerwick,
 Tel: (0859) 2557


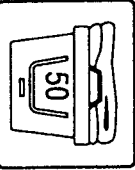

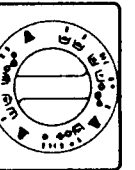
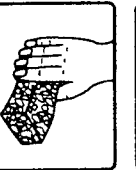

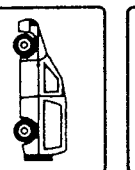








ORKNEYS:
 Halstone Ind Estate, Kirkwall
 Tel: (0856) 5457

WESTERN ISLES:
 27 Bayhead Street,
 Stromoway, Isle of Lewis
 Tel: (0851) 3287

OTHER ISLANDS: Local Hydro Electric Shops
EXCEPT ARRAN, BUTE & SKYE -
 Which are covered by Hotpoint

USER HANDBOOK - MODEL 9536

Contents

	Before you operate your washing machine	2
	Know your machine	3
	How to do a wash	4
	Sorting your laundry	6-7
	Load your machine	8
	Washing detergent	9
	Fabric conditioner	10
	Selecting your programme	10-11
	Additional wash features	12
	The machine at work	13
	Caring for your machine	14
	If you think you have a problem . . .	15-17
	If it still won't work	18
	Hotpoint Service Cover	19
	Hotpoint Service Offices and Spares Centres	back page

Hotpoint®

In accordance with its policy of progressive product design,
 Hotpoint reserves the right to alter specifications.
 Hotpoint Ltd, Peterborough, PE2 9UB, England
 Printed in England A94




Before you operate your Washing Machine

1. Make sure that your machine is correctly installed. Follow the Installation Instructions supplied with the machine. If the Installation Instructions are missing, please contact your nearest Hotpoint Spares Centre (see back page).

2. REMOVE THE TRANSIT BRACKET. YOU MUST NOT OPERATE THE MACHINE WITH THIS BRACKET IN PLACE.

Disconnect the machine from the electricity supply then follow the procedure as shown on the label on the back of the machine.

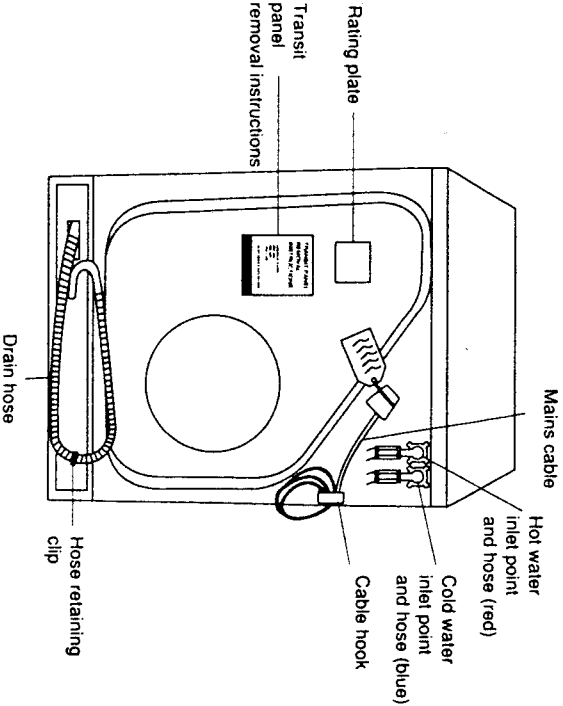

3. Read these Instructions before using your machine.
- NOTE: Do not sit or stand on top of your washing machine; you could injure yourself or damage the machine by such abuse.

WARNING: CHILDREN SHOULD NOT BE ALLOWED TO PLAY WITH THE APPLIANCE OR TAMPER WITH THE CONTROLS.

Hotpoint Service Cover

Satisfaction Guaranteed or Your Money Back

Hotpoint gives you a unique 'Satisfaction Guaranteed' promise - valid for ninety days after you have purchased your Hotpoint product. If there is a problem with your Hotpoint appliance just call your Hotpoint Service Office. If necessary we will arrange for an engineer to call. If the problem is not resolved by us under this Guarantee, Hotpoint will replace your appliance or, if you prefer, give you your money back. This Guarantee is additional and subject to the terms of Hotpoint's Five Year Paris Guarantee.

Hotpoint's Free Five Year Guarantee

From the moment your appliance is delivered, Hotpoint guarantees it for **FIVE YEARS**.

- In the Five Years all replacement parts are **FREE** provided they are fitted by our own Service Engineer. During the first year our Engineer's time and labour is also free.
- After the first year we will charge for our Engineer's time and labour. We do, however, operate a range of Service Plans (see opposite) which for an annual payment enables you to cover any repair costs which may be necessary. All of our service repairs are guaranteed for twelve months in respect of our labour and any parts fitted.
- The appliance must be used in the United Kingdom and must not be tampered with or taken apart by anyone other than our own Service Engineer.
- You may, however, buy parts which can be safely fitted without specialist knowledge or equipment. The correct fitting of such parts, provided they are genuine Hotpoint spares, will not affect your Guarantee. Parts are available from our main Hotpoint Spares Centres.
- Our Guarantee does not cover the cost of any repair which is needed because of power cuts, accidents or misuse. Nor does it cover the cost of any visit to advise you on the use of the appliance except for our Free Installation Check for Automatic Washing Machines and Dishwashers. Please read the instruction book thoroughly.
- If at any time during the Guarantee period we are unable to repair your appliance, we will refund any repair costs paid to us in the previous twelve months. We will also offer you a new appliance at a reduced charge instead of a repair.
- Our Guarantee is in addition to and does not affect your legal rights.
- Should you need independent advice on your consumer rights, help is available from your Consumer Advice Centre, Law Centre, Trading Standards Department and Citizens Advice Bureau.
- All Hotpoint servicing is done by our own Service Organisation located throughout the United Kingdom and Southern Ireland. It will be happy to deal with any problems.

Hotpoint's Installation Check

If you ask at your local Service Office (see back page), Hotpoint will send one of its trained Engineers to make sure that the appliance has been properly unpacked and correctly connected to existing water and electrical supplies. If you wish, the Engineer will be happy to explain how to use your new appliance.

Hotpoint's Service Care

Whether you have just one or a number of Hotpoint appliances in your kitchen, Hotpoint has a range of Service Schemes to give you complete peace of mind.

Service Cover

A single payment covers you for all repairs during the period of cover, which can be from 1 to 4 years. There is also an option of Service Cover with Maintenance at an additional cost. This includes an annual Electrical and Safety check and replacement of any parts as necessary. For 1 year contracts this takes place towards the end of the contract period.

Kitchen Cover

An annual payment covers you for all repairs for all your Hotpoint appliances which are less than 10 years old. It also covers the cost of loss of food up to £250 in our refrigeration and freezer products. There is also the option of Kitchen Cover with Maintenance at an additional cost. Any additional Hotpoint appliances purchased after you have joined Hotpoint Kitchen Cover will automatically be included during the annual period of cover without further charge.

Appliance Registration

To ensure that you have the opportunity to benefit from any of the above Service Schemes you should complete and return immediately the Appliance Registration Form supplied with your appliance. Full details and costs of our Service Schemes together with an application form will be sent to you at the end of the first year of the guarantee.

Annual Safety/Maintenance Checks

Hotpoint strongly recommends that all its appliances are regularly checked for electrical and mechanical safety whether or not they are covered by a Service Plan.

Proof of Purchase

For future reference please attach your purchase receipt to this booklet and keep it in a safe place. Spares and accessories can be ordered from your local Hotpoint Spares Centre (listed on the back page), using the order form enclosed.

NOTE: Our Engineer will use every effort to avoid damage to floor coverings and adjacent units when carrying out repairs/service work but in locations where the Engineer advises you that it will be impossible to move the appliance without risk of damage, he will only proceed with your approval that no liability is accepted

NOTE: Our Engineer will use every effort to avoid damage to floor coverings and adjacent units when carrying out repairs/service work but in locations where the Engineer advises you that it will be impossible to move the appliance without risk of damage, he will only proceed with your approval that no liability is accepted

?

If it still won't work . . .

Contact your local Service Office

If something is still wrong with your machine after you've been through the check-lists:

1. Switch off and unplug machine from the mains.
2. Turn off hot and cold taps.
3. Call your nearest Hotpoint Service Office or local importer (outside the UK). The telephone number is on the back page. Note down the number here for convenience:

When you contact us we will want to know the following:

1. Your name, address and post code.
2. Your telephone number.
3. Clear and concise details of the fault.
4. The model number of your machine (9536 for this machine), the serial number (found on the inside of the door) and the colour.
5. The date of purchase. Enter the date here:

6. If you have taken out a Hotpoint Service Cover Plan.
- Please make sure you have all these details ready when you call.

Emergency door opening

If the machine is full of water with your clothes inside, you can open the door by following these instructions. You will need a bucket. First you have to empty some of the water, so that the safety latch will release the door.

1. Turn off the hot and cold taps, switch off the electricity and unplug the machine. Do not use machine again until the Service Engineer has called.
2. Pull out the machine so that you can get at the back of it.
3. Place the end of the Hose in a bucket to drain the water. Draw off about two bucketfuls.

WARNING: BE CAREFUL, THE WATER MAY BE VERY HOT.

4. When sufficient water has been removed you will be able to open the door.


Retention of this Instruction Book

This Instruction Book must be kept handy for reference as it contains important details on the safe and proper use of the appliance.


If you sell or pass the appliance to someone else, or move house and leave it behind, make sure this Book is also provided so the new owner can become familiar with the appliance and safety warnings.

If the Book is lost or damaged a copy may be obtained from Hotpoint Ltd, Colta Road, Peterborough, PE2 9JL3.

Know your Machine

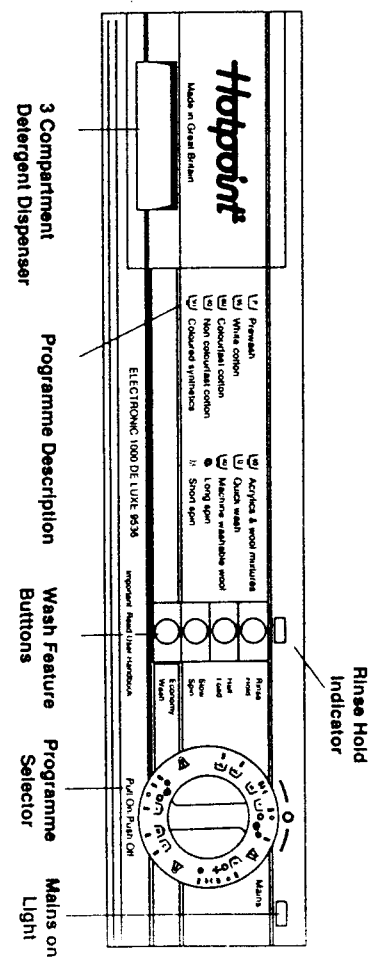


How to Open the Door

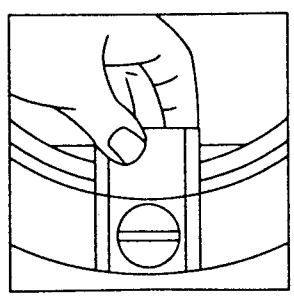

Open the door by pulling the door catch and handle outwards.


Programme Selector

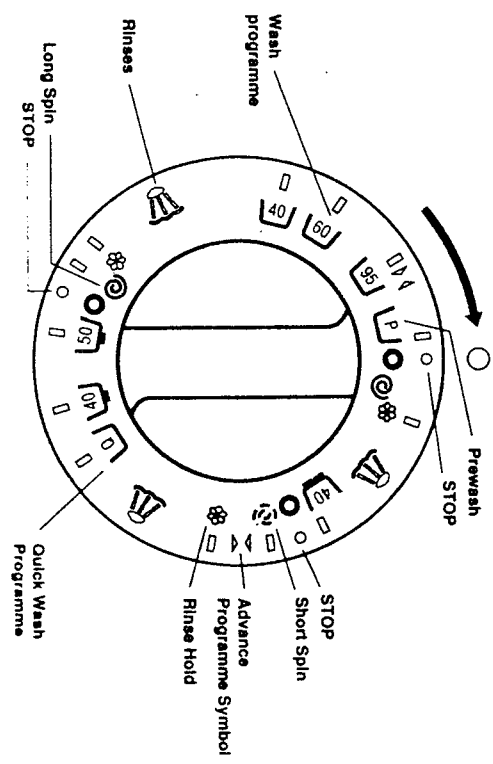




How to do a wash

BEFORE THE WASH

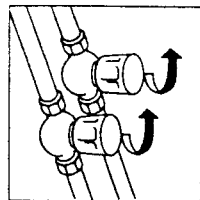

1. Turn on hot and cold water
Hot water should ideally be at 60°C (140°F) and (140°F) and must not be above 70°C (160°F).

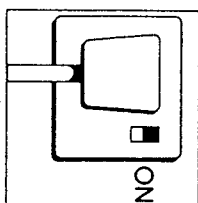


2. Plug in, switch on electricity


WARNING: ENSURE HANDS ARE DRY.




3. Sort your laundry
See page 6
Make up a load of similar fabrics

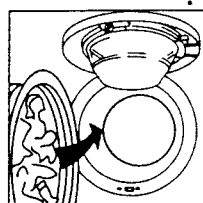

4. Load the machine
See page 8
Don't overload the machine

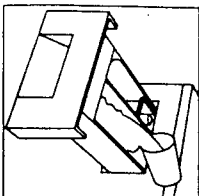


5. Detergent and fabric conditioner
See pages 9 and 10

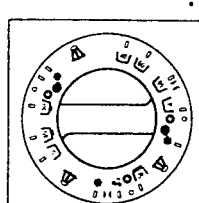

6. Select a programme to suit your laundry
See page 10

7. Select additional wash features
See page 12.

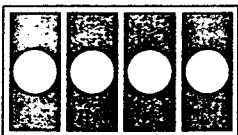

Rinse Hold
Half Load
Slow Spin
Economy Wash

Stops the machine during the final rinse (progs 50, 40 and 0 only)
For small loads (not prog 40)
Minimises creasing of delicate fabrics
'No heat' wash for light soiling only



The door won't open

Has the door lock been set, see page 12.

Is the door locked?

Has the programme finished?

Could it be on Rinse Hold?

Is there water still in the machine? Check your drain outlet and waste pipe connections. If your waste

installation is wrong, water could be running back into the machine causing the door to lock! Spin out and try again.

Emergency door opening procedure is explained on page 18.

18.

The clothes are not dry enough

Did you select the right programme for the type of fabric?

Did the water pump out?

(Check waste plumbing arrangements.)

Machine takes a long time

Have you selected a hot wash? See page 13. Hot programmes can take a long time, especially if the water has to be heated up from cold. Other things that can lengthen the programme are:

- Prewash
- Low water pressure
- Modifying your machine to cold fill only

The clothes are not clean

Did you select the correct programme?

(Try a prewash next time and the correct wash programme.)

Did you use the correct quantity of detergent?

(See page 9.)

Did you use the Economy Button?

Did you select the correct wash options?

Was the machine overloaded? Good wash results are only obtainable with the recommended wash load.

IF YOU INSTALL YOUR MACHINE CORRECTLY AND FOLLOW THE USER INSTRUCTIONS SUPPLIED, YOU ARE UNLIKELY TO EXPERIENCE DIFFICULTIES.



It's stopped in mid programme

After the initial fill, the machine may sometimes pause while the heater comes into operation. It should continue after the selected temperature is reached.

Has it stopped on RINSE HOLD? If so, press the button to continue the programme.

NOTE: The Rinse Hold light (if fitted) only operates when the Rinse Hold feature is reached in the programme.

Steam is coming out of the detergent dispenser drawer
During HOT washes the machine is designed to vent steam from the dispenser drawer and this is quite normal.

Water flowing into the machine and out of the drain hose at the same time
Is the drain standpipe at least 500mm (20in) above floor level? See Installation Instructions booklet.

Has the drain hose been pushed down the standpipe more than 50mm (2in)?
If so, then raise it.

Suds are coming out from the detergent dispenser
Did you use the right quantity of **LOW SUDS AUTOMATIC DETERGENT?**
Select a rinse programme and flush the machine through.

It makes a noise or vibrates during spin
Your Automatic will make some noises, especially while spinning. **If vibration is excessive, check that you have removed the transit packing. See Installation Instructions.**

Small loads of heavy or bulky items (towels, bath mats, jeans, etc) can cause out of balance conditions but the machine will usually sort itself out.

Check also that your machine is resting firmly on the floor. See Installation Instructions regarding levelling of the machine.

Note: Rattling and scraping noises are not normal and may need attention!


It won't pump out
Has the drain hose been installed correctly? (See the Installation Instructions.) Is the hose kinked? If you have connected to a sink waste spigot, is the spigot blocked?

8. CLOSE THE DOOR SAFETY LOCK



It is recommended that the door is locked if children are nearby. To lock, turn the slot 90° in a clockwise direction. For safety reasons the door cannot be opened whilst the drum is rotating or contains water. Door lock can be turned clockwise or anti-clockwise. When bar in vertical position door unlocked, in horizontal position = locked

9.

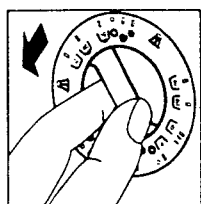


Start the machine
See page 10

Pull out the Programme Selector
The machine will automatically carry out the programme selected

DURING THE WASH


10. Rinse hold (Programmes 150', 140' and 10').
See page 13

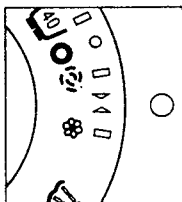


Note: This symbol appears after Prewash
See page 11

AFTER THE WASH


11. Switch off machine
Push in the Programme Selector when programme has finished

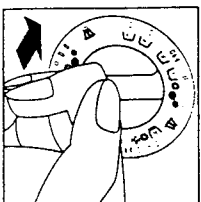


12.
To unlock the safety lock turn the slot 90° in an anti-clockwise direction
Take out laundry

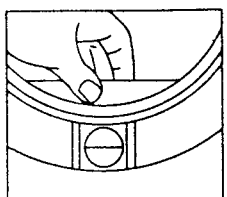

13. Switch off electricity

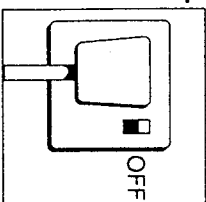


14. Turn off water

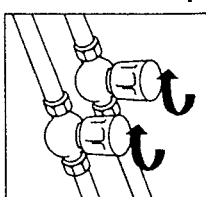

WARNING: WHEN SWITCHING ELECTRICITY OR MACHINE ON OR OFF, PLEASE ENSURE THAT YOUR HANDS ARE DRY.





Sorting your laundry

Wash codes appear on the labels on most washable items. You may have some items with the old wash code printed on the garment label. For easy reference, the new and old wash codes are shown below. The new codes are shown on your Programme Selector.

Label codes	Fabric	Temp °C	Max		
			Full load	Half load	
1 95/150	White cotton and linen without special finishes	85	5kg 11lb	2.5kg 5.5lb	
2 60/60	Colourfast cotton, linen or viscose without special finishes	60	5kg 11lb	2.5kg 5.5lb	
3 50/60	Coloured nylon polyester acrylic/cotton mixtures, cotton or viscose with special finishes (eg. drip dry), coloured polyester/cotton mixtures	50	3kg 6.5lb	1.5kg 3.2lb	
4 40/50	Non-colourfast cotton, linen and viscose	40	5kg 11lb	2.5kg 5.5lb	
5 40/40	Acrylics, acetates and tri-acetates, blends of these fabrics with wool, polyester/wool blends	40	3kg 6.5lb	1.5kg 3.2lb	
6 40/40	Woolen blankets, wool mixtures with cotton or rayon, silk	40	2.7kg 6lb	Do not use	
7 40/40	Shrink resistant machine-washable and Superwash Woolmark garments	40	1.4kg 3lb	Do not use	
Q	Lightly soiled items only Not wool items – machine washable: wool mixtures	Cool	0.9kg 2lb	Do not use	

It is advisable to separate light and dark colours. There are often other symbols on the garment label also. These are explained on the opposite page.

If you think you have a problem . . .



Look at this list, then check the adjacent suggestions. They may give you the answer to your problem, without having to telephone your Hotpoint Service Office.

If you cannot solve the problem, follow the advice given on page 18.

Problem	Check these things first
<i>Powder dispenser drawer won't close properly</i>	Ensure flap is fitted correctly. See page 14. Make sure the flap is fitted correctly. Is the drawer jammed with detergent?
<i>It won't start</i>	Have you selected the programme and pulled out the selector knob? Is the loading door closed firmly? Is it plugged in and switched on at the mains? Is the socket OK? (Try another appliance in it.) Has the fuse blown? (Try a new fuse of the correct rating.)
<i>It won't fill or take in the detergent</i>	Are the taps turned on fully? Have you got the hoses connected correctly. See page 2. Have you selected the programme correctly and pulled out the selector knob to start the machine? If you have a liquid detergent dispenser – did you put powder in the liquid detergent dispenser by mistake?
<i>The programme sticks at the end of the wash or during the rinses</i>	Has the drain hose been installed correctly? If not, syphoning could occur and this will halt the programme. Check the installation instructions. It is important that you do not remove hooked end support and push the hose too far down the waste standpipe.
<i>It's leaking</i>	Are the fill hoses tightened correctly? – Perhaps the washers are not sealed properly. Is your standpipe blocked? Is your household drainage system blocked? If you cannot clear the blockage yourself, you will need a plumber. Removal of the hooked end support may cause a leakage.



Caring for your machine



When programme has finished:


- press in the Programme Selector
- cancel any feature buttons.

After each wash:

- open door, remove clothes and rotate drum to check for small items left behind.
- remove dispenser drawer for cleaning.

To clean dispenser:

- Pull out the drawer until it reaches its stop, then lift slightly and give it a sharp tug to remove it completely (see diagram).

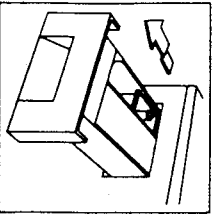


- Remove fabric conditioner compartment.
- Pull off syphon tube and clean conditioner compartment.
- Push syphon tube **firmly** back into place in the conditioner compartment.
- Clean the dispenser drawer and dry thoroughly.
- Replace the conditioner compartment in the dispenser drawer, with the syphon tube towards the back.
- Check that the flap at the back is in place and pivots correctly.

To locate drawer into the machine, hold the top of the flap away from you until it locates under the top of the dispenser opening, then push the drawer back in firmly.

As necessary

Clean exterior surfaces with a damp cloth or silicon polish only.

Do not use abrasive cleaners, scouring agents, acids, chlorine bleach or metal polish to clean any part of the machine. This could damage it.

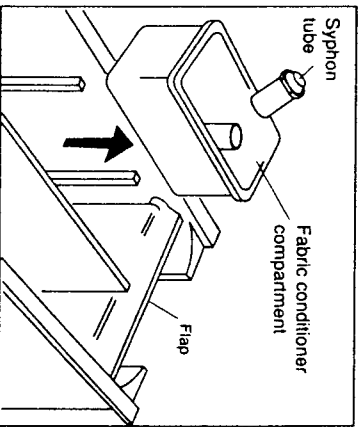

Yearly. We recommend you take out a Hotpoint Service Cover Plan with annual safety/maintenance check which ensures the machine is professionally serviced every year. Details are given at the end of this book.

Hotpoint strongly recommends that its machines are regularly checked for electrical and mechanical safety whether or not they are covered by a Hotpoint Service Cover Plan. This is to avoid such things as worn door gaskets or hoses which may cause a leak on a machine which could become dangerous if neglected.

NOTE: The hole in the door gasket is designed to help water drain into the drum.

WASHING:

Articles labelled should be hand washed.

Hand wash only.

Do not machine or hand wash

Dry Cleaning:

All of these are dry cleaning symbols. The letters are to instruct the cleaner what type of solvent should be used.

Garments bearing these symbols should not be washed in your machine, unless the label says otherwise.

Do not dry clean.

Bleaching:

Bleach may be used. In this case the letters 'Cl' show that a chlorine household bleach such as 'Domestos' can be used. NB This applies to hand washing only. **Do not use bleach in your machine.**



Do not bleach.

NOTE: Do not wash non-colourfast items, woollens or really dirty clothes in a mixed load.

Woollens

Machine-washable woollens may be washed on programme , but remember:

- Limit the load to 1.4kg (3lb).
- Do not use the Half Load option (woollens should be totally immersed in water).
- Do not use a Prewash (soaking may harm woollens).
- Do not tumble dry.

Do not machine wash woollens which don't have a Washcare label or any label stating they are machine washable.

NOTE: Some 'woollens' are not made of wool at all but acrylic, which should be washed on programme . Check the label to make sure.

Pre-treating dirt and stains

Brush a little washing detergent dissolved in water onto stains like collars and cuffs to help shift the dirt.

Treat stains immediately

Plunge the stained area into cold water, or sponge it down. This prevents the stain from setting. Wash as soon as possible afterwards.

Nappies: Scrape off any excess baby cream, such as Vaseline[®] from the nappies before washing. Use a Prewash programme (page 11) to prevent the cream being transferred to other items in the wash.

Pockets and Zips


DO MAKE SURE ALL YOUR POCKETS ARE EMPTY.

Tissues can disintegrate and cover all your washing.

Sharp objects like coins and keys can damage clothes and the machine.

Close all zips and tie belts and strings to prevent tangling.

Caring for Your Machine



Load your machine

Don't overload your machine.

Clothes won't wash properly and damage may be caused to your machine and garments. See page 6 for maximum wash loads.

Typical Weights

To help you wash the correct quantity of clothes, the chart below lists typical clothes weights.

Clothes	Weight
Blouse	Cotton 150g 5oz
	Other 100g 3½oz
Dress	Cotton 500g 11lb 2oz
	Other 350g 12oz
Jeans	700g 11lb 8oz
10 Nappies	1000g 21b 3oz
Shirt	Cotton 300g 10½oz
	Other 200g 7oz
T-Shirt	125g 4½oz
Household items	
Duvet Cover (Double)	Cotton 1500g 31b 5oz
	Other 1000g 21b 3oz
Large Tablecloth	700g 11lb 8oz
Small Tablecloth	250g 9oz
Tea Towel	100g 3½oz
Bath Towel	700g 11lb 8oz
Hand Towel	350g 12oz
Double Sheet	500g 11b 2oz
Single Sheet	350g 12oz

Additional tips:

- Blankets, double bedspreads and other bulky articles should be washed one at a time.
- To load a blanket, hold it by the centre and allow the corners to drop down. Feed it into the machine centre first.
- Highly absorbent loads such as towels and nappies should be limited to 3kg (7lb) per load to ensure adequate rinsing.
- Place small items in a washbag.
- Check the wash symbol on items such as T-Shirts. They may require a cool wash eg
- Whenever possible wash a full load of clothes to obtain maximum cost and time efficiency.**

The machine at work

What's it doing?

During use you will be aware that your machine will be making some noise and will stop at various intervals during the programme. This is normal.

During the wash the machine will:

- 1. Fill** with water, tumbling to mix the detergent.
- 2. Heat** to temperature, with the occasional tumble. This may take some time, so don't be worried if it appears to have stopped working.
- 3. Wash** the clothes, by tumbling, stopping and reverse tumbling.
- 4. Cool rinse.** On programmes , , the first rinse has a stepped 'cool down' feature by which cold water is added to the hot wash water to gradually reduce its temperature and prevent shock creasing of the washing.
- 5. Dispense fabric conditioner.** If added, this is dispensed on the final rinse.
- 6. Rinse Hold.** Machine stops on the final rinse on programmes , , if you've pushed in the Rinse Hold button (see page 12). Push Rinse Hold button to restart programme.
- 7. Spin.** Follows each rinse at one of two different speeds.

How long can programmes take?

It depends on many things for example:

1. Water flow rate.
2. Temperature of incoming water.
3. Time taken for machine to heat up the water.
4. Features selected.
5. Type and weight of clothes load.

The approximate programme times are:

Programme	Approximate time
	110-115 mins
	70-75 mins
	50-55 mins
	55-60 mins
	45-50 mins
	35-40 mins
	30-35 mins

Prewash adds 30 minutes.
Half Load saves 5-10 minutes.
Economy Wash saves up to 15 minutes.


WARNING: DO NOT TOUCH THE GLASS DOOR WHEN THE MACHINE IS IN OPERATION AS THIS AREA CAN BECOME HOT.

WARNING: IT IS POSSIBLE FOR CHILDREN AND ANIMALS TO CLIMB INTO WASHING MACHINES AND INJURE THEMSELVES.





Additional Wash Features

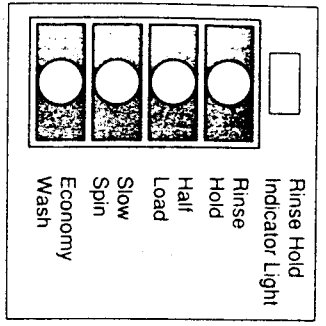

One or more option buttons can be pressed in to give you the versatility of wash programme you require.

Select your own wash option BEFORE pulling out the Programme Selector. Press button(s) again to cancel option.

Rinse Hold
minimises creasing of synthetic fabrics
50, 40, 0.

Programme stops at final rinse with washing immersed in water until they are spun dry. The rinse hold indicator light will glow.

Press Rinse Hold button to complete programme.

Half Load
For small loads: saves time, water, electricity and detergent.

Reduces the amount of water the machine uses, saves detergent, time and the electricity to heat the water.

Page 6 shows the maximum quantities for a 1/2 load.

Slow Spin
For spinning delicate fabrics.

Don't use on Programme 40 nor for full loads or when washing large single objects like bedspreads, as it won't get them dry enough.

The machine normally spins at 1000rpm. Pressing the Slow Spin button reduces this to 500rpm, to reduce creasing on synthetics programmes 50, 40 and 0. Slow Spin doesn't get the clothes quite as dry as the normal speed.

Economy Wash
For lightly soiled washing; saves electricity and time.

Economy Wash switches off the machine's own water heater so your clothes are washed at the temperature of the water entering your machine from your hot and cold water tanks. This saves you electricity, but means a cooler wash. Use Economy Wash for lightly soiled clothes, not for really dirty clothes.

PULL OUT PROGRAMME SELECTOR TO START THE MACHINE.

Additional Features
Safety Lock
If children are nearby it is recommended that the door is locked. To lock, turn the slot 90° in a clockwise direction. To unlock turn 90° in an anti-clockwise direction.

DON'T FORGET TO CANCEL BUTTONS AT THE END OF THE PROGRAMME.

Washing Detergent

Which one to use?
Use any low suds automatic powder. Non-automatic powders reduce wash performance and can cause overfarming.

Your machine has been specially developed to take advantage of biological powders. Hotpoint recommends Biological Persil Automatic.

How much to use
It is important to use the correct quantity in soft or hard water areas, too little won't get the clothes clean, and too much is a waste.


Quantities indicated below apply to Persil Original Automatic Powder.

For other detergents refer to the packet. The table below will give you a guide which you can amend in the light of your own experience, if necessary.

Detergent	Cottons Hard water/ Soft water*	Synthetics Hard water/ Soft water*	Woolfens Hard water/ Soft water*
Prewash	75/50 grams	75/50 grams	150/100 grams
Full load	225/175 grams 150/100 grams	150/100 grams 100/75 grams	150/100 grams 100/75 grams
Reduced load	150/100 grams	100/75 grams	100/75 grams

These doses are for normally soiled loads
1 cup = 265ml = approximately 16oz.

* If you are unsure, check with your local water company

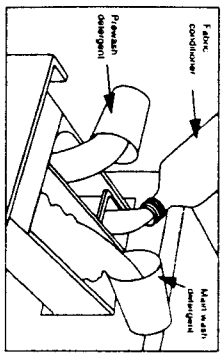

Where to put it

Pull-out drawer on the left of the machine. Powders or liquids which cannot be dispensed through the drawer should be used in detergent dispensers as recommended by the detergent manufacturer, whose instructions on use and quantity of detergents should be followed.

Concentrated detergents


Are now becoming more widely available. Follow the detergent manufacturer's guide regarding quantities to use.

Liquid detergent

To dispense all liquid detergents (which do not require their own dispenser) we recommend using the Hotpoint Liquid Detergent Dispenser (Part No. 9003) which is obtainable from your nearest Hotpoint Spares Centre (see back page) using the order form enclosed. Place the Liquid Detergent Dispenser in the right hand section of the dispenser drawer.

Remove any water remaining from the previous wash before adding liquid detergent and ensure that the syphon tube is firmly in position.


When using liquid detergents in their own dispensers, follow manufacturer's instructions.

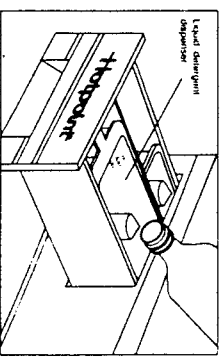



Fabric Conditioner

Hotpoint recommends Comfort. It will soften your washing, eliminate static cling from synthetics and make ironing easier. Add conditioner when adding your detergent. Use the quantity recommended on the bottle. Don't exceed the quantity. Remove the fabric conditioner compartment and tip out any water remaining in it before adding conditioner. Replace it as shown with the syphon tube towards the back. **Make sure the tube is firmly in place.**

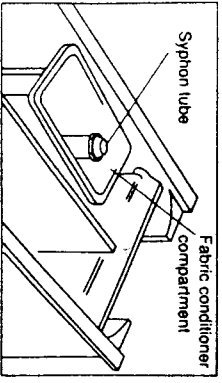

Selecting your Programme

Turn the Programme Selector clockwise to the wash programme according to the clothes label code (see page 6) or one of the alternative programmes on page 11. The symbol selected should be at the top, eg. 150.


Do not turn the Programme Selector anti-clockwise and do not turn it when it is pulled out. Push it in to select another programme.

Select any additional features. Pull Programme Selector OUT.

A Lockable Dispenser Drawer

(Part No. 9002) is available, to prevent young children from opening the drawer whilst the machine is running, or from hiding objects in the drawer. This can be ordered from your local Hotpoint Spares Centre (see back page), using the order form enclosed.

WARNING: DO NOT PULL OUT THE DISPENSER DRAWER WHILE THE MACHINE IS OPERATING AS THERE MAY BE HOT WATER PASSING THROUGH IT.

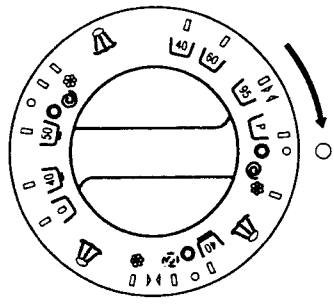


Programme Selector

Do not attempt to open the door once the programme has started

Selecting your Programme

The following additional programmes may be selected:

Prewash

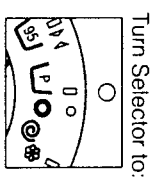


Select Prewash for really dirty clothes. Use Football Kit and nappies. Select Prewash before any programme except 140.

When finished Programme Selector will stop at the symbol ▶▶.


Push Programme Selector in and turn to select the main wash you want. For a cold Prewash, press the Economy Wash button as well.

Quick Wash

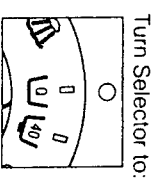


A quick cool wash to freshen up lightly soiled items in just over 30 minutes. Max load 0.9kg (2lb). Not recommended for woollen or machine washable wool. It is not necessary to select the Half Load feature.

Spin Only

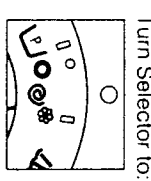


Long Fast Spin
Natural fabrics - wash codes 95/160/40/140

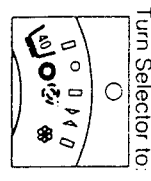


Short Slow Spin
Synthetic fabrics wash codes 150/140/0

NB: Do not fill more than half full with wet clothes (natural fabrics) or one-third full of synthetics. Short Slow Spin has a burst at high speed at the end of its cycle. To delete this for delicate fabrics, press the Slow Spin button.

Rinse and Spin

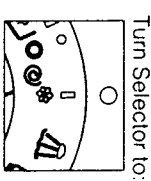


Choose the rinse symbol on the Selector just before the type of spin you want - Long Fast (⊙) or Short Slow (⊙) to suit the fabric. Press the Slow Spin button if required (see page 12).

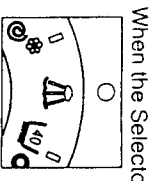

When the Selector reaches: The machine is in its rinse programme.

NB: Woollens and other Hand-Wash only items should only be spin dried, but it is advisable to rinse and spin all other washable fabrics.

End of Programme

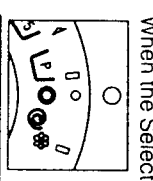

When the Selector reaches: The programme has finished. To switch off, push in the Programme Selector, open the door and remove the clothes.



Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>