



Getting Started

Copyright and License

The only warranties for Hewlett-Packard products and services are set forth in the express statements accompanying such products and services. Nothing herein should be construed as constituting an additional warranty. HP shall not be liable for technical or editorial errors or omissions contained herein.

HP assumes no responsibility for the use or reliability of its software on equipment that is not furnished by HP.

This document contains proprietary information that is protected by copyright. No part of this document may be photocopied, reproduced, or translated to another language without the prior written consent of HP.

Hewlett-Packard Company

P.O. Box 4010

Cupertino, CA 95015-4010

USA

Copyright © 2010 Hewlett-Packard Development Company, L.P.

This product incorporates copyright protection technology that is protected by U.S. patents and other intellectual property rights. Use of this copyright protection technology must be authorized by Macrovision, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision. Reverse engineering or disassembly is prohibited.

Microsoft and Windows 7 are U.S. registered trademarks of Microsoft Corporation. The Windows logo and Windows 7 are trademarks or registered trademarks of Microsoft Corporation in the United States and/or other countries/regions.

"Dr. Dre", "Beats" and the B logo are trademarks of Dr. Dre and Jimmy Iovine.

HP supports lawful use of technology and does not endorse or encourage the use of our products for purposes other than those permitted by copyright law.

The information in this document is subject to change without notice.

Understanding hard disk drive space

The hard disk drive on the Hewlett-Packard and Compaq computers with the Microsoft® Windows operating system preinstalled may appear to be smaller than the size stated in the product specifications, in the documentation, or on the box. Hard disk drives are described and advertised by manufacturers in terms of decimal (base 10) capacity. Microsoft Windows and other programs, such as FDISK, use the binary (base 2) numbering system.

In decimal notation, one megabyte (MB) is equal to 1,000,000 bytes, and one gigabyte (GB) is equal to 1,000,000,000 bytes. In the binary numbering system, one megabyte is equal to 1,048,576 bytes, and one gigabyte is equal to 1,073,741,824 bytes. Because of the different measuring systems, you may see a difference between the size reported by Microsoft Windows and the size advertised. The storage capacity of the hard disk drive is as advertised.

Microsoft Windows reports smaller capacity in the Windows Explorer tool and in the computer window because it shows information about one partition on the hard disk drive at a time. One of the partitions contains the System Recovery information.

Part number: 626272-002

Second edition, December 2010


Table of contents

1 Getting information	1
2 Features	4
3 Setting up your computer	5
Connecting your computer	6
Protecting your computer	7
Guidelines for installing software and hardware devices	7
Connecting to the Internet	8
Transferring files and settings to your new computer	9
Computer orientation	10
Connecting a game console	11
HP My Display TouchSmart Edition	13
Using Beats Audio™	14
Using the HP TouchSmart with safety and comfort	14
4 Troubleshooting and maintenance	16
Computer does not start	16
Power	17
Display (screen)	17
Keyboard and mouse (with cable)	18
Keyboard and mouse (wireless)	20
Speakers and sound	21
Internet access	21
Memory	23
Gaming mode	24
Software troubleshooting	24
Maintenance	27
System Recovery	29
Recovery media	33

1 Getting information

Type of information	Where to find
<ul style="list-style-type: none">• Set up your computer.	Setup documentation included with your computer.
<ul style="list-style-type: none">• See how-to videos about using the features of your computer.	Visit www.hp.com/support/videos (English only) Tap the Tutorial icon (select models only) in the carousel within the HP TouchSmart application.
<ul style="list-style-type: none">• Use the computer.• Connect to the Internet.• Recover factory settings.	<i>Getting Started</i> (this guide)
<ul style="list-style-type: none">• Troubleshoot the most common computer hardware and software issues.• Find links to driver updates.• Read frequently asked questions.	Help and Support: Tap the Start button, and then tap Help and Support .
<ul style="list-style-type: none">• Learn how to use the Microsoft® Windows® 7 operating system.• Find Windows 7 support information.	Windows 7 troubleshooting tools: <ol style="list-style-type: none">1. Tap the Start button, tap Control Panel, and then tap System and Security.2. Under Action Center, tap Find and fix problems (troubleshooting). HP Support website: www.hp.com/support Visit www.hp.com/go/win7
<ul style="list-style-type: none">• Find electronic user guides and specifications for your computer model.• Order parts and find additional troubleshooting help.	HP Support website: www.hp.com/support
<ul style="list-style-type: none">• Upgrade or replace components of your computer.	<i>Upgrading and Servicing Guide</i> Tap the Start button, tap All Programs , and then tap User Guides .
	If the guide is not available there, visit www.hp.com/support

Type of information	Where to find
<ul style="list-style-type: none"> Find computer warranty information. Get technical support. 	<p><i>Limited Warranty and Support Guide</i> or the <i>Warranty and Support Information</i> included with your computer.</p>
<ul style="list-style-type: none"> Get up-to-date information and help from the Windows community. 	<p>www.hp.com/support/consumer-forum</p>
<ul style="list-style-type: none"> Connect to a TV. 	<p>Setup documentation included with your computer.</p>
	<p><i>Watching and Recording TV</i></p>
	<p>Tap the Start button, tap All Programs, and then tap User Guides.</p>
	<p>If the guide is not available there, visit www.hp.com/support</p>
<ul style="list-style-type: none"> Get special utilities for computer owners. 	<p>PC Help & Tools folder</p> <p>Tap the Start button, tap All Programs, and then tap PC Help & Tools.</p>
<ul style="list-style-type: none"> Maintain your computer. 	<p>HP Support Assistant — Maintains your computer performance and resolve problems faster by using automated updates, onboard diagnostics, and guided assistance.</p> <p>Tap the Start button, tap All Programs, tap HP, and then tap HP Support Assistant.</p>
<ul style="list-style-type: none"> Find ergonomic information. 	<p><i>Safety & Comfort Guide</i></p> <p>Tap the Start button, tap All Programs, and then tap User Guides or visit www.hp.com/ergo.</p>
<ul style="list-style-type: none"> Wall-mounting your computer (select HP TouchSmart PC models only). 	<p><i>Wall-Mounting your HP TouchSmart</i></p> <p>Tap Start, tap All Programs, and then tap User Guides.</p> <p>If the guide is not available there, visit www.hp.com/support</p>

 **WARNING!** To reduce the risk of electrical shock or damage to your equipment: Place the computer in a location away from water, dust, moisture, and soot. These can increase the inside temperature, or can cause fire or electrocution.

WARNING! Do not disable the power cord grounding plug. Plug the power cord in a grounded (earthed) outlet that is easily accessible at all times.

WARNING! Disconnect power from the equipment by unplugging the power cord from the electrical outlet.

WARNING! The power supply is preset for the country/region in which you purchased your computer. If you move, check the voltage requirements for your new location before plugging the computer into an AC power outlet.

WARNING! To prevent direct exposure to a laser beam, do not try to open the enclosure of the CD or DVD drives.


NOTE: Some features might not be available on systems that are shipped without a version of Microsoft Windows.

2 Features

Features vary by model.

The HP TouchSmart PC is a touch-enabled high-performance computer built into a high-definition widescreen display. The slim computer offers select features, that vary by model, such as an adjustable webcam, a CD/DVD and Blu-ray player and burner, Bluetooth capability, USB ports, a media card reader, Wireless 802.11n networking, full support for Beats Audio™ devices (sold separately), and high quality speakers.

Select HP TouchSmart PC models can be mounted on a wall using a standard VESA wall-mounting device. The hardware to adapt the computer for wall mounting (not the actual wall mount) is included in select HP TouchSmart PC models and can be purchased.

The HP TouchSmart 4.0 application is designed to maximize the touch-enabled capabilities of your computer. Some of the new features included in the HP TouchSmart 4.0 application are: the Magic Canvas, creating Magnets, easy interaction with other software applications, and creating website shortcut tiles. To launch the software, tap the HP TouchSmart icon  on the desktop, or tap the **Start** button and then tap **HP**

TouchSmart.

• The Magic Canvas

- Access a submenu, by tapping on the Magic Canvas, to change the background, write a note on the Magic Canvas and leave it there, and filter the media types that appear on your screen.
- Customize the appearance of your Magic Canvas with stationary and moving objects.
- Place playlists, slide shows, music, graffiti, videos, and photos on your Magic Canvas.
- A carousel, of available applications and your favorite website shortcuts, appears at the bottom of the screen. Make a left and right sliding motion with your finger over the carousel to scroll continuously through the applications and website shortcuts.

• Creating Magnets

- Drag content from an application (photos, music, playlists, notes, calendars) onto the Magic Canvas.
- Create shortcuts to content.
- Interact with magnets without having to open the application.
- Pin magnets to the Magic Canvas to prevent them from scrolling off.

• Interaction with Applications

- All active applications are highlighted in the carousel.
- Applications can be scrolled on or off the screen.
- Bring an application into view by touching it in the carousel.
- View all applications and website shortcuts by tapping the Quick Launch button.
- Size application views to full screen, partial screen, or icon.

• Website Tiles

Add shortcut tiles to your favorite websites into the carousel.

3 Setting up your computer


- ❑ Follow the steps in the setup documentation included with your computer.
- ❑ Place the computer so that all ventilation openings are unobstructed and cabling is not in a walkway or where it can be stepped on or damaged by placing furniture on it.
- ❑ Connect all power cords from the computer and accessories to a power surge protection device that is specifically labeled as having surge protection, an uninterruptible power supply (UPS), or a similar device. If the computer has a television tuner or telephone connection, protect the computer by using surge protection with these signal inputs as well. Connect the television cable or the telephone line cord to the surge protection device, and then connect the device to the computer.
- ❑ Download and install operating system updates.
- ❑ Look in the computer box for additional printed details or updates.
- ❑ Read the *Safety and Regulatory Information* document. Tap the **Start** button, tap **All Programs**, and then tap **User Guides**.
- ❑ Read the *Safety & Comfort Guide* for proper workstation setup, posture, health and work habits, and electrical and mechanical safety information. Tap the **Start** button, tap **All Programs**, and then tap **User Guides** or visit www.hp.com/ergo.

Connecting your computer

1. Squeeze the two tabs on the rear door at the back of the computer and pull the door open.



2. Reach into the rear cavity framed by the computer stand, and plug the power cord into the power connection at the top right corner.

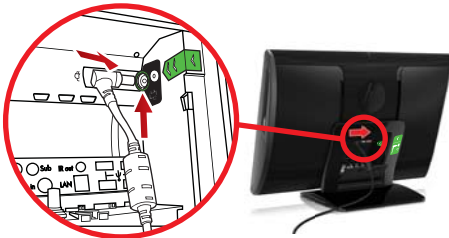

3. Plug the three-pronged power plug into a power outlet.



4. Pull the white tabs in the direction of the red arrow on both the wireless keyboard and the wireless mouse to activate them.
5. Press the Start button.

Protecting your computer

Computer risk	Computer feature
Unauthorized use of the computer or user account	User password <p>A <i>password</i> is a group of characters that you choose to secure computer information.</p>
Unauthorized access to Setup Utility, BIOS settings, and other system identification information	Administrator password
Computer viruses	Antivirus software <p>The free trial antivirus software that is preinstalled on your computer can detect most viruses, remove them, and, in most cases, repair damage caused by viruses. For protection against new viruses beyond the trial period, purchase an extended update service.</p>
Unauthorized access to data and ongoing threats to the computer	Firewall software <ul style="list-style-type: none">Windows 7 includes firewall software preinstalled on the computer.The antivirus software, which is preinstalled on the computer, includes firewall software.
Computer security	Windows 7 critical security updates <p>Microsoft continually updates the Windows 7 operating system.</p>

NOTE: Security solutions can deter theft, mishandling, and software attacks, but cannot prevent them.

Guidelines for installing software and hardware devices

After you complete the initial computer setup, you might want to install additional software programs or hardware devices. Check the operating system, memory, and other requirements listed before purchasing new software or hardware for your computer. Follow the software manufacturer's directions to install the new software.


NOTE: Use only licensed original software. Installing copied software could result in an unstable installation, infect the computer with a virus, or be illegal.

Connecting to the Internet

Steps to connect to the Internet:

1. Connect the hardware (sold separately).

- For a wired network connection, connect an Ethernet cable to the computer and to a network router or LAN device.

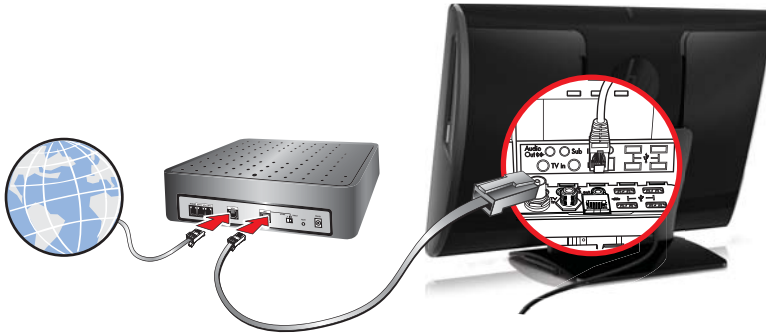

- For a wireless network connection, use a wireless router with the computer to connect to a WLAN with an Internet connection.



2. Get Internet service.

- Sign up with an Internet service provider (ISP). If you already have an account with an ISP, skip this step and follow the instructions provided by the ISP.
- If you did not set up the computer for Internet service during the initial setup, do so now by using Online Services:

- a. Tap the **Start** button, tap **All Programs**, and then tap **Get Online**.
- b. Follow the onscreen instructions to select an ISP and set up Internet service.

NOTE: Online Services provides a list of ISPs; however, you might choose another ISP or transfer an existing account to this computer. To transfer existing accounts, follow the instructions provided by the ISP.

3. Using your Internet connection through your ISP, open a Web browser and browse the Internet.

NOTE: If you have issues connecting to the Internet, see [Internet access on page 21](#).

Transferring files and settings to your new computer

You can copy files from another computer to your new computer by using CDs or DVDs, memory sticks, and external hard drives. You can also use Windows Easy Transfer software, which is included with Windows 7 (select models only), to copy files and settings to a storage device or, using an Easy Transfer Cable, directly from another computer to the new computer. The Easy Transfer Cable is a USB cable designed specifically to connect two computers and to work with the Windows Easy Transfer software.

NOTE: The Easy Transfer Cable is sold separately. A standard USB cable does *not* work.

To transfer your files and settings:

1. Tap the **Start** button, type Windows Easy Transfer into the **Start Search** box, and then tap **Windows Easy Transfer**.
2. Follow the onscreen instructions in the Windows Easy Transfer wizard to transfer your files to your new computer.

NOTE: Some features might not be available on systems that are shipped without a version of Microsoft Windows.

Computer orientation

Your HP TouchSmart PC is designed to be operated in several orientations. The computer can be swiveled to the right and left (1). The computer can be tilted from the stand, within the range of -5 degrees to $+60$ degrees (2). With the stand tilted, the computer can move on the rails from an upright position to an almost horizontal position (3). Be sure to position your hands on either side of the computer (4) when making adjustments.





If the computer is wall-mounted (select HP TouchSmart PC models only), it can be displayed in landscape orientation, or portrait orientation with the CD-DVD player on top. For instructions on wall-mounting your HP TouchSmart PC, refer to the *Wall-Mounting your HP TouchSmart* user guide.

Connecting a game console

Select HP TouchSmart⁶¹⁰ PC models only


Some computer models allow you to use your system as a high-resolution monitor for gaming. Two HDMI game console ports are located on right side of the computer, at the bottom. You can get audio from the internal speakers, from headphones, or from external speakers connected to the A/V source connector (1) located at the back of the computer.

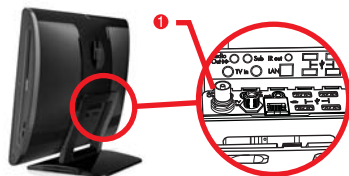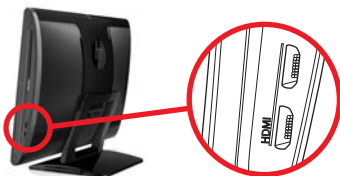

1. Connect the game box cable to an HDMI port to enable onscreen display.
2. Connect the external speaker audio cable to the A/V source connector (1).
3. To adjust the screen display, see [Adjusting incoming-video display settings with HP Picture-in-Picture \(PIP\) application on page 13](#).
4. To switch between full screen mode and partial screen mode, tap the gaming image on the screen, or left click on the mouse.

⚠ CAUTION: When the system is in display mode, the computer is still running in the background. The keyboard, mouse, and touch screen function are active and still control the computer. It is recommended that you save and close all files before connecting the game console ports.

Using the remote control in gaming mode

Use the A/V source button  on your remote control to toggle between source modes: PC mode and gaming mode. If used while you are in gaming mode, the following buttons will still affect PC mode:

- **A/V** – Switches between sources (PC, HDMI)
- **Volume** – Affects the volume of the computer as well, when changed in gaming mode
- **Mute** – Mutes sound in games and on computer
- **Media Center (Start)** – Automatically switches back to computer and opens Media Center
- **Power** – Places the system into Sleep mode.

Return to PC mode from gaming mode

To return to PC mode from gaming mode, choose from any one of the following options:


- Tap the full screen to return to desktop
- Press ESC key to return to desktop
- Left click mouse to return to desktop
- Press the Ctrl+Alt+Del buttons simultaneously on the keyboard
- Press the Power/Sleep button on the keyboard or remote
- Press the Power/Sleep button on the computer
- Press the Media Center (Start) button on the remote

Adjusting incoming-video display settings with HP Picture-in-Picture (PIP) application

Game console models only

HP Picture-in-Picture (PIP) software allows you to open and adjust the incoming video source from either HDMI input.

- You can adjust the display controls for each HDMI input: brightness, contrast, gamma (color), and volume.
 - The controls have predefined settings for movie, text, and game modes.
 - You can toggle between full screen and PIP mode within the application.
1. Select **Start**, select **All Programs**, select **HP**, and then select **HP Picture in Picture**, or tap the PIP icon on the desktop or the system icon tray. The PIP menu appears.

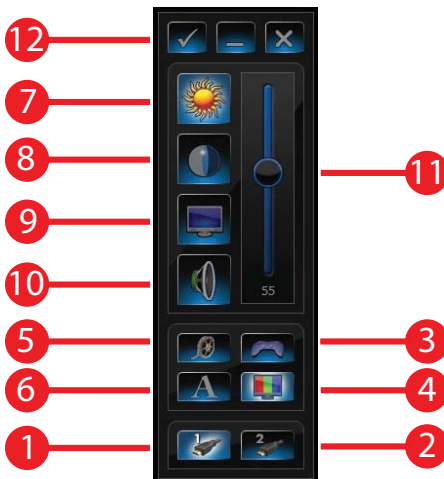

2. Select the video input: HDMI 1 (1) or HDMI 2 (2).
3. Select the video mode: Gaming (3), Default (4), Movie (5), or Text (6).
4. Select Brightness (7), Contrast (8), Gamma (color) (9), or Volume (10), and then move the slider (11) to make the adjustment.

To check for updates to the PIP software, tap the ✓ button (12).

NOTE: When connected to the game console ports, your system is in display mode; there is no recording capability.

HP My Display TouchSmart Edition

Select HP TouchSmart PC models only


HP My Display TouchSmart Edition allows you to adjust the screen display using the touch feature.

- You can adjust sound, brightness, and contrast.
- Viewing mode can be set to the factory default, or optimized for movie, text, or gaming.
- Status indicators let you know if the onscreen keyboard scroll lock, number lock, or caps lock are set.
- A settings screen lets you adjust color with the touch of a button.
- An options screen lets you set display options, set transparency, and check for updates.

HP My Display TouchSmart Edition can be accessed from the task tray, or by right-clicking on the desktop, or from the Start Menu, tap **All Programs**, tap **HP**, and then tap **HP My Display TouchSmart Edition**. Online help for HP My Display TouchSmart Edition is available by tapping the **?** button in the upper right hand corner of the application screen.

Using Beats Audio™

Select HP TouchSmart PC models only

Your HP TouchSmart PC features audio connectors (headphone and Audio Out) that are optimized for Beats Audio™ headphones and external audio systems (purchased separately). HP TouchSmart⁶¹⁰ PC models also include four Beats-optimized internal speakers and a Beats toggle button  on the keyboard.

Your computer comes ready for you to experience music with Beats enabled. To disable Beats, press the Beats toggle button; the Beats-off icon appears on the screen. To turn Beats on, press the Beats toggle button again. Tap the **Beats** icon on the system tray to view the Beats user interface.

All you need to do is plug the Beats Audio headphones into the side headphone connector to experience crisp and clear sound separation. To experience the full capability of BEATS audio using the internal speakers, HP recommends connecting a matching HP subwoofer to the Sub connector on the back panel. If you are using an external audio system, plug it into the Audio Out connector on the back panel.

Using the HP TouchSmart with safety and comfort

Before you begin using the computer, arrange the computer and your work area to maintain your comfort and productivity. Refer to the *Safety & Comfort Guide* for important ergonomic information:

Visit www.hp.com/ergo on the Web.



WARNING! To reduce the risk of serious injury, read the *Safety & Comfort Guide*. It describes proper computer setup, posture, and health and work habits for computer users. It also provides important electrical and mechanical safety information.

Locate the HP TouchSmart PC in the room to minimize glare from the screen. You can also reduce glare by tilting the screen.

The HP TouchSmart screen can be used as an input device; therefore, the computer should be placed so that your shoulders and neck are comfortable.

The computer might need to be moved close to your body to keep your shoulders relaxed while you are touching the screen. Keep your shoulders low and your upper arm close to your body when you touch the screen. The more the screen is used for input, the more important this is.

You can position the computer in a variety of ways to provide a balance between relaxing your shoulders and keeping your head balanced comfortably over your neck. If you feel discomfort in your shoulders, try moving the computer closer to your body or lowering the height of the screen by lowering the work surface. If you feel discomfort in your upper back muscles and neck, try increasing the height of the screen by increasing the work surface height.

The graphic below shows correct body and computer positioning.



The graphic below shows incorrect usage.



4 Troubleshooting and maintenance

Refer to the documentation provided by the product manufacturer for information about peripheral-specific problems, such as issues with a printer. The following sections present some issues you might encounter while installing, starting up, or using your computer and possible solutions.

For more information or for additional troubleshooting options, see [Getting information on page 1](#).

Computer does not start

Symptom	Possible solution
Error message: Hard disk drive error.	Contact Support: www.hp.com/support
Computer will not turn on or start.	Ensure that the cables connecting the computer to the external power source are plugged in properly. When the cables connecting the computer to the external power source are plugged in properly, and the wall outlet is functioning, the green power supply light on the back of the computer should be on; if it is not, contact Support. If the display (screen) is blank, the computer might not be properly connected. Plug in the computer and turn it on. Test the wall outlet by connecting a different electrical device to it.
Computer seems to be locked up and is not responding.	Use the Windows Task Manager to close any programs not responding, or restart the computer: <ol style="list-style-type: none">1. Press the Ctrl+Alt+Delete keys on the keyboard simultaneously.2. Tap Start Task Manager.3. Tap the program that is not responding, and then tap End Task. If closing programs does not work, restart the computer: <ol style="list-style-type: none">1. Press the Ctrl+Alt+Delete keys on the keyboard simultaneously.2. Tap the Arrow button next to the red Shut Down button, and then tap Restart. Or, press and hold the Power button on the computer for 5 or more seconds to turn off the computer, and then press the Power button to restart the computer.

Power

Symptom	Possible solution
Error message: Invalid system disk or Non-System disk or Disk error.	When drive activity stops, remove the disc, and then press the spacebar on the keyboard. The computer should start up.
Computer does not turn off when the Power button is pressed.	Press and hold the Power button until the computer turns off. Check Power Settings.
Computer shuts down automatically.	<ul style="list-style-type: none">• The computer might be in an exceedingly hot environment. Let it cool down.• Ensure that computer air vents are not blocked and that the internal fan is running — see Keeping the computer free of dust, dirt, and heat on page 28. (Your computer might not have an internal fan.)

Display (screen)

Symptom	Possible solution
Screen is blank.	Reconnect the power plug to the back of the computer and to the wall outlet. Press the Power button to turn on the computer. Press the space bar on the keyboard or move the mouse to make the screen display visible again. Press the Sleep button (select models only), or the Esc key on the keyboard, to resume from Sleep mode.
Images on the screen are too large or too small, or the images are fuzzy.	Adjust the display resolution setting in Windows 7: <ol style="list-style-type: none">1. Tap the Start button, and then tap Control Panel.2. Under Appearance and Personalization, tap Adjust Screen Resolution.3. Adjust resolution as necessary, and then tap Apply.

Keyboard and mouse (with cable)

Symptom	Possible solution
Keyboard commands and typing are not recognized by the computer.	Use the mouse to turn off the computer, unplug and reconnect the keyboard to the back of your computer, and then restart your computer.
Mouse (with cable) does not work or is not detected.	Unplug and reconnect the mouse cable to your computer. If the mouse is still not detected, turn off the computer, unplug and reconnect the mouse cable, and then restart the computer.
Cursor does not move using the arrow keys on the number keypad.	Press Num Lock on the keyboard to turn off Num Lock, so that the arrow keys on the number keypad can be used.
Cursor does not respond to mouse movement.	Use the keyboard to save changes in all open programs, and then restart your computer: <ol style="list-style-type: none">1. Press the Alt+Tab keys simultaneously to navigate to an open program.2. Press the Ctrl + S key simultaneously to save your changes in the selected program (Ctrl + S is the keyboard shortcut for Save on most—not all—programs).3. Repeat step 1 and step 2 to save changes in all open programs.4. After saving changes in all open programs, press the Ctrl+Esc keys on the keyboard simultaneously to display the Windows Start menu.5. Use the arrow keys to select the Arrow button that is next to Shut Down. Select Shut Down, and then press Enter.6. After the shutdown is complete, unplug and reconnect the mouse connector to the back of your computer, and then restart your computer.

Symptom	Possible solution
Cursor responds slowly, moves only vertically or horizontally, or does not track smoothly.	For a mouse with a roller ball: <ul style="list-style-type: none">● Clean the roller ball: Remove the roller ball cover from bottom of mouse (rotate it counterclockwise), remove the ball, and clean it by using a damp, lint-free cloth (not paper). Also clean the rollers on which the ball moves.● Use a mouse pad or other rough surface under the mouse.
	For an optical mouse: <ul style="list-style-type: none">● Clean the optical mouse: Gently wipe the light sensor lens on the bottom of the mouse by using a lint-free cloth (not paper).● Use a mouse pad, white sheet of paper, or other less reflective surface under the mouse.

Keyboard and mouse (wireless)

Symptom	Possible solution
Wireless keyboard or mouse does not work or is not detected.	<ul style="list-style-type: none">• Ensure that you are using the wireless keyboard or wireless mouse within range of the receiver, approximately 10 meters (32 feet) for normal use, and within 30 cm (12 inches) during initial setup or for re-synchronization.• Ensure that the mouse is not in Suspend mode, which occurs after 20 minutes of inactivity. Tap the left mouse button to reactivate it.• Replace the batteries in the keyboard and mouse.• Re-synchronize the keyboard and mouse to the receiver using the following steps.

The receiver, wireless keyboard, and wireless mouse shown in the following illustrations are examples; your models might vary.

IMPORTANT: During these steps, place the wireless keyboard and wireless mouse on the same level as the receiver, within 30 cm (12 inches) of the receiver, and away from interference from other devices.

1. Unplug the receiver from the USB connector on the computer, and then reconnect it. Your computer model might have a connector dedicated to the receiver.



2. Check that the mouse is on **(A)**, and then push and hold the Connect button **(B)** on the underside of the mouse for 5 to 10 seconds until the LED on the receiver lights or stops flashing. The receiver connection session times out after 60 seconds. To ensure that the connection was established, and that the receiver did not time out instead, and then move the mouse and check for a response on the screen.



3. After the mouse connection is established, continue by using the following steps to repeat the procedure for the keyboard.
4. Push and hold the Connect button **(C)** on the underside of the keyboard for 5 to 10 seconds until the LED on the receiver lights or stops flashing.



Speakers and sound

Symptom	Possible solution
Volume is very low or unsatisfactory.	Ensure that you connected the speakers to the Audio Out connector on the back of the computer. (Additional audio connectors are used for multiple-channel speakers.) Detached non-powered speakers (speakers without a separate power source, such as batteries or a power cord) do not produce satisfactory sound. Replace the non-powered speakers with powered speakers.
No sound is produced.	<p>For Windows 7:</p> <ol style="list-style-type: none">1. Tap the Start button, tap Control Panel, tap Action Center, and then tap Troubleshooting.2. Under Hardware and Sound, tap Troubleshoot and audio playback. <p>If you are using built-in computer speakers, use the Volume button to adjust volume. You can also use My Display TouchSmart Edition to ensure that the volume is set appropriately.</p> <p>Ensure that you connected powered (active) speakers and that they are turned on.</p> <p>Turn off your computer, and then unplug and reconnect the speakers. Ensure that the speakers are connected to an audio connector, not a Line In or headphone connector.</p> <p>To resume from Sleep mode, press the Sleep button (select models only), or press Esc.</p> <p>Unplug headphones if they are connected to your computer (or speaker system).</p>
When external speakers are connected, the audio is muted.	When an Audio Line Out connector (such as headphones or external speakers) is connected, the internal speakers are muted.


Internet access

Symptom	Possible solution
Internet programs do not start automatically.	Log in to your Internet Service Provider (ISP), and start the desired program.

Symptom	Possible solution
Cannot connect to the Internet.	<p data-bbox="256 188 389 210">For Windows 7:</p> <ol style="list-style-type: none"> <li data-bbox="256 226 930 277">1. Tap the Start button, tap Control Panel, tap Action Center, and then tap Troubleshooting. <li data-bbox="256 293 837 316">2. Under Network and Internet, tap Connect to the Internet.
	<p data-bbox="256 347 1001 485">Verify that you are using the proper cables for your Internet connection type. Your computer might have an Ethernet network adapter (also called a network interface card, or NIC). The network adapter uses a network cable, to connect to a local area network (LAN). Do not connect a telephone cable to the network adapter, and do not plug a network cable into a telephone service line; doing so might damage the network adapter.</p>
	<p data-bbox="256 517 501 539">Run the wireless setup wizard:</p> <ol style="list-style-type: none"> <li data-bbox="256 555 983 606">1. Tap the Start button, tap Control Panel, tap Network and Internet, and then tap Network and Sharing Center. <li data-bbox="256 622 1001 673">2. In the Network and Sharing Center window, tap Set up a connection or network to open the wizard, and then follow the onscreen instructions.
	<p data-bbox="256 705 978 756">If your system has an external antenna, try to move the antenna to a better position. If the antenna is internal, try to move the computer.</p>
	<p data-bbox="256 788 748 810">Try to connect again later, or contact your ISP for assistance.</p>

Memory

Symptom	Possible Solution
Computer beeps after being powered on.	Make sure the memory modules are added in the correct order. The first and second memory modules go into the black slots (1, 2), and the third and fourth memory modules go into the white slots (3, 4).

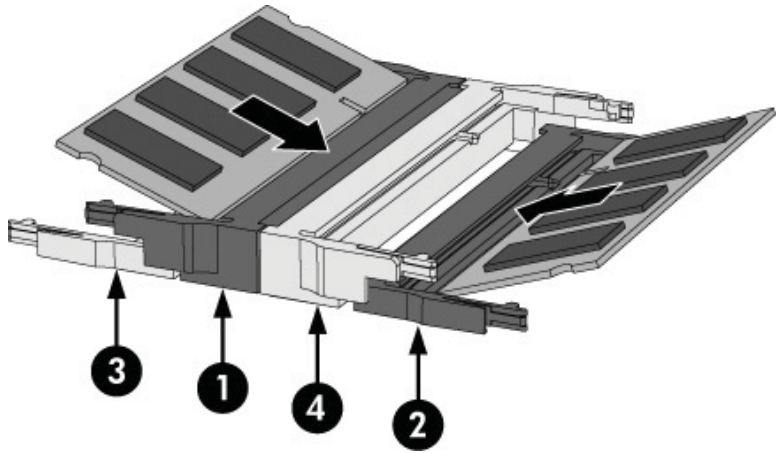

Check to make sure that there is a least one memory module in your computer, and that it is in a black slot.

If you have added or replaced memory modules in your computer, verify the placement of the memory modules:

- If the memory modules are in the white slots only, and not in the black slots, you may hear a beep.
- Power off and unplug your computer, and then replace the memory modules in the correct positions.

Gaming mode

Symptom	Possible Solution
When connecting the gaming device to the game console ports, the computer keeps going back to PC mode.	<ul style="list-style-type: none">• Ensure that the gaming device and the computer are on.• Ensure that the source you want is highlighted on the PIP menu.
No Signal message appears on the display.	<ul style="list-style-type: none">• Ensure that the gaming device is on.• Make sure the HDMI cable is connected from the gaming device to the computer.• Make sure the HDMI source selected on the PIP menu matches the HDMI connector at the side of the computer.
Audio drops when a video game is being played.	<ul style="list-style-type: none">• The system is on Mute. Press the Volume + or Volume – button on the side of the computer to get out of Mute state.• Check the volume setting on the PIP menu.• Open the Audio Settings menu from within the gaming application to ensure that the correct audio format output is selected. Choose Digital Stereo, or PCM Audio. (HP TouchSmart PC does not support AC3, DTS, Dolby Digital 5.1.)

Software troubleshooting

Some software repairs are as simple as restarting your computer, and others require performing a System Recovery from files on your hard disk drive.

To repair software problems, try these methods:

- Turn the computer off completely, and then turn it on again. Sometimes this is the easiest way to fix a problem.
- Update the drivers (see [Updating drivers on page 25](#)).
- Use Microsoft System Restore (see [Microsoft System Restore on page 26](#)) — Restore your computer to a configuration that was in use before the software was installed.
- Reinstall the software program or hardware driver. (See [Software program and hardware driver reinstallation on page 26](#)) — Restores the software (if it came with the product) or hardware driver to factory defaults.
- System Recovery (see [System Recovery on page 29](#)) — Erase and reformat the hard disk drive, and then reinstall the operating system, programs, and drivers.



CAUTION: This erases all data files you have created.

Updating drivers

A *driver* is a software program that enables your computer to communicate with an attached device, such as a printer, hard disk drive, mouse, or keyboard.

Complete the following procedure to update a driver, or to revert to an earlier version of the driver if the new one does not solve your problem:

1. Tap the **Start** button.
2. Type Device Manager into the **Start Search** box, and then tap **Device Manager** to open the Device Manager window.
3. Tap the plus sign (+) to expand the type of device you want to update or rollback. (For example, DVD/CD-ROM drives).
4. Double-tap the specific item (for example, HP DVD Writer 640b).
5. Tap the **Driver** tab.
6. To update a driver, tap **Update Driver**, and then follow the onscreen instructions.
Or, to revert to an earlier version of a driver, tap **Rollback Driver**, and then follow the onscreen instructions.

You can also go to the HP Support website: www.hp.com/support and select the task, Download drivers and software. Follow the onscreen instructions.

Microsoft System Restore

If you have a problem that might be due to software that was installed on your computer, use System Restore to return the computer to a previous restore point. You can also set restore points manually.

NOTE: Always use this System Restore procedure before you use the System Recovery program.

NOTE: Some features might not be available on systems that are shipped without a version of Microsoft Windows.

To start a System Restore:

1. Close all open programs.
2. Tap the **Start** button, tap **Computer**, and then tap **Properties**.
3. Tap **System protection**, **System Restore**, tap **Next**, and then follow the onscreen instructions.

To add restore points manually:

1. Close all open programs.
2. Tap the **Start** button, tap **Computer**, tap **Properties**, and then tap **System protection**.
3. Under **Protection Settings**, tap the disk for which you want to create a restore point.
4. Tap **Create**, and then follow the onscreen instructions.

Software program and hardware driver reinstallation

If any of your factory-installed software programs or hardware drivers are damaged, you can reinstall it by using the Recovery Manager program (select models only).

NOTE: Do not use the Recovery Manager program to reinstall software programs that came on CDs or DVDs included in the computer box. Reinstall these programs directly from the CDs or DVDs.

Before you uninstall a program, ensure that you have a way to reinstall it. Make sure that the program is still available from where you initially installed it (for example, discs or the Internet). Or verify that the program is in the list of programs you can reinstall from the Recovery Manager.

NOTE: Some features might not be available on systems that are shipped without a version of Microsoft Windows.

To check the list of installable programs in the Recovery Manager:

1. Tap the **Start** button, tap **All Programs**, tap **Recovery Manager**, and then tap **Recovery Manager**. If prompted, tap **Yes** to allow the program to continue.
2. Under **I need help immediately**, tap **Software Program Reinstallation**.
3. Tap **Next** at the Welcome screen. A list of programs opens. Check whether your program is there.

To uninstall a program:

1. Close all software programs and folders.
2. Uninstall the damaged program:
 - a. Tap the **Start** button, and then tap **Control Panel**.
 - b. Under **Programs**, tap **Uninstall a program**.
 - c. Tap the program you want to remove, and then tap **Uninstall**.
 - d. Tap **Yes** if you want to continue with the uninstall process.

To reinstall a program using the Recovery Manager:

1. Tap the **Start** button, tap **All Programs**, tap **Recovery Manager**, and then tap **Recovery Manager**.
2. Tap **Software Program Reinstallation**, and then tap **Next** at the Welcome screen.
3. Choose the program you want to install, tap **Next**, and follow the onscreen instructions.
4. When you have finished reinstalling, restart the computer. **Do not skip this last step**. You must restart the computer after recovering software programs or hardware drivers.

Maintenance

It is important that you perform simple maintenance of your computer to ensure that it works at peak performance.

Weekly

Software cleanup	Use Disk Cleanup or safe third-party cleaning tools to remove junk files and temporary files that accumulate and slow down your system. Also, check for programs you no longer need and uninstall them.
Defragmentation	Run Disk Defragmenter to keep your hard disk in good condition and improve system performance. Frequently performing this task does not harm your system.

Virus scan	Perform a full virus scan every week to catch viruses that might have slipped through unnoticed. Most antivirus products have a scheduling feature to keep track of this automatically.
Monthly	
Hardware cleanup	Thoroughly clean the outside of your computer.
Software updates	Use Windows Updates to fix operating system bugs and improve performance. Also, be sure to check for driver updates for your hardware and new versions of your favorite programs.
Windows Update	Run Windows Update monthly to install updates.
Hard disk diagnostic	Sometimes a failing hard disk can be caught beforehand by using Hard Disk Diagnostic.
Yearly	
System Recovery	In time, your system might still get bogged down, depending on the computer usage. Use System Recovery to wipe your Windows operating system installation clean, restoring it to the original configuration when you first started your system. Make a backup of important data files before proceeding with a System Recovery. See System Recovery on page 29 for further details.
As needed	
Backing up your data	Use CD or DVD recording software that is installed on your computer to create (or “burn”) backup discs of important information, including personal files, e-mail messages, and website bookmarks. You can also move data to an external hard disk drive.

Keeping the computer free of dust, dirt, and heat

Keeping your computer system free of dust, dirt, and heat will prolong its life. Dust, pet hair, and other particles can build up, creating a blanket effect; as a result, components can overheat, or, in the case of the keyboard and mouse, not work smoothly and effectively. Check your system once a month for visible signs of dust and debris, and clean it about once every three months. Visit www.hp.com/support for additional cleaning instructions.

Cleaning the computer vents	<p>Air vents keep the computer cool. Keep these vents clean by using a small, battery-powered vacuum cleaner. (A battery-powered vacuum cleaner eliminates the risk of electric shock.)</p> <ol style="list-style-type: none"> 1. Vacuum the vents on the computer case. 2. Remove any debris that has accumulated in and around the computer connectors (for example, the Ethernet and USB connectors).
-----------------------------	--

Cleaning the keyboard and mouse

When cleaning the keyboard keys, use a low setting on a battery-powered vacuum cleaner, to avoid removing key caps and springs.

1. Vacuum between the keys of the keyboard and along the grooves.
2. Use a clean, dry cloth and isopropyl (rubbing) alcohol to clean buildup on the keyboard keys and along its edges.
3. Wipe the body of the mouse and the mouse cord by using cleaning wipes.

If you have a roller-ball mouse, clean the ball and rollers inside:

1. Turn the mouse upside down, and rotate the ball-cover ring counterclockwise to remove the ring and release the roller ball.
2. Rinse the roller ball with soap and warm water.
3. Clean the rollers inside the mouse with a cotton swab dampened with isopropyl (rubbing) alcohol.
4. After the roller ball and rollers are completely dry, replace the ball and ball-cover ring.

Cleaning the touch screen

Follow these steps to clean the touch screen:

1. Turn off the computer. Tap the **Start** button, and then tap **Shut Down**.
2. Disconnect the power cord from the wall.
3. Spray a small amount of mild glass cleaner on a soft cloth to clean the touch screen.
4. Wipe the surface and left and right side of the touch screen to remove any dirt, fingerprints, or other debris that could hinder the touch recognition of the screen.



CAUTION: Do not spray or place the cleaner directly on the screen; spray the cleaner into the cloth, and then wipe the sides and surface of the touch screen.

Do not use an abrasive cleaner or cloth when cleaning the sides or the surface of the screen, because this could cause damage to the touch screen.

System Recovery

System Recovery completely erases and reformats the hard disk drive, deleting all data files you have created, and then reinstalls the operating system, programs, and drivers. However, you must reinstall any software that was not installed on the computer at the factory. This includes software that came on media included in the computer accessory box, and any software programs you installed after purchase.

NOTE: Always use the System Restore procedure before you use the System Recovery program — see [Microsoft System Restore on page 26](#).

NOTE: Some features might not be available on systems that are shipped without a version of Microsoft Windows.

You must choose one of the following methods to perform a System Recovery:

- Recovery Image — Run the System Recovery from a recovery image stored on your hard disk drive. The recovery image is a file that contains a copy of the original factory-shipped software. To perform a System Recovery from a recovery image, see [System Recovery from the Windows 7 Start Menu on page 30](#).

NOTE: The recovery image uses a portion of the hard disk drive that cannot be used for data storage.


- Recovery Media — Run the System Recovery from recovery media, that you created from files stored on your hard disk drive, or purchased separately. To create recovery media, see [Recovery media on page 33](#).

System Recovery options

You should attempt a System Recovery in the following order:

1. Through the hard disk drive, from the Windows 7 Start menu.
2. Through the hard disk drive, by pressing the F11 key on the keyboard during system startup.
3. Through recovery media that you create.
4. Through recovery discs purchased from HP Support. To purchase recovery discs, visit www.hp.com/support.

System Recovery from the Windows 7 Start Menu

 **CAUTION:** System Recovery deletes all data and programs you created or installed. Back up any important data to a removable disc or USB flash drive.

If the computer is working and Windows 7 is responding, use these steps to perform a System Recovery.

1. Turn off the computer.
2. Disconnect all peripheral devices from the computer except the keyboard and mouse.
3. Turn on the computer.
4. Tap the **Start** button, tap **All Programs**, tap **Recovery Manager**, and then tap **Recovery Manager**. If prompted, tap **Yes** to allow the program to continue.
5. Under **I need help immediately**, tap **System Recovery**.
6. Tap **Yes**, and then tap **Next**. Your computer restarts.

NOTE: If your system does *not* detect a recovery partition, it prompts you to insert recovery media. Insert the disc, or USB flash drive, tap **Yes**, and then tap **Next** to restart the computer and run Recovery Manager from the recovery disc, or the recovery USB flash drive. If using discs, insert the next system-recovery disc when prompted.

7. When the computer restarts, you will see the Recovery Manager welcome screen again. Under **I need help immediately**, tap **System Recovery**. If you are prompted to back up your files, and you have not done so, tap **Back up your files first (recommended)**, and then tap **Next**. Otherwise, tap **Recover without backing up your files**, and then tap **Next**.
8. System Recovery begins. After System Recovery is complete, tap **Finish** to restart the computer.
9. Complete the registration process, and wait until you see the desktop.
10. Turn off the computer, reconnect all peripheral devices, and turn the computer back on.

System Recovery at system startup




CAUTION: System Recovery deletes all data and programs you created or installed. Back up any important data to a removable disc.

If Windows 7 is not responding, but the computer is working, follow these steps to perform a System Recovery.

1. Turn off the computer. If necessary, press and hold the Power button until the computer turns off.
2. Disconnect all peripheral devices from the computer, except the keyboard and mouse.
3. Press the Power button to turn on the computer.
4. As soon as you see the initial company logo screen appear, repeatedly press the F11 key on your keyboard until the *Windows is Loading Files...* message appears on the screen.
5. Under **I need help immediately**, tap **System Recovery**.
6. If you are prompted to back up your files, and you have not done so, tap **Back up your files first (recommended)**, and then tap **Next**. Otherwise, tap **Recover without backing up your files**, and then tap **Next**.
7. System Recovery begins. After System Recovery is complete, tap **Finish** to restart the computer.
8. Complete the registration process, and wait until you see the desktop.
9. Turn off the computer, reconnect all peripheral devices, and turn the computer back on.

System Recovery from recovery media

 **CAUTION:** System Recovery deletes all data and programs you created or installed. Back up any important data to a removable disc, or USB flash drive. To create recovery media, see [Recovery media on page 33](#).

To perform a System Recovery using recovery media:

1. If the computer is working, create a backup DVD, or backup USB flash drive, containing all the data files you want to save, and then remove the backup media from the computer.
2. Insert recovery disc #1 into the DVD drive tray, and close the tray; or if using a recovery USB flash drive, insert it into a USB port.
3. If the computer works, tap the **Start** button, and then tap **Shut Down**. Or, if the computer is not responding, press and hold the **Power** button for approximately 5 seconds, or until the computer turns off.
4. Disconnect all peripheral devices from the computer except the keyboard and mouse.
5. Press the **Power** button to turn on the computer. If you are using a recovery DVD, the computer will automatically run Recovery Manager from the disc. Skip to step 7.
6. If you are running System Recovery from a USB flash drive, press the **Esc** key as the computer is powering on to bring up the boot menu. Use the arrow keys to select the USB device and press **Enter** to boot from that device.
7. If the Recovery Manager asks if you want to run System Recovery from Media or Hard Drive, select **Media**. On the Welcome screen, under **I need help immediately**, tap **Factory Reset**.
8. If you are prompted to back up your files, and you have not done so, tap **Back up your files first (recommended)**, and then tap **Next**. Otherwise, tap **Recover without backing up your files**, and then tap **Next**.
9. If you are prompted to insert the next recovery disc, do so.
10. When the Recovery Manager is finished, remove all recovery discs, or the recovery USB flash drive, from the system.
11. Tap **Finish** to restart the computer.

Recovery media

Recovery media can be created on either blank DVD discs or a USB flash drive (one or the other, but not both). Create recovery media from the recovery image stored on your hard disk drive. This image contains the operating system and software program files that were originally installed on your computer at the factory. You can create only one set of recovery media for your computer; the recovery media can be used *only* with this computer. Store the recovery media in a safe place.

NOTE: Some features might not be available on systems that are shipped without a version of Microsoft Windows.

Choosing recovery media

- To create recovery discs, your computer must have a DVD writer, and you must use only high-quality blank DVD+R or DVD-R discs.

NOTE: You *cannot* use CDs or DVD+RW, DVD-RW, DVD+RW DL, DVD-RW DL, DVD+R DL, or DVD-R DL discs to create recovery discs.

- You have the option of creating a recovery USB flash drive instead, using a high-quality blank USB drive.
- If you are creating recovery discs, be sure to use high-quality discs. It is normal for discs to be rejected if they are not defect-free. You will be prompted to insert a new blank disc to try again.
- The number of discs in the recovery-disc set depends on your computer model (typically 3–6 DVD discs). The Recovery Media Creation program tells you the specific number of blank discs needed to make the set. If you are using a USB flash drive, the program will tell you the size of the drive required to store all the data (minimum of 8 GB).

NOTE: The process of creating recovery media takes some time to verify that the information written on the media is correct. You can quit the process at any time. The next time you run the program, it resumes where it left off.

Creating recovery media

To create recovery discs:

1. Close all open programs.
2. Tap the **Start** button, tap **All Programs**, tap **Recovery Manager**, and then tap **Recovery Media Creation**. If prompted, tap **Yes** to allow the program to continue.
3. Tap **Create recovery media using blank DVD(s)**, and then tap **Next**.
4. Follow the onscreen instructions. Label each disc as you make it (for example, Recovery 1, Recovery 2).

To create a recovery USB flash drive:

1. Close all open programs.
2. Insert the USB flash drive into a USB port on the computer.
3. Tap the **Start** button, tap **All Programs**, tap **Recovery Manager**, and then tap **Recovery Media Creation**.
4. Tap **Create recovery media with a USB flash drive**, and then tap **Next**.
5. Select the USB flash drive from the list of media. The program will let you know how much storage is required to create the recovery drive. If the USB flash drive does not have enough storage capacity (8 GB is the minimum), it will be grayed out on the screen. Tap **Next**.

NOTE: Recovery Media Creation formats the flash drive and deletes all on files on it.

6. Follow the onscreen instructions. Make sure to label the USB flash drive and store it in a secure place.

NOTE: Do not use media cards for creating recovery media. The system may not be able to boot up from a media card and you may not be able to run system recovery.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>