

WS320 Wireless Repeater

User Guide



HUAWEI

WS320 Wireless Repeater

User Guide

Issue	02
Date	2011-07-25
Part Number	202302

Huawei Technologies Co., Ltd. provides customers with comprehensive technical support and service. Please feel free to contact our local office or company headquarters.

Huawei Technologies Co., Ltd.

Address: Huawei Industrial Base
Bantian, Longgang
Shenzhen 518129
People's Republic of China

Website: <http://www.huawei.com>

Email: terminal@huawei.com

Copyright © Huawei Technologies Co., Ltd. 2011. All rights reserved.

No part of this document may be reproduced or transmitted in any form or by any means without prior written consent of Huawei Technologies Co., Ltd.

The product described in this manual may include copyrighted software of Huawei Technologies Co., Ltd and possible licensors. Customers shall not in any manner reproduce, distribute, modify, decompile, disassemble, decrypt, extract, reverse engineer, lease, assign, or sublicense the said software, unless such restrictions are prohibited by applicable laws or such actions are approved by respective copyright holders under licenses.

Trademarks and Permissions



HUAWEI, **HUAWEI**, and  are trademarks or registered trademarks of Huawei Technologies Co., Ltd.

Other trademarks, product, service and company names mentioned are the property of their respective owners.

Notice

Some features of the product and its accessories described herein rely on the software installed, capacities and settings of local network, and may not be activated or may be limited by local network operators or network service providers. Thus the descriptions herein may not

exactly match the product or its accessories you purchase.

Huawei Technologies Co., Ltd reserves the right to change or modify any information or specifications contained in this manual without prior notice or obligation.

NO WARRANTY

THE CONTENTS OF THIS MANUAL ARE PROVIDED "AS IS". EXCEPT AS REQUIRED BY APPLICABLE LAWS, NO WARRANTIES OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE MADE IN RELATION TO THE ACCURACY, RELIABILITY OR CONTENTS OF THIS MANUAL.

TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, IN NO CASE SHALL HUAWEI TECHNOLOGIES CO., LTD BE LIABLE FOR ANY SPECIAL, INCIDENTAL, INDIRECT, OR CONSEQUENTIAL DAMAGES, OR LOST PROFITS, BUSINESS, REVENUE, DATA, GOODWILL OR ANTICIPATED SAVINGS.

Import and Export Regulations

Customers shall comply with all applicable export or import laws and regulations and will obtain all necessary governmental permits and licenses in order to export, re-export or import the product mentioned in this manual including the software and technical data therein.

Contents

1 Warnings and Precautions	1
2 Function Overview	8
3 Setting Up a Wireless Connection	9
Setting Up a Wireless Connection Through the WPS Button	10
Setting Up a Wireless Connection Through the Web-Based Configuration Utility	16
4 Maintaining the WS320	25
Logging In to the Advanced Configuration Webpage.....	25
Connecting to a New Wireless Network.....	26
Changing the IP Address of the LAN Interface.....	27
Restoring Default Settings	28
5 FAQs	28
6 Appendix	33
Hardware Features	33
Default Settings.....	35
Technical Specifications	36

1 Warnings and Precautions

To use the device properly and safely, read these warnings and precautions carefully and strictly observe them during operation. Unless otherwise specified, the term "device" refers to the device and its accessories.

Basic Requirements

- During storage, transportation, and operation of the device, keep it dry and prevent it from colliding with other objects.
- Do not dismantle the device. In case of any fault, contact an authorized service center for assistance or repair.
- Without authorization, no organization or individual can change the mechanical, safety, or performance design of the device.
- When using the device, observe all applicable laws and regulations and respect the legal rights of other people.

Environmental Requirements for Using the Device

- Keep the device far from sources of heat and fire, such as a heater or a candle.
- Keep the device far from electronic appliances that generate strong magnetic or electric fields, such as a microwave oven or a refrigerator.
- Place the device in a cool and well-ventilated indoor area. Do not expose the device to direct sunlight.
- Use the device in an area with a temperature ranging from 0°C to 40°C.
- Do not block the openings on the device with any object. Reserve a minimum space of 10 cm around the device for heat dissipation.
- Do not place any object (such as a candle or a water container) on the device. If any foreign object or liquid enters the device, stop using the device

immediately, power it off, remove all the cables connected to it, and then contact an authorized service center.

- During thunderstorms, power off the device, and then remove all the cables connected to it to prevent it from getting damaged due to lightning strikes.

Precautions for Using Wireless Devices

- When using the device, ensure that the antenna of the device is at least 20 cm away from all persons.
- Do not use the device where using wireless devices is prohibited or may cause interference or danger.
- The radio waves generated by the device may interfere with the operation of electronic medical devices. If you are using any electrical medical device, contact its manufacturer for the restrictions on the use of the device.
- Do not take the device into operating rooms, intensive care units (ICUs), or coronary care units (CCUs).

Areas with Inflammables and Explosives

- Do not use the device where inflammables or explosives are stored, for example, in a gas station, oil depot, or chemical plant. Otherwise, explosions or fires may occur. In addition, follow the instructions indicated in text or symbols.
- Do not store or transport the device in the same box as inflammable liquids, gases, or explosives.

Safety of Children

Keep the device and its accessories out of the reach of children. Otherwise, they may damage the device and its accessories by mistake, or they may swallow the small components of the device, causing suffocation or other dangerous situations.

Maintenance

- If the device is not used for a long time, power it off, and then remove all the cables connected to it.
- If any exception occurs, for example, if the device emits any smoke or unusual sound or smell, stop using the device immediately, power it off, remove all the cables connected to it, and then contact an authorized service center.
- Before cleaning the device, stop using it, power it off, and then remove all the cables connected to it.
- Use a clean, soft, and dry cloth to clean the device shell. Do not use any cleaning agent or spray to clean the device shell.

Disposal and Recycling Information



This symbol on the device (and any included batteries) indicates that the device (and any included batteries) should not be disposed of as normal household garbage. Do not dispose of your device or batteries as unsorted municipal waste. The device (and any batteries) should be handed over to a certified collection point for recycling or proper disposal at the end of its life.

For more detailed information about the recycling of the device or batteries, contact your local city office, the household waste disposal service, or the retail store where you purchased this device.

The disposal of this device is subject to the Waste from Electrical and Electronic Equipment (WEEE) Directive of the European Union. The purpose for separating WEEE and batteries from other waste is to minimize any environmental impact and health hazard due to the presence of hazardous substances.

Reduction of Hazardous Substances

This device is compliant with the EU Registration, Evaluation, Authorisation and Restriction of Chemicals (REACH) Regulation (Regulation No 1907/2006/EC of the European Parliament and of the Council) and the EU Restriction of Hazardous Substances (RoHS) Directive (Directive 2002/95/EC of the European Parliament and of the Council). For more information about the REACH compliance of the device, visit the Web site www.huaweidevice.com/certification. You are recommended to visit the Web site regularly for up-to-date information.

EU Regulatory Conformance

This device should be installed and operated with a minimum distance of 20 cm between the antenna and all persons.

Български: С настоящето Huawei Technologies Co., Ltd. декларира, че този уред съответства на основните изисквания и другите разпоредби на Директива 1999/5/EC.

Česky: Huawei Technologies Co., Ltd., tímto prohlašuje, že toto zařízení je ve shodě se základními požadavky a dalšími souvisejícími opatřeními směrnice 1999/5/EC.

Dansk: Huawei Technologies Co., Ltd. erklærer hermed at denne enhed er i overensstemmelse med de obligatoriske krav og andre relevante bestemmelser i direktiv 1999/5/EF.

Nederlands: Hierbij verklaart Huawei Technologies Co., Ltd. dat dit apparaat in overeenstemming is met de essentiële eisen en de andere relevante bepalingen van richtlijn 1999/5/EC.

English: Hereby, Huawei Technologies Co., Ltd. declares that this device is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.

Eesti: Käesolevaga kinnitab Huawei Technologies Co., Ltd., et see seade vastab Direktiivi 1999/5/EÜ põhinõudmistele ja teistele asjakohastele määrustele.

Suomi: Huawei Technologies Co., Ltd. vakuuttaa täten, että tämä laite on yhdenmukainen direktiivin 1999/5/EY olennaisten vaatimusten ja direktiivin muiden asiaankuuluvien lausumien kanssa.

Français (Européen) : Le fabricant déclare que ce produit est conforme aux exigences essentielles et aux autres dispositions pertinentes de la directive 1999/5/CE.

Deutsch: Huawei Technologies Co., Ltd. erklärt hiermit, dass dieses Produkt die erforderlichen Bestimmungen und andere relevante Verordnungen der Richtlinie 1999/5/EG einhält.

Ελληνικά: Δια της παρούσης η Huawei Technologies Co., Ltd. δηλώνει ότι αυτή η συσκευή συμμορφώνεται με τις βασικές απαιτήσεις και άλλες σχετικές διατάξεις της οδηγίας 1999/5/E.K.

Magyar: Jelen nyilatkozaton kereszttul a Huawei Technologies Co., Ltd. kijelenti, hogy a készülék megfelel az EC/5/1999 Irányelv összes lényeges követelményének és vonatkozó előírásának.

Gaeilge: Fograíonn Huawei Technologies Co., Ltd leis seo go bhfuil an fheiste seo i gcomhlíonadh leis na fíor-riachtanais agus na forálacha eile maidir le Treoir 1999/5/AE.

Italiano: Col presente documento, Huawei Technologies Co., Ltd. dichiara che questo dispositivo è conforme ai requisiti essenziali e alle altre disposizioni applicabili della Direttiva 1999/5/CE.

Latviski: Ar šo Huawei Technologies Co., Ltd. paziņo, ka šī ierīce atbilst Direktīvas 1999/5/EC pamatprasībām un piemērojamajiem nosacījumiem.

Lietuviškai: Šiuo Huawei Technologies Co., Ltd. praneša, kad šis įtaisas atitinka Direktyvos 1999/5/EC pagrindinius reikalavimus ir taikomas sąlygas.

Malti: Hawnekk, Huawei Technologies Co., Ltd. tiddikjara li dan it-tagħmir hu konformi mal-htigijiet essenzjali u provvedimenti rilevanti oħrajn ta' Direttiva 1999/5/KE.

Polski: Wymieniona w tym dokumencie firma Huawei Technologies Co., Ltd. deklaruje, że niniejsze urządzenie spełnia zasadnicze wymagania w zakresie zgodności oraz inne odnośne postanowienia Dyrektywy 1999/5/EC.

Português (Europeu) : Deste modo, a Huawei Technologies Co., Ltd. declara que este dispositivo está em conformidade com os requisitos essenciais e outras provisões relevantes da Directiva 1999/5/CE.

Română: Prin prezenta Huawei Technologies Co., Ltd. declară că acest dispozitiv este conform cu cerințele esențiale și alte prevederi relevante ale directivei 1999/5/CE.

Slovenčina: Huawei Technologies Co., Ltd. týmto vyhlasuje, že zariadenie je v súlade so základnými požiadavkami a inými relevantnými predpismi Smernice 1999/5/ES.

Slovenščina: Huawei Technologies Co., Ltd. izjavlja, da je ta naprava v skladu z bistvenimi zahtevami in drugimi ustreznimi določbami Direktive 1999/5/ES.

Español (Europeo) : Con el presente documento, Huawei Technologies Co., Ltd. declara que este dispositivo cumple con los requisitos esenciales y con las demás disposiciones correspondientes de la Directiva 1999/5/CE.

Svenska: Huawei Technologies Co., Ltd. förklarar härmed att denna produkt överensstämmer med de grundläggande kraven och andra relevanta föreskrifter i direktiv 1999/5/EG.

For the declaration of conformity, visit the Web site
www.huaweidevice.com/certification.

CE0678!

Notice: Observe the national local regulations in the location where the device is to be used. This device may be restricted for use in some or all member states of the European Union (EU).

Notice: This device may be operated in all member states of the EU.

France: Outdoor use limited to 10 mW e.i.r.p. within the band 2454-2483.5 MHz.


Italy: For private use, a general authorisation is required if WAS/RLAN's are used outside own premises. For public use, a general authorisation is required.

Luxembourg: General authorisation required for network and service supply.

Norway: This subsection does not apply for the geographical area within a radius of 20 km from the centre of Ny-Ålesund.

2 Function Overview

WS320 Wireless Repeater (hereinafter referred to as the WS320) is a wireless signal repeater that can work with a wireless router to extend the wireless network coverage. The following figure shows the network connection between the WS320 and other related devices. The PC in Room C on the second floor is some distance from the wireless router in Room A on the first floor. The WS320 is used to process the wireless signals transmitted between the PC and the wireless router. Thus, a wireless network can be established.

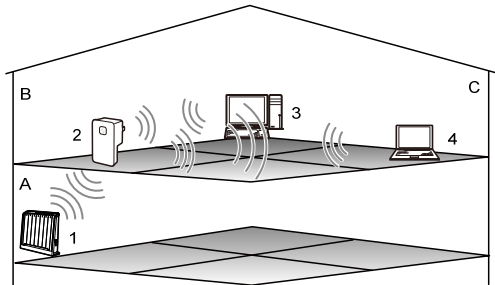


1 Wireless router

2 WS320

3 and 4 PCs with a wireless network adapter installed on each

3 Setting Up a Wireless Connection

When using the WS320, you need to set up a wireless connection between the WS320 and the wireless router only. Then the PC can connect to the wireless network extended by the WS320 as it connects to the wireless network implemented by the wireless router. You need to connect the WS320 to the wireless network for only one time. Then when you restart the WS320, the WS320 will automatically connect to the wireless network that it connected to last time. Suppose that you are in the network environment as shown in the following figure.

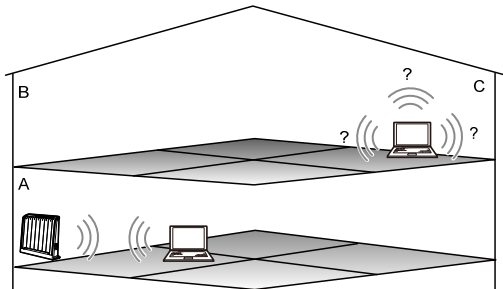

Your PC is placed in Room A and it is connected to a wireless network. Because Room C is far from the wireless router and wireless signals are blocked by several

walls, the PC in Room C cannot connect to the wireless network. Room B is between Room A and Room C.

Now you want the PC in Room C to connect to the wireless network also. The WS320 supports two methods of setting up a wireless connection. You can choose one of the following configuration methods based on your installation environment and operation habit.

Setting Up a Wireless Connection Through the WPS Button

If your wireless router supports the Wi-Fi Protected Setup (WPS) function implemented through Push Button Configuration (PBC), you can quickly set up a wireless connection between the WS320 and the wireless router by pressing the WPS button.




Wi-Fi Protected Setup, abbreviated to WPS, is a standard used for simplifying the security settings of a wireless network. Through the WPS function, you can securely connect your wireless terminal to a wireless network without entering the name and password of the network.

To set up the wireless connection, do as follows:


Step 1 Power on the wireless router in Room A. On the wireless router, ensure that the wireless network function and the WPS function implemented through PBC are enabled.

The method of configuring a wireless network on a router varies with the routers produced by different manufacturers. For details about the configuration method, see the wireless router operation guide provided by the manufacturer.

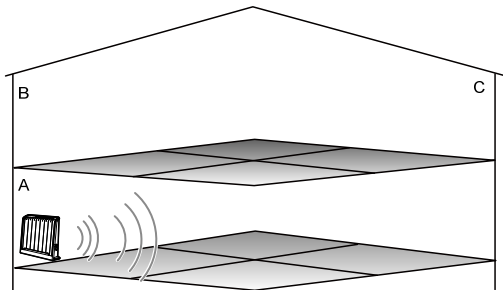


Step 2 In Room A, connect the WS320 to a power socket near the wireless router.

After the WS320 is powered on, the indicator on the panel turns red, indicating that the WS320 is being started. Wait for about one minute. Then the indicator of the WS320 turns solid yellow, indicating that the WS320 has been started but not connected to the wireless router.

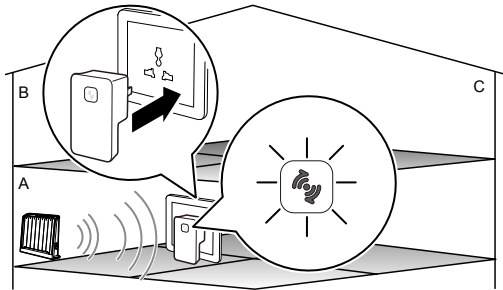

Step 3 Press the WPS button of the wireless router to start the WPS negotiation of the router. Press and hold the WPS button of the WS320 for over 1s within two minutes, and then release the button.

At this time, the indicator of the WS320 blinks in yellow, indicating that the WS320 is trying to connect to the wireless router through the WPS function. Wait for a moment (generally about 20s and less than 120s). When the indicator of the WS320 turns solid green, it indicates that the WS320 successfully connects to the wireless router through the wireless network.

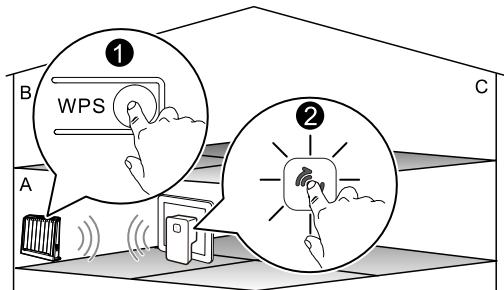




If the indicator turns solid yellow after blinking in yellow, it indicates that the WS320 fails to connect to the wireless network. For a solution, see 5 "FAQs."

Step 4 Unplug the WS320 in Room A, and then plug it into a power socket in Room B.

After the WS320 is powered on, the indicator on the panel turns on in red, indicating that the WS320 is being started. Wait for about one minute. Then the indicator of the WS320 blinks in yellow, indicating that the WS320 is trying to connect to the wireless network. When it successfully connects to the wireless network, the indicator of the WS320 turns solid green.

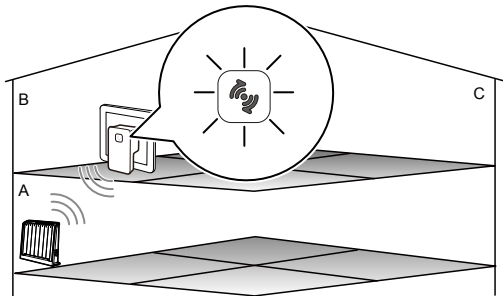




If the indicator turns solid yellow after blinking in yellow, it indicates that the WS320 fails to connect to the wireless network. In this case, adjust the position of the WS320, placing the WS320 near the wireless router.

Step 5 Place the PC in Room C. After being started, the PC automatically connects to the wireless network extended by the WS320. At this moment, the extended network can be used the same as that implemented in Room A.



If you want to connect another PC to the wireless network, you can directly connect the PC to the wireless network in Room C. For the method of manually configuring a wireless connection on the PC, see 5 "FAQs."

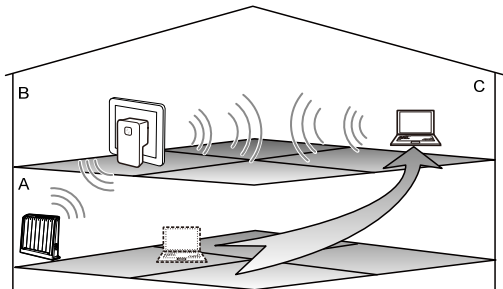


Setting Up a Wireless Connection Through the Web-Based Configuration Utility

If your wireless router does not support the WPS function, you can manually connect the WS320 to the wireless router by using the Web-based configuration utility.


You need to access the Web-based configuration utility through the wireless network of the WS320. By default, an unencrypted wireless network has been configured on the WS320. The service set identifier (SSID) of the wireless network is **Repeater**. When you use the WS320 for the first time, you can connect to the default wireless network to access the Web-based configuration utility of the WS320.

Suppose that the wireless SSID of the wireless router is **AP**. To set up a wireless connection, do as follows:


Step 1 Power on the wireless router in Room A. Ensure that the wireless network function of the wireless router is enabled.

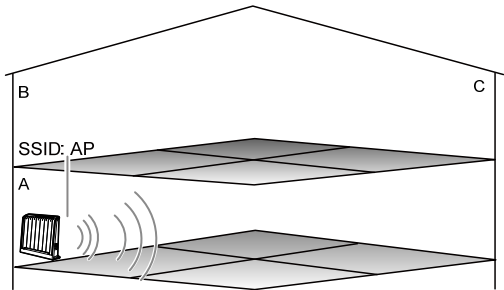

Step 2 In Room A, connect the WS320 to a power socket near the wireless router. Wait for about one minute until the WS320 is started.

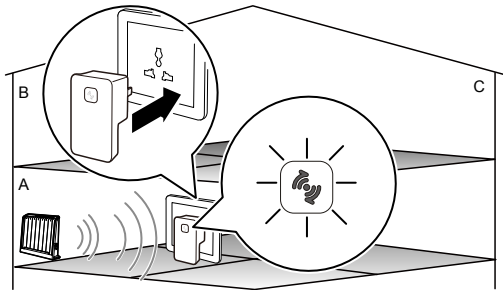

- Step 3 In Room A, log in to the quick configuration webpage of the WS320 on the PC.
1. Set up a wireless connection between the PC and the WS320. The SSID of the wireless network to be connected is **Repeater**. For the method of manually configuring a wireless connection on the PC, see 5 "FAQs."
 2. Configure the network connection of the PC, enabling the PC to obtain an IP address automatically.
 3. Launch the browser on the PC. Enter **http://192.168.1.254** in the address bar, and then press Enter.. The quick configuration webpage of the WS320 is displayed.

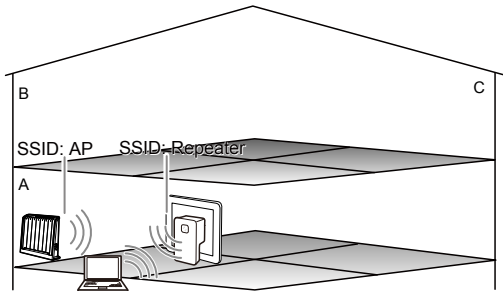

Step 4 On the quick configuration webpage of the WS320, set up a connection between the WS320 and the wireless router.

1. Click **Manual Connecting**.

The WS320 searches for wireless network signals. Wait patiently until the browser displays a wireless network list.

2. In the wireless network list, click the row of the wireless network whose SSID is **AP**.



If the SSID of the wireless network is hidden, you need to enter the SSID in the lower **SSID** text box.


3. In the **Settings** area, set the connection parameters of the wireless network.

4. Click **Connect** to connect the WS320 to the wireless network with the SSID of **AP**.

Wait for a moment (within 30 seconds). When the indicator of the WS320 turns solid green after blinking in yellow, it indicates that the WS320 successfully connects to the wireless router through the wireless network.




After the WS320 sets up a wireless connection with the wireless router, the SSID named **Repeater** is disabled. If you want to use this SSID to access the Web configuration utility of the WS320 again, you need to enable the SSID by restoring the WS320 to the default settings.

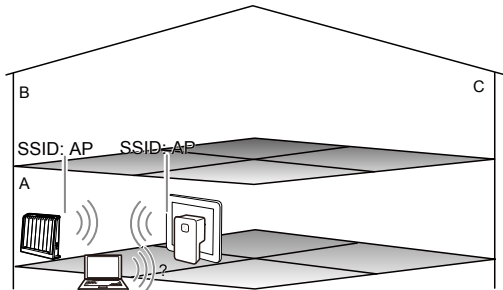


- If the indicator turns solid yellow after blinking in yellow, it indicates that the WS320 fails to connect to the wireless network. In this case, try to connect to the wireless network again on the quick configuration webpage.
- If the indicator turns solid yellow and the browser cannot display the quick configuration webpage, press the reset button on the panel of the WS320 to restore the WS320 to the default settings. Then log in to the quick configuration webpage of the WS320 again.


Step 5 Configure the wireless connection of the PC again. Set the PC to connect to the wireless network with the SSID of **AP**.

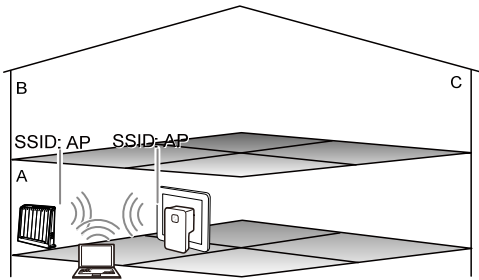

Step 6 Unplug the WS320 in Room A, and then plug it into a power socket in Room B.

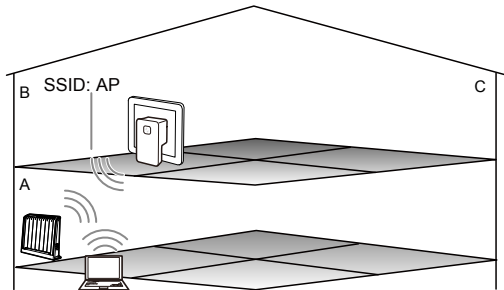

Step 7 Place the PC in Room C. After being started, the PC automatically connects to the wireless network extended by the WS320. At this moment, the extended network can be used the same as that implemented in Room A.

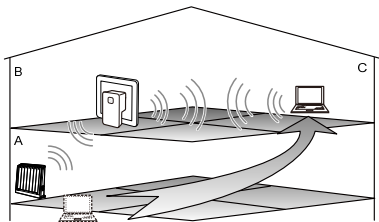

On the wireless router, when the security mode of the wireless network is set to Open and the encryption mode is set to WEP, if you enter a wrong WEP password, the WS320 can connect to the wireless network but cannot normally communicate with the wireless router. The PC cannot obtain an IP address which is allocated by the wireless router. For a solution, press the reset button on the panel of the WS320 to restore the WS320 to the default settings. Then try to configure the WS320 again. This problem is caused by the defect of the wireless network protocol. To ensure normal communication, you must enter the correct WEP password.

4 Maintaining the WS320

Logging In to the Advanced Configuration Webpage

By default, most parameters are preset on the WS320 for supporting the network applications in general conditions. To view the working status or to change the parameters of the WS320, you can log in to the advanced configuration webpage. You need to access the advanced configuration webpage through the wireless network of the WS320. To log in to the advanced configuration webpage, you can also do as follows:

When the WS320 Is Not Connected to the Wireless Router

- Step 1 Set up a wireless connection between the PC and the WS320.
- When the WS320 is not connected to the wireless router: The SSID of the wireless network to be connected is **Repeater**.
 - When the WS320 is connected to the wireless router: The SSID of the wireless network of your PC is the same as that of the wireless network of the wireless router.

- Step 2 Set the network connection of the PC and ensure that the IP address of the PC is in the same network segment as the IP address of the WS320 local area network (LAN) interface.

By default, the IP address of the WS320 LAN interface is **192.168.1.254** and the subnet mask is **255.255.255.0**. If the IP address of the LAN interface is not changed, you can set the IP address and subnet mask of the PC to **192.168.1.101** and **255.255.255.0** respectively.

When the WS320 is not connected to the wireless router, you can configure the network connection of the PC to obtain an IP address

automatically.

- Step 3 Launch the browser on the PC. Enter **http://192.168.1.254** in the address bar, and then press **Enter**.
- Step 4 In the upper right corner of the quick configuration webpage, click **Advanced**.
- Step 5 In the login dialog box, enter the user name (**admin** by default) and the password (**admin** by default), and then click **Login**.
After the password is verified, you can access the advanced configuration webpage.

Connecting to a New Wireless Network

After the WS320 is connected to the wireless network of a wireless router, if you want to connect the WS320 to the wireless network of another wireless router, you can press the WPS button.

To connect to a new wireless network, you can also do as follows by using the Web-based configuration utility:

- Step 1 Log in to the advanced configuration webpage of the WS320.
- Step 2 In the navigation tree, choose **Settings > Repeater** to display the configuration page.
- Step 3 On the configuration page, click **Client**.
- Step 4 Select the wireless network to be connected to from **WLAN AP List**.
- Step 5 In the **Settings** area, set the connection parameters of the wireless network.
- Step 6 In the lower right corner, click **Connect**.
When the connection is set up successfully, **Connection Status** in the

Connection Status area at bottom of the page is displayed as **Connected**. When powered on in the future, the WS320 will automatically connect to the wireless network you have set.

After the WS320 is connected to a new wireless network, you need to configure the wireless connection of your PC again and then connect the PC to the new wireless network.

Changing the IP Address of the LAN Interface

The IP address of the LAN interface is the IP address entered in the address bar of the browser before you log in to the Web-based configuration utility. To change the IP address, do as follows after you log in to the Web-based configuration utility:

- Step 1 Log in to the advanced configuration webpage of the WS320.
- Step 2 In the navigation tree, choose **Settings** > **LAN** to display the configuration page.
- Step 3 In the **IP address** text box, enter the new IP address.
- Step 4 In the **Subnet mask** text box, enter the subnet mask.
- Step 5 Click **Submit**.



When changing the IP address of the WS320 LAN interface, ensure that the new IP address does not conflict with the IP address of another device that is connected to the WS320.

Restoring Default Settings



After you restore the default settings, your customized data will be lost. Therefore, use this function with caution.

When the WS320 is powered on, press and hold the reset button of the WS320 for over 1s by using an object with a sharp point (such as a pin), and then release the button. Then the WS320 automatically restarts and the default settings are restored. After you release the reset button, the indicator of the WS320 turns off and then changes to solid red, indicating that the WS320 is restarted after the default settings are restored.

To restore the default settings, you can also do as follows after logging in to the advanced configuration webpage:

- Step 1 In the navigation tree, choose **Maintenance** > **Reset** to display the system reboot page.
- Step 2 Click **Restore Default Settings**.

5 FAQs

Can I set up a wireless connection between my PC and the WS320 by pressing the WPS button of the WS320?

No, you cannot. The WPS button of the WS320 can be used only for setting up a wireless connection between the WS320 and a wireless router.

After I access a wireless network, if the PC is not moved, the network connection is stable; if the PC is moved, the network cannot be accessed

sometimes. In this case, what should I do?

If the PC is moved, the wireless network adapter of the PC will automatically switch between wireless network signals. In this case, wait until the PC reestablishes the wireless connection. If the PC cannot automatically connect to a wireless network, you need to configure the wireless connection of the PC again.

After you extend the wireless network by using the WS320, two wireless networks with the same name are available in your home: One network is set up by the wireless router, and the other one is set up by the WS320. When the PC is being moved, the signal strength of the two networks searched for by the wireless network adapter of the PC changes. The wireless network adapter automatically detects and switches to the wireless network with stronger signal strength. During the network switch process, the data transmission on the wireless connection will be interrupted.

If the network adapter does not support the network switch function, the wireless connection cannot be reestablished automatically and you need to configure a wireless connection again.

When my PC has connected to the wireless network of the WS320 and automatically obtained an IP address, is the IP address allocated by the WS320 or the wireless router?

If the WS320 has not set up a wireless connection with the wireless router, the IP address is allocated by the WS320; otherwise, the IP address is allocated by the wireless router.

How can I configure a wireless connection on the PC to be connected to a wireless network?

You can configure a wireless network connection by using the software delivered with the wireless network adapter. If a Windows OS is installed on your PC, you can use the wireless connection configuration software provided by the Window OS. The following procedure takes Windows XP as an example and describes how to configure a wireless connection.

Step 1 Enable the wireless configuration service supported by Window XP.

1. Right-click **My Computer**, and then choose **Manage** from the shortcut menu.
2. In the left pane of the **Computer Management** window, choose **Computer Management (Local) > Services and Applications > Services**.
3. From the services listed in the right pane of the **Computer Management** window, right-click **Wireless Zero Configuration**, and then choose **Properties** from the shortcut menu.
4. In the **Wireless Zero Configuration Properties (Local Computer)** dialog box, check whether **Service status** is **Started**. If not, click the **Start** button.
5. Click **OK** to close the dialog box. Then, close the **Computer Management** window.

Step 2 Configure the wireless network connection on your PC.

1. Choose **Start > All Programs > Accessories > Communications > Network Connections**.
2. In the **Network Connections** window, right-click **Wireless Network Connection**, and then choose **Properties** from the shortcut menu.
3. In the **Wireless Network Connection Properties** dialog box, click **Wireless Networks**.

4. Select **Use Windows to configure my wireless network settings**.
5. Click **View Wireless Networks**.
6. In the **Wireless Network Connection** dialog box, select the wireless network to be connected to from the wireless network list, and then click **Connect** in the lower right corner of the dialog box.
7. In the displayed dialog box, enter the network access password, and then click **Connect**.
After the password is verified, **Connected** appears on the icon of the wireless network in the wireless network list, which indicates that your PC is connected to the wireless network.
8. Close the **Wireless Network Connection** dialog box.
9. In the **Wireless Network Connection Properties** dialog box, click **OK**.

How can I quickly restore the WS320 to the default settings?

When the WS320 is powered on, press and hold the reset button of the WS320 for over 1s by using an object with a sharp point (such as a pin), and then release the button. Then the WS320 automatically restarts and the default settings are restored.

Does the WPS function have any special requirement on the wireless encryption settings of a wireless router?

The WPS function has no special requirement on the wireless encryption settings; however, it is recommended that you use the Wi-Fi Protected Access 2-Pre-shared key (WPA2-PSK) security mode together with the Advanced Encryption Standard (AES) encryption rather than the Wired Equivalent Privacy (WEP) encryption method for accessing a wireless network. The

reasons are as follows: If a wireless network is not encrypted or encrypted by using WEP, the security performance is poor. In addition, on some wireless routers, the WPS function is forcibly disabled when the WEP encryption is used for accessing a wireless network.

If several SSIDs are enabled on my wireless router, when the WS320 tries to connect to a wireless network by using the WPS function, which wireless network does the WS320 connect to?

This depends on the design of the wireless router. Generally, by using the WPS function, the wireless router tries to connect to the wireless terminal with the SSID numbered **1**.

If my wireless router does not support the WPS function, how can I set up a connection between the WS320 and the router?

You can manually connect the WS320 to the wireless network of the wireless router by using the Web-based configuration utility of the WS320.

If the WS320 fails to connect to the wireless network of a wireless router after I press and hold the WPS button, what should I do?

- Step 1 Ensure that only one wireless router has started the WPS negotiation at a particular moment.
- Step 2 Ensure that only one WS320 is trying to connect to the wireless router through the WPS function at a particular moment.
- Step 3 On the wireless router, ensure that the wireless network function and the WPS function implemented through PBC are enabled. Note that on some wireless routers, the WPS function is forcibly disabled when the encryption mode of the wireless network is WEP or when the


SSID of the wireless network is hidden.

- Step 4 On the wireless router, ensure that the MAC filtering function does not prohibit the WS320 from connecting to the wireless router.
- Step 5 Check the positions of the wireless router and the WS320. Keep them away from the electric appliances, such as microwave ovens, refrigerators, or cordless telephones, which generate strong magnetic or electric fields.
- Step 6 It is recommended that you place the wireless router and the WS320 in an open space. Although radio signals can pass through obstacles, passing through too many obstacles such as cement or wooden walls can affect the transmission of wireless signals of a wireless network.
- Step 7 Adjust the position of the WS320, placing the WS320 near the wireless router.

6 Appendix

Hardware Features

The following figure shows the positions of the interface, buttons, and indicator of the WS320.

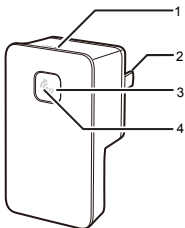

The following table describes the interface, buttons, and indicator of the WS320.

No.	Description
1	Reset button: used to restore the default settings of the WS320. When the WS320 is powered on, press and hold the reset button of the WS320 for over 1s, and then release it. Then the WS320 automatically restarts and the default settings are restored.
2	Power plug: used to connect to a power socket.
3	WPS button: used to start the WPS negotiation of the WS320 to set up a wireless connection between the WS320 and a wireless router.

No.	Description
4	Status indicator: located in the middle of the WPS button and used to indicate the working status of the WS320. For details about the status indicator, see the following table.

The following table describes the functions of the indicator.

Color	Status	Description
Red	Solid on	The WS320 is being started.
	Blinking	The WS320 is updating software.
Yellow	Solid on	The WS320 has been started but not connected to a wireless router.
	Blinking	The WS320 is trying to set up a wireless connection with a wireless router.
Green	Solid on	The WS320 has set up a wireless connection with a wireless router.

Default Settings

Parameter	Default Value
IP address of the LAN interface	192.168.1.254

Parameter	Default Value
Subnet mask of the LAN interface	255.255.255.0
User name used to log in to the Web-based configuration utility	admin
Password used to log in to the Web-based configuration utility	admin
Wireless network name (SSID)	Repeater
Wireless network password	None. No password required for connection

Technical Specifications

Item	Specification
Entire-device power supply	100–240 V AC
Entire-device power consumption	< 5 W
Working temperature	0°C to 40°C (32°F to 104°F)
Working humidity	5% to 95% (non-condensing)
Dimensions (L × W × H)	76 mm × 42 mm × 59 mm

Item	Specification	
Weight	About 61 g	
Wireless networking standards	802.11b, 802.11g, and 802.11n (2.4–2.4835 GHz)	
Wireless network coverage	Maximum distance of 150 m from the WS320 to a wireless router (with no obstacle and interference between)	
Wireless data rates	802.11b	1 Mbit/s, 2 Mbit/s, 5.5 Mbit/s, and 11 Mbit/s
	802.11g	6 Mbit/s, 9 Mbit/s, 12 Mbit/s, 18 Mbit/s, 24 Mbit/s, 36 Mbit/s, 48 Mbit/s, and 54 Mbit/s
	802.11n (a 1T × 1R antenna used)	6 Mbit/s, 6.5 Mbit/s, 13.0 Mbit/s, 13.5 Mbit/s, 19.5 Mbit/s, 26.0 Mbit/s, 27.0 Mbit/s, 39.0 Mbit/s, 40.5 Mbit/s, 52.0 Mbit/s, 54.0 Mbit/s, 58.5 Mbit/s, 65.0 Mbit/s, 81.0 Mbit/s, 108.0 Mbit/s, 121.5 Mbit/s, and 135.0 Mbit/s



Warranty Card

Thank you for choosing Huawei Technologies Co., Ltd. — a leading telecom solution provider. To get better services, please read this warranty card carefully, fill in the required information and preserve this card in good condition.

Your Name	
Address/Postal Code	
Telephone	
Product Type	
Product Serial Number	
Purchase Date	
Invoice Number	
Dealer Name	
Dealer's Address/Telephone	

Preserve well. No reissue.

Dealer's Seal:

Limited Warranty

Subject to the exclusions contained below, Huawei Technologies Co., Ltd. (hereinafter referred to as Huawei) warrants its access terminals ("Products") to be free from defects in materials and workmanship under normal consumer usage for one year from the date of purchase of the product ("Warranty period"). During the warranty period, a Huawei authorized service partner shall remedy defects in materials and workmanship free of charge.

Special Notice:

- (1) The warranty card shall be applicable only after being stamped by the dealer.
- (2) The warranty card must be preserved in good condition and free of any scratch or alteration.
- (3) To claim such service for defects that are not included in the following exclusion terms, the warranty card and the invoice that records the product serial number shall be presented to a Huawei authorized service partner.

Exclusions:

In any of the following cases, the warranty card becomes unenforceable or inapplicable without prior notice:

- (1) The defects are caused by improper handling in transportation and assembly.
- (2) The defects are caused by the fact that the product is dismantled or altered by anyone that is not from a Huawei authorized service partner.
- (3) The defects are caused by the fact that the product is used in a harsh environment that is not suitable for the operation of the product.

- (4) The defects are caused by any force majeure including but not limited to fire, earthquake, lightning and tsunami.
- (5) The defects are caused by the fact that the product is used or handled improperly, roughly or not as instructed in the applicable User Guide.
- (6) The normal wear and tear, including but not limited to the normal wear and tear of the shell and the power module, shall not be covered by the limited warranty.
- (7) The warranty card is altered or illegible, or the product serial number recorded on the warranty card is inconsistent with the actual one imprinted or labeled on the product.
- (8) The product nameplate, serial number barcode, or seal label has been removed, erased, defaced, or is illegible.

In any case that is not covered by this limited warranty or should the warranty expire, Huawei shall charge for the service(s) claimed for the products if the product is still remediable.

Huawei preserves the right for interpretation of this limited warranty.

Huawei Technologies Co., Ltd.

Address: Huawei Industrial Base, Bantian, Longgang,
Shenzhen 518129, People's Republic of China

Postal Code: 518129

Website: <http://www.huawei.com>

HUAWEI TECHNOLOGIES CO., LTD.

Huawei Industrial Base
Bantian, Longgang
Shenzhen 518129
People's Republic of China
www.huawei.com

Part Number: 202302

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>