

AF-S DX Zoom-Nikkor 55-200mm f/4-5.6G ED


使用説明書
Instruction Manual
Bedienungsanleitung
Manuel d'utilisation
Manual de instrucciones
Manuale di istruzioni
使用説明書
使用説明書



使用説明書の内容が破損などによって消滅できなかったときは、当社サービス機関で新しい使用説明書をお求めください(有料)。

NIKON CORPORATION
FUJI BLDG., 2-3, MARUNOUCHI 3-CHOME, CHIYODA-KU,
TOKYO 100-8331, JAPAN

Printed in Japan TTSC03000101 (80) 76AA24023-

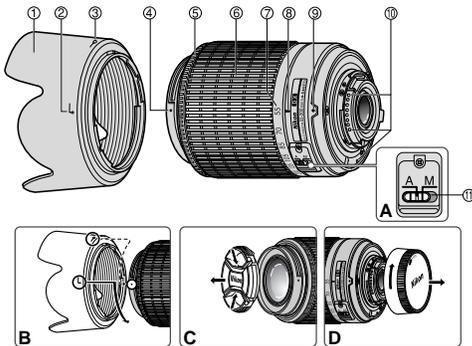

- 1 フード Lens hood
2 フード取り付け指環
3 フードセット指環
4 フード固定指環
5 フォーカスリング
6 ズームリング
7 焦点距離目盛
8 フード固定指環
9 レンズ脱着指環
10 レンズ脱着指環
11 A-M切り換えスイッチ

安全上のご注意

ご使用の前に「安全上のご注意」をよくお読みください。正しくお使いください。この「安全上のご注意」は製品を安全に正しく使用していただく、および他人への危害や財産への損害を未然に防止するために、重要な内容が記載されています。

表示について

- 警告 この表示を無視して、誤った取り扱いをすると、人が死亡または重傷を負う可能性が想定される内容が記載されています。
注意 この表示を無視して、誤った取り扱いをすると、人が傷害を負う可能性が想定される内容および物的損害の発生が想定される内容が示されています。

絵表示の例

- △記号は、注意(警告を含む)を促す内容を示すもので、図の中や近くに具体的な注意内容(左図の場合は感電注意)が描かれています。
○記号は、禁止(してはならないこと)の行為を示すもので、図の中や近くに具体的な禁止内容(左図の場合は分解禁止)が描かれています。
●記号は、行方を強制すること(必ずすること)を告げるもので、図の中や近くに具体的な強制内容(左図の場合は電池を取り出す)が描かれています。

警告

- 分解したり修理・改造をしないこと
落下などによって破損し、内部が露出したときは、露出した手を触れないこと
熱いもの、煙が出る、ごけいなどの異常時は、速やかにカメラの電池を取り出すこと
水につけた水やかけたり、雨にぬらしたくないこと
引火・爆発のおそれのある場所では使用しないこと
レンズまたはカメラで直接太陽や強い光を見ないこと
ぬれた手でさわらないこと
製品は幼児の手の届かないところに置くこと
使用しないときは、レンズにキャップをつけるか太陽光のあたらない所に保管すること
三脚にカメラやレンズを取り付けたまま移動しないこと

日本語

このたびはDXニッコールレンズをお買い上げいただきありがとうございます。このレンズは、ニコンデジタル一眼レフカメラ(ニコンDXフォーマット)D2シリーズ、D1シリーズ、D100、D70S、D70、D50専用です。

主な特長

- レンズ内超音波モーター(サイレント・ウェーブ・モーター)を採用し静かなAF(オートフォーカス)撮影が可能です。
●夜間撮影でも正確な露出値を確保し、3D測光機能を持ったカメラとの組み合わせで、より確かな露出制御を実現します。

カメラへの取り付け方

- 1 カメラの電源スイッチをOFFにします。
2 レンズの裏ぶたを取り外します。
3 レンズとカメラのレンズ着脱指環を合わせ、時計と反対回りにカチッと音がするまでレンズを回します。
4 レンズの前キャップを取り外します。

カメラからレンズの取り外し方

レンズを取り外すには、カメラの電源スイッチをOFFにして、レンズ取り外しボタンを押しながら時計回りにレンズを回します。

パコネットフードFH-B-34の取り付け、取り外し

- 取り付け方
●取り外し方

ズームリングと被写界深度

撮影を行う場合は、ズームリングを回して焦点距離を変化させ、構図を決めてピント合わせを行ってください。

ピント合わせの方法

オートフォーカス撮影: カメラのフォーカスモードをAF (C/S) にセットし、レンズのA-M切り換えスイッチを前にセットしてください。

オートフォーカス撮影ではフォーカスリングが回転しますので、フォーカスリングに触れないように注意してください。

マニュアルフォーカス撮影: カメラのフォーカスモードをAF (C/S) またはMにセットし、レンズのA-M切り換えスイッチをMにセットしてください。

Table with 2 columns: Lens switch, Camera focus mode. Rows for AF, M, and Manual Focus Assist.

カメラのフォーカスモードについては、カメラの使用説明書をご覧ください。

絞り値の設定

絞り値を設定する場合は、カメラで設定してください。

開放F値の変化

このレンズはズームにより、開放F値が最大1段変化します。ただし、露出を決める際、F値の変化量はカメラが自動的に補正しますので考慮する必要はありません。

カメラ内蔵フラッシュ使用時のケラレについて

カメラ内蔵フラッシュのケラレとは、フラッシュの光がレンズのフードや焦点距離によってレンズの先端でさえぎられて影になり、写真に映り込む現象です。

Table with 2 columns: Digital SLR camera, Keirare-free shooting focal length and shooting distance. Rows for D100, D70S, D70, D50.

レンズのお手入れと取り扱い上のご注意

- レンズのCPU信号端子は汚さないようにご注意ください。
●レンズの清掃は、ホコリを拭く程度にしてください。
●シッターやペンシッターなどの有機溶剤は絶対に使用しないでください。

付属アクセサリー

- 52mmスプリング式前キャップ LC-52 ●裏ぶた LF-1
●パコネットフード HB-34 (注: フードはブラックのみです) ●ソフケース CL-0815

別売アクセサリー

- 52mm内蔵式フィルター
●クロースアップレンズ: No. 01/2/3T/4T (クロースアップレンズを装着した場合は、マニュアルフォーカスモードを合わせ撮影してください。

使用できないアクセサリー

- テレコンバーター: 全種類 ●オート接写リング: PKリング全種類 ●Kリング: 全種類
●オートレンズ: BR-4 ●ベローズアタッチメント: 全種類

仕様

- 型式: ニコンマウントCPU内蔵Gタイプ、AF-S DXニッコールズームレンズ(ニコンデジタル一眼レフカメラ [ニコンDXフォーマット] 専用)
焦点距離: 55mm - 200mm
最大口径径: 1-4 5.6
絞り階級: 9段1/3段 (ED1/2N2枚)
角 度: 28° 50' - 8°
焦点距離目盛: 55, 70, 85, 105, 135, 200mm

English

Thank you for purchasing the AF-S DX Zoom-Nikkor 55-200mm f/4-5.6G ED. DX Nikkor lenses are specially designed for use with Nikon digital SLR (Nikon DX format) cameras, including the D2-Series, D1-Series, D100, D70S, D70 and D50.

Notes on Safety Operations

- CAUTION
Do not disassemble
Turn off immediately in the event of malfunction
Do not use the camera or lens in the presence of flammable gas
Do not look at the sun through the lens or viewfinder
Keep out of reach of children

Major features

- This lens employs a Silent Wave Motor to drive the focusing mechanism, making autofocusing smooth, silent and almost instantaneous.
● More accurate exposure control is possible when the lens is mounted on a Nikon camera having 3D Matrix Metering capability.

Mounting the lens

- 1 Turn the camera off.
2 Remove the rear lens cap.
3 Keeping the mounting index on the lens aligned with the mounting mark on the camera, rotate the lens counterclockwise until it clicks into place.

Detaching the lens

Be sure to turn the camera off when removing the lens. Press and hold the lens-release button while turning the lens clockwise to detach.

Using bayonet hood HB-34

- Attaching the hood
● Detaching the hood

Detaching the hood

While holding it by the base rather than its outer edge, detach the hood by turning it clockwise as viewed from the camera side.

Focusing, zooming, and depth of field

Before focusing, turn the zoom ring to change the focal length until the desired composition is framed in the viewfinder.

Focusing (Fig. A)

- Autofocus mode: Set the camera's focus mode to AF (C/S) and set the lens' A-M mode switch to A.
Manual focus mode: Set the camera's focus mode to AF (C/S) or M and set the lens' A-M mode switch to M.

Setting the aperture

Set the aperture on the camera body. Variable maximum apertures: Zooming the lens from 55mm to 200mm increases the maximum aperture by one (f) stop.

Table with 2 columns: Lens' A-M mode switch, Camera's focus mode. Rows for Autofocus and Manual focus.

For more details on camera's focus mode, refer to your camera instruction manual.

Taking flash pictures using camera with a built-in flash

Table with 2 columns: Digital SLR camera, Usable focal length / Shooting distance. Rows for D100, D70S, D70, D50.

Lens care

- Be careful not to soil or damage the CPU contacts.
● Clean the lens surfaces with a blower brush.
● Never use thinner or benzene to clean the lens, as this might damage it.

Standard accessories

- 52mm snap-on front lens cap LC-52 ● Rear lens cap LF-1
● Bayonet hood HB-34 ● Flexible lens pouch CL-0815

Optional accessories

- Close-up attachment lenses (No. 01, 2, 3T, 4T). Focus manually when these lenses are attached.

Incompatible accessories

- Teleconverters (all models)
● Auto Lens BR-4 and all models of Auto Extension Ring PK, K Ring and Bellows focusing attachment.

Specifications

- Type of lens: G-type AF-S DX Zoom-Nikkor lens with built-in CPU and Nikon bayonet mount
Focal length: 55mm-200mm
Maximum aperture: f/4-5.6
Lens construction: 13 elements in 9 groups (2 ED lens elements)
Picture angle: 28°50'

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>