



उपरोक्त मातृदशिका
मातृदशिका: LG-RD2530



LG-RD2530 User Guide



P/N : MMBB0191801 (1.0) G








Contents

Phone Components	2	Typing In ABC (Multi-tap) Mode ...	10
Onscreen Icons	4	123 (Numbers) Mode	11
Using the Battery and Charger ...	5	Symbol/Smileys Mode	11
Installing and Removing the Battery	5	To Edit in Hindi Mode	11
Charging the Battery	6	Write Text	12
Battery Charge Level	6	Write E-mail	14
Turning the Phone On and Off	7	1234 Services	16
Changing the display language	7	Introduction	17
Airplane Mode	7	Menu Features	18
Making a Call	8	Safety Information	27
Receiving Calls	8	Charger and Adapter Safety	27
Menu Tree	9	Battery Information and Care	27
Entering Information Using T9 Text		General Notice	27
Input	10	LIMITED WARRANTY	
Typing In T9 Mode	10	STATEMENT	28
		Service Center List	30

Phone Components










The following shows key components of your mobile phone.



LCD Screen	Displays messages & indicator icons.
Soft Keys (the names of the functions of these keys appear at the bottom of the screen)	<p>Soft Key 1 </p> <p>Used to display the function setting menu. Accepts the highlighted choice when navigating through a menu.</p> <p>Soft Key 2 </p> <p>Press this key once in a menu, to go back one level.</p>
CALL Key	Allows user to place or answer calls.
END/PWR Key	Used to turn power on/off and to end a call. Using this key, you can return to the main menu display screen. When you press once, when a call is received, the phone stops ringing or vibrating depending on the mode it is in. Press twice to reject the call.
Alphanumeric Keypad	These keys enable you to enter numbers and characters and choose menu items.
4 Way Navigation Key	This Navigation key allows quick access to  Messages and Voice Mail notification messages.  Ring Tone,  R World,  Profiles.
Clear Key CLR	Press to delete a single space or character. Press and hold to delete entire words.
Vibrate Mode Key	In standby mode, set the vibrate mode by pressing and holding the key  about 2 seconds.

Onscreen Icons

The phone screen displays several onscreen icons which appear when the phone is powered on.

Icons	Descriptions
	Displays the strength of the signal received by the phone and current signal strength is indicated by the number of bars displayed on the screen.
	No service The phone is not receiving a system signal.
	In use. A call is in progress. * No icon indicates the phone is in standby mode.
	Indicates that a Text Message or E-Mail Messages or Voice Mail has been received
	In Vibrate mode.
	In General mode.
	In Silent mode.
	In Alarm mode.
	Charge level. Indicates battery charge level.

Using the Battery and Charger

Charge the battery fully before the initial use of the phone.

The phone comes with a rechargeable battery. Keep the battery charged while not in use in order to maximize talk and standby time when using the phone.



Installing and Removing the Battery

- To install, insert the battery into the opening on the back of the phone, and insert the bottom of battery into groove at the bottom of the handset. Gently press down the cover until the latch snaps into place.
- To remove, push the back cover down. Push the tab with one hand and lift the top of the battery to separate.



Charging the Battery

To use the AC adapter charger provided with your phone:

1. Plug the AC adapter into the electrical outlet.
 2. Insert the round end of the adapter into the AC adapter jack on the bottom of the phone. (Make sure the battery is installed.)
- As the phone charges, the battery icon continually displays a progression from empty () to full ().

It takes about three hours to fully recharge a completely rundown battery. When fully charged, battery icon indicates charging by twinkling.


Battery Charge Level

The battery charge level is shown at the top right of the LCD screen.



When the battery charge level becomes low, the low battery sensor will alert you in three ways: sounding an audible tone, blinking the battery icon outline, and displaying **Recharge the battery**. If the battery charge level becomes exceedingly low, the phone will automatically switch off and any function in progress will not be saved.

Turning the Phone On and Off

- 1) Install a charged battery pack or connect the phone to an external power source such as the cigarette lighter charger, car kit or AC Adaptor.
- 2) Hold down the Key  for 2 seconds until the LCD screen flashes.



Note As any other communication device, avoid any unnecessary contact with the antenna while your phone is turned on.

Changing the display language

- 1) In standby mode, press Soft Key 1 **Menu**.
- 2) Press , .
- 3) Set **English/ हिन्दी** with  and then press Soft Key 1.




Airplane Mode

When your phone is in Airplane Mode, it cannot send or receive any calls or access online information. You may use the phone's other features, such as Game, Scheduler, Memo, etc. When Airplane Mode is enabled, a message "Airplane Mode" is displayed on the screen.






- 1) In standby mode, press Soft Key 1 **Menu**, , , .
- 2) Select **On** or **Off** and press Soft Key 1.

Making a Call

Every time you make a call, follow these steps:

- 1) Make sure that the phone is turned on. If not, hold down  for 2 seconds.
- 2) Type the phone number and then press .
- If the phone is locked, type the lock code.
- 3) To end the call press .

Receiving Calls

- 1) When the phone rings or vibrates (if the Vibrate Mode is enabled), press any key (except ) or  depending on the Call settings.
- When you press  once, when a call is received, the phone stops ringing or vibrating depending on the mode it is in. Press  twice to disconnect.
- 2) To end an answered call press .

Menu Tree

1. Names

1. Add Name
2. Find
3. Groups
4. Speed Dial
5. Help

2. Messages

1. Write
2. Inbox
3. 1234 Services
4. Outbox
5. Voice Mail
6. Archive
7. Drafts
8. Templates
9. Msg Groups
0. Erase Msgs
- *. Message Settings
- #. Help

3. Call History

1. Missed
2. Received

3. Dialed
4. In Call Memo
5. Call Duration
6. Erase History
7. Help

4. Profiles

1. Vibrate Only
2. Silent
3. General
4. Outdoor
5. Headset
6. Carkit
7. Help

5. Display

1. Language
2. Service Area
3. Clock
4. Wallpaper
5. Screensaver
6. Menu Style
7. Rhythmic Lighting
8. Backlight

9. Contrast
0. Help

6. Settings

1. My Menu
2. Call
3. Phone
4. Security

7. Organiser

1. Scheduler
2. Memo
3. Alarm
4. Stopwatch
5. Calculator
6. Currency Converter
7. World Clock
8. Help

8. R World

1. R-Menu
2. Games
3. Reset R-Menu

















Entering Information Using T9 Text Input

In the text input field, you can scroll through the modes using Soft Key 2 in the following order : T9En, Abc, 123, Symbol, Smileys, Hindi.

- Shift Key  : Used to change the letter case







Typing In T9 Mode

For example, to write “**Call the office**”, follow these steps:

1. Press: Soft Key 2  to change letter case to T9En mode.
2. Press:    .
3. Press:  to complete the word and add a space.
4. Press:          .
5. Display: Call the office.

Typing In ABC (Multi-tap) Mode

For example, to type “**LG**”, follow these steps:

1. Press: Soft Key 2  to change letter case to ABC mode.
2. Press:  to change to **ABC** Caps Lock mode.
3. Press:    .
4. Display: LG.

123 (Numbers) Mode

Type numbers using one keystroke per number.


To change to 123 mode in a text entry field, press Soft Key 2 until 123 mode is displayed.

Symbol/Smileys Mode

Press the Navigation Key  to cycle through the desired characters :

To select Character, Press the assigned number key.

To Edit in Hindi Mode

Press Soft Key 2  , until the soft menu changes to Hindi mode.





For example, to type "हिन्दी "

1. Press  2 times.
2. Press  8 times.
3. Press  5 times.
4. Press  3 times.
5. Press  3 times.
6. Press  3 times.

Write Text

LMS(Long Message Service) allows you to send a message upto 462 characters at a time. Before sending LMS message, total number of SMS packets formed are intimated to the user and confirmation is taken to send.

Maximum 3 packets for English and 4 for Hindi messages can be sent. Each LMS packet is received as individual message. Every LMS message shows the packet sequence number in the message for ex: In case of 3 packets, <1/3>, <2/3>, <3/3>.

1. Press Soft Key 1 **Menu**,  or .
2. Select  **Write**.
3. Select  **Write Text**.
4. After entering a message to be sent by selecting **Send**, press Soft Key 1 **Options**.
 - ▶ **Send** Use to send the message.
 - ▶ **Save** Save to Draft message.
 - ▶ **Templates** Select a sample message.
 - ▶ **Help** You can get information about Hindi writing.

5. After entering the phone number where the message is to be sent, press Soft Key 1 **Options**.





- ▶ **Send** Use to send the message.
- ▶ **NextRecipient** Enter the next recipients address You can add up to 10 recipients.
- ▶ **Priority** Allows you to give the priority to message. Normal or Urgent.
- ▶ **Delivery Ack** This function allows you to know whether the message is successfully transmitted to other party or not when the transmitted message is received in other party's phone. If you want to activate this function, set to **On**.
- ▶ **Save Sent Msg** You can save this message in **Outbox**.

6. If you select **Send**, it notifies you whether the message was sent successfully.


- ▶ **Send** Use to send the message.
- ▶ **Last** Select a recent sent number.
- ▶ **SMS Groups** Select SMS Group.
- ▶ **Names** Select a phonebook entry.

Write E-mail

Send message to an E-mail ID with Write E-mail.

1. Press Soft Key 1 **Menu**,  or .
2. Select  **Write**.
3. Select  **Write E-mail**.

There are four optional menus of **Send, Last, E-mail Groups** and **Names**.




- ▶ **Send** Use to send the message.
 - ▶ **Last** Select a recent sent number.
 - ▶ **E-mail Groups** Select E-mail Group.
 - ▶ **Names** Select a phonebook entry.
4. After entering the e-mail address where the message is to be sent, enter the next recipients address in the  key. You can add up to 10 recipients. Press Soft Key 1 **Options**.
 - ▶ **Send** Use to send the message.
 - ▶ **Domain** Select a domain.
 - ▶ **NextRecipient** Select a next recipient. (up to 10)
 5. After entering a Subject, press Soft Key 1 **Next**.

6. After entering a message to be sent by selecting **Send**, press Soft Key 1 **Options**.

- ▶ **Send** Use to send the message.
- ▶ **Save** Save to Drafts message.
- ▶ **Templates** Select a Templates message.
- ▶ **Priority** Allows you to give the priority to message. Normal or Urgent.
- ▶ **Delivery Ack** This function allows you to know whether the message is successfully transmitted to other party or not when the transmitted message is received in other party's phone. If you want to activate this function, set to **On**.
- ▶ **Save Sent Msg** You can save this message in **Outbox**.

1234 Services

Exciting SMS-based Infotainment services such as News, Joke, Horoscope etc are available to Reliance subscribers. Using the SMS 1234 services, the user will be able to access interesting information on common subjects through SMS. User needs to select the Menu corresponding to the Service Keyword.

1. Press Soft Key 1 **Menu**,  or .
2. Select  **1234 Services**.
3. Place the cursor on the item that you wants to be served, and then press Soft key 1 **Select**. You may select from eleven items. (1.News 2. Cricket 3.Joke of The Day 4.Thought of the Day 5.Contest 6. Beauty Tips 7.Health 8.Horoscope 9.Bill Info 0.Unbilled Info *.Help)
You may select the keyword that you want to send in subsequent-Menu.

Example

For example, to receive the "sports news" you can operate the phone as follow;

1. Press Menu +2(Messages) + 3(1234 Services) + 1(News) + 6(NEWS SPORTS)

Display: Sending...(1/1) To 1234

Introduction

Congratulations on your purchase of the LG-RD2530 cellular phone that has been designed to operate with the latest digital mobile communication technology, Code Division Multiple Access (CDMA). The CDMA system has greatly enhanced voice clarity and can provide various types of advanced features.

This is an advanced and compact phone which has diverse features as follows:

- Large, easy-to-read, 2 lines display + 1 Icon Line + 1 Menu Line.
- Paging, Messaging, Voice Mail, and Caller ID.
- 18-key keypad (10 number keys / 2 function keys / 2 Soft keys / 1 clear key / 4 way navigation 1 key / 1 Call key / 1 End key).
- Long battery stand-by and talk time.
- Choice of 19 Ring sounds + 3 downloadable Ring tones by SMS + 50KB R World downloadable Ring tones.
- Choice of 3 Wallpapers + 3 downloadable by SMS.
- Menu-driven interface with prompt for easy operation and configuration.
- Voice Privacy inherent with CDMA encoding.
- Any Key Answer, Auto Redial, Speed Dial upto 99 memory locations.
- Optional accessories with greater convenience and enhanced functionality.
- In Call Memo, 1234 Services, R World, Games
- Airplane Mode, Rhythmic Lighting.
- SMS, LMS, SMS to E-mail, Group SMS.


Menu Features

Menu	Description	Select
Add Name	Store upto 600 contacts, adding 4 phone numbers + E-mail + Memo with each entry and assign Group + Ring Tone + Message Alert Tone to each entry.	Menu > Names > Add Name
Find	To find phone numbers you have stored in the Phone Book.	Menu > Names > Find
Groups	This is a function for changing Group Name and setting Ring tones by Group.	Menu > Names > Groups
Speed Dial	Speed Dial allows you to make a call faster by just pressing a corresponding number.	Menu > Names > Speed Dial
Write	Write and send Message and E-Mail. Allows you to send a message upto 462 characters at a time.	Menu > Messages > Write (Refer to 12-15 page)
Inbox	Received Text messages, Page, E-mail messages, Delivery ack, lists may be searched, and the contents may be viewed. Upto 30 can be stored.	Menu > Messages > Inbox
1234 Services	Exciting SMS-based Infotainment services such as News, Joke, Horoscope etc are available to Reliance subscribers.	Menu > Messages > 1234 Services (Refer to 16 page)

Menu	Description	Select
Outbox	Up to 30 sent messages can be stored in the Outbox.	Menu > Messages > Outbox
Voice Mail	Allows you to view the new voice messages recorded in the voice mail box.	Menu > Messages > Voice Mail
Archive	Archive stores what is preferred to save among messages received. Upto 30 can be stored.	Menu > Messages > Archive
Drafts	When a user is interrupted by a call while composing a message, messages automatically get saved. Upto 30 can be stored.	Menu > Messages > Drafts
Templates	There are 10 predefined phrases included in the Templates. You can add upto 20 templates more.	Menu > Messages > Templates
Msg Groups	Msg Groups consists of 5 SMS/E-mail Groups with each group consisting of maximum 10 members.	Menu > Messages > Msg Groups
Erase Msgs	Allows you to erase messages in each message box.	Menu > Messages > Erase Msgs
Message Settings	Message Settings can be configured for receiving new messages.	Menu > Messages > Message Settings

Menu	Description	Select
Missed	Allows you to view list of all Missed Calls. (Maximum 60 numbers are possible including Missed, Received, Dialed and In Call Memo)	Menu > Call History > Missed
Received	Allows you to view list of all Received Calls. (Maximum 60 numbers are possible including Missed, Received, Dialed and In Call Memo)	Menu > Call History > Received
Dialed	Allows you to view list of all Dialed Calls. (Maximum 60 numbers are possible including Missed, Received, Dialed and In Call Memo)	Menu > Call History > Dialed
In Call Memo	Save the phone numbers taken while talking and can view the list of numbers present in In Call Memo. (Maximum 5 numbers are possible)	Menu > Call History > In Call Memo
Call Duration	View the duration and number of recent calls you have dialed and received. Also reset the time counter.	Menu > Call History > Call Duration
Erase History	Erase the contents of each of the three call histories.	Menu > Call History > Erase History
Profiles	Profiles let you set your phone's sound settings to your environment. Each profile contains settings for your phone's Ring Type, Ring Tone, Ringer Volume, Earpiece Volume, Key Volume and Message Alert.	Menu > Profiles > <ul style="list-style-type: none"> 1. Vibrate Only / 2. Silent / 3. General / 4. Outdoor / 5. Headset / 6. CarKit

Menu	Description	Select
Language	Set the Bilingual feature according to your preference, choose between English and हिन्दी.	Menu > Display > Language
Service Area	This menu displays the current SDCA/calling area the user is in.	Menu > Display > Service Area
Clock	Allows you to select a clock on your mobile phone display.	Menu > Display > Clock
Wallpaper	Enter the string of characters you want to be displayed. You can set up the screen displayed on the LCD screen in the standby mode.(Up to three images)	Menu > Display > Wallpaper
Screensaver	The screensaver is activated when no function of the phone is used after a preset period of time. Press any key to deactivate the screensaver.	Menu > Display > Screensaver
Menu Style	Allows you to select the menu style.	Menu > Display > Menu Style
Rhythmic Lighting	Allows you to select pattern for an incoming call.	Menu > Display > Rhythmic Lighting

Menu	Description	Select
Backlight	Choose the settings of the LCD and keypad backlight.	Menu > Display > Backlight
Contrast	Using the Navigation Key, select the contrast setting using the scale of lightest to darkest.	Menu > Display > Contrast
My Menu	Lets you access to favorite menu quickly by customising my menu.	Menu > Settings > My Menu
Call Forward	Call forward lets you forward all your incoming calls to another number or Voice Mail connection.	Menu > Settings > Call > Call Forward
Call Waiting	While a call is in progress, you may hear two beeps indicating another incoming call. When call waiting is enabled, you may put the active call on hold while you answer the other incoming call.	Menu > Settings > Call > Call Waiting
Any Key Answer	When your phone rings, press any key to answer except  .	Menu > Settings > Call > Any Key Answer
Auto Redial	Set the length of time the phone waits before automatically redialing a number when the attempted call fails.	Menu > Settings > Call > Auto Redial

Menu	Description	Select
Voice Privacy	Set the voice privacy feature for CDMA calls as Standard or Enhanced.	Menu > Settings > Call > Voice Privacy
Clear Voice	On/Off the function of Audio AGC(Auto Gain Control) system.	Menu > Settings > Call > Clear Voice
Call Timer	You can set your phone to display the running elapsed time while a call is active.	Menu > Settings > Call > Call Timer
Call Connect Alert	This is a function to alert you that the call connection has been established.	Menu > Settings > Call > Call Connect Alert
Key Guard	Allows you to protect the keypad of your phone from accidental dialing.	Menu > Settings > Phone > Key Guard
Airplane Mode	When your phone is in Airplane Mode, it cannot send or receive any calls or access online information.	Menu > Settings > Phone > Airplane Mode
Set NAM	Select the phone's NAM (Number Assignment Module).	Menu > Settings > Phone > Set NAM
Service Alert	Alerts you when service changes.	Menu > Settings > Phone > Service Alert
Version	View the S/W and PRL version.	Menu > Settings > Phone > Version

Menu	Description	Select
Lock Mode	Keeps your phone from unauthorized use. (Default Lock Code is 0000)	Menu > Settings > Security > Lock Mode
Emergency Numbers	You can call these numbers 100, 101, 102 even when the phone is locked or restricted.	Menu > Settings > Security > Emergency Numbers
Change Lock Code	New Lock Code allows you to enter a new four-digit lock code number.	Menu > Settings > Security > Change Lock Code
Clear Memory	Deletes all information saved in Phone Book or all data saved in phone and go back to default value.	Menu > Settings > Security > Clear Memory
Reset Default	You can reset some of the menu settings to their original values.	Menu > Settings > Security > Reset Default
Scheduler	Simply store your appointments and your phone alerts you with a reminder of your appointment. Up to 160, can be saved.	Menu > Organiser > Scheduler
Memo	Write memos. Up to 40, can be saved.	Menu > Organiser > Memo
Alarm	To change an event alarm time.	Menu > Organiser > Alarm

Menu	Description	Select
Stopwatch	Allows you to take an accurate measurement of time.	Menu > Organiser > Stopwatch
Calculator	Calculate simple mathematical computations.	Menu > Organiser > Calculator
Currency Converter	Before you can make currency conversions, you need to choose a base currency (usually your domestic currency) and add exchange rates.	Menu > Organiser > Currency Converter
World Clock	Is useful if you need to make a call to another country, and you are not sure about the time difference.	Menu > Organiser > World Clock
R-Menu	This connects you to R World Data Services like Ringtones, Cricket, Dating, News, Astro, City & TV Guides, and more provided by your service provider.	Menu > R World > R-Menu
Games (Tizzy Jump)	It's like a rope skipping which jumps without touching the rope, refer to key Info.	Menu > R World > Games > Tizzy Jump
Games (Stone Axe)	It is a game that hits the enemy with attack the enemy, refer to key Info.	Menu > R World > Games > Stone Axe

Menu	Description	Select
Game Settings	You can set sound volume of the game and backlight to On or Off.	Menu > R World > Games > Game Settings
Reset R-Menu	You can reset R-Menu.	Menu > R World > Reset R-Menu

Functions Used During a Call

In Call Memo	It allows you to note a phone number that the other person provides you during a call. Maximum 5 numbers are possible.	During a Call : Menu 1
Mute/ Unmute	This function locks the microphone of your telephone and prevent sounds from your end being heard by the person at the other end.	During a Call : Menu 2
Call Volume	You may adjust the earpiece volume during a call.	During a Call : Menu 3
Voice Privacy On/Off	Set the privacy feature for CDMA calls as Enhanced or Standard. CDMA offers inherent voice privacy.	During a Call : Menu 4

Safety Information

Please read and observe the following information for safe and proper use of your phone and to prevent damage. Also, keep the user guide in an accessible place at all the times after reading it.

Charger and Adapter Safety

- The charger and adapter are intended for indoor use only.

Battery Information and Care

- Please dispose of your battery properly.
- Use only LG-approved chargers specific to your phone model since they are designed to maximize battery life.
- Do not disassemble or short-circuit the battery.
- Keep the battery's metal contacts clean.
- Recharge the battery after long periods of non-use to maximize battery life.
- Battery life will vary due to usage patterns and environmental conditions.
- The self-protection function of the battery cuts the power of the phone when its operation is in an abnormal state. In this case, remove the battery from the phone, reinstall it, and turn the phone on.

General Notice

- Using a damaged battery or placing a battery in your mouth may cause serious injury.
- Do not place items containing magnetic components such as a credit card, phone card, bank book or subway ticket near your phone.

The magnetism of the phone may damage the data stored in the magnetic strip.

- Talking on your phone for a long period of time may reduce call quality due to heat generated during use.
- When the phone is not used for a long period time, store it in a safe place with the power cord unplugged.
- Using the phone in proximity to receiving equipment (i.e., TV or radio) may cause interference to the phone.
- Do not use the phone if the antenna is damaged. If a damaged antenna contacts skin, it may cause a slight burn. Please contact an LG Authorized Service Center to replace the damaged antenna.
- Do not immerse your phone in water. If this happens, turn it off immediately and remove the battery. If the phone does not work, take it to an LG Authorized Service Center.
- The power cord on this product will expose you to lead, a chemical known to the State of California to cause (cancer) birth defects or other reproductive harm. Wash hands after handling.
- Do not paint your phone.
- The data saved in your phone might be deleted due to careless use, repair of the phone, or upgrade of the software. Please backup your important phone numbers. (Ring tones, text messages, voice messages, pictures, and videos could also be deleted.) The manufacturer is not liable for damage due to the loss of data.
- Do not turn your phone on or off when putting it in your ear.

LIMITED WARRANTY STATEMENT

LG ELECTRONICS Inc. represents and warrants that this subscriber unit and its accessories ("PRODUCT") is free from defects in material and workmanship.

This warranty is subject to the following terms and conditions;

1. This warranty of the PRODUCT extends for a period of 12 months commencing from the date of the activation or 16 months from the date of manufacture whichever is less, except for the battery, for which the warranty is 9 months from the date of activation or 12 months from the date of manufacture whichever is less.
2. During the warranty period, LG ELECTRONICS Inc. or its authorized service network will repair or replace, at LG ELECTRONICS Inc.'s option, the PRODUCT or any relevant parts thereof in the event that the PRODUCT is found to be defective. The repaired PRODUCT or the Product/part provided as a replacement for a defective PRODUCT/part, shall be free from defects. The END USER/consumer purchaser of the PRODUCT or his/her assignee ("CONSUMER") shall not be charged (whether for parts, labour or otherwise) for the repair or replacement of a defective PRODUCT during the warranty period. All replaced parts, boards or equipment shall become the property of LG ELECTRONICS Inc.
3. The warranty in respect of a repaired or replaced PRODUCT/part shall extend for the remaining warranty period of the repaired PRODUCT or replacement thereof to the CONSUMER.
4. Upon request from LG ELECTRONICS Inc., the CONSUMER may be required to provide the purchase receipt or other documentation or information in respect of the date and place of purchase.
5. The CONSUMER shall have no coverage or benefits under this warranty in the event that any of the following conditions are applicable:
 - (a) The PRODUCT has been subject to abnormal use or conditions, improper storage, exposure to excessive moisture or dampness, exposure to excessive temperatures, unauthorized modifications, unauthorized repair (including but not limited to use of unauthorized spare parts in repairs), abuse, accident, Acts of God, spills of food or liquids, improper installation and breakage or damage to antennae (otherwise than by reason of any defects in material or workmanship).
 - (b) LG ELECTRONICS Inc. has not been notified by the CONSUMER of the defects of the PRODUCT during the applicable warranty period.
 - (c) The PRODUCT serial number code or the accessory date code has been removed, defaced or altered.
 - (d) The PRODUCT has been used with or connected to an accessory (i) not supplied by LG ELECTRONICS Inc. or

its affiliates, (ii) not fit for use with the PRODUCT or (iii) used otherwise than in the manner intended.

- (e) The seals of the PRODUCT'S battery enclosure have been broken or show evidence of tampering or the PRODUCT'S battery has been used in equipment other than that for which it has been specified usable by LG ELECTRONICS Inc.
 - (f) All plastic surfaces and all other externally exposed parts that are scratched or damages due to normal customer use.
 - (g) Breakage or damage to antenna unless caused by defects in material or workmanship.
6. In order to derive the benefits of this warranty in respect of any defects in the PRODUCT, the CONSUMER shall ship the PRODUCTS or part thereof at its cost to the authorized service center of LG ELECTRONICS Inc. LG ELECTRONICS Inc. shall bear the cost of shipping the PRODUCT or part thereof back to the CONSUMER after the completion of the service under this limited warranty.

NO OTHER EXPRESS WARRANTY IS APPLICABLE TO THIS PRODUCT. THE DURATION OF ANY IMPLIED WARRANTIES, INCLUDING THE IMPLIED WARRANTY OF MARKETABILITY OR MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE OR USE IS LIMITED TO THE DURATION OF THE EXPRESS WARRANTY

HEREIN. LG ELECTRONICS Inc. SHALL NOT BE LIABLE FOR THE LOSS OF USE OF THE PRODUCT, INCONVENIENCE, LOSS OR ANY OTHER CONSEQUENTIAL DAMAGE, ARISING OUT OF THE USE OF, OR INABILITY OF USE, OF THIS PRODUCT OR FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY, INCLUDING THE IMPLIED WARRANTY OF MARKETABILITY OR MERCHANTABILITY OR FITNESS APPLICABLE TO THIS PRODUCT.

THE CONSUMER UNDERSTANDS THAT LG ELECTRONICS INC. HAS EMBEDDED RELIANCE SOFTWARE AND ITS NETWORK PARAMETERS IN THE PRODUCT. IN CASE THE CONSUMER DELETES, REMOVES, ALTERS OR MODIFIES SUCH SOFTWARE AND THE PARAMETERS AND/OR INSTALLS ANY THIRD PARTY SOFTWARE, THE WARRANTY AND REMEDIES HEREUNDER SHALL NOT BE AVAILABLE TO THE CONSUMER.

7. It is hereby expressly clarified that all warranties (express or implied) in respect of the PRODUCT are provided by LG ELECTRONICS Inc. alone.

Service Center List

	Circle	City	ASCs Name	Address	Contact Person	Phone	Status
1	Andhra Pradesh	Guntur	Vasavi Associates	Door no 6-20-4, Swarnalok complex, 4/1 Arandal Pet, Guntur-522003	MR.Satyam	0863-2233678, 9848105789, 09394155554	
2	Andhra Pradesh	Hyderabad	Sri Varun Electronics	D.No 5-8-344/1, " DHAN BHAGYA ESTATE " , Chirag Ali Lane, Abids, Next toRaghava Ratna Towers, Hyderabad - 500 001	Mr.Raghavendra	040-55781999, 040-55253888, 040-56878822, 09391001463	
3	Andhra Pradesh	Hyderabad	JVR Infotech Pvt Ltd	Shop No 8, Vanijya Vihar,Nalanda Building, Dilslukh Nagar Main Road,Hydrabad-500060	EV Ramakanth	040-24161848, 040-55109604, 040-56524157, 09391131067, 040-36060606	
4	Andhra Pradesh	Hyderabad	S V Electronics	Shop No. 41, Nilagiri Block, Aditya Enclave, Ameerpet Main Road, Hydrabad-500038	Mr.Vanktेशwar a Rao	040-55754477/55343030	
5	Andhra Pradesh	Hyderabad	Reliable Communication	G-8, 3-6-561, AALTO'S A & M Trade Centre, HIMAYATNAGAR, HYDERABAD -500029	Mr Mahesh Heda	04030913251, 09346320705, 09849251173	
6	Andhra Pradesh	Hyderabad	Shweta Communications	Shop No.9, Ground Floor, Pavani Ansuaya Complex, Opp. Huda Complex,Tarnaka, Hyderabad	Mr. Sandeep Heda	040-55918841, 55918842, 09346698606	
7	Andhra Pradesh	Kurnool	R K LG CDMA	#40-37-J1, Gandhi Bhavan, Shop No:13, UCON PLAZA,Opp: Indian Bank,Beside ICICI Bank, Ballary Road, Old Navarang Theatre, KURNOOL-2	Mr:G Rama Krishna	08518-220201, 09393810688	
8	Andhra Pradesh	Nellore	Siri Enterprises	Opp.Archana Theater,A C Centre,Nellore PIN-524001	Mr.Paraveen	939, 830, 957, 109, 347, 000, 000	
9	Andhra Pradesh	Rajamahendray	Siri Infotech	Police Welfare Complex,City Hospitals Junction,Danvai Pet MainRoad,Rajmahundry-533103	Mr Raghvendra	0883-2421567, 09397925799	
10	Andhra Pradesh	Secunderabad	Shweta Computers	# 1-7-69/1 & 2, OPP Aditya Delux Hotel,Near Paradise circel SarojiniDevi Road, Secunderabad - 500003	Mr.Jagdish	040-55334180, 040-27721076, 09396532358, 09391041673	
11	Andhra Pradesh	Tirupathi	CMT Computer Services	18-1-624 VV Mahal Road,OPP HDFC BANK, Tirupathi,PIN-517501	Mr.K Vasu Naidu	0877-5561979, 09393620209	
12	Andhra Pradesh	Vijayawada	K L Computer House	39-9-46 SVS Temple Street,Labbipet,Vijaywada PIN- 520 010	Mr.Kartik	0866-5520461/ 5671461, 09392105222	
13	Andhra Pradesh	Visakhapatnam	GVS Enterprises	G5, Ground Floor, Backside of Sangam-Sarat Theatre, 1st Lane, Dwaraka Nagar,Visakhapatnam - 530 016.	Mr. Satish Kumar	0891-2598610, 9394206074	
14	Andhra Pradesh	Warrangal	S S Marketers	61-7-131,Sai Bhavan, Sridevi Theatre Road, Hanamkonda,Warrangal-506001	Mr.L.Srinivas Rao	0870-2552223, 09390100708	
15	Andhra Pradesh	Kakinada	Delta Infotech	Door No. 6-1-29, Opp. Swami Vivekananda Park, Jawahar Street, Surya RaoPet, Kakinada - 533001	Mr. Shivanand	0884-5593533 9346846009	

16	Bihar	Patna	Infotek Trading Company	1st floor, City Palace, New Dak Bunglow Road, Patna-800001	Sanjay Chowbey	0612-2227166	
17	Bihar	Patna	Competent Mobile Service	Shop 1, Hotel Lalitha Complex, East Bowring Canal Road, Patna	Mohit Ahluwalia	9334022706	
18	Delhi	Delhi	Comhard Systems	D-30,31, First floor, Near Hotel Shipra, Main Vikas Marg, Lakshmi Nagar	Mr Ravi Kant Gupta	011-30955887, 9818867678	
19	Delhi	Delhi	Innovative Telecom	305,Aggarwal Millenium Tower,Netaji Subash Place,Pitam Pura,Delhi-110088	Mr Manoj Garg	011-55154343, 9811682453, 1130925753	
20	Delhi	Delhi	Sagar Technologies	W-8, First Floor,Main Patel Road,West Patel Nagar,New Delhi- 110008	Mr Deepak/ Mr Amit	9810320170, 011 55433100	
21	Delhi	Delhi	Sagar Technologies	J-39,Central Mkt, Lajpat Nagar-II, New Delhi-110024	Mr Prabhat	011- 55425644, 011-55425645	
22	Delhi	Delhi	Ucom Technologies Pvt Ltd.	45, 1st Flr, Corner Mrkt, Malviya Nagar, New Delhi - 110017	Bhuwan Chandra	011-26675900, 55665382, 09313088818, 011-30977000	
23	Delhi	Delhi	Nice Tele-communication	15/23,First Floor, DDA Complex, Nangal raya, D Block, Janakpuri, Delhi -110046	Ripul Garg	011-28521044, 9810778310	
24	Delhi	Delhi	Touch Tone Telecom	B-52, First Floor,Kalkaji, New Delhi	Ashish Dey	11 30939031	
25	Delhi	Delhi	Cube Engineers and Consultants Pvt Ltd	A-65, Naraina Industrial Area, Phase-1, New Delhi	Atul Gupta	09312224103, 011-55450272, 51411623	
26	Delhi	Delhi	Comhard Systems	B-120, Hardev Puri, 100 Feet Main Road, Near MTNL Office, Nathu ColonyChowk,Shahdra, New Delhi - 110 093	Mr. Ravi Kant Gupta	011-39572430 , 011-39572427	
27	Delhi	Delhi	R K Communications	2516 Hudson Lines , Kingsway Camp-Nr. Kamla Nagar , New Delhi	Mr. Pradeep Aggarwal	011-39508861	
28	Delhi	Delhi	Arham Infotech Services	1/1, Regal Building, Near Malik Sweets, Connaught Place New Delhi - 110 001.	Mr. Anil Surana	9350286361	
29	Gujarat	Ahmed abad	Visual Enterprises	104, Saarthak Complex, behind Urja House, Swastik Char Rasta, Navrangpura,Ahmedabad-380009	Vallabh Patel	079-26463305, 9376171851	
30	Gujarat	Ahmed abad	Silicon Valley	F/6,Silver lake,Jagabhai Park,Rambaug Road,Maninagar,Ahmedabad-380008	Rajesh Patel	079-25430634, 9824025430	
31	Gujarat	Ahmed abad	Mishree Communication	75,Management Enclave,Opp.Indraprastha Bungalows,Vastrapur,Ahmedabad.	Mitesh Patel	09327037582, 079-55314224, 9827800611	
32	Gujarat	Ahmed abad	A Com Technologies	Shop No-40, 1st Floor, Shubh Complex,Near Rajasthan Hospital, CampRoad,Shahibaug, Ahmedabad-380004	Vijay.S.Gohel	9824544230, 079-30940560	
33	Gujarat	Bhavnagar	Teletext Gold	G/8,Radheshyam Complex,Radha Mandir,Vaghavadi Road,Bhavnagar-364001	Nilesh Bagadia	0278-2415545, 9824497766	

34	Gujarat	Gandhinagar	Creative Communications	Shop No 102,Suman City,Sector 11,Gandhinagar-382011	K.J.Barot	079-23226241, 9825059590	
35	Gujarat	Jamnagar	Sudarshan Infosys	3, Prerna Building, Cricket Bunglow-3, Indira Nagar, Jamnagar	Amit Unadkat	0288-2552636, 9824478203	
36	Gujarat	Rajkot	Roopang infocare	Vinod Nivas,4,Sardarmagar(West),Nr Astron Cinema,Rajkot-360001	Kalpesh Rugani	0281-2464485, 9824068880	
37	Gujarat	Surat	Excel Solutions	G-48, Ascon Plaza, Anand Mahal Road, Adajan Surat-395009	Nitesh Jain	0261-5544500, 98327344500	
38	Gujarat	Surat	Omsai Services	37,Golden Point,Near Science Laboratory,Ring Road, Surat -3940003	Dharmesh Patel	0261-5593716, 9374710610, 9825406123	
39	Gujarat	Vadodra	Aashnik Infotech	F 50,National Plaza,R.C.Dutt Road,Alkapuri, Vadodara-390005	Aashish Parmar	0265-3112123, 3090969, 9327230793	
40	Gujarat	Vapi	Klassik Statino Products	116,Bhanudarshan Co-Op Society, Koparfi Road, Near Gunjan Cinema, GIDC,Vapi	Avishek Suhasaria	0260-3092363, 9377000911	
41	Haryana	Ambala	Bee Ess Aar Communication	92-93, Gandhi market, Ambala Cantt-133001	Rajiv Gupta	0171-2641234, 9416021234	
42	Haryana	Faridabad	Hi - Tech Communication	105, Sector 10, Faridabad-121006	Rahul Jindal	0129-2223422, 9810456663	
43	Haryana	Gurgaon	Signature Communications	B-100 A , South City - 1 , Opposite - Huda Gymkhana Club - Gurgaon 122001	Raj Kumar Garg	0124-3956565, 0124-5102709	
44	Haryana	Karnal	Mass Communication	7, Dayal Singh Colony, Kunj Pura Road, Karnal-132001	Ms.Veena	0184-3090717, 9354761148	
45	Haryana	Panipat	INS Telecom	2,Bishan Sarup Colony, Opp Bus Stand, Near Hotel Deep, Panipat	Jagdeep Sachdeva	0180-3091860, 5005360	
46	Haryana	Rohtak	Telecentre	Shakti Market, Civil Hospital Road, Near Chhotu Ram Chowk, Rohtak-124001	Mr.Madaan	01262-247242, 9896243092, 09355671666	
47	Haryana	Sonipat	Teleworld	Ground Floor, Main Market, Main Railway Road, Opp. Old Civil Hospital, Sonipat- 138001.	Vipin Dua	1303090889, 9896052888	
48	Haryana	Yamunanagar	Menish Communications	Shop No.3, Sharma Colony, Near Mahindra Petrol Bunk, Yamunanagar - 135005	Vinod Kumar Mittal	9355327374	
49	Jharkhand	Jamshedpur	Tirupati Teletech	Chakravarti Compound,Near Hotel Castel,Contractors area,Bistupur,Jamshedpur-831001	Abhijeet Mukherjee	9334800350	
50	Jharkhand	Ranchi	Satya Systems & Solutions	158, Opp Hotel Palace, Kadru, Ranchi-834002	Amit Rastogi	0651-2341361, 9835167667	
51	Karnataka	Bangalore	Meenakshi Electronics	#129,Lalbagh Main Road, Bangalore-560027	Mr. Ramesh.	080-56992943/ 30617345, 09341210375, 51146822	
52	Karnataka	Bangalore	Optima Mobile Services	24/2, Rajkumar Road, Near Subramanyanagar Police Station, 1st Block,Rajajinagar, Bangalore - 560 010	Unni Krishnan	080- 23131953, 080-57722205, 09341266656	

53	Karnataka	Bangalore	Optima Mobile Services	B-3, Mallikarjun Complex, Opp R T Nagar Police Station, 80 Feet Road, R TNagar, Bangalore-560032	Prasad	8030610202	
54	Karnataka	Bangalore	Pranav infocom	91/92 , Hemachandra complex, Near VGP Show room, 4thblock, jayanagar, Bangalore-560011	S.V.Sirish	080-56697937, 26552551	
55	Karnataka	Bangalore	Pranav infocom	267/1, 1st Main Road, 6th Cross, Behind Shanti Sagar, Domlur Layout, Bangalore-560071	S.V.Sirish	80- 56969937, 51256309	
56	Karnataka	Bangalore	Ascent Communication	No:113, St Johns Church road,Bangalore - 5	Naveen	080-30914856	
57	Karnataka	Belgaum	Hello India Telecom	G-4, Maratha Mandir Complex, Khanapur Road, Near Railway Flyover, Belgaum -590 001.	Sanjay	9845327531/ 09341101800	
58	Karnataka	Hubli	Shruti Services	shop no : B6, Laxmi complex, Court circle, Hubli- 580020	Mr.Mahendar	0836-3090671, 98452-54251, 0836-3090671	
59	Karnataka	Mangalore	Innovative Infocom	15-10-537/11, Jayavarma Centre, Mallikatte Circle, Kadri, Mangalore - 575002.	SEBASTIAN FERNANDES	0824-56632441	
60	Karnataka	Mysore	K.K.Marketing.	1432/9, Tribhuvan Towers, opp Vetenary Hospital, Dewan's Road, DhanwantriRoad Cross, Mysore -570001	Mr. Karunakaran.	09342115003, 09342120789	
61	Karnataka	Gulbarga	Aishwaraya Communication	G-15, G.R. Complex, Opp Mini Vidhan Soudha Main Road, Gulbarga	Mallikarjun	9342356000, 9342355116	
62	Kerala	Ernakulam	Zenicon Infocom(P) limited	2nd floor, Tharian's Building,opp. Ship Yard, M.G. Road, Ernakulam-682015	Jaimon Joseph	0484-2359511, 9349271511	
63	Kerala	Irinjalakuda	Akbar Mobiles	376-44, Near St. Josephs college junction, Irinjalakuda-680121	Mr Sebastian	0480-830796	
64	Kerala	Karunagapally	Supreme Enterprises	Opp to KSRTC Bus stand, Karunagapally-690518	Mr. Ratish	0476-2620282	
65	Kerala	Kollam	Digital Infosystems	MC-3087, New Block, Bishop Jeromi Nagar, Chinnakada, Kollem-691001	Johnson Lawrence	0474-2760647, 9846007059	
66	Kerala	Kottayam	SVM Technologies	NSS Builbing, Near Pallippurathukavu Temple, Kodimapha, Kottayam - 686 002	Rajesh K S	0481-2565303, 9847310123	
67	Kerala	Kozhikode	Domain Infosystems	Domain Infosystems, 2nd Floor, Darussalam Complex, Mavoor Road, Kozhikode- 673 004	Mukundan	0495-2722222	
68	Kerala	Manjeri	Integrated Computer Systems	Royal Tower, TB Road, Manjeri - 676121	Mr. Thomas Chacko	0483-3099686	
69	Kerala	Mavelikarra	Ettutharayil Agency	Ettutharayil complex, K P Road,Kayamkulam-690502	Anu T cheriyan	0479-2441760, 09388900025	
70	Kerala	Pallakad	Akbar Mobiles	N.S. Towers, Kalamandapam junction, Palakkad - 678 001	Suresh	0491-2529829, 9847086446	

71	Kerala	Thiruvananthapuram	Appolo Systems	TC 20/2392, Kalpalayam, Karamana P.O., Thiruvananthapuram - 695 002.	Santosh	0471-2340523	
72	Kerala	Trichur	Akbar Mobiles	Kadarathodh Building, North Bus stand, Trichur - 680 001	Sojan	0487-2323424	
73	Kerala	Tirur	Telit Telecom Shop	P.T.Building, Thazhepalam, Tirur	Vasan.K.Nair	0494-2423311	telit.tirur@lgmobiles.com
74	Madhya Pradesh	Bhopal	Neha Sales Corporation	F-104, Anmol Tower, E-5/14, Commercial Zone, Arera Colony, Bhopal-462016	Ashok Hirwani	0755-5277247/ 2424088, 9826072327	
75	Madhya Pradesh	Gwalior	Computer Clinic	Global Appartments, City Centre, Opp Income Tax Office, Gwalior.	Rishi Sharma	9329302200	
76	Madhya Pradesh	Indore	Neha Sales Corporation	Shop No.18, Ground Floor, Johari Palace, M.G.Road, Indore - 452001.	Ashok Hirwani	0731-5091833, 9826072327	
77	Madhya Pradesh	Jabalpur	S M Shoppee	846, Chattarpur Bhavan, Nr. Ashoka Hotel, Wright Town, Jabalpur, Pin 482002	Vikas Jain	0761-5063183	
78	Madhya Pradesh	Raipur	Cybernet Systems	B-2,1st Floor, Garchaz Complex, Jail Road, Raipur - 492001	Anand Singh	0771-2524033, 9826132918	
79	Madhya Pradesh	Ujjain	Galaxy Computers & Communication	43/2, Varruchi Marg, Opp Madhav Nagar Police Station, Freeganj, Ujjain	Amitabh Chhajlani	9893003099	
80	Maharashtra	Amravati	Scorpio Services	Shop No. 84, Ground Floor, Gulshan Towers, Nr. Panchasheel Cinema, Amravati, Pin-444601	Mr. Pramod	0721-2567302, 09370151826, 9422156874	
81	Maharashtra	Aurangabad	Unique Telematics	Shop no.108/B, Behind Sajawat Handloom, Tapdiya Super Market, Nirala Bazar, Aurangabad-431001	Mr. Mahesh	0240-2356447, 9823007730, 09325210364	
82	Maharashtra	Chinchwad (Pimpri)	Ritz Communication	Shop No 22, Gawde Kunal garden, Pimpri-Chinchwad Link Road, Chinchwad, Pune-411033	Mr Reyaz	020-7485613, 020 30961900, 09890339777	
83	Maharashtra	Jalgaon	Saranag Services	B-288, Golani Market, Jalgaon	Mr. P.M. Waghanna	982331703	
84	Maharashtra	Kohlapur	SMS Services	S5, Diwan Tower, Opp. Nutan Marathi School, Near Mirajkar Tikky, Kolhapur, Pin -416005.	Prakash Patil	0231-2541120, 9823026120	
85	Maharashtra	Margao	Comlink Synergies India Pvt Limited.	Ground Floor, Shop No.1, Garden view building., Next to UTI Bank, Near Margao Municipal Garden, Margao-403601	Sunil	09326105629, 9822101522, 09326105637	
86	Maharashtra	Nagpur	Spectrum Marketing	Shop No.2, Dharampeth Towers, West High Court (WHC) Road, Dharampeth, Nagpur - 440010	Sonali	0712-3095700 / 5618186, 2527823	
87	Maharashtra	Nasik	MOBS Associates	SHOP NO. 12, FIRST FLOOR, KAPOTE-MEHER MARKET, RENUKA NAGAR, WADALA NAKA, DAWRKA, NASIK - 422 001	Girish Bhangre	0253-5623613, 09370291070, 09371531078	

88	Maharashtra	Panjim	Comlink Synergies India Pvt Ltd	Shop No. 5 , Dr Atmaram Borkar Road, Next to RIL Mutual Fund, Panjim, Goa-403001	Sunil	09326105629	
89	Maharashtra	Pune	Mobile World	G-25,AKSHAY COMPLEX, DHOLE PATIL ROAD, PUNE-411 001 30, Time Square, Near Hotel Panchami, Pune Satara Road, Pune.	Pawan Mantri	30942268, 9325088055	
90	Maharashtra	Pune	Horizon		Mr. Nilesh Pundye	39501222 / 9325002399	
91	Maharashtra	Sangli	Ramesh Electronics	Opp. Kanya Purohit prashala, Rajwada, Sangli-416416	Suresh Shegane	0233-2327601, 9823085176, 09372107601	
92	Maharashtra	Solapur	Jawaharlal Radio Service	184, Gold Finch Peth, nr Hotel Ritesh, Solapur - 413007.	Prasanna J Chavan	0217-2725030, 9422458830, 9823317081	
93	Mumbai	Kalyan	Vintech Solutions	SHOP- 14, GROUND FLR, ARCHIES APARTMENT, OAK BAUG, KALYAN-421301	Pawan	9322877555	
94	Mumbai	Vasai	E-Link Solutions	Shop No.5, Type C, Bldg no.5/6, Shanti Vihar, Mira Road -E, Pin Code :401107.	Kamlesh	022-28552087, 09323182084	
95	Mumbai	Mumbai	Absolute Networks	A007, Vishal Shopping Centre, Next to Vishal Hall, Near Station, M.V.Road, Andheri (E), Mumbai - 400 069	Arun	022 39544800, 9322252390	
96	Mumbai	Mumbai	Bombay Telecom Services	211, 212, Navjeevan Commercial Society, Building No:3., Second Floor, Above Hasmutk Tea, Mumbai Central (E), Mumbai: 400004.	Mr. Tejinder Singh Kalha	9323900612	
97	Mumbai	Mumbai	Creative Solutions	SHOP NO 6 AMBIKA COOPERATIVE HOUSING SOCIETY, JAWAHAR NAGAR ROADNO 2 NEAR RAILWAY CROSSING, GOREGAON WEST,MUMBAI	Anand	022-28769003, 022-39533603, 9820188338	
98	Mumbai	Mumbai	Sai Tele Services	400062 A-110, Satyam Commercial Complex, M.G.Road,	Mr. Suresh Kotle	9892549782	
99	Mumbai	Mumbai	LG Service Centre	Ghatkoper (E), Mumbai - 400077. Third Floor, Trade World,Kamala Mills Compound,	Rajib Saha	022-24947375 , 09323190401	
100	Mumbai	Navi Mumbai	LG Service Centre- DAKC	Senapati Bapat Marg, LowerParel, Mumbai-400013 A Block, Ground Floor, Dhirubhai Ambani Knowledge	Rajnish	022-30388052, 09323190405	
101	Mumbai	Thane	Vinay Technologies Pvt Ltd	City, Navi Mumbai-400709 Shop no 3, Minal Chhaya Aptt, Municipal Corporation Road, Panch Pakhadi, Thane (W) - 400601	Vinod Jakotiya	022-25304960, 9821068231, 09322213342	
102	Mumbai	Navi Mumbai	Hello World	Shop No 53, GF, Welfare Chambers, Sector-17, Vashi,	Mahesh	022-27657705, 09322641396	
103	Mumbai	Khar (W)	Komplex Telecom Corporation	Mumbai-400703 1, Satguru Shopping Center, IlIrd road, Khar(W), Mumbai	Mr Mohammad	022-26461917, 09323395024	
104	Mumbai	Panvel	Oceanic Tele System	Shop No.10, Prajapati Arcade, Sector 15, New Panvel	Shailash Bobade	022-56104542, 09322217221	

105	Mumbai	Powai	Unicom Infotel Pvt Ltd	(E), Dist. Raigad. C- 413, Solaris, Sakivihar Road, opp. L & T gate No 6,	Chetan Pawar	022-39411140, 55049776	
106	Mumbai	Dadar	Trident Services	Powai, Mumba-400 079. 8-A, Vasant Smruti, Dadasaheb Phalke Road, Beside "BharatKshetra Building", Near Dadar station(E), Dadar	Mr. Rajesh Sarda	98200 36869	
107	Orissa	Bhubneshwar	S.A.INFOSYS	-East, Mumbai - 400 014. 291 Bomikhal, Opp.Akamra cinema hall, Bhubaneswar-751010	Sarabjeet Singh	0674-2573113/4	
108	Orissa	Cuttack	O.A.INFOTECH	Behind Govt Bus Stand, Badambadi, Cuttack -753012	Manas Mahapatro	0671-2312613	
109	Punjab	Amritsar	Bajaj Telecommunication	87, G Floor, Nehru Complex, Lawrence Road,	Suman Bajaj	09356024827, 9814650314, 0183-3958859	
110	Punjab	Barnala	Unique Infotech	Amritsar-143001 Mittal Street, Near M C Office, Barnala-148101	Pankaj Goyal	01679- 238007,	
111	Punjab	Bathinda	Lalli's Electronic Gallery	1139-A, First Floor, Amrik Singh Road, Nr Gole Diggi, Bhatinda-151005	Ashok Kakria	0164- 2239500/2236337, 9814222310	
112	Punjab	Chandigarh	Vignesh Services	S.C.O- 189-90, Sec- 34, Chandigarh	Mukesh Arya	0172-3018028, 09316134655	
113	Punjab	Hoshiarpur	Kuldip's Mobile Care	Dhobian Wali Gali, Phagwara Road, Hoshiarpur-146001	Kuldip	01882-226906, 9815073906	
114	Punjab	Jalandhar	Mobile Center	Shop No-7, Gobind Market, Opp-Beri Hospital, Nakodar	Jogesh Diwan	0181-3092666, 9814029696, 9815314060	
115	Punjab	Ludhiana	Shahi Communication	Road, Jalandhar. Shop No 5, 4X International, 583 L, Model Town,	Amit Shahi	0161-3944190	
116	Punjab	Malerkotla	Prime Infocomm	Ludhiana Opp. Main gate, Govt College, Malerkotla-148023	Raj Verma	01675-253899, 9814040066, 01675-331979	
117	Punjab	Moga	Super Communication	Pawan Market, Opp shankar Batteries, Court Road,	Jai Deep Mehta	9356314398	
118	Punjab	Patiala	Image Services	Moga-142001 84, First Floor, Leela Bhawan, Patiala-147001	Rohit Bansal	0175-2222796, 9815761262.	
119	Rajasthan	Jaipur	Kamakshi Telecom	105,1st floor,Paradise, C-61(A), Sarojini Marg, C-	Rahul Bhargav	0141-2365575, 09314512863	
120	Rajasthan	Jaipur	Alpha Infotech Systems	Scheme, Jaipur-302001 F-1, First Floor, Krishna Mall, Lakshmi Mandir Crossing,	Shatrughan Mangal	0141-5106777, 9829077136, 0141-3099724	
121	Rajasthan	Jodhpur	Omega Electronics	Tonk Road, Jaipur-302015 UG/4, Adeshwar Tower, Main Chopasani Road,	Pratap Singh	0291-3091214, 09314717171	
122	Rajasthan	Kota	Cyber Infosystems	Opp.Gehlot Watch Co, Jodhpur-342003 26, Ground floor, Kalawati Palival market, Gumanpura,	Shyam Maheshwari	0744-2398153, 09352603354, 09352620153	

123	Rajasthan	Udaipur	Ficusa Enterprises	Kota-324007 13, Darshanpura, Opp.M.B.Commerce College Gate, Nr	Virendra Ranka	0294-2410002, 2413002, 09314410002	
124	Tamilnadu	Chennai	Unicare Infocomm Services	Computer Zone, Udaipur-313002 No.293, Arcot Road, Next to Indian Overseas Bank, Kodambakkam Chennai - 24	Kartik	044 24724666, 044 52047059, 09382306857	
125	Tamilnadu	Chennai	GS Systems	547/352, F M Towers, Mount Road, Nandanam, Chennai-	Kanirajan	044-24330889, 9884160010	
126	Tamilnadu	Chennai	U Com Technologies Pvt. Ltd.	6000035 Shop#3, Door # 24, New #30, Balfour Apartments, Balfour Road, Kilpauk Chennai - 600 010.	Shyam	044-52174656/52175115, 9884187800	
127	Tamilnadu	Chennai	Escomm Systems India P Ltd	No 57-7, Arunodaya Apartments Next to Hotel Sindhoori, Near by Everest BusStop, Ponnamalai High Road,	Mrs N S Vijaysri	044-30901688, 25612212	
128	Tamilnadu	Chennai	Genesis Communication	Chennai-600003 63/3, First main road, Gandhi Nagar, Adyar, Chennai-	Mr Suresh	044-24401188	
129	Tamilnadu	Coimbatore	Fast Track	600020 Sudera Complex, 354B, 100 Feet Road, COIMBATORE -	Anand Prakash	0422-2490577, 9843080040, 09363100080	
130	Tamilnadu	Cuddalore	Kasturi Cellular Service	641012 NO: 37 (2C) BHARATHI ROAD,CUDDALORE. 607	Mr Raghupati	04142 - 220183	
131	Tamilnadu	Erode	JANS Electronics	001,CUDDALOREDISTRICT,TAMIL NADU. 148,Mettur Road, Opposite shakti vinayak temple, Dana	M Kanan	0424-2258526, 9443263508	
132	Tamilnadu	Madurai	Devaa Electronics	Complex, Erode-638011 No.4, Thirumakulam North Street,Near Ayyappan koi,	Guna	0452-5360995, 0452- 2526179, 09344107995	
133	Tamilnadu	Pondicherry	Digital Logistics	Thhalakulam, Madurai-625002 126/2, Perumal Koil Street (Bharathi Street Cutting),	G Singaravelu	9843093348, 09345455351, 0413-5210148	
134	Tamilnadu	Salem	Vishwesh Mobiles	Pondicherry-605001 Sixer Complex, 121/19A, Sarada College Road, Next to	Vasudev Nayak	0427-3090535	
135	Tamilnadu	Thanjavur	Z M Electronics	Abi Medical Centre, Salem - 636007 33,New Municipal Shopping Complex, Opp LIC, Gandhi ji	Ziauddin	04362-272595, 09360313254	
136	Tamilnadu	Tirunelveli	Classic Electronic	road, Thanjavur-613001 39, Trivendrum Road, Opposite Kalimark, Welcome	Erkins MR.U.B. Bala	0462-2575801	
137	Tamilnadu	Tirupur	Shri Vasavi Electronics	Complex, Palayamkottai, Tiruniveli-627002 # 155-303, Mangalam Road, Karuvam palayam, Tirupur -	Murali	0421-3091438, 98422- 74300, 09363005560	
138	Tamilnadu	Trichy	S K Electronics	641604 Raj Complex, 9/A EVR Road, Puthur, Trichy- 620017	Krishnan	0431-2771946, 9843178104, 09345101502	
139	Tamilnadu	Coimbatore	Nucom Services	3/61, Master Building, Kattoor Road, Pappa Naicken,	Mr.Uthaman	9344862178, 0422-5351569	
140	Tamilnadu	Vellore	Matha Communication	Palayam, Coimbatore -641037.	Gunaa Shekhar	0416-2240800	

141	Uttar pradesh	Agra	NSC Computers	4, S.L.N Plaza, Opposite Oda Pilliar Koil, Gandhinagar, Vellor - 632006	Rajiv Singhal	0562-2520032, 09319111350	
142	Uttar pradesh	Agra	Space Consultancy & Services	Shop No G-124, Block No- 29, Sanjay Place, Agra – 282 002 UG 1 & 2, Opp. Jaihind Hotel, Merchant Chamber, Sadar Bazar, Agra-282001.	Tanvir	0562-3957826, 09358504140	
143	Uttar pradesh	Aligarh	A V Computer Services	G-1, Ganpati Plaza, Jha Compund, Marris Rd, Aligarh-202001	Vaibhav	0571-2506148, 9412274391	
144	Uttar pradesh	Allahbad	B.P.Electronics	G-11, Indira Bhawan, Ground Floor, Civil Lines, Allahbad-211001	Ms Naina Pandey	0532-2608088	
145	Uttar pradesh	Bareilly	Sapan Infotech	G- 64 A Kunwar Complex, Near Gupta Watch Co, 116 Civil Lines, Bareilly	Sanjeev Singh	9359102467	
146	Uttar pradesh	Dehradun	Krishna Communication	Shop No 15A, Meedo Plaza, Rajpur Road, Dehradun, Uttaranchal-248001	Vinod	0135 3090895,0935812922, 09358119696	
147	Uttar pradesh	Ghaziabad	Concessionair Documentation India Pvt Ltd (CDIL)	C-83, Rajnagar District Center (RDC), Ghaziabad	Arun Sharma	0120-3092011	
148	Uttar pradesh	Gorakhpur	Eternal Electronics	Shop No.11, Pandey Complex, 33, Kasya Road, Opp DIG Bungalow, Gorakhpur 273001	Ram Pratap	0551-2204520	
149	Uttar pradesh	Kanpur	AR Infotech	111/402 Ashok Nagar, Kanpur Pin 208012	Manoj Shukla	0512 3111662, 9839068734, 0512-3093011	
150	Uttar pradesh	Lucknow	NET COM	3 way road, City Point, Opp Krishi Bhawan, Lucknow-226024	Kawaljeet	0522-3094222	
151	Uttar pradesh	Meerut	Systech Computers	F-124/125 1st floor Ganga Plaza, Begum Bridge Road, Meerut-250002	Vineet Goyal	0121-2691167, 09358416631	
152	Uttar pradesh	Moradabad	Bhavya Technologies	A12, 1st Floor, Rampur Road,Gandhi Nagar, Moradabad	Vivek Kumar Singh	0591-3092318	
153	Uttar pradesh	Muzaffarnagar	Jai Computers	Shop No. 4, 1st Floor, Roorkee road, Near Shiv Chowk, Central Bank Mkt, Muzaffarnagar-251001	Manohar Singh	0131-2635483, 9412110215	
154	Uttar pradesh	Noida	M R Telecom	J-45, First Floor, Sector-18, NOIDA-201301	Kailash Aggarwal	0120-2591440, 9871197801	
155	Uttar pradesh	Saharanpur	Maharaj Communications	Near Maharaja Palace, Delhi Road, Saharanpur-247001	Pankaj Malhotra	0132-2720881, 09358311202	
156	Uttar pradesh	Varanasi	Shivam Mobile Distributers	Shop No.5,B37/115-B-1 Baradari Complex, Rathyatra Crossing, Varansi Pin221010	Rishi Mohan	9839241003, 9335418998, 9335497424	
157	Uttar pradesh	Lucknow	ALFA ELECTRONICS	Shop No.GF20 ABC Complex, Kanpur Road, Lucknow	Harjinder Singh	0522-3948730	

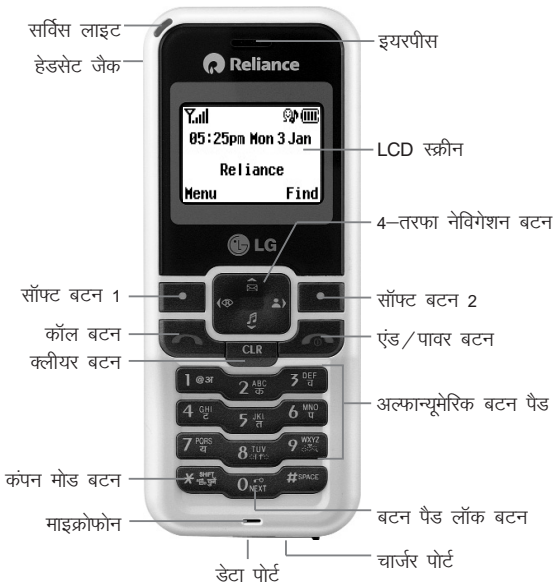
158	W Bengal	Assansol	Sky Computer & Telecom	Islam Market, Nuruddin Road, Assansol-713301	Syed Arshad Ali	0341- 2207719, 9832160886	
159	W Bengal	Burdwan	San Infosys	Tikonía Bus Stand, Central Mkt, GT Road, Burdawan-713101	Sanjit Debnath	0342-3090265, 9832192170	
160	W Bengal	Calcutta	Benma Infosol Pvt Ltd.	P-168/1 CIT Road,Scheme VIIM,KOLKATA 700 067	Arun Surana	033-30943176/7	
161	W Bengal	Calcutta	JP Computers	5B Ekdalia Place, Kolkata - 700019	Somim Kabir	033-24401923	
162	W Bengal	Calcutta	Jaksom Engineering Pvt Ltd	Block-A, Shop-1, Ambika Vihar,1/1 Hardutrai Chamaría Road,Howrah- 711001	PMukherjee	033- 30950383	
163	W Bengal	Calcutta	Skylink	8/1A, Little Russel Street, Calcutta-700071	H R Molla	033-30903814, 033-32091037	
164	W Bengal	Durgapur	Tech International	Red Cross Road, City Centre, Durgapur-713216	Amitava Banerjee	0343-2546893, 9434002244	
165	W Bengal	Barrackpore	Friends Communication	32(8) Barasat Road,N/L 15 no railgate,PO-nonachandanpukur,PS- Titagarh,Barrackpore, Dist-North 24PGS, PIN-743102	Arup Sarkar & TarasankarMukherjee	033-25921263, 9330986253	








अनुक्रमणिका

फोन के पुर्जे.....	2	चिन्ह/स्माईलीस मोड	11
स्क्रीन पर आने वाले चिन्ह.....	4	हिन्दी मोड में संपादन.....	11
बैटरी और चार्जर का उपयोग करना.....	5	शब्द लिखें.....	12
बैटरी लगाना और निकालना.....	5	ई-मेल लिखें.....	14
बैटरी चार्ज करना.....	6	1234 सर्किसेस.....	16
बैटरी चार्ज स्तर.....	6	प्रस्तावना.....	17
फोन को बंद और चालू करना.....	7	सूची की सुविधाएँ.....	18
फोन में भाषा के चुनाव.....	7	सुस्त्रा जानकारी.....	27
एयर प्लेन मोड.....	7	चार्जर एवं एडाप्टर सुस्त्रा.....	27
कॉल करना.....	8	बैटरी की जानकारी एवं देखभाल.....	27
कॉल प्राप्त करना.....	8	सामान्य नोटिस.....	27
सूची शृंखला.....	9		
T9 शब्द इनपुट मोड से जानकारी लिखना.....	10		
T9 मोड में लिखना.....	10		
ABC (मल्टी-टैप) मोड में लिखना.....	10		
123 (अंक) मोड.....	11		

फोन के पुर्जे










आपके मोबाइल फोन के महत्वपूर्ण पुर्जे नीचे दिखाए गए हैं।



LCD स्क्रीन	संदेश और संकेत चिन्ह प्रदर्शित करती है।
सॉफ्ट बटन (सब सूची में, इन बटनों के फंक्शन के नाम स्क्रीन में नीचे दिखते हैं)	<p>सॉफ्ट बटन 1 </p> <p>फंक्शन सेटिंग सूची प्रदर्शित करने के लिए प्रयुक्त। सूची में नेविगेशन के समय हॉइलाइट हुए विकल्प को चुनें।</p> <p>सॉफ्ट बटन 2 </p> <p>किसी सूची में एक बार दबाने पर, एक स्तर पीछे जाते हैं।</p>
कॉल बटन	उपयोगकर्ता कॉल कर या ले सकता है।
एंड / पावर बटन	पावर बंद/चालू करने और कॉल समाप्त करने के लिए उपयोग किया जाता है। इस बटन से आप मुख्य सूची प्रदर्शन स्क्रीन पर लौट सकते हैं। कॉल प्राप्त करते समय जब आप एक बार दबाते हैं, तो मोड के अनुसार घंटी या कंपन बंद हो जाता है। संपर्क तोड़ने के लिए दो बार दबाएँ।
अल्फान्यूमेरिक बटन पैड	इससे आप नंबर और अक्षर लिख सकते हैं और सूची आइटम चुन सकते हैं
4-तरफा नेविगेशन बटन	इस नेविगेशन बटन से आप तुरंत  संदेश और वॉइस मेल अधिसूचना संदेश,  रिंग स्वर,  R वर्ल्ड,  प्रोफाइल्स पर पहुँच सकते हैं।
क्लीयर बटन CLR	एक स्थान या अक्षर मिटाने के लिए इसें दबाएँ। पूरे शब्दों को मिटाने के लिए दबाएँ रखें।
कंपन मोड बटन	स्टैंडबाय मॉड में, बटन  को लगभग 2 सेकंड तक दबाएँ रखकर कंपन मोड सेट करें।

स्क्रीन पर आने वाले चिन्ह

फोन का पावर चालू होने पर फोन स्क्रीन पर अनेक चिन्ह दिखाई देते हैं।

चिन्ह	विवरण
	फोन द्वारा प्राप्त संकेत की शक्ति स्क्रीन पर प्रदर्शित करता है और स्क्रीन पर दिखने वाली पंक्तियों की संख्या से वर्तमान शक्ति पता चलती है।
	सर्विस नहीं फोन को किसी सिस्टम से संकेत नहीं मिल रहा है।
	उपयोग में है: कोई कॉल चल रही है। * कोई संकेत न होना दर्शाता है कि फोन स्टैंडबाय मोड में है।
	दर्शाता है कि कोई पाठ संदेश या वॉइस मेल या ई-मेल संदेश प्राप्त हुआ है।
	कंपन मोड.
	General मोड में.
	Silent मोड में.
	अलार्म मोड में.
	चार्ज स्तर. बैटरी चार्ज स्तर दर्शाता है.

बैटरी और चार्जर का उपयोग करना

पहली बार फोन का उपयोग करने से पहले पूरी बैटरी चार्ज कर लें.

फोन के साथ एक रीचार्जबल बैटरी आती है. अधिकतम स्टैंडबाय और टॉक टाइम प्राप्त करने के लिए उपयोग में नहीं होने पर भी बैटरी को पूरी तरह चार्ज रखें.

बैटरी लगाना और निकालना

- बैटरी लगाने के लिए बैटरी को फोन के पिछले हिस्से में खाली जगह में डालें और धीरे से तब तक दबाएँ. जब तक कि लैच अपनी जगह क्लिक न हो जाएँ.
- इसे निकालने के लिए पिछले हिस्से को नीचे की ओर खींचें, अलग करने के लिए एक हाथ से टैब खींचें और बैटरी के ऊपरी हिस्से को उठाएँ.





ग्रूव



स्लॉट

बैटरी चार्ज करना

फोन के साथ मिले एसी एडॉप्टर चार्जर का उपयोग करने के लिए :

1. एसी एडॉप्टर को बिजली के प्लग में लगाएँ.
 2. एडॉप्टर के गोल सिरों को फोन के नीचे स्थित एसी एडॉप्टर जैक में लगाएँ (सुनिश्चित करें कि बैटरी लगी है).
- जैसे – जैसे फोन चार्ज होता है, बैटरी का चिन्ह खाली () से भरे () होने तक पावर में वृद्धि दिखाता है.

पूरी तरह समाप्त हो चुकी बैटरी को रीचार्ज करने में लगभग तीन घंटे लगते हैं. जब बैटरी पूरी तरह चार्ज हो जाती है तो चार्जिंग संकेतक झपकता है.


बैटरी चार्ज स्तर

बैटरी चार्ज एलसीडी स्क्रीन के ऊपर दाईं ओर दिखाई देता है.






जब बैटरी चार्ज स्तर कम हो जाता है, तो कम बैटरी सेंसर आपको तीन प्रकार से चेतावनी देगा: सुनाई देने वाली एक आवाज़ से, बैटरी चिन्ह आउटलाइन टिमटिमा कर और **बैटरी पुनः चार्ज करें** प्रदर्शित करके, यदि बैटरी चार्ज स्तर बिल्कुल कम हो जाता है तो फोन अपने आप बंद हो जाएगा और चल रहा कोई भी फंक्शन सुरक्षित नहीं होगा.

फोन को बंद और चालू करना




- 1) चार्ज किया हुआ बैटरी पैक लगाएँ या फोन को बाहरी पावर स्रोत से जोड़ें जैसे कि सिगरेट लाईटर चार्जर, कार किट या AC एडॉप्टर .
 - 2) बटन  को 2 सेकंड तक दबाएँ जब तक कि एलसीडी स्क्रीन चालू न हो जाएँ.
- नोट** किसी भी अन्य संचार उपकरण की तरह, फोन के चालू होने पर एंटीना को स्पर्श न करें

फोन में भाषा के चुनाव

- 1) स्टैंडबाय मोड में, सॉफ्ट बटन 1 **सूची** दबाएँ.
- 2) ,  दबाएँ.
- 3)  से **English / हिन्दी** चुनें और सॉफ्ट बटन 1 दबाएँ.




एयर प्लेन मोड

जब आपका फोन एयर प्लेन मोड में होता है, तब इससे न तो कोई कॉल किया जा सकता है, न प्राप्त किया जा सकता है और न ही ऑनलाइन जानकारी तक पहुँचा जा सकता है. आप फोन की अन्य सुविधाओं जैसे गेम्स, टाईम मैनेजर, मेमो आदि का उपयोग कर सकते हैं. एयर प्लेन मोड सक्षम होने पर, स्क्रीन पर "एयर प्लेन मोड" संदेश प्रदर्शित होता है.






- 1) स्टैंडबाय मोड में, सॉफ्ट बटन 1 **सूची**, , ,  दबाएँ.
- 2) **ऑन** या **ऑफ** चुनें और सॉफ्ट बटन 1 दबाएँ.

कॉल करना

जब भी आप कॉल करें, तो इन चरणों का पालन करें :

- 1) सुनिश्चित करें कि फोन चालू है. यदि नहीं है, तो  को 2 सेकंड तक दबाएँ रखें.
- 2) फोन नंबर लिखें और  दबाएँ.
 - यदि फोन लॉक है, तो लॉक कोड लिखें.
- 3) कॉल समाप्त करने के लिए  दबाएँ.

कॉल प्राप्त करना

- 1) जब फोन की घंटी बजे या कंपन हो (यदि कंपन मोड चालू है), तो उत्तर देने के लिए ( के अलावा) या कॉल सेटिंग्स के आधार पर  बटन दबाएँ.
 - कॉल प्राप्त करते समय जब आप  को एक बार दबाते हैं, तो मोड के अनुसार घंटी या कंपन बंद हो जाता है. डिस्कनेक्ट करने के लिए  को दोबारा दबाएँ.
- 2) उत्तर दिए गए कॉल को समाप्त करने के लिए,  दबाएँ.

सूची शृंखला

1. नाम

1. नाम जोड़ें
2. खोजें
3. गुप्स
4. शीघ्र डायल
5. सहायता

2. संदेश

1. लिखें
2. इनबॉक्स
3. 1234 सर्विसेस
4. आउटबॉक्स
5. वॉइस मेल
6. संग्रह
7. ड्राफ्ट्स
8. टेम्प्लेट्स
9. संदेश गुप्स
0. संदेश मिटाएँ
- *. संदेश सेटिंग्स
- #. सहायता

3. कॉल विवरण

1. छूटी हुई
2. प्राप्त
3. डायल किये गये

4. कॉल मेमो में
5. कॉल अवधि
6. विवरण मिटाएँ
7. सहायता

4. प्रोफाइल्स

1. सिर्फ कंपनी
2. Silent
3. General
4. Outdoor
5. हेडसेट
6. कारकिट
7. सहायता

5. प्रदर्शन

1. भाषा
2. सर्विस एरिया
3. घड़ी
4. वॉलपेपर
5. स्क्रीन सुरक्षा
6. सूची स्टाइल
7. रिदमिक लाईटिंग
8. स्क्रीन लाइट
9. वैषम्य
0. सहायता

6. सेटिंग्स

1. मेरी सूची
2. कॉल
3. फोन
4. सुरक्षा

7. ऑर्गनाइजर


1. टाईम मैनेजर
2. मेमो
3. अलार्म
4. स्टॉप वॉच
5. कैलक्युलेटर
6. नोट रुपान्तरक
7. विश्व घड़ी
8. सहायता

8. R वर्ल्ड

1. R-सूची
2. गेम्स
3. R-सूची रीसेट

















T9 शब्द इनपुट मोड से जानकारी लिखना

शब्द इनपुट फील्ड में आप सॉफ्ट बटन 2 को स्कॉल कर के निम्न मोड्स चुन सकते हैं : T9En, Abc, 123, चिन्ह, :-), हिन्दी.

—शिफ्ट बटन  : अक्षर का केस बदलने के लिए उपयोग किया जाता है.







T9 मोड में लिखना

उदाहरण के लिए “Call the office” इस तरह लिखें :

1. अक्षर केस को T9En मोड में बदलने के लिए सॉफ्ट बटन 2  दबाएँ.
2.     दबाएँ.
3. शब्द पूरा करने और एक स्थान जोड़ने के लिए  दबाएँ.
4.           दबाएँ.
5. प्रदर्शन : Call the office.

ABC (मल्टी-टैप) मोड में लिखना

उदाहरण के लिए, “LG” लिखने के लिए, इन चरणों का पालन करें :

1. अक्षर केस को ABC मोड में बदलने के लिए सॉफ्ट बटन 2  दबाएँ.
2. ABC बड़ा अक्षर लॉक मोड को बदलने के लिए  बटन दबाएँ.
3.     दबाएँ.
4. प्रदर्शन : LG.

123 (अंक) मोड


प्रत्येक अंक के लिए एक बार बटन दबाकर अंक लिखें।

किसी शब्द प्रविष्टि फील्ड में 123 मोड के लिए, सॉफ्ट बटन 2 को 123 मोड के प्रदर्शित होने तक दबाएँ।

चिन्ह/स्माइलीस मोड

इच्छित अक्षर देखने के लिए नेविगेशन बटन  दबाएँ: अक्षर चुनने के लिए, निर्धारित अंक बटन दबाएँ।

हिन्दी मोड में संपादन

सॉफ्ट बटन 2  को तब तक दबाते रहें, जब तक सॉफ्ट सूची हिन्दी मोड में न बदल जाएँ।





उदाहरण के लिए, “हिन्दी” लिखने के लिए।

1.  2 बार दबाएँ।
2.  8 बार दबाएँ।
3.  5 बार दबाएँ।
4.  3 बार दबाएँ।
5.  3 बार दबाएँ।
6.  3 बार दबाएँ।

शब्द लिखें

एलएमएस (लॉग मैसेज सर्विस) से आप एक बार में 462 अक्षरों तक का संदेश भेज सकते हैं। एलएमएस संदेश भेजने से पहले, बनने वाले एसएमएस पैकेट्स की कुल संख्या उपयोगकर्ता को बताकर उससे भेजने की पुष्टि ली जाती है।

अंग्रेजी के अधिकतम 3 पैकेट्स और हिन्दी संदेश के अधिकतम 4 पैकेट्स भेजे जा सकते हैं। प्रत्येक एलएमएस पैकेट एक एकल संदेश के रूप में प्राप्त किया जाता है। प्रत्येक एलएमएस संदेश में पैकेट के क्रम की संख्या दर्शाता है, जैसे 3 पैकेट होने पर, <1/3>, <2/3>, <3/3>.

1. सॉफ्ट बटन 1 सूची,  या  दबाएँ।
2.  लिखें चुनें।
3.  शब्द लिखें चुनें।
4. **भेजें** लिखें जो आप भेजना चाहते हैं, और सॉफ्ट बटन 1 **विकल्प** दबाएँ।

- ▶ भेजें संदेश भेजने के लिये चुनें
- ▶ सुरक्षित संदेश ड्राफ्ट्स में सुरक्षित करें
- ▶ टेम्प्लेट्स टेम्प्लेट्स संदेश चुनें
- ▶ सहायता आप हिन्दी लिखने के बारे में और ज्यादा जानकारी प्राप्त कर सकते हैं।

5. गंतव्य स्थान पर संदेश भेजने के लिये फोन नंबर लिखने के बाद, सॉफ्ट बटन 1 **विकल्प** दबाएँ.

- ▶ भेजें संदेश भेजने के लिये चुनें.
- ▶ अगला प्राप्तकर्ता अगले प्राप्तकर्ता का पता लिखें. आप 10 प्राप्तकर्ता तक जोड़ सकते हैं.
- ▶ प्राथमिकता आप संदेश को प्राथमिकता दे सकते हैं, सामान्य या अति आवश्यक.
- ▶ भेज दिया गया अगर आप **ऑन** चुनते हैं, तो यह आपको सूचित करेगा कि संदेश सफलतापूर्वक भेज दिया गया है या नहीं.
- ▶ भेजे गए सुरक्षित आप यह संदेश **आउटबॉक्स** में सुरक्षित कर सकते हैं.

6. अगर आप **भेजें** चुनते हैं, तो यह आपको सूचित करेगा कि संदेश सफलतापूर्वक भेज दिया गया है या नहीं.

- ▶ भेजें संदेश भेजने के लिये चुनें.
- ▶ अंतिम नवीन भेजे हुए नंबर में से चुनें
- ▶ एसएमएस ग्रुप्स एसएमएस ग्रुप्स चुनें
- ▶ नाम फोनबुक में से चुनें

ई-मेल लिखें

आप ई-मेल लिखने के साथ किसी ई-मेल पते पर एसएमएस भेज सकते हैं।

1. सॉफ्ट बटन 1 सूची,  या  दबाएँ।

2.  लिखें चुनें।

3.  ई-मेल लिखें चुनें।

यहाँ चार विकल्प सूची **भेजें, अंतिम, ई-मेल गुप्स** और **नाम** हैं।

▶ भेजें

संदेश भेजने के लिये चुनें

▶ अंतिम

नवीन भेजे हुये ई-मेल में से चुनें

▶ ई-मेल गुप्स

ई-मेल गुप्स चुनें

▶ नाम

फोनबुक में से चुनें

4. गंतव्य का ई-मेल लिखने के बाद,  दबाकर अगले प्राप्तकर्ता का पता लिखें। आप 10 प्राप्तकर्ता तक जोड़ सकते हैं। सॉफ्ट बटन 1 **विकल्प** दबाएँ।

▶ भेजें

संदेश भेजने के लिये चुनें

▶ डोमेन

डोमेन चुनें

▶ अगला प्राप्तकर्ता

अगले प्राप्तकर्ता का पता लिखें। (आप 10 प्राप्तकर्ता तक जोड़ सकते हैं।)




5. **विषय** लिखें और सॉफ्ट बटन 1 **अगला** दबाएँ।

6. **भेजें** लिखें और सॉफ्ट बटन 1 **विकल्प** दबाएँ.

- ▶ भेजें संदेश भेजने के लिये चुनें.
- ▶ सुरक्षित संदेश ड्राफ्ट्स में सुरक्षित करें.
- ▶ टेम्प्लेट्स टेम्प्लेट्स संदेश चुनें.
- ▶ प्राथमिकता आप संदेश को प्राथमिकता दे सकते हैं, सामान्य या अति आवश्यक.
- ▶ भेज दिया गया अगर आप **ऑन** चुनते हैं, तो यह आपको सूचित करेगा कि संदेश सफलतापूर्वक भेज दिया गया है या नहीं.
- ▶ भेजे गए सुरक्षित आप यह संदेश **आउटबॉक्स** में सुरक्षित कर सकते हैं.

1234 सर्विसेस

एसएमएस के द्वारा उपलब्ध सर्विस जैसे News (न्यूज) Joke (जोकस) Horoscope (भविष्यफल) आदि भी रिलायंस के सभी उपभोक्ताओं को उपलब्ध है. 1234 सर्विसेस पर संदेश भेज कर आप कई विषयों पर आकर्षक जानकारी प्राप्त कर सकते हैं. इसके लिये उपभोक्ता को पूर्वनियत फार्मेट में 1234 पर संदेश भेजना होता है.

1. सॉफ्ट बटन 1 सूची,  या  दबाएँ.
2.  1234 सर्विसेस चुनें.
3. कर्सर को इच्छित आइटम पर ले जाएं जिसे आप देखना चाहते हैं, और सॉफ्ट बटन 1 ओके दबाएँ. आप इन 11 विकल्पों में से चुन सकते हैं (1. News 2. Cricket 3. Joke of The Day 4. Thought of the Day 5. Contest 6. Beauty Tips 7. Health 8. Horoscope 9. Bill Info 0. Unbilled Info *. Help). आप इच्छित आइटम से संबंधित बटन दबाकर भी विकल्प चुन सकते हैं.

उदाहरण

उदाहरण के लिये, आप फोन में निम्नलिखित प्रकार से "sports news" प्राप्त कर सकते हैं :

1. सूची + 2(संदेश) + 3(1234 सर्विसेस) + 1(News) + 6(NEWS SPORTS) दबाएँ.
2. प्रदर्शन : भेज रहा...(1/1) को:1234

प्रस्तावना

आपको LG-RD2530 मोबाइल फोन खरीदने पर बधाई. यह फोन नवीनतम डिजिटल मोबाइल कम्युनिकेशन तकनीक CDMA (Code Division Multiple Access) पर काम करने के लिये डिजाइन किया गया है. इसमें CDMA सिस्टम की कई उन्नत सुविधाएँ हैं जैसे इसकी आवाज़ बहुत स्पष्ट है.

यह एक उन्नत और परिपूर्ण फोन है और इसमें निम्न विविध सुविधाएँ हैं.

- बड़ा, आसानी से पढ़ा जा सकने वाला, 2 लाईनो का प्रदर्शन + 1 आइकन लाईन + 1 सूची लाईन.
- पेजिंग, संदेश भेजना, वॉइस मेल, और कॉलर ID.
- 18 – बटनों वाला बटन पैड (10 नंबर बटन/2 फंक्शन बटन/2 सॉफ्ट बटन/1 किलयर बटन/4-तरफा नेविगेशन 1 बटन/1 कॉल बटन/1 एंड बटन).
- लंबा बैटरी स्टैंड-बाय और टॉक टाइम.
- 19 रिंग स्वर + एसएमएस द्वारा 3 डाउनलोड का विकल्प + R वर्ल्ड द्वारा 50 KB रिंग स्वर डाउनलोड का विकल्प.
- 3 वॉलपेपर + एसएमएस द्वारा 3 वॉलपेपर डाउनलोड का विकल्प.
- आसान संचालन और कॉन्फिगरेशन के लिए तुरंत तैयार सूची-संचालित इंटरफेस.
- CDMA एन्कोडिंग निहित वॉइस प्राइवैसी
- किसी बटन से उत्तर, स्वतः रिडायल, 99 मेमोरी विकल्पों वाली शीघ्र डायल.
- अधिक सुविधा और अधिक कार्यक्षमता के लिए वैकल्पिक सहायक उपकरण.
- कॉल मेमो में, 1234 सर्विसेस, R वर्ल्ड, गोम्स.
- एयर प्लेन मोड, रिदमिक लाईटिंग.
- एसएमएस, एलएमएस, एसएमएस से ई-मेल, ग्रुप एसएमएस.


सूची की सुविधाएँ

सूची	विवरण	चुनें
नाम जोड़ें	आप 600 प्रविष्टियाँ संग्रह कर सकते हैं। प्रत्येक के साथ 4 फोन नंबर + ई-मेल + मेमो जोड़ सकते हैं और ग्रुप + रिग स्वर + संदेश सचेतक एसॉइन कर सकते हैं।	सूची > नाम > नाम जोड़ें
खोजें	आपके द्वारा फोन बुक में संग्रहित फोन नंबर को खोजने के लिये।	सूची > नाम > खोजें
ग्रुप्स	इस फंक्शन से आप ग्रुप का नाम बदल सकते हैं और ग्रुप के लिये रिग स्वर सेट कर सकते हैं।	सूची > नाम > ग्रुप्स
शीघ्र डायल	शीघ्र डायल से आप केवल संबंधित नंबर दबा कर जल्दी से कॉल कर सकते हैं।	सूची > नाम > शीघ्र डायल
लिखें	संदेश और ई-मेल लिखें एवं भेजें आप एक समय में 462 अक्षरों तक का संदेश भेज सकते हैं।	सूची > संदेश > लिखें (देखें पेज 12-15)
इनबॉक्स	प्राप्त पाठ संदेश, पृष्ठ, ई-मेल संदेश, भेज दिया गया, सूचियाँ खोजी जा सकती हैं और सामग्री देखी जा सकती है। 30 संदेश तक संग्रह कर सकते हैं।	सूची > संदेश > इनबॉक्स
1234 सर्विसेस	एसएमएस के द्वारा उपलब्ध सर्विस जैसे News (न्यूज) Joke (जोक्स) Horoscope (मविष्यफल) आदि भी रिलायंस के सभी उपभोक्ताओं को उपलब्ध है।	सूची > संदेश > 1234 सर्विसेस (देखें पेज 16)

सूची	विवरण	चुनें
आउटबॉक्स	आउटबॉक्स में 30 संदेश तक संग्रह कर सकते हैं.	सूची > संदेश > आउटबॉक्स
वॉइस मेल	आप यहाँ वॉइस मेल बॉक्स में रिकार्ड हुये नये वॉइस संदेश को देख सकते हैं	सूची > संदेश > वॉइस मेल
संग्रह	संग्रह में आप अपने संदेशों को किसी अलग फोल्डर में संग्रहित कर सकते हैं. 30 संदेश तक संग्रहित कर सकते हैं.	सूची > संदेश > संग्रह
ड्राफ्ट्स	संदेश लिखते समय उपयोगकर्ता को कोई कॉल आने से व्यवधान उत्पन्न होने पर स्वचालित रूप से संदेश यहाँ संग्रहित किये जाते हैं. 30 संदेश तक संग्रहित कर सकते हैं.	सूची > संदेश > ड्राफ्ट्स
टेम्पलेट्स	टेम्पलेट्स में 10 पूर्वनिर्धारित वाक्यांश शामिल हैं. आप 20 टेम्पलेट्स और जोड़ सकते हैं.	सूची > संदेश > टेम्पलेट्स
संदेश गुप्स	संदेश गुप्स में पाँच 5 एसएमएस/ई-मेल गुप्स है. आप प्रत्येक गुप में 10 सदस्य तक जोड़ सकते हैं.	सूची > संदेश > संदेश गुप्स
संदेश मिटाएँ	आप सभी संदेश बॉक्सों में से संदेशों को मिटा सकते हैं.	सूची > संदेश > संदेश मिटाएँ
संदेश सेटिंग्स	नये आने वाले संदेशों के लिये संदेश सेटिंग्स की जा सकती है.	सूची > संदेश > संदेश सेटिंग्स

सूची	विवरण	चुनें
छूटी हुई	आप यहाँ छूटी हुई कॉल्स का विवरण देख सकते हैं. अधिकतम 60 नंबर (छूटी हुई, प्राप्त, डायल किये गये, कॉल मेमो में) तक संग्रहित किये जा सकते हैं.	सूची > कॉल विवरण > छूटी हुई
प्राप्त	आप यहाँ प्राप्त हुई कॉल्स का विवरण देख सकते हैं. अधिकतम 60 नंबर (छूटी हुई, प्राप्त, डायल किये गये, कॉल मेमो में) तक संग्रहित किये जा सकते हैं.	सूची > कॉल विवरण > प्राप्त
डायल किये गये	आप यहाँ डायल किये हुए कॉल्स का विवरण देख सकते हैं. अधिकतम 60 नंबर (छूटी हुई, प्राप्त, डायल किये गये, कॉल मेमो में) तक संग्रहित किये जा सकते हैं.	सूची > कॉल विवरण > डायल किये गये
कॉल मेमो में	आप यहाँ कॉल के दौरान सुरक्षित किये गये नंबर देख सकते हैं (अधिकतम 5 नंबर तक संग्रहित किये जा सकते हैं).	सूची > कॉल विवरण > कॉल मेमो में
कॉल अवधि	प्राप्त और डायल किये हुए सभी कॉल्स या अंतिम कॉल की समय अवधि आप यहाँ देख सकते हैं. समय काउंटर को रिसेट भी कर सकते हैं.	सूची > कॉल विवरण > कॉल अवधि
विवरण मिटाएँ	तीनो कॉल विवरण के विषय मिटा सकते हैं.	सूची > कॉल विवरण > विवरण मिटाएँ
प्रोफाइल्स	प्रोफाइल्स से आप अपने परिवेश के अनुसार फोन की आवाज सेट कर सकते हैं। प्रोफाइल्स सूची में आपके फोन के रिंग प्रकार, रिंग स्वर, रिंगर वॉल्यूम, इयरपीस वॉल्यूम, बटन वॉल्यूम, और संदेश सचेतक के लिए सेटिंग्स होती हैं.	सूची > प्रोफाइल्स > <ol style="list-style-type: none"> 1. सिर्फ कंपन/ 2. Silent / 3. General / 4. Outdoor / 5. हेडसेट / 6. कारकिट

सूची	विवरण	चुनें
भाषा	अपनी जरूरत के अनुसार भाषा का चुनाव करें। English या हिन्दी में से चुनें।	सूची > प्रदर्शन > भाषा
सर्विस एरिया	यह आपको वर्तमान का सर्विस एरिया बताता है।	सूची > प्रदर्शन > सर्विस एरिया
घड़ी	अपने मोबाइल फोन में प्रदर्शिन के लिये घड़ी चुनें।	सूची > प्रदर्शन > घड़ी
वॉलपेपर	उन वर्णों की स्ट्रिंग डालें जो आप प्रदर्शित करना चाहते हैं। आप आइडल स्थिति में प्रदर्शन के लिए LCD स्क्रीन प्रदर्शन चुन सकते हैं। (3 इमेजों में से चुन सकते हैं)	सूची > प्रदर्शन > वॉलपेपर
स्क्रीन सुरक्षा	सेट किये गये समय अंतराल तक अगर फोन फंक्शन में नहीं होता है तो स्क्रीन सुरक्षा सक्रिय हो जाती है। किसी भी बटन को दबाकर स्क्रीन सुरक्षा निष्क्रिय कर सकते हैं।	सूची > प्रदर्शन > स्क्रीन सुरक्षा
सूची स्टाइल	आप सूची की स्टाइल चुन सकते हैं।	सूची > प्रदर्शन > सूची स्टाइल
रिदमिक लाईटिंग	कॉल आते समय के लिये आप पैटर्न चुन सकते हैं।	सूची > प्रदर्शन > रिदमिक लाईटिंग

सूची	विवरण	चुनें
स्क्रीन लाइट	इससे आप LCD और बटन पैड की बैकलाइट की सेटिंग्स चुन सकते हैं.	सूची > प्रदर्शन > स्क्रीन लाइट
वैषम्य	नेविगेशन बटन से, आप सबसे चमकदार से कम चमकदार के स्केल पर वैषम्य सेटिंग चुन सकते हैं.	सूची > प्रदर्शन > वैषम्य
मेरी सूची	इससे आप मेरी सूची को अनुकूलित कर अपनी पसंद की सूची चुन सकते हैं.	सूची > सेटिंग्स > मेरी सूची
कॉल फॉरवर्ड	कॉल फॉरवर्ड से आप सभी आने वाली कॉल, अन्य नंबर या वॉइस मेल कनेक्शन पर फॉरवर्ड कर सकते हैं.	सूची > सेटिंग्स > कॉल > कॉल फॉरवर्ड
कॉल प्रतीक्षा	जब कोई कॉल चल रही हो तो आपको आने वाली दूसरी कॉल का संकेत करने वाली दो बीप सुनाई पड़ सकती है. कॉल प्रतीक्षा के सक्रिय होने पर, चल रहे कॉल को होल्ड पर रखकर आप आने वाले दूसरी कॉल का उत्तर दे सकते हैं.	सूची > सेटिंग्स > कॉल > कॉल प्रतीक्षा
किसी बटन से उत्तर	जब फोन की घंटी बजे, तो उत्तर देने के लिए  के अलावा कोई भी बटन दबाएँ.	सूची > सेटिंग्स > कॉल > किसी बटन से उत्तर
स्वतः रिडायल	कॉल करने की कोशिश असफल होने पर अपने आप नंबर रिडायल करने के पहले फोन की प्रतीक्षा अवधि सेट करें.	सूची > सेटिंग्स > कॉल > स्वतः रिडायल

सूची	विवरण	चुनें
वॉइस प्राइवैसी	CDMA कॉल के लिये मानक या बढ़ा हुआ वॉइस प्राइवैसी सुविधा चुनें.	सूची > सेटिंग्स > कॉल > वॉइस प्राइवैसी
साफ वॉइस	यह ऑडियो AGC (ऑटो गेन कंट्रोल) सिस्टम प्रणाली को ऑन/ऑफ करता है.	सूची > सेटिंग्स > कॉल > साफ वॉइस
कॉल समयक	जब कोई कॉल चल रहा हो तो उसमें लगा समय प्रदर्शित करने के लिये आप अपना फोन सेट कर सकते हैं.	सूची > सेटिंग्स > कॉल > कॉल समयक
कॉल संपर्क सचेतक	यह फंक्शन कॉल संपर्क स्थापित हो जाने पर आपको सचेत करता है.	सूची > सेटिंग्स > कॉल > कॉल संपर्क सचेतक
बटन रक्षक	इससे आप फोन के बटन पैड की सुरक्षा कर सकते हैं ताकि गलती से कोई नंबर डायल न हो.	सूची > सेटिंग्स > फोन > बटन रक्षक
एयर प्लेन मोड	जब आपका फोन एयर प्लेन मोड में होता है, तब इससे न तो कोई कॉल किया जा सकता है, न प्राप्त किया जा सकता है और न ही ऑनलाइन जानकारी तक पहुँचा जा सकता है.	सूची > सेटिंग्स > फोन > एयर प्लेन मोड
NAM सेट करें	फोन का NAM (नंबर असाइनमेंट मॉड्यूल) चुनें.	सूची > सेटिंग्स > फोन > NAM सेट करें
सर्विस सचेतक	सर्विस बदलने पर आपको सूचित करता है.	सूची > सेटिंग्स > फोन > सर्विस सचेतक
वर्शन	S/W और PRL वर्शन देखें.	सूची > सेटिंग्स > फोन > वर्शन

सूची	विवरण	चुनें
लॉक मोड	यह आपके फोन को अनाधिकृत उपयोग से सुरक्षित रखता है. (पूर्वनियत लॉक कोड 0000 है).	सूची > सेटिंग्स > सुरक्षा > लॉक मोड
आपातकालीन नंबर	आपका फोन लॉक अथवा प्रतिबंधित होने पर भी आप 100, 101, 102 नंबरों पर कॉल कर सकते हैं.	सूची > सेटिंग्स > सुरक्षा > आपातकालीन नंबर
लॉक कोड बदलें	नये लॉक कोड के लिये आप नया चार अंकों का लॉक कोड नंबर लिख सकते हैं.	सूची > सेटिंग्स > सुरक्षा > लॉक कोड बदलें
मेमोरी मिटाएँ	फोनबुक में संग्रहित सभी जानकारी या सभी डाटा मिटाएँ और वापस पूर्वनियत सेटिंग पर जा सकते हैं.	सूची > सेटिंग्स > सुरक्षा > मेमोरी मिटाएँ
पूर्व नियत पुनः सेट करें	आप कुछ सेटिंग्स को रिसेट करके पूर्वनियत सेटिंग पर जा सकते हैं.	सूची > सेटिंग्स > सुरक्षा > पूर्व नियत पुनः सेट करें
टाईम मैनेजर	अपने कार्यक्रम इसमें संग्रहीत कर दें और आपका फोन आपके नियत समय के बारे में आपको सतर्क कर देगा. 160 संदेश तक संग्रहित कर सकते हैं.	सूची > ऑर्गनाइज़र > टाईम मैनेजर
मेमो	इसमें 40 मेमो सुरक्षित किए जा सकते हैं.	सूची > ऑर्गनाइज़र > मेमो
अलार्म	किसी कार्य का अलार्म समय बदलने के लिए.	सूची > ऑर्गनाइज़र > अलार्म

सूची	विवरण	चुनें
स्टॉप वॉच	स्टॉप वॉच से आप समय सीमा और समय का अंतराल या लैप समय देख सकते हैं।	सूची > ऑर्गनाइज़र > स्टॉप वॉच
कैलक्युलेटर	यह सरल गणितीय गणना करता है।	सूची > ऑर्गनाइज़र > कैलक्युलेटर
नोट रुपान्तरक	करेन्सी कन्वर्ट कर सकने से पहले, आपको कोई आधार करेन्सी चुननी होती है (आमतौर पर आपकी घरेलु करेन्सी) और विनिमय दर देनी होती है।	सूची > ऑर्गनाइज़र > नोट रुपान्तरक
विश्व घड़ी	यह वर्तमान समय निर्धारित करती है जब कि आप किसी दूसरे टाइम जोन या देश में होते हैं।	सूची > ऑर्गनाइज़र > विश्व घड़ी
R-सूची	यह आपको R वर्ल्ड डेटा सर्विसेस जैसे रिंग स्वर, क्रिकेट, डेटिंग, न्यूज, भविष्यफल, शहर और टीवी गाइड, और दूसरी कई सर्विस प्रदाता द्वारा उपलब्ध करायी गयी सर्विसेस से जोड़ता है।	सूची > R वर्ल्ड > R-सूची
गेम्स (टिज़ी जम्प)	यह एक रस्सा कुदाने का गेम है जिसमें बिना रस्से को छुएँ कुदाना होता है। बटनो की जानकारी देखें।	सूची > R वर्ल्ड > गेम्स > टिज़ी जम्प
गेम्स (स्टोन एक्स)	इस गेम में शत्रुओं को कुल्हाड़ी से मारना होता है। बटनों की जानकारी देखें।	सूची > R वर्ल्ड > गेम्स > स्टोन एक्स

सूची	विवरण	चुनें
गेम सेटिंग्स	आप गेम की ध्वनि वॉल्यूम सेट कर सकते हैं और स्क्रीन लाइट चालू या बंद कर सकते हैं.	सूची > R वर्ल्ड > गेम्स > गेम सेटिंग्स
R-सूची रीसेट	आप R-सूची को रीसेट कर सकते हैं.	सूची > R वर्ल्ड > R-सूची रीसेट

कॉल के दौरान उपयोग होने वाले फंक्शन

कॉल मेमो में	इससे आप कॉल के दौरान अन्य व्यक्ति द्वारा दिया जाने वाला फोन नंबर नोट कर सकते हैं. अधिकतम 5 नंबर संग्रहित किये जा सकते हैं.	कॉल के दौरान: सूची 1
मौन/मौन नहीं	यह फंक्शन आपके फोन का माइक्रोफोन लॉक कर देता है और दूसरे व्यक्ति तक आपकी आवाज़ नहीं पहुँचने देता.	कॉल के दौरान: सूची 2
कॉल वॉल्यूम	इससे आप कॉल के दौरान इयरपीस वॉल्यूम समायोजित कर सकते हैं.	कॉल के दौरान: सूची 3
वॉइस प्राइवैसी ऑन/ऑफ	CDMA कॉल के लिये मानक या बढ़ा हुआ के रूप में प्राइवैसी सुविधा सेट करें CDMA में वॉइस प्राइवैसी सुविधा है.	कॉल के दौरान: सूची 4

सुरक्षा जानकारी

इन सरल दिशानिर्देशों को पढ़ें, नियमों का उल्लंघन खतरनाक या अवैधानिक हो सकता है। इस उपभेक्ता मार्गदर्शिका को हमेशा आसान पढ़ें वाली जगह पर रखें।

चार्जर एवं एडाप्टर सुरक्षा

- चार्जर एवं एडाप्टर सिर्फ इनडोर उपयोग के लिए है।

बैटरी की जानकारी एवं देखभाल

- कृपया अपनी बैटरी को ठीक से नष्ट करें।
- अपने LG फोन के मॉडल के लिए उपयुक्त बैटरी और चार्जर का ही उपयोग करें LG के चार्जर बैटरी की आयु बढ़ाते हैं।
- बैटरी को न तो खोलें और न ही शॉर्ट सर्किट करें।
- बैटरी के धातु के सिरे साफ रखें।
- यदि बैटरी को बहुत समय से उपयोग नहीं किया गया हो तो उसकी आयु बढ़ाने के लिए उसे फिर से चार्ज करें।
- बैटरी की लार्इफ उसे इस्तमाल करने के ढंग पर निर्भर करती है।
- अगर फोन असाधारण रूप से काम करने लगता है, तो बैटरी का सेल्फ-प्रोटेक्शन फंक्शन फोन का पॉवर बंद कर देता है। ऐसी स्थिति में फोन से बैटरी निकाल कर पुनः लगाएँ और फोन को चालू करें।

सामान्य नोटिस

- क्षतिग्रस्त बैटरी का उपयोग करने का बैटरी को मुँह में रखने से गंभीर चोट लग सकती है।
- चुंबकीय घटकों वाली चीजें जैसे क्रेडिट कार्ड, फोन कार्ड, बैंक बुक, या सबसे टिकट को फोन के पास न रखें। फोन का चुंबकत्व इनकी चुंबकीय रिट्रिप में

संग्रहीत डेटा को नुकसान पहुँचा सकता है।

- फोन पर लंबे समय तक बात करने से उपयोग के दौरान पैदा हुई ऊष्मा के कारण कॉल की गुणवत्ता कम हो सकती है।
- जब फोन का उपयोग लंबे समय तक नहीं हो, तो इसकी पावर कॉर्ड का प्लग निकाल कर इसे सुरक्षित जगह पर रखें।
- फोन को किसी भी रिसेटिंग उपकरण (जैसे टीवी या रेडियो) के पास उपयोग करने से फोन में व्यवधान आ सकता है।
- एंटीना क्षतिग्रस्त होने पर फोन का उपयोग न करें। यदि क्षतिग्रस्त एंटीना चमड़ी के त्वचा के संपर्क में आता है, तो इससे त्वचा थोड़ी जल सकती है। क्षतिग्रस्त एंटीना को बदलने के लिए कृपया अधिकृत LG सर्विस सेंटर से संपर्क करें।
- फोन को पानी में डुबाएँ नहीं। यदि ऐसा हो जाता है, तो इसे तुरंत बंद कर दें और बैटरी निकाल दें। यदि फोन काम नहीं करता है, तो इसे अधिकृत LG सर्विस सेंटर पर ले जाएँ।
- इस उत्पाद की पावर कॉर्ड का उपयोग करने पर आप लेड के संपर्क में आएँगे, जिसे कैलिफोर्निया राज्य में ऐसा रासायनिक तत्व माना जाता है जो कैंसर, प्रसव या अन्य प्रजनन संबंधी बाधाओं का कारण हो सकता है। इसे हाथ लगाने के बाद हाथ धोएँ।
- फोन पर रंग नहीं करें।
- असावधानीपूर्वक उपयोग किए जाने, फोन को सुधारने या सॉफ्टवेयर के अपग्रेडेशन के कारण आपके फोन में संग्रहीत डेटा हट सकता है। कृपया अपने महत्वपूर्ण फोन नंबरों का बैकअप रखें। (रिंग टोन, शब्द मैसैज, वॉइस मेल, चित्र और वीडियो भी हट सकते हैं।) डेटा की हानि के लिए निर्माता उत्तरदायी नहीं हैं।
- अपने फोन को कान में लगाते समय इसे ऑन या ऑफ नहीं करें।

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>