LG

Life's Good

www.LGUSA.com

CU500
Quick Start Guide

♫ Cingular Music

🔋 Transferring & Playing Music

3G Cingular Video

📷 Taking Pictures

▢ Multitasking

☺ Instant Messaging (IM)

Getting to Know Your Phone

Rotating Camera

Headset Jack

Volume Up/Down

Task Key

External Music Keys

Charging & USB Port

Jan 20 [Sat] 11:57pm
Menu   Options

Left Soft Key

Right Soft Key

Navigation Key

OK/Web Key

Cingular Music Key

Camera Key

Send Key

Power/End Key

Clear & Back Key

Microphone

Cingular Music

Your phone is a complete music experience from an integrated music player to music news, chat, and live radio. Even use your phone to identify recorded music when you're out and about.

MobiRadio

1. Press the 🎵 **Key**, then select **Radio (4)**.

Billboard Mobile

1. Press the 🎵 **Key**, then select **The Buzz (6)**.

MusicID

1. Press the 🎵 **Key**, then select **MusicID (3)**.

2. Select **ID song!**, then hold the phone up to the music source. MusicID will then analyze the tune and give you the song title.

Transferring Music

Listen to music on your phone.
Transfer your favorite tunes today!

1. You must convert your music to either .MP3, .AAC, or .AAC+ format using the media player of your choice.

2. Remove the battery and insert the microSD™ card* (gold contacts facing down) into the slot at the top of the phone.

3. Power on the phone and connect it to your PC using a USB data cable.*

4. When the Hardware Wizard pops up, click **Cancel**.

5. The PC recognizes the phone as a **Removable Disk** under **My Computer**. Open the folder where your music is stored and transfer your files by dragging and dropping them onto the **Removable Disk** icon.

6. When finished, press the **Right Soft Key** on the phone for **Exit** and disconnect the USB cable.

Note: The number of files you can store depends on the size and format options of the memory card.

*microSD card and USB data cable sold separately.

Requirement: Windows 2000 or later. Not compatible with Mac OS.

SanDisk 512MB microSD

Found New Hardware Wizard

Welcome to the Found New Hardware Wizard

This wizard helps you install software for:

LG Mobile USB Modem

If your hardware came with an installation CD or floppy disk, insert it now.

What do you want the wizard to do?

○ Install the software automatically (Recommended)
○ Install from a list or specific location (Advanced)

Click Next to continue.

< Back   Next >   Cancel

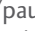**Warning!** Do not disconnect phone while file transfer is in progress.

Playing Music

To listen to music that you have transferred to your phone, follow these quick easy steps:

Playing Music with the Flip Open

1. Press the 🎵 **Key**, select **Music Player (1),** then **All Songs (1)** or **Playlists (2)**. Select a song or playlist.

2. Press ✕ to play/pause. Press **up** or **down** on the Navigation Key to change the volume, and **left** or **right** to go to the previous or next song.

3. Press the **Left Soft Key** for **Minimize** to access other phone functionality while music is playing.

Playing Music with the Flip Closed

1. Press and **hold** the ▶/❙❙ **Key**. Select **All Songs** or a playlist. Use the left side volume keys to scroll.

2. Press ▶/❙❙ to play/pause the music. Use the ◀◀ or ▶▶ keys to go to the previous or next song.

3. Press and **hold** the ▶/❙❙ **Key** to exit the music player.

Cingular Video

Cingular Video brings your phone to life. Watch news, sports, weather, and entertainment clips via Cingular's high-speed data network while on the go.

1. From standby mode, press the **Left Soft Key** for **Menu**.
2. Select **Cingular Video (6)**, then press ✕ to connect.
3. Once connected, select the program options you wish to view and press ✕.
4. Select the clip you want to play and press ✕.

Parental controls available.

The Sopranos
brought to you by **HBO mobile**

Taking Pictures

Capture everything around you in vivid detail via the 1.3 megapixel camera with video. Then share it instantly with friends via multimedia messaging.

1. To take a picture, press the 📷 **Key**.

2. Rotate the camera lens toward your subject. Press the volume keys to flip the viewfinder image.

3. Press **left** or **right** on the Navigation Key to adjust brightness and **up** or **down** for zoom*. Press the **Right Soft Key** to adjust image resolution, quality, self timer, or other options.

4. Press ✕ to take the picture.

5. To send your picture, press the **Left Soft Key**. Add text, then press ✕ to enter recipients. To choose a contact from the address book, press ✕. Press the **Left Soft Key** to send.

Note: To take a photo with the flip closed, press the **Task Key**. Scroll down with the volume keys to **Take Photo** and press ▶/❚❚.
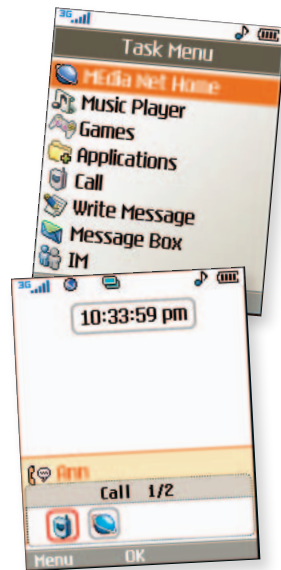
* Camera resolution of 1280 x 960 does not support zoom function.

Multitasking

Multitask simultaneously with voice and data—browse the web, make calls, play games, send and receive messages, and listen to music. All at once.

1. If you're involved in one task and want to launch another, press the **Task Key** (lower left side of phone), then press the **Left Soft Key** for **Menu**, select the task you want to launch, and press ✖.

2. To switch among multiple open tasks, just press the **Task Key** to display the task icon bar on the bottom of the screen, press **left** or **right** on the Navigation Key to select another task icon, and press ✖.

3. If you get a call while in another task (except playing music), you can accept the call, then return to the task while you're talking.

Instant Messaging

If you subscribe to an instant messaging (IM) service such as AOL®, MSN, Yahoo!®, or ICQ®, you can take the convenience and fun of IM on the go with your mobile phone.

1. From standby mode, press **right** on the Navigation Key to access IM.

2. Highlight the IM community you want to enter, select **Sign In/On**, and press ✖.

3. The first time you enter a community, enter your **Screen Name**/**ID** or **Email** and your **Password.** Check the **Auto Sign On/In** box to be automatically connected in the future. Press the **Left Soft Key** to **Sign In/On**.

4. Select a contact that is currently online and press ✖.

5. Enter your message and press ✖ twice to send. To end a chat, select **Option**, then **End Conversation**.

Note: When you receive an incoming instant message, a "new message" icon similar to this one 💬 will appear on the screen.

Optional Accessories

Accessories for productivity, convenience and fashion are available at *www.LGUSA.com.*

USB Data Cable

Bluetooth Headset

Portable Stereo Speakers

Stereo Headset

Bluetooth Speakerphone

Mobile Charger

Free Manuals Download Website

http://myh66.com

http://usermanuals.us

http://www.somanuals.com

http://www.4manuals.cc

http://www.manual-lib.com

http://www.404manual.com

http://www.luxmanual.com

http://aubethermostatmanual.com

Golf course search by state

http://golfingnear.com

Email search by domain

http://emailbydomain.com

Auto manuals search

http://auto.somanuals.com

TV manuals search

http://tv.somanuals.com