

LG-8 Keyboard Stand キーボードスタンド

Thank you for purchasing the LG-8 Keyboard Stand for the Yamaha Digital Synthesizer.

- Please use the Phillips screwdriver included with the stand for assembly.
- Be sure to tighten all screws securely.
- Note that there is a given direction in which the legs should be installed on the base plate. Make sure the "Front" edge of the base plate is facing forward, and the right (R) and left (L) legs are installed in the proper relation to the front edge.

Assembly Procedure

- ① After making sure the legs are arranged in the correct direction, set the base plate on the legs with the front edge facing forward, and secure the base plate with the four (short) screws.

CAUTION: As shown in the illustration, insert the stand screws from the bottom, pressing them upwards and tightening them once the base plate has been positioned.

- ② Fasten the name plate in place with the four (long) screws.
- ③ Set the synthesizer on the base plate. Align the holes on the bottom of the synthesizer with the screws provided on the stand.
- ④ Tighten the stand screws to secure the synthesizer in place.

このたびは、YAMAHA デジタルシンセサイザー用キーボードスタンドLG-8をお買い求めいただき、まことにありがとうございます。


- 組立には付属のプラスドライバーをお使いください。
- ネジは確実に締め付けてください。
- 脚と台座には、組立てる方向が決まっています。
L (左)、R (右)、□、Front (前)を確認し、間違えないように組み立ててください。

組立手順

- ①脚と台座の前後左右を確認して、脚の上に台座をのせて、4本のネジ(短)で台座を固定します。

注意：スタンド付属ネジを図のように上に押し上げ、台座の位置を決めてからネジ(短)を締めてください。

- ②ネームプレート(台座)を4本のネジ(長)で固定します。
- ③シンセサイザーを台座の上にのせます。
シンセサイザーの底にある固定用の穴とスタンド付属のネジをあわせします。
- ④スタンド付属のネジを締めて、シンセサイザーを固定します。

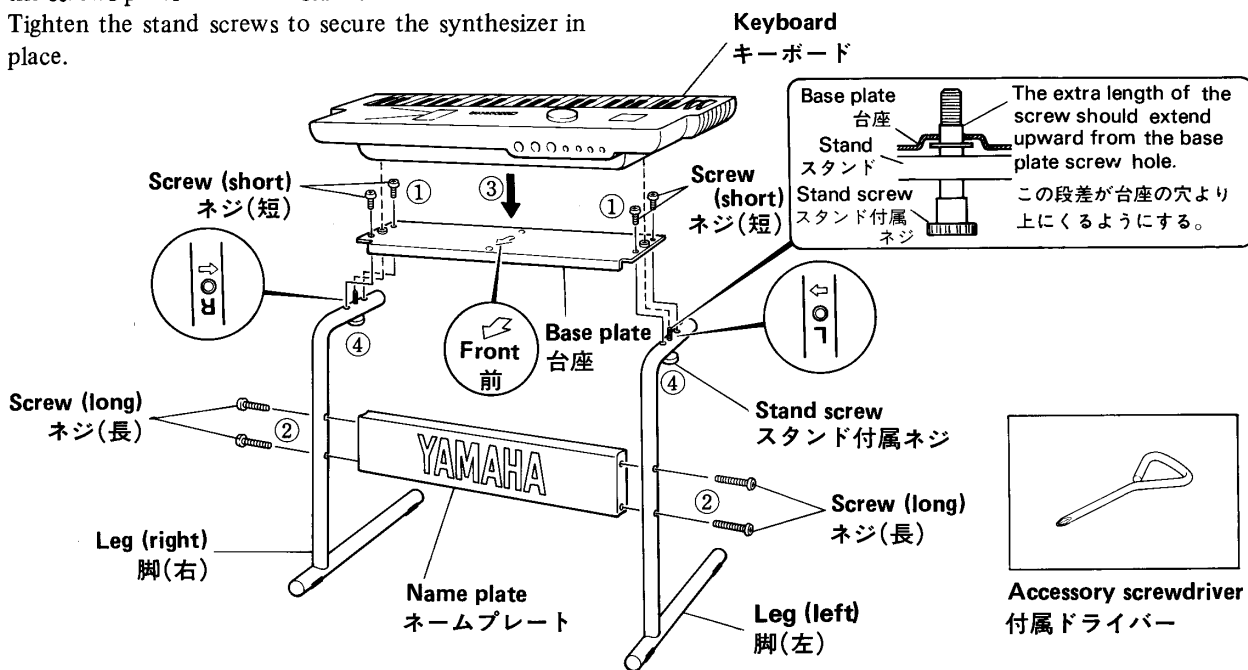

ヤマハ株式会社 LM事業本部

デジタル楽器事業部 〒430 浜松市中沢町10-1
TEL (0534)60-2445

YAMAHA 電気音響製品サービス拠点

(お客様ご相談窓口・お預り修理窓口)

東京電音サービスセンター 〒211 川崎市中原区木月1184
TEL (044)434-3100
新潟電音サービスステーション 〒950 新潟市万代1-4-8(シルバーホールビル2F)
TEL (025)243-4321
大阪電音サービスセンター 〒565 吹田市新芦屋下1-16(千里丘センター内)
TEL (06)877-5262
四国電音サービスステーション 〒760 高松市丸亀町8-7(ヤマハ高松店内)
TEL (0878)22-3045
名古屋電音サービスセンター 〒454 名古屋市中川区玉川町2-1-2
(ヤマハ名古屋流通センター3F)
TEL (052)652-2230

九州電音サービスセンター 〒812 福岡市博多区博多駅前2-11-4
TEL (092)472-2134

北海道電音サービスセンター 〒064 札幌市中央区南10条西1-4
(ヤマハセンター内)
TEL (011)513-5036

仙台電音サービスセンター 〒983 仙台市卸町5丁目-7(卸商共同配送センター3F)
TEL (022)236-0249

広島電音サービスセンター 〒731-01 広島市安佐南区祇園町西原2-27-39
TEL (082)874-3787

浜松電音サービスセンター 〒435 浜松市上西町911
TEL (0534)65-6711

本社
電音サービス部 〒435 浜松市上西町911
TEL (0534)65-1158

★住所及び電話番号は変更になる場合があります。

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>