

Stand Fan



First Use Safety Recommendation

Please read through this booklet for safe and efficient use of the appliance. We urge you to read the "Important Safeguards" section and also follow all detailed instructions even if you are familiar with a similar appliance.

Keep this guide handy for future reference.


FS1600

IMPORTANT SAFEGUARDS

When using electrical appliances, in order to reduce the risk of fire, electric shock, and/or injury to persons, basic safety precautions should be followed, including the following:

- Read all instructions carefully, even if you are familiar with the appliance.
- To protect against the risk of electric shock, DO NOT IMMERSER the appliance, cord set or plug in water or other liquids.
- To clean, wipe the exterior with a damp cloth.
- Close supervision is necessary when any appliance is used near children. Never leave an appliance unattended when in use.
- Switch off and remove the plug from the power outlet when not in use, before assembling or disassembling parts or during cleaning. Never pull the cord.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions, or is dropped or damaged in any manner. Return the complete appliance to your nearest authorised service facility for examination, electrical repair, mechanical repair or adjustment.
- The use of attachments or accessories not recommended or sold by this appliance manufacturer may result in fire, electric shock or personal injury.
- Do not let the cord hang over the edge of a table, counter, or touch hot surfaces.
- Avoid touching hot surfaces, use handles and knobs.
- Do not operate or place any part of this appliance on or near any hot surfaces (such as gas or electric burner or in a heated oven).
- Do not abuse the cord. Never carry the appliance by the cord or yank it to disconnect it from the outlet; instead, grasp the plug and pull to disconnect.
- When using an extension cord with your appliance, make sure the extension cord is correctly wired and rated for its use.
- This product is intended for household use only.
- Do not attempt to repair the appliance yourself; instead, take it to your Black & Decker-Owned or Authorised Service Centre for repair.
- Always route the cord carefully to avoid a tripping hazard.
- Do not allow children or any person unfamiliar with these instructions use this appliance.

SAVE THESE INSTRUCTIONS

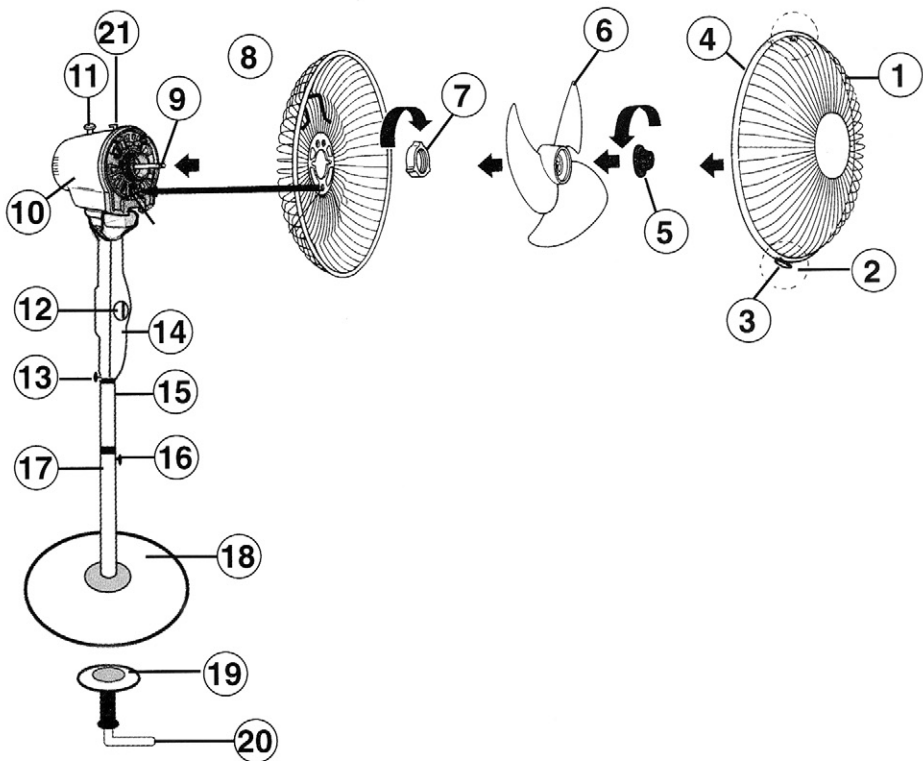

Parts Identification

- | | |
|------------------------------|----------------------------|
| 1. Front Guard | 12. Control panel |
| 2. Locking Screw | 13. Securing Screw |
| 3. Guard Securing Clip | 14. Switch Housing |
| 4. Guard ring | 15. Adjusting Tube |
| 5. Blade Cap | 16. Tighten / Loosen Screw |
| 6. Fan Blade | 17. Support tube |
| 7. Guard Lock Nut | 18. Base Plate |
| 8. Rear Guard | 19. Fixing Ring |
| 9. Motor Shaft | 20. L-Screw |
| 10. Main unit | 21. Handle |
| 11. Oscillation control knob | |

Your Pedestal Fan Features

1. Three step speed control for comfortable cooling air.
2. Horizontal sweep for large coverage air.
3. Easy Carry away Handle
4. Guard Securing clip for your safety.
5. 16" fan for better air circulation
6. Solid base for a stable support.

Intended Use :-


Your Black & Decker fan has been designed for indoor household use only.

Remove all the parts from the packaging material and keep them aside. Ensure that you have all the parts as identified in the part identification list else get in touch with your nearest Black & Decker service agent assistance.


Fitting and assembling:-

Make sure your fan is switched off before connecting to or disconnecting from power supply. Ensure that the voltage rating on the base plate corresponds to the main voltage at your home.

Assembling of Base and stand :

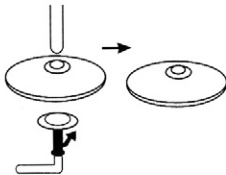


1. Rotate the screw in the anti-clockwise direction and remove it from the support tube.
2. Place the support tube onto the base and then install the fixing ring from the base plate. Tighten the screw in the clockwise direction.
3. To assemble the main unit, release a few inches of the adjustable tube by operating the screw
4. Fit the main unit on the adjustable tube and secure it in place by tightening the screw.

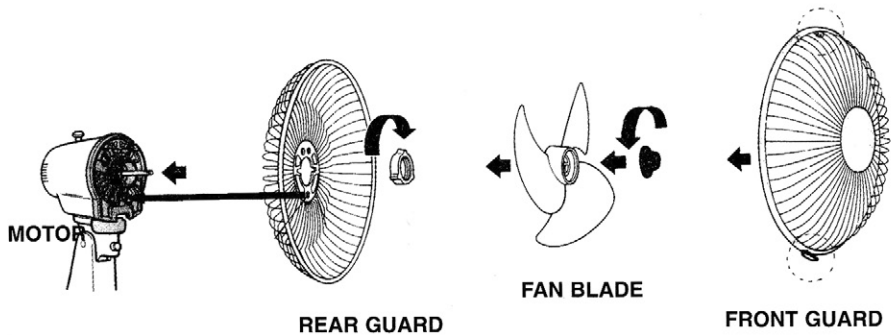

Assembly of the fan :-

1. To install the rear guard, remove the blade cap and guard nut from the motor shaft. Then attach the rear guard by positioning it on the location pins on the main unit. Secure the guard to the motor body by fastening the guard nut, turning it clockwise until the guard is locked into position.
2. Mount the fan blade onto the motor shaft. Fasten the blade cap by rotating it in the anti-clockwise direction until the blade is fixed firmly into place.
3. Open the securing clip at the bottom of the front guard and loosen the clip screw. Position the top clip on the uppermost part of the rear guard. Push the top clip down and press rim of the front guard onto the rear guard. Close the bottom clip and tighten the screw.

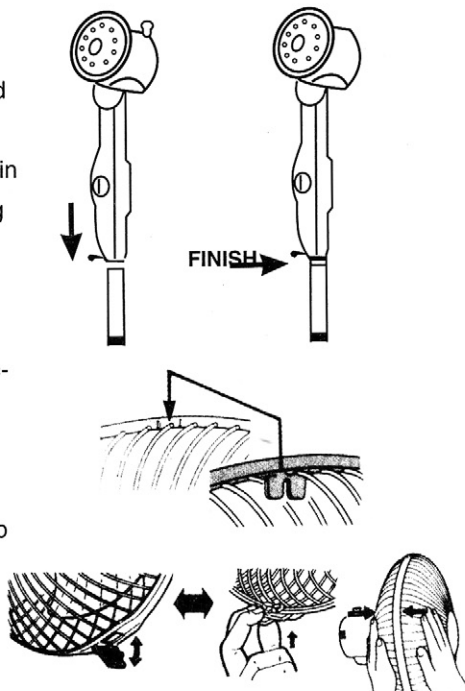

Operations :


Your Fan has three speed control to keep the desired air flow through your room

0-OFF

1-LOW



2-MEDIUM

3-HIGH

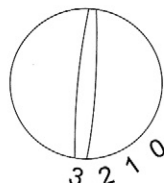

You can press the oscillating control knob down to make the fan oscillate to position the fan in specific direction pull the knob up .

The Fan guard can also be positioned vertically depending upon the direction of flow desired. For this Switch OFF the fan first, let the fan come to a halt, then with one hand hold the stand and with the other hand, move the guard assembly up or down depending upon the desired angle required. To make the fan oscillate, press the oscillation pin down. To make it stop oscillation, pull it up.


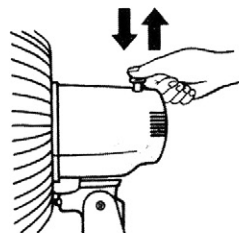
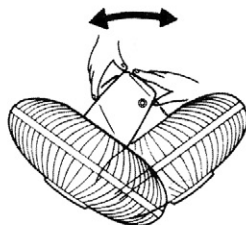



Warning !

- * Do not bring long hair or loose clothes near the fan, as they might get entangled in the fan.
- * Never use the fan without the guard in place or if the guard is damaged.

Some Do's and Don't

1. Do not touch moving parts
2. Always allow motor to stop before approaching the blades or changing any accessory.
3. Keep your fingers, long hair, loose clothes and supply cord away from moving parts
4. Never pull the power cord to disconnect the plug from the socket
5. Keep the power supply cord away from heat, oil and sharp edges
6. Do not place the appliance on or near heat source or in a heated oven
7. Do not use the appliance outdoors. Always protect the motor unit from water or excessive humidity
8. Operate the appliance only with dry hands
9. If the power supply cord is damaged during use, disconnect the appliance from the power supply immediately. Do not touch the power supply cord before disconnecting from the power supply.
10. When not in use, the appliance should be stored in a dry place. Children should not have access to stored appliances.
11. Do not cover the rear housing of the fan with any cloth or curtain.
12. Do not operate this unit in tropical climate or in areas where the temperature exceeds 40°C.

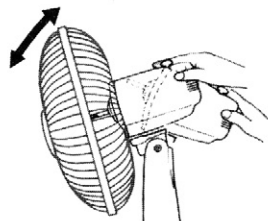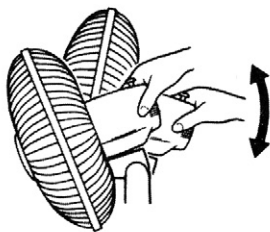

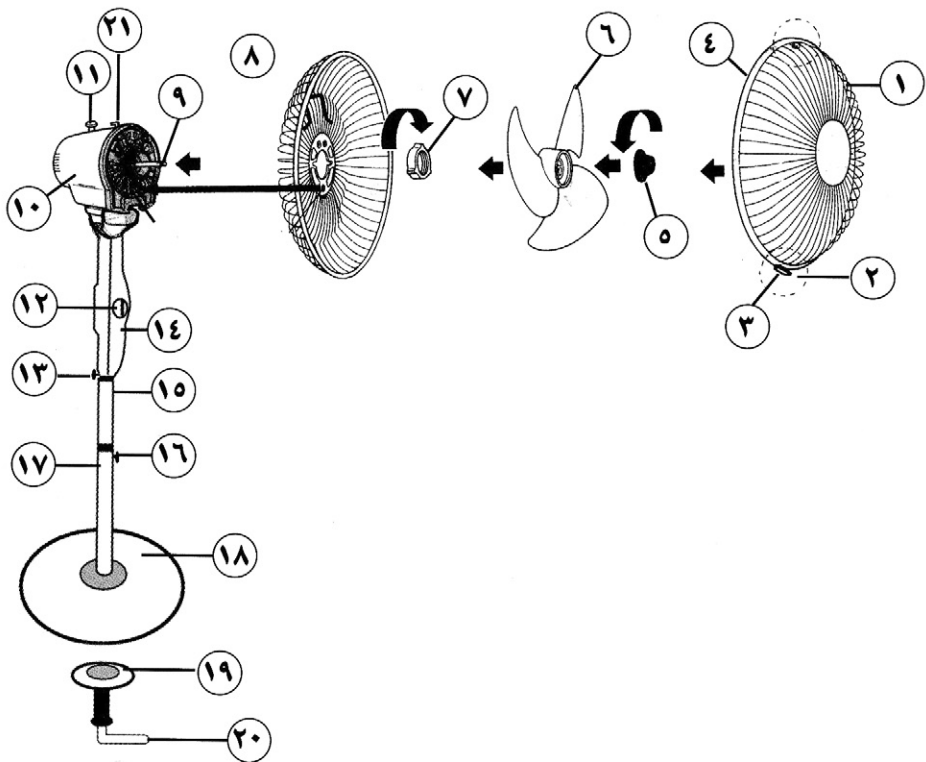

تعريف الأجزاء :

- | | |
|-------------------------|--------------------------------|
| ١٢. لوحة التحكم | ١. الواقي الأمامي |
| ١٣. مسمار أمان | ٢. مسمار إقفال |
| ١٤. غطاء المفتاح | ٣. مشبك الأمان للواقي |
| ١٥. أنبوب قابل للتعديل | ٤. حلقة الواقي |
| ١٦. برغي للشد/الفك | ٥. غطاء الشفرة |
| ١٧. أنبوب داعم | ٦. شفرة المروحة |
| ١٨. صفيحة القاعدة | ٧. صمولة قفل الواقي |
| ١٩. حلقة تثبيت | ٨. الواقي الخلفي |
| ٢٠. مسمار على شكل حرف ج | ٩. عمود المحرك |
| ٢١. مقبض | ١٠. الوحدة الرئيسية |
| | ١١. مقبض التحكم بطريقة الدوران |

مزايا المروحة القاعدية:

١. تحكم بالسرعة من ثلاث خطوات لهواء بارد منعش.
٢. حركة أفقية لشمول منطقة تبريد أكبر
٣. مقبض حمل سهل الاستخدام
٤. مشبك الأمان للواقى لسلامتك
٥. مروحة ١٦ بوصة لتوزيع الهواء على اكمل وجه
٦. قاعدة قوية لتدعيم ثابت


الاستخدامات:

تم تصميم مروحة بلاك أند ديكر للاستخدام المنزلي فقط.
انزع مواد التغليف عن جميع القطع واحتفظ بها جانباً. تأكد من وجود جميع الأجزاء المذكورة في قائمة تعريف الأجزاء، أو اتصل مع اقرب وكيل خدمات بلاك أند ديكر لتقديم المساعدة.


التجهيز والتركيب:

تأكد من إغلاق المروحة قبل توصيلها أو نزعها من مصدر الكهرباء. تأكد من أن الفولطية في صفيحة القاعدة متوافقة مع الفولطية الرئيسية في منزلك.


تركيب القاعدة والقائم :

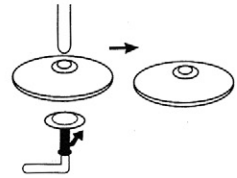


١. أدر المسمار باتجاه عكس عقارب الساعة وانزعها من أنبوب الدعم.
٢. أدخل أنبوب الدعم في القاعدة وقم بتركيب حلقة التثبيت من صفيحة القاعدة. ثبت المسمار باتجاه عقارب الساعة.
٣. لتركيب الوحدة الرئيسية، اترك عدة بوصات من الأنبوب القابل للتعديل باستخدام المسمار.
٤. ضع الوحدة الرئيسية في مكانها على الأنبوب القابل للتعديل وثبتها في مكانها بواسطة شد المسمار.

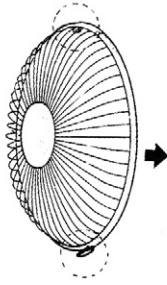

الواقى الأمامي

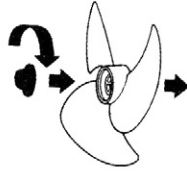

شفرة المروحة

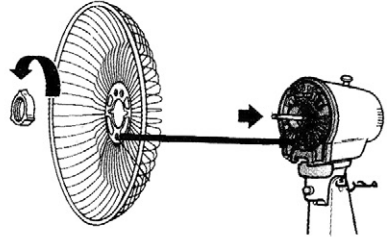





الواقى الخلفي

تركيب المروحة:

١. لتركيب الواقى الخلفي، انزع غطاء الشفرة وصمولة الواقى من عمود المحرك. ثم صل الواقى الخلفي بوضعه في مكانه المخصص في الوحدة الرئيسية. ثبت الواقى بجسم المحرك من خلال تثبيت صمولة الواقى، وقم بإدارته باتجاه عقارب الساعة حتى يثبت الواقى في مكانه.

٢. علق شفرة المروحة داخل عمود المحرك. وثبت غطاء الشفرة بإدارتها باتجاه عكس عقارب الساعة إلى أن تثبت الشفرة جيداً في مكانها.


٣. افتح مشبك الأمان الموجود اسفل الواقى الأمامي وحرر مسمار المشبك. ضع المشبك العلوي في الجزء الأعلى من الواقى الخلفي. اكبس المشبك العلوي للأسفل واضغط حافة الواقى الأمامي باتجاه الواقى الخلفي. اغلق المشبك السفلي وقم بشد المسامير.

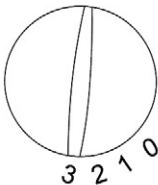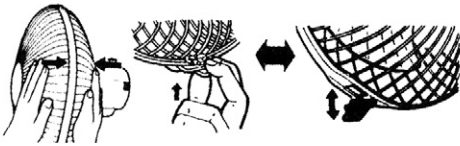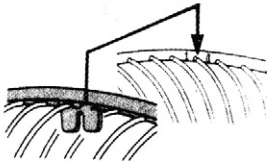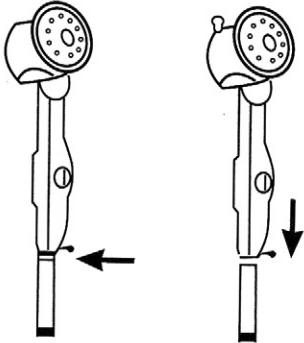


التشغيل:

تمتاز مروحتك بثلاث سرعات تحكم بتوزيع الهواء في أرجاء غرفتك:

- ٠ - إغلاق
- ١ - منخفض
- ٢ - متوسط
- ٣ - عالي

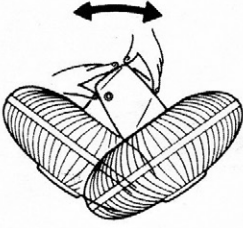

يمكنك كبس زر التحكم بطريقة الدوران لجعل المروحة تتحرك. ويمكن تثبيت موقع المروحة في الاتجاه المطلوب حالما يكون مسمار الدوران للأعلى. يمكن تثبيت مكان المروحة أيضاً بشكل عمودي بالاعتماد على اتجاه التدفق المطلوب. لعمل ذلك قم بإطفاء المروحة أولاً، دع المروحة تتوقف تماماً، وبعد ذلك امسك القائم بيد واحدة وحرك بالأخرى مجموعة الواقي للأعلى أو الأسفل بالاعتماد على الزاوية المطلوبة.

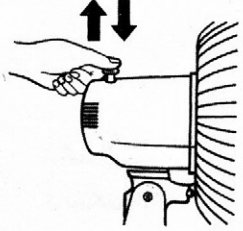


ولكي تتحكم بطريقة دوران المروحة، اضغط زر طريقة الدوران للأسفل. ولجعلها تتوقف عن الدوران اسحبها للأعلى.


تحذير!

- احذر ملامسة الشعر الطويل أو الملابس للمروحة، فقد تعلق بها.
- لا تستخدم المروحة بدون وجود الواقي في مكانه أو عند تلف الواقي.


بعض المحاذير والإرشادات:

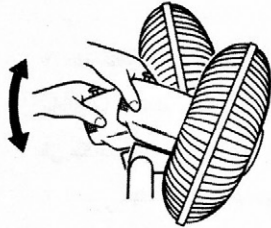

١. لا تلمس الأجزاء المتحركة.
٢. اسمح للمحرك دائماً بالتوقف قبل الاقتراب من الشفرات أو تبديل أي ملاحق.
٣. ابعد أصابعك، الشعر الطويل، الملابس والسلك الكهربائي عن الأجزاء المتحركة.

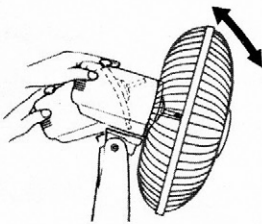

٤. لا تسحب السلك الكهربائي لفصل القابض من مأخذ الكهرباء.
٥. ابعد السلك الكهربائي عن الحرارة، الزيوت والأطراف الحادة.
٦. لا تستخدم الجهاز على أو بجانب أي مصدر حراري أو على موقد ساخن.
٧. لا تضع الجهاز في الخارج. وفر الحماية دائماً لوحدة المحرك من الماء أو الرطوبة الزائدة.

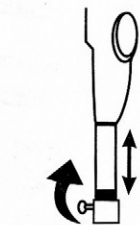

٨. شغل الجهاز باستخدام أيدي جافة.
٩. في حالة تلف السلك الكهربائي أثناء الاستخدام، افصل الجهاز من مصدر الكهرباء فوراً. لا تلمس السلك الكهربائي قبل فصل مصدر الطاقة.
١٠. في حالة عدم التشغيل، يجب حفظ الجهاز في مكان جاف. يجب حفظ الأجهزة بعيداً عن متناول الأطفال.
١١. لا تقم بتغطية الغطاء الخلفي من المروحة باستخدام أي قطعة قماش أو ستارة.
١٢. لا تقم بتشغيل هذه الوحدة في الأجواء الاستوائية أو المناطق التي تزيد درجة الحرارة فيها عن ٤٠ درجة مئوية.

ضمان شامل لمدة سنتين لأدوات BLACK & DECKER المنزلية

تمنح Black & Decker ضمان شامل مدته سنتين للمنتج اعتباراً من تاريخ الشراء، يسري الضمان علي عيوب التصنيع أو عيوب المواد الداخلة في التصنيع. في حالة إصابة المنتج بأي عطل زثناء فترة الضمان، فإن لشركة Black & Decker حرية الاختيار إما إصلاحه أو استبداله بدون أي تكلفة.

لا يغطي الضمان الأعطال الناتجة عن الحوادث، سوء الاستعمال، الإهمال، الاستعمال الخاطئ، أو عدم اتباع النظم المعمل بها؟
كذلك، لا تنطبق شروط الضمان إنا تمك صيانة أو تصليح المنتج لدي طرف غير معتمد من قبل شركة Black & Decker ، أو عند استخدام قطع غيار بدون الرجوع أو أخذ موافقة الشركة وتسببت هذه القطع في العطلل إذا توقف إنتاج أي طراز مع عدم وجود البديل المناسب، فإن لشركة Black & Decker الحرية في إصلاح المنتج أو استبداله بطراز آخر ذو نفس القيمة الشرائية.

إتمام عمالية الشراء

إملاً بظاقة تسجيل الضمان مع التأكد من وجود الختم الأصلي للوكيل المعتمد (وتوضيح تاريخ الشراء) ثم أرفق إيصال الشراء بالبطاقة. الرجاء الاحتفاظ بهما لإبرازهما في حالة المطالبة في المستقبل.

عملية المطالبة

خذ المكتج المعطل مع بطاقة الضمان وإيصال الشراء بنفسك إلي مركز الصيانة المحلي. أو يمكنك إرساله بالبريد. في حالة الإرسال بالبريد أو الشحن؛ تأكد من تفريغ المنتج من الماء كلياً وقم بتغليفه جيداً في صندوق كرتون مقوي مع إضافة مواد تغليف لملاً الفراغات لتفادي الإصابة بأي ضرر. أفق شرح موجز للمشكلة وتأكد من إعطاد اسمك وعنوان المراسلة صممت من أجل الاستعمال المحلي فقط.

BLACK & DECKER HOME APPLIANCE 2 YEAR WARRANTY

Black & Decker provides a 2 Year Warranty for this product from the date of purchase against defects due to defective materials or workmanship. Motor/element burn-outs due to voltage fluctuations are not covered under warranty. If the product should become defective within the warranty period, Black & Decker will repair or (at Black & Decker's discretion) replace it free of charge.

The warranty provisions do not cover failure due to accident, misuse, abuse, negligence or non observation of local regulations on the part of the user. Equally, the warranty provisions do not apply where the appliance has been serviced by a person not authorised by Black & Decker or serviced with non-approved parts and this has contributed to the fault of the product. Superseded models without a replacement equivalent will either be repaired or (at Black & Decker's discretion) replaced with another product of similar retail value.

UPON PURCHASE

Fill in the Warranty Registration Card with the original Authorised Dealer's stamp (indicating date of purchase) and attach your purchase receipt to it. Retain in case of claims in the future.

MAKING A CLAIM

Take your defective product together with the Warranty Registration Card & purchase receipt to your local service Centre. You can either do this in person or send it freight prepaid. If mailing or shipping your appliance, ensure and remove all the water and pack it carefully in a sturdy carton with enough packing material to prevent damage. Include a note describing the problem to the service Centre and be sure to give your return address.

DESIGNED FOR DOMESTIC PURPOSES ONLY.

Names & Addresses of Black & Decker Houseware Service Concessionaires

Afghanistan - Ishan National Company, Opp. Ministry of Justice, Kabul. **Tel.:**+932-2101727 **Algeria** - SARL Outillage Corporation, 04 Route De Dely Brahim Cheraga, Alger. **Tel.:**+21321-364363/508 **Fax:**+21321-369667. **Bahrain** - Fawaz Al Zayani, P.O.Box 26563, Adliya, Manama **Tel.:**+973-715252/712756 **Fax:**+973-713789. **Bangladesh** - Ultra Corporation, 8, Kushol Centre, Uttara, Dhaka - 1230. **Tel.:**+8802-8919272/9756 Ext.28 **Fax:**+8802-9887167. **Egypt** - Anasia Egypt for Trading S. A. E. P.O. Box: 2443, 110 Mostafa Refaat St, Sheraton, Heliopolis 11361, Cairo. **Tel.:**+202-2684159 **Fax:**+202-2684169. **Ethiopia** - Tewfik Sherif & Co. Ltd., P.O. Box 5583, Debre Zeit Road, Addis Ababa. **Tel.:**+25111-651700/601 **Fax:**+2511-650570. **India** - Gryphon Impex Pvt. Ltd., D-6/4, Okhla Industrial Area, Phase - I, New Delhi-110020. **Tel.:**+9111-26372602-4 **Fax:**+9111-26372601. **Iran - Tehran** - Service Centre of Iran, No 510, South Karger Ave, Below Pasteur Sq. Tehran. **Tel.:**+9821-6490608/0656/6407672 **Iran - Kish Island** - Cayhan Electric Co., No. 69, Paradise Shopping Centre, Kish Island. **Tel./Fax:**+98-76444-22894. **Jordan** - Bashiti Hardware, P.O. Box 1564, TLA Ali , Amman. **Tel.:**+9626-5350009/4770741 **Fax:**+9626-5350012/4789783. **Kenya** - Zylong Enterprises, IPS Building, Kaunda Street, P.O.Box 40877, Nairobi. **Tel.:**+2542-338188/199 **Fax:**+2542-330642. **Kuwait** - Al Omar Technical Co., P.O. Box 4062, 13041 Safat, Kuwait. **Tel.:**+965-4848595/0039 **Fax:**+965-4845652. **Lebanon** - Est. F. A. Kettaneh SA, P.O.Box 110242, Dora Highway, Kettaneh Building, Beirut. **Tel.:**+9611-255860/6 **Fax:**+9611-255891. **Libya** - El Ghoul Brothers, P.O.Box 348, Islamic Call Bldg. Office 201-202, Benghazi. **Tel.:**+21861-9097681/4183 **Fax:**+21861-9094123. **Madagascar** - Group Tana Confort S. A. R. L., B. P. 1770, Antananarivo. **Tel.:**+26120-2264505 **Fax:**+26120-2264244. **Malta** - John G. Cassar Ltd., 36 Victory Str, Qormi QRM 06, Malta. **Tel.:**+35621-493251 **Fax:**+35621-483231. **Mauritius** - Happy World Marketing Ltd., Block 2, Industrial Estate, Coromandel, P.O. Box 429, Port Louis. **Tel.:**+230-2076700 **Fax:**+230-2337330/7400. **Nepal** - Universal Trading Centre, P.O. Box 1947, Tripureswor, Kathmandu. **Tel.:**+9771-262192/260587/7785 **Fax:**+9771-261154. **Nigeria** - Amin Bros. Eng. Co. Ltd., 30A (Plot 1291), Akin Adesola Street, Victoria Island, Lagos. **Tel.:**+2341-3201778 **Fax:**+2341-2613667. **Oman** - OMASCO, P.O. Box 2734, Ruwi, Muscat. **Tel.:**+968-560232 **Fax:**+968-560255 **Pakistan - Lahore** - Electronics Inn. 212-G Raja Centre, Main Market, Gulberg, Lahore. **Tel.:**+9242-5756750. **Philippines** - Modern House International Enterprises, 213 Rizal Ave. Extension, between 2nd and 3rd Ave. Extension, between 2nd and 3rd Ave. Kalookan City. **Tel.:**+632-3664487 **Fax:**+632-3664489. **Qatar** - Al Mufftah Trading & Cont., P.O. Box 875, Doha. **Tel.:**+974-4650880/4466868 **Fax:**+974-4441415. **Saudi Arabia - Dammam** - Ebrahim Fawaz Al Zayani, P.O. Box 76026, Al Raka, Dammam. **Tel.:**+9663-8140914 **Fax:**+9663-8140824. **Jeddah** - Anasia, P.O. Box 50959, Jeddah - 21477. **Tel.:**+9662-6710014 **Fax:**+9662-6725929. **Jeddah** - EAC (Al Yousof), P.O. Box 50959, Jeddah-21477. **Tel.:**+9662-6519912 **Fax:**+9662-6511153. **Madina** - Garziz Trad. for Bldg. Mat. & Decor., P.O. Box 30377, Jeddah-21477. **Tel.:**+9664-8261490/8227636 **Fax:**+9664-8265741. **Riyadh** - Anasia, P.O. Box 76026, Al Raka, Dammam. **Tel.:**+9662-6710014 **Fax:**+9662-6725929. **Yanbu** - Bin Afif, P. O. Box 530 Yanbu, Al Bahr. **Tel.:**+9664-3222626/8867 **Fax:**+9664-3222210. **Sri Lanka** - Delmege General Equip. Pvt. Ltd., 297, No. 428/1AT. B., Jaya Mawatha (Darley Road), Colombo-10. **Tel.:**+9411-2665914 **Fax:**+9401-2665915. **Sudan** - United Distribution Company, Sayed Addel Rehman Street, P. O. Box 325, Khartoum. **Tel.:**+24911-772612/777296 **Fax:**+24911-770919. **Tanzania** - General Motors Investment, 14 Vingunguti Nyerere Road, P.O Box 16541, Dar Es Salaam. **Tel.:**+25522-2862661/5022 **Fax:**+25522-2862667/5412/3. **Tunisia** - SFax - Techni-Sud, 68, Rue d'Algerie, Sfax. **Tel.:**+2164-226335. **UAE - Abu Dhabi** - Light House Electric., P.O.Box 120, Abu Dhabi. **Tel.:**+9712-6726131 **Fax:**+9712-6720667. **Dubai** - Black & Decker (O) A.G., P.O. Box 5420, Dubai. **Tel.:**+9714-7028234/233 **Fax:**+9714-2822765. **Dubai** - Ideal Machinery & Equipmt. R. Workshop, P.O.Box 37116, Al Quoz, Dubai. **Tel.:**+9714-3474160 **Fax:**+9714-3474157. **Sharjah** - McCoy Middle East LLC, P.O. Box 20228, Sharjah. **Tel.:**+9716-5336321 **Fax:**+9716-5336320. **Uganda** - The Building Centre, Kitgum House, 52 Station Road, P.O. Box. 7436, Kampala. **Tel.:**+25641-234567 **Fax:**+25641-236413. **Yemen - Aden** - METCO Ltd. Mulla Dakka, Aden. **Tel.:**+9672-240950 **Fax:**+9672-240952. **Sana'a** - METCO Ltd., P.O.Box 12363, Hayel Street, Sana'a. **Tel.:**+9671-204201 **Fax:**+9671-204204. **Taiz** - METCO Ltd. Campa Area, Near Al Kair Mosque. **Tel.:**+9674-231610/232033 **Fax:**+9674-219869. **Zimbabwe** - J.D.Distributors, P.O. Box 226, 17 Bessemer Road, Graniteside, Harare. **Tel.:**+2634-753913/4/5/6/7 **Fax:**+2634-753918.



WARRANTY REGISTRATION CARD

YOUR NAME / الاسم _____

YOUR ADDRESS / العنوان _____

POSTCODE / الرمز البريدي _____

DATE OF PURCHASE / تاريخ الشراء _____

DEALER'S NAME & ADDRESS / اسم وعنوان البائع _____

PRODUCT MODEL NO. **FS1600**

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>