


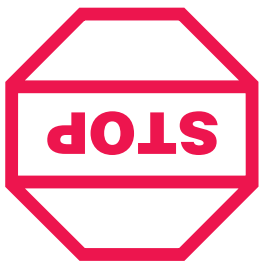

...can save a life!

# GROUND FAULT CIRCUT INTERRUPTERS

This message about...



ligero

## Secador Iónico



# CONAIR®

Manual de instrucciones/  
Guía de modelado

Modelo 227

IB-7475

\*GFCI is a sensitive device which reacts immediately to a small electric current leak by stopping the electricity flow.

A GFCI can save your life! Compared to that, the price is small! Don't wait...install one now!



“off.” A regular fuse or circuit breaker won't protect you under these circumstances. A GFCI offers you far greater protection.

While it's plugged in, the electric shock can kill water don't mix. If your hair dryer falls into water

**WHY DO YOU NEED A GFCI?** Electricity and vacuum cleaner. The outer surface of the dryer with a small brush attachment or a damaged opening and clean dust and lint from air intake openings cleaning is needed, unplug the cord, allow to cool lubrication is needed. For proper operating performance, the dryer must be kept clean. When plugged into the electrical outlet or a permanent unit installed by your electrician. The National Electrical Code now requires GFCI's in the bath-rooms, garages, and outdoor outlets of all new homes.

**IF YOU MUST USE YOUR HAIR DRYER IN THE BATHROOM, INSTALL A GFCI NOW!**

Línea Gratis de Asistencia

Llame al: 1-800-3-CONAIR  
O visite nuestro sitio en Internet:  
<http://www.conair.com>

Para más información sobre los productos de Conair

**CENTRO DE SERVICIO CONAIR CORPORATION**  
Service Department  
7475 N. Glen Harbor Blvd.  
Glendale, AZ 85307  
©2007 CONAIR CORPORATION  
07NP030

Blocked or clogged air intake vents will cause the dryer to overheat. If overheating occurs, an automatic safety device will shut the dryer or the heat off to prevent damage or personal injury. If the unit or the heat cycles off, safe, dry location, out of reach of children. Do not wrap line cord around dryer. Allow the cord to hang or lie loose and straight at the point of entry into the dryer.

10 to 15 minutes before restarting. Make sure the air vents are clean.

## USER MAINTENANCE

NEVER allow the power supply cord to be pulled, twisted, or severely bent. Never wrap the cord tightly around the dryer. Damage will occur at the high flex point of entry into the dryer, causing it to rupture and short. Inspect the cord frequently for damage. Stop use immediately if damage is visible or unit stops or operates intermittently.

If the cord or dryer is damaged or does not operate properly, return it for repair to an authorized Conair service representative only. No repairs should be attempted by the consumer.

### CAUTION

### GARANTÍA LIMITADA POR DOS AÑOS

Conair reparará o reemplazará (a su opción) su aparato sin cargo por un período de 24 meses a partir de la fecha de compra si presenta defectos de mano de obra o en los materiales.

Para obtener servicio técnico bajo esta garantía, lleve o mande su aparato al Centro de Servicio más cercano, junto con su recibo de compra y un cheque de \$5,00US por gastos de envío y de manejo. Los residentes de California sólo necesitan dar una prueba de compra y deben llamar al 1-800-3-CONAIR para recibir instrucciones de envío. En ausencia del recibo de compra, el período de garantía será de 24 meses a partir de la fecha de fabricación.

**CUALQUIER GARANTÍA, OBLIGACIÓN O RESPONSABILIDAD IMPLÍCITAS, INCLUYENDO PERO NO LIMITADAS A LA GARANTÍA IMPLÍCITA DE COMERCIABILIDAD Y APTITUD PARA UN PROPÓSITO ESPECÍFICO, ESTARÁN LIMITADAS POR LOS 24 MESES DE LA PRESENTE GARANTÍA ESCRITA.** Algunos Estados no permiten limitaciones sobre la duración de una garantía implícita, de modo que las limitaciones mencionadas pueden no regir para usted.

**CONAIR NO SERÁ RESPONSABLE EN NINGÚN CASO POR ALGÚN DAÑO ESPECIAL, INCIDENTAL O CONSECUENTE DEBIDO AL INCUMPLIMIENTO DE ESTA O DE CUALQUIER OTRA GARANTÍA, EXPRESA O IMPLÍCITA.** Algunos Estados no permiten la exclusión o limitación de daños especiales, incidentales o consecuentes, de modo que las limitaciones mencionadas pueden no regir para usted.

Esta garantía le otorga derechos legales específicos y usted puede tener otros derechos que varían de un Estado a otro.

35% lighter when compared to other Conair and competitive dryers, including Conair 146L and 178; Remington D3200N, Revlon RV470 and Vidal Sassoon VS519. 32% lighter when compared to the Revlon lightweight dryer, model RV544.

\*35% lighter when compared to other Conair and competitive dryers, including Conair 146L and 178; Remington D3200N, Revlon RV470 and Vidal Sassoon VS519. 32% lighter when compared to the Revlon lightweight dryer, model RV544.

any implied warranty lasts, so the above limitations may not apply to you.

any implied warranties, obligations, or liabilities, including but not limited to the implied warranty of merchantability and fitness for a particular purpose, shall be limited in duration to the 24 month duration of this warranty. Some states do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you.

any implied warranties, obligations, or liabilities, including but not limited to the implied warranty of merchantability and fitness for a particular purpose, shall be limited in duration to the 24 month duration of this warranty. Some states do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you.

### PRECAUCIÓN

NUNCA jale, retuerza ni doble mucho el cable eléctrico. Nunca lo enrolle con fuerza alrededor del secador. Esto pudiera dañar la junta flexible que lo conecta al secador, produciendo su ruptura o un cortocircuito. Inspeccione el cable con frecuencia para asegurarse que no está dañado. **Deje de usar el aparato inmediatamente si el cable parece dañado, si el aparato deja de funcionar o funciona de manera intermitente.**

Si el cable o el aparato están dañados o no funcionan correctamente, regrese el aparato a la tienda donde lo compró, o llévelo a un centro de servicio autorizado únicamente. No trate de repararlo.

**ALMACENAJE - Importante**  
Cuando no utiliza el aparato, desconéctelo, déjelo enfriar y guárdelo en un lugar seco y seguro, fuera del alcance de los niños. **No enrolle el cable alrededor del aparato.** Deje que el cable cuelgue o que la junta que lo conecta al secador esté suelta y recta.

\*35% lighter when compared to other Conair and competitive dryers, including Conair 146L and 178; Remington D3200N, Revlon RV470 and Vidal Sassoon VS519. 32% lighter when compared to the Revlon lightweight dryer, model RV544.

any implied warranty lasts, so the above limitations may not apply to you.

any implied warranties, obligations, or liabilities, including but not limited to the implied warranty of merchantability and fitness for a particular purpose, shall be limited in duration to the 24 month duration of this warranty. Some states do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you.

any implied warranties, obligations, or liabilities, including but not limited to the implied warranty of merchantability and fitness for a particular purpose, shall be limited in duration to the 24 month duration of this warranty. Some states do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you.

any implied warranties, obligations, or liabilities, including but not limited to the implied warranty of merchantability and fitness for a particular purpose, shall be limited in duration to the 24 month duration of this warranty. Some states do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you.

## INSTRUCCIONES DE MANTENIMIENTO

Su secador casi no necesita mantenimiento. No necesita lubricación. Para que funcione correctamente, debe mantenerlo limpio. Cuando sea necesario limpiarlo, desenchúfelo, déjelo enfriar y saque el polvo y las pelusas de las aberturas de aire con un cepillo pequeño o el cepillo accesorio de una aspiradora. La superficie exterior del secador sólo se debe limpiar con un paño limpio.

**El secador se recalienta si las aberturas de aire están bloqueadas u obstruidas.** En tal caso, un sistema de seguridad automático apagará el secador o cortará la temperatura para evitar daños o lesiones personales. Si esto sucede, desenchufe el aparato y deje que se enfríe de 10 a 15 minutos antes de encenderlo de nuevo. Asegúrese que las ventilaciones de aire estén limpias.

**SERVICE CENTER**  
CONAIR CORPORATION  
Service Department  
7475 N. Glen Harbor Blvd.  
Glendale, AZ 85307  
©2007 CONAIR CORPORATION  
07NP030

Haircare Hotline

Call: 1-800-3-CONAIR  
Or visit us on the web at:  
<http://www.conair.com>  
For info on any Conair product

Model 227  
Instruction & Styling Guide

# CONAIR®



## Ionic Styler

lightweight



Este mensaje sobre los ...

# G

ROUND

# F

AULT

# C

IRCUIT

# I

NTERRUPTERS

(Interruptores de circuito contra fallas a tierra)

¡Puede salvar una vida!

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>