

Continental®

E l e c t r i c

INSTRUCTION MANUAL



MANUAL DEL USUARIO

C o n t i n e n t a l ®
E l e c t r i c

STEAM AND SPRAY IRON

MODEL:
CE23121



IMPORTANT SAFEGUARDS

When operating your iron, basic safety precautions should always be followed, including the following:

1. **READ ALL INSTRUCTIONS.**
2. Use iron only for its intended use.
3. To protect against a risk of electrical shock, do not immerse the iron in water or other liquids.
4. The iron should always be turned to OFF before plugging or unplugging from outlet. Never yank cord to disconnect from outlet; instead, grasp plug and pull to disconnect.
5. Do not allow cord to touch hot surfaces. Let iron cool completely before storing. Loop cord loosely around iron when storing.
6. Do not operate iron with a damaged cord or if the iron has been dropped or damaged.

BEFORE USING IRON

Remove any labels from soleplate and wipe any manufacturing residue from soleplate and soleplate vents using a soft cloth and cotton swab.

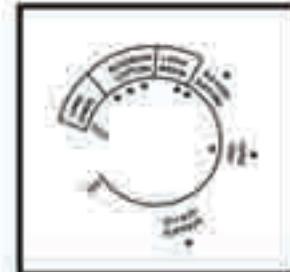
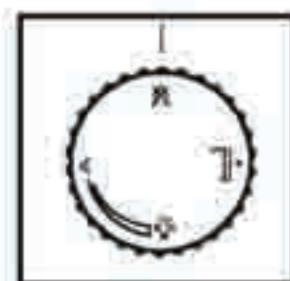


HOW TO USE IRON

Filling Water Tank

If you plan on using Steam features, fill water tank as follows:

1. Unplug iron from electrical outlet and set iron on heel rest on a stable level surface.
2. Turn temperature dial counterclockwise until V lines up with OFF.
3. Turn steam system dial until the dry setting ** lines up with the T on the handle.

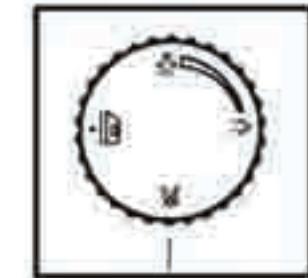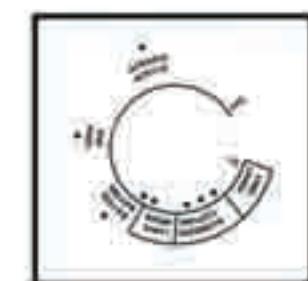

1. Llene el tanque del agua.
2. Encienda la plancha al tomaoriente.
3. Dele vueltas al regulador del sistema steamm hasta alinear "T" para el vapor moderado o "V" para el vapor maximo con la "V".

Para planchar al vapor

5. Ponga la plancha en el talón de descanso y espere hasta que encienda la luz que indica que esta lista. Lo cual significa que la carreta interior de la plancha ha alcanzado la temperatura deseada.
6. Cuando termine de planchar, dele vueltas al regulador de temperatura en la dirección de planchar, deje vueltas a las manecillas del reloj hasta la posición de APAGAR (OFF) y desenchufela del tomacorriente.

NOTA: Asegúrese de ver el contenido de LANA/ALGODON/LINO.

4. Dele vueltas al regulador de temperatura en la dirección de la vapor o al agua.

para el agua. Pueden darse cuando se expanden las prendas de vestir. Algunas telas se para las instrucciones.

NOTA: Asegúrese de ver las instrucciones para el agua. Pueden darse cuando se expanden las prendas de vestir. Algunas telas se para las instrucciones.

3. Dele vueltas al regulador del sistema steamm hasta alinear "T" para el vapor moderado o "V" para el vapor maximo con la "V".

2. Encienda la plancha al tomaoriente.

1. Llene el tanque del agua.

- Using a measuring cup, tip iron slightly and fill tank through the water fill hole.

CAUTION: Never fill with anything else but water.

Steam Pressing




- Fill water tank.
- Plug iron into electrical outlet.
- Turn steam system dial until either "A" for moderate steam or "B" for maximum steam lines up with the "I".

NOTE: Be sure to check the garment label for instructions. Some fabrics may be damaged when exposed to steam or water.

- Turn the temperature dial clockwise until the V falls within the steam range - WOOL/COTTON/LINEN.

NOTE: Be sure to check the garment label for fiber content and set for the fiber requiring the lowest temperature.

- Set iron on heel rest and wait until ready light turns on indicating the soleplate has reached the desired temperature.
- When you are finished ironing, turn temperature dial counterclockwise to OFF and unplug from electrical outlet.

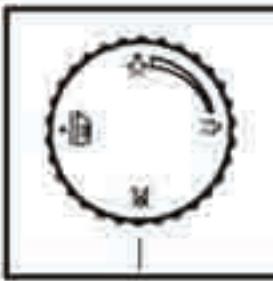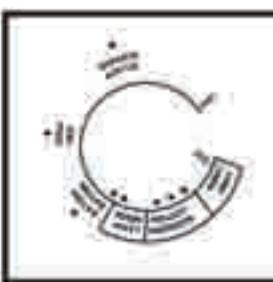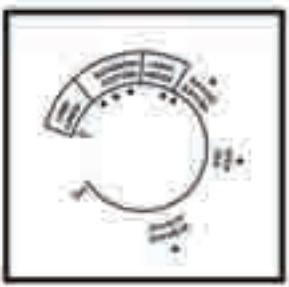


- Enchufela en el tomacorriente.
- Dele vueltas al regulador del sistema de vapor hasta alinear el "A" con el "I" del asa.
- Dele vueltas al regulador de temperatura hasta alinear el "V" con la clasificación de vapor de la tela.
- Ponga la plancha en el lado de desgastes y espere hasta que encienda la luz que indica que esta lista. Lo que significa que la alcanzado la temperatura deseada.
- Porque la plancha en el lado de desgastes y espere hasta que encienda la luz que indica que esta lista. Lo que significa que la alcanzado la temperatura deseada.
- Cuando termine de planchar, dele vueltas al regulador de temperatura en la dirección contraria a las manecillas del reloj hasta la posición de APAGAR (OFF) y desenchufela del tomacorriente.

Dry Pressing

1. Plug into electrical outlet.
2. Turn the system dial until "X" lines up with the "I" on the handle.
3. Turn temperature dial clockwise until the V lines up with the desired fabric setting.

NOTE: Be sure to check the garment label for fiber content and set for the fiber requiring the lowest temperature.

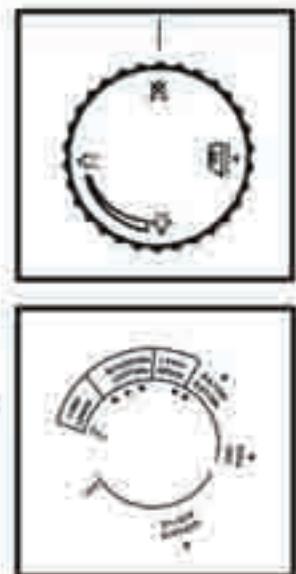

4. Set iron on heel rest and wait until ready light turns on indicating the soleplate has reached the desired temperature.
5. When you are finished ironing, turn temperature dial counterclockwise to OFF and unplug from electrical outlet.

- La placa de planchar se haya entirado al planchar y la temperatura es la subiendo para alcanzar la temperatura establecida.
- Se ha puesto el regulador de temperatura a una temperatura más alta.
- La luz se apaga cuando:

NOTA: Si ha puesto el regulador de temperatura en un nivel más bajo, espere a que la luz que indica que esta se encienda de nuevo antes de planchar. Esto le asegurará que la placa de planchar se ha entirado hasta alcanzar la temperatura más baja.

- La placa de planchar haya alcanzado la temperatura seleccionada.
- La luz se enciende cuando:

La luz que indica que esta lista muestra el estado de la temperatura de la placa de planchar en comparación con el ajuste del regulador de temperatura.

La luz que indica que esta lista

Ready Light

The ready light shows the status of the soleplate temperature compared to the temperature dial setting.

The light will come on when:

- The soleplate has reached the selected temperature.

NOTE: If you turned the temperature dial to a lower setting, wait until the ready light goes out and comes back on before setting. This will assure you that the soleplate has cooled to the new lower temperature.

The light will go out when:



- When the temperature dial has been set for a higher temperature.
- When the soleplate has cooled during ironing and the temperature is increasing to the set temperature.

- Para evitar que se arañe la placa de planchar, no dese que esta se ponga directamente en contacto con objetos abrasivos tales como cremalleras (zippers) y botones. En lugar de eso, cubra el área con un paño de planchar y entrelace planche.
1. Ponga el regulador de temperatura en la posición de APAGAR (OFF) y desenchufe la plancha del tomacorriente.
 2. Aleje de usted la plancha de la plancha y volteela con cuidado hacia abajo en el vertedero para sacarle el agua.
 3. Una vez que haya escumido toda el agua como se indica en el segundo paso, sostenga la plancha sobre el vertedero con la plancha de planchar hacia abajo.
 4. No guarde la plancha hasta que la plancha de planchar se haya enfriado totalmente.
- Una vez que la plancha se haya enfriado totalmente:
1. Limpie el exterior de la plancha y la plancha de planchar con un paño húmedo. Nunca use limpiadores abrasivos.
 2. Para evitar que se arañe la placa de planchar, no dese que esta se ponga directamente en contacto con objetos abrasivos tales como cremalleras (zippers) y botones. En lugar de eso, cubra el área con un paño de planchar y entrelace planche.
- PRECAUCIÓN: El agua del tanque puede estar caliente. Evite el contacto con el agua y el vapor.

CUIDADO Y LIMPIEZA

Para secarla y guardarla la plancha

Para que la plancha le dure más y le siga funcionando debidamente, siga los siguientes pasos:

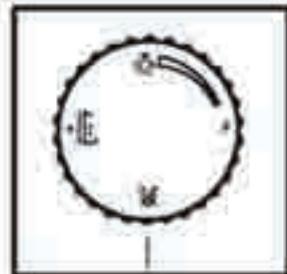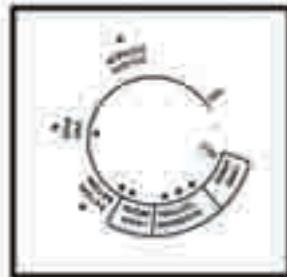

Auto-Limpieza

1. Llene el tanque del agua.
2. Enchute la plancha en el tomacorriente.
3. Dele vueltas al regulador de temperatura en la dirección de las manecillas del reloj hasta alcanzar el nivel máximo de temperatura.
4. Ponga la plancha en el talón de descanso y espere a que la luz que indica que esta lista, se encienda para señalar que la plancha ha alcanzado el nivel máximo de temperatura.
5. En cuanto se encienda la luz que indica que esta lista, dele vueltas al regulador de temperatura hasta llegar a la posición de APLGAR (OFF).
6. Desenchufe la plancha del tomacorriente.
7. Sostenga la plancha sobre el tomacorriente.
8. Ponga el regulador del sistema steam en la posición de "D". El vapor saldrá por las aberturas. Continúe con este operación hasta que el tanque del agua se haya vaciado completamente.
9. Desague el sacar toda el agua como se indica en el octavo paso, sostenga la plancha sobre el vertedero con la cara interior hacia abajo. Las gotas de agua que queden escumbran sobre el talón de la cartera.

CARE AND CLEANING

To extend the life and maintain the performance of your iron follow these steps:

Draining and Storing Iron



1. Turn temperature dial to OFF and unplug iron from electrical outlet.
 2. With sole plate facing away from you, carefully turn iron upside down over sink to empty water.
- CAUTION:** Water tank may be hot. Avoid contact with water an steam.
3. Once all the water has been drained in Step 2, hold iron over sink with the soleplate facing down. Remaining drops of water will drain through the soleplate vents. Place the hot iron on its heel rest so that any remaining moisture will evaporate.
 4. Do not store iron until the soleplate is completely cool.
 5. Loop cord loosely around iron when storing.

Once the soleplate has cooled completely:

- Wipe the outside of the iron and soleplate with a damp cloth. Never use abrasive cleaners.
- To prevent scratching the soleplate do not allow soleplate to directly contact abrasive objects such as zippers and buttons. Instead, cover the area with a press cloth and then iron.

Self-Cleaning

1. Fill the water tank.
2. Plug iron into electrical outlet.
3. Turn temperature dial clockwise to the maximum temperature setting.
4. Set iron on heel rest and wait until ready light turns on indicating the soleplate has reached the maximum temperature.
5. As soon as ready light turns on, turn temperature dial to OFF.
6. Unplug iron from electrical outlet.
7. Hold iron over sink with soleplate facing away from you.
8. Turn steam system dial to "↔" Steam will flow through the vents. Continue this operation until the water tank is completely empty.
9. When all the water has been removed in Step 8, hold iron over sink with the soleplate facing down. Remaining drops of water will drain through the soleplate vents. Place the hot iron on its heel rest so that any remaining moisture will evaporate.

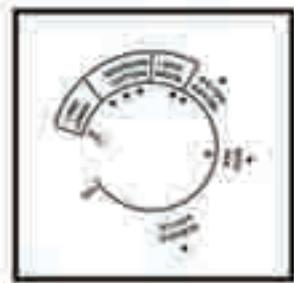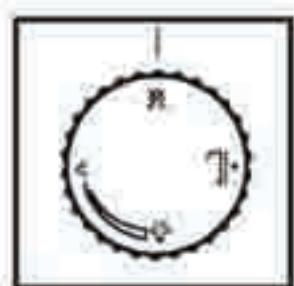

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>