8L DEVICE HOME THEATER

UNIVERSAL REMOTE CONTROL WITH LEARNING

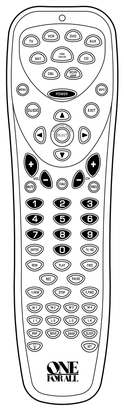

USER'S GUIDE

INTRODUCTION

The One For All 8L Home Theater Upgradeable Universal Remote Control with Learning (URC-8811) is designed to operate up to eight home entertainment devices, including TV, video, and audio components. The remote control requires four (4) fresh AAA alkaline batteries (not included) and easy programming to control your devices. For best results, please read and perform all instructions listed here. Also, keep these instructions for future reference.

FEATURES AND FUNCTIONS

Use the *Key Charts* (below) to learn how to use the universal features and functions of the One For All 8L Home Theater Upgradeable Universal Remote Control with Learning (URC-8811).

Key Charts

The LED (red light) blinks to show that the remote control is working and is sending signals.

Press TV, VCR, DVD, AUX, SAT, CD, CBL, or RCVR/AMP once to select a desired home entertainment device to control.

After programming, press HOME THEATER once to select the home theater mode (see *Using The Home Theater Mode*).

Press POWER once to turn on or off the selected device.

Press MENU once to display your selected device's main menu.

Use GUIDE to display your selected device's program guide or setup menu.

Use EXIT to exit from your selected device's guide or menu.

Use INFO to display the current channel and program information.

Use the cursor keys to move the cursor in the program guide and menu screens. Use SELECT to choose options from your selected device's menu or guide.

In the CD mode, use SELECT to select a compact disc. Use ▲ (or ▼) to select the next (or previous) CD. Use ◀ (or ▶) to select the next (or previous) track.

In the RCVR/AMP mode, use SELECT to set the surround sound. Use ▲ (or ▼) to adjust the volume higher (or lower). Use ◀ (or ▶) to adjust the balance left (or right).

Use VOL+ (or VOL-) to raise (or lower) the sound volume.

Press MUTE once to turn the sound off or on.

In TV, VCR, DVD, SAT, and CBL modes, use FAV to scan favorite channels and/or all channels. See *Using Channel Scan* and *Programming Favorite Channel Scan*.

Use CH+ (or CH-) to select the next higher (or lower) channel.

Press PREV once to recall the last-viewed channel and to page back one screen on the main menu.

In the CD mode, use PREV to turn random play on or off.

In the RCVR/AMP mode, use PREV to select the receiver band.

Use the keypad (1 ~ 9 and 0) to directly select channels (for example, 009 or 031).

In the RCVR/AMP mode, use the keypad (1 ~ 9 and 0) to select audio sources 1 through 10.

Press ENTER once after entering the channel numbers on some TVs.

In the CD mode, use ENTER to add 10 to the digit entry (e.g., ENTER and 7 is 17).

Use TV/VID to switch the TV's input to view TV or video programs.

Use the transport keys to control your VCR, DVD or CD player, or VOD (Video On Demand) if available on your cable or satellite service.

To record a VCR program, press REC twice.

After programming, press M1 ~ M4 once to run a desired macro (see *Using Macros*).

After programming, press L1 ~ L4 once to activate a learned function (see *Using Learning Keys*).

Use PIP to switch the Picture-In-Picture feature on or off (if available on your TV).

Use MOVE to move the window picture to different positions in the main picture.

Use SWAP to switch images and sound between the main and window pictures.

Press SLEEP to activate your device's sleep timer (not available for all devices).

Use ☼ to turn on or off the key backlight. When this feature is activated, keys will remain backlight for 5 seconds after the last key press.

Use SET for all programming sequences.

INSTALLING BATTERIES

1. On the remote control's back, push the tab and lift off the battery cover.
2. Obtain four (4) new (fully-charged) AAA alkaline batteries. Match the + and – marks on the batteries to the + and – marks in the battery case, then insert the new batteries.
3. Press the battery cover back into place. The tab should click when the cover is locked.
4. Test the remote control by first pressing POWER and then any mode key (e.g., TV). If batteries are inserted correctly, the LED (red light) will blink once.

   NOTE: When batteries need replacement, the remote control will stop operating. Remove the old batteries and insert new ones to ensure all of your programming information is restored.

PROGRAMMING DEVICE CONTROL

The One For All 8L Home Theater Upgradeable Universal Remote Control with Learning is preprogrammed at the factory to operate an RCA TV and VCR, a Motorola (GI) cable box, an RCA satellite receiver, a Pioneer CD player, a Toshiba DVD player, a Pioneer audio receiver/ amplifier, and a One For All home automation device. To control devices other than the default brands, perform the following steps; otherwise skip this section:

NOTE: For TV/VCR Combo control, see the next section.

1. Turn on a device (e.g., VCR or DVD player) and, if applicable, insert media (e.g., cassette or disc).

   NOTE: Please read steps 2 through 4 completely before proceeding. Highlight or write down the codes and device you wish to program before starting step 2.

2. On the remote control, press a device key once (i.e., TV, VCR, DVD, AUX, SAT, CD, CBL, or RCVR/AMP).

   NOTE: Use the AUX key to program control of home automation devices as well as miscellaneous audio services and video accessories. Alternately, use the AUX key to program control of a second device type (e.g., a second VCR; see "Re-assigning Device Keys").

3. Press and hold SET until the LED (red light) blinks twice, then release SET.
4. Use the *Manufacturer's Codes* (on the back) to locate the type of device and brand name and then enter the first four-digit code for your device. If performed correctly, the LED will blink twice.

   NOTE: If the LED did not blink twice, repeat steps 2 through 4 and try entering the same code again.

5. Aim the remote control at the device and press POWER once. The device should turn off. If it does not respond, repeat steps 2 through 5, trying each code for your brand until you find one that works. If it still does not work, try *Searching For Your Code*.

   NOTE: If the device does not have a POWER key, press the ► (Play) key.

6. Repeat steps 1 through 5 for each device you want to control. For future reference, write down each working device code in the boxes below:

TV Code:

VCR Code:

DVD Code:

SAT Code:

CD Code:

CBL Code:

RCVR/AMP Code:

AUX Code:

Aux. Device Type: _____

PROGRAMMING TV/VCR COMBO CONTROL

Perform the following instructions to control a TV/VCR Combo:

1. Turn on the TV/VCR Combo and insert a video cassette.

   NOTE: Please read steps 2 through 4 completely before proceeding. Highlight or write down the codes and device you wish to program before starting step 2.

2. On the remote control, press VCR.
3. Press and hold SET until the LED (red light) blinks twice, then release SET.
4. Use the *Setup Codes For TV/VCR Combos* (on the back) to locate the brand name and then enter the first four-digit code for your device. If performed correctly, the LED will blink twice.

   NOTE: If the LED did not blink twice, repeat steps 2 through 4 and try entering the same code again.

5. Aim the remote control at the device and press POWER once. It should turn off. If the device does not respond, repeat steps 2 through 5, trying each code for your brand until you find one that works. If it still does not work, try *Searching For Your Code*.

   NOTE: If the device does not have a POWER key, press the ► (Play) key.

6. If you've located a setup code that works, but it has a separate TV code, you'll also need to program it into the remote control to access volume control as follows:

   a. Press TV once. The LED (red light) will blink twice.

   b. Enter the TV code for your TV/VCR Combo. If correct, the LED will blink twice.

   NOTE: For VCR/TV Combos programmed with separate TV codes, TV volume is controlled by pressing VCR first and then TV. After that, use VOL+ (or VOL-) to raise (or lower) the TV volume. For other alternatives on controlling your volume keys, see the "Changing Volume Lock" or "Using Keymover" sections.

7. For future reference, write down the working TV/VCR combo code in the below boxes:

TV/VCR Code:

TV Code (if used):

SEARCHING FOR YOUR CODE

If your device does not respond to the remote control after trying all codes listed for your brand, or if your brand is not listed at all, try searching for your code.

For example, to search for a code for your TV:

1. On the remote control, press TV once.
2. Press and hold SET until the LED (red light) blinks twice, then release SET.
3. Enter 9 - 9 - 1. The LED will blink twice.
4. Aim the remote control at the the TV and slowly alternate between pressing POWER and TV. Stop when the TV turns off.

   NOTE: In the search mode, the remote control will send IR codes from its library to the selected device, starting with the most popular code first.

5. To lock in the code, press and hold SET until the LED blinks twice, then release SET.
6. To search for the codes of your other devices, repeat steps 1 through 5, but substitute the appropriate device key for the device you are searching for.

CHECKING THE CODES

If you have set up the remote control using the *Searching For Your Code* procedure, you may need to find out which four-digit code is operating your equipment. For example, to find out which code is operating your TV:

1. On the remote control, press TV once.
2. Press and hold SET until the LED (red light) blinks twice, then release SET.
3. Enter 9 - 9 - 0. The LED will blink twice.
4. To view the code for the first digit, press 1 once. Wait 3 seconds, count the LED blinks (e.g., three blinks = 3) and write down the number.

   NOTE: If a code digit is "0", the LED will not blink.

5. Repeat step 4 three more times for remaining digits. Use 2 for the second digit, 3 for the third digit, and 4 for the fourth digit.
6. To check for codes of other devices, repeat steps 1 through 5, but substitute the appropriate device key for each device you are checking.

USING THE HOME THEATER MODE

The One For All 8L Home Theater Upgradeable Universal Remote Control with Learning includes a custom Home Theater mode. After the HOME THEATER key is programmed, it will allow you to access five groups of remote control keys without having to change device modes.

Control Organization

About Control Groups

For Home Theater programming, the remote control's keys are grouped by type of control into the following five control groups:

(1) Transport Controls:	PLAY, STOP, FWD, REW, PAUSE, and REC
(2) Volume Controls:	VOL+, VOL-, and MUTE
(3) Channel Controls:	CH+, CH-, (Keypad) 0 ~ 9, ENTER, LAST, SLEEP, INFO, and TV/VCR
(4) Menu Controls:	MENU, GUIDE, Cursor Controls (Up, Down, Left, Right), SELECT, and EXIT
(5) PIP Controls:	PIP, MOVE, and SWAP

About Device Groups

Moreover, the remote control's devices are grouped into the following five device groups:

(1) Device Group 1:	VCR, DVD, CD, and RCVR/AMP
(2) Device Group 2:	TV, VCR, CBL, SAT, CD, and RCVR/AMP
(3) Device Group 3:	TV, VCR, CBL, SAT, CD, and RCVR/AMP
(4) Device Group 4:	TV, VCR, CBL, SAT, and DVD
(5) Device Group 5:	TV

The default *Device Group* setting from the factory is:

(1) Device Group 1:	VCR
(2) Device Group 2:	TV
(3) Device Group 3:	CBL
(4) Device Group 4:	CBL
(5) Device Group 5:	TV

Programming The Home Theater Mode

For example, let's assume you have a TV, a cable box, and a VCR in your home theater system. You can set up the Home Theater mode so that selected controls are assigned to these devices as follows:

1. On the remote control, press HOME THEATER.
2. Press and hold SET until the LED (red light) blinks twice, then release SET.
3. Enter 9 - 7 - 9. The LED will blink twice.
4. Select a device. For this example, press VCR once. Then assign a desired *Control Group* to the device. For this example, press PLAY once, which will assign the entire group of *Transport Controls* (i.e., PLAY, STOP, FWD, REW, PAUSE, and REC) to the VCR. The LED will blink once.
5. Select another device. For this example, press TV once. Then assign a desired *Control Group* to this device. For this example, press VOL+ once, which will assign the entire group of *Volume Controls* (i.e., VOL+, VOL-, and MUTE) to the TV. The LED will blink once.
6. Select another device. For this example, press CBL once. Then assign a desired *Control Group* to this device. For this example, press CH+ once, which will assign the entire group of *Channel Controls* (i.e., CH+, CH-, (Keypad) 0 ~ 9, ENTER, LAST, SLEEP, INFO, and TV/VCR) to the Cable Box. The LED will blink once.
7. To add additional Menu functionality to the Cable Box, press CBL once. Then press MENU once. This action will assign the entire group of *Menu Controls* (i.e., MENU, GUIDE, Cursor Controls (Up, Down, Left, Right), SELECT, and EXIT) to the Cable Box. The LED will blink once.
8. To add PIP functionality to the TV, press TV once. Then press PIP once. This action will assign the entire group of *PIP Controls* (i.e., PIP, MOVE, and SWAP) to the TV. The LED will blink once.
9. To exit Home Theater programming, press and hold SET until the LED (red light) blinks twice, then release SET.

Operating The Home Theater Mode

After programming the Home Theater key (see previous), you simply activate this mode by pressing HOME THEATER once. Instantly, groups of remote control keys will be assigned to their programmed devices.

For the above example, pressing HOME THEATER once would assign the following keys to the VCR, TV, and Cable Box:

VCR:	PLAY, STOP, FWD, REW, PAUSE, and REC
TV:	VOL+, VOL-, MUTE, PIP, MOVE, and SWAP
Cable Box:	CH+, CH-, (Keypad) 0 ~ 9, ENTER, LAST, SLEEP, INFO, TV/VCR, MENU, GUIDE, Cursor Controls (Up, Down, Left, Right), SELECT, and EXIT

USING MACROS

With programming, the M1 through M4 keys on your One For All 8L Home Theater Upgradeable Universal Remote Control with Learning can be setup to perform repetitive, time-consuming operations for easy, convenient access through the press of a single key.

Macro keys are ideal for home theater operations, setting a favorite channel, guide steps, or other multiple functions you would like to control with one key press. Moreover, each macro key can hold up to 15 key presses total.

NOTE: Programming a new macro over an existing one will erase the original macro.

Programming A Favorite Channel

With so many channels available through your cable or satellite system provider, you can program a macro that directly selects a favorite channel with one key press.

For example, let's assume your favorite cable programs are on channel 71. Use the following instructions to program a macro key for direct access of this channel:

NOTE: This example assumes the TV tuner is connected directly to the cable line and not through a cable box.

1. Press and hold SET until the LED (red light) blinks twice, then release SET.
2. Enter 9 - 9 - 5. The LED will blink twice.
3. Select an open macro key (e.g., M1) and press it once.
4. Press TV once.
5. Enter the channel number, 7 - 1.

   NOTE: If you have access to over 100 channels, enter 0 - 7- 1. Moreover, if the original remote control required pressing an Enter key to change the channel, also press the Enter key after the channel number (e.g., 0 - 7- 1- Enter).

6. Press and hold SET until the LED blinks twice, then release SET.

Now when you press M1, you will instantly see cable channel 71 on your TV set.

Programming A Master Power Key With Instant Channel Selection

A macro key can be programmed to turn on and off your equipment as well. For example, let's set up a sequence that will turn on the TV and tune it to channel 3, and then turn on the Cable Box and tune it to a premium channel (e.g., 11).

NOTE: This example assumes all equipment is turned off and that the TV is connected through the cable box with TV tuning set to channel 3.

1. Press and hold SET until the LED (red light) blinks twice, then release SET.
2. Enter 9 - 9 - 5. The LED will blink twice.
3. Select an open macro key (e.g., M2) and press it once.
4. Enter the following sequence:

   TV, POWER, and 0 - 3 (or 0 - 0 - 3 if access is over 100 channels)

   NOTE: If the original remote control required pressing an Enter key to change the channel, also press the Enter key after the channel number (e.g., 0 - 7- 1- Enter).

5. Then enter the following sequence:

   CBL, POWER, and 1 - 1 (or 0 - 1 - 1 if access is over 100 channels)

6. Press and hold SET until the LED blinks twice, then release SET.

Now when you press M2 once, the TV will turn on and tune to channel 03. Then the cable box will turn on and tune to channel 11.

Clearing A Macro

1. Press and hold SET until the LED (red light) blinks twice, then release SET.
2. Enter 9 - 9 - 5. The LED will blink twice.
3. Select a macro key (e.g., M1~ M4) you want to clear and press it once.
4. Press and hold SET until the LED blinks twice, then release SET.

USING CHANNEL SCAN

In the TV, VCR, DVD, SAT, and CBL modes, use the FAV key to start a 3-second scan of all favorite channels (if programmed – see *Programming Favorite Channel Scan* below) and/or all channels for the selected mode.

1. If *Favorite Channel Scan* has been set up, skip to step 2. Otherwise, press TV, VCR, DVD, SAT, or CBL once.
2. Press FAV once.
   - If *Favorite Channel Scan* has been set up, scanning of favorite channels will start and, upon completion, continue to scan all channels upward for the same device.
   - If *Favorite Channel Scan* has not been set up, scanning will start with the current channel, then proceed to the next channel up, and continue until all channels of the selected device is scanned.
3. To stop scanning channels at any time, press any key once (except the backlight key ☼).

PROGRAMMING FAVORITE CHANNEL SCAN

In the TV, VCR, DVD, SAT, or CBL mode, you can store a list of up to 10 favorite channels, in any order, that will be immediately scanned when FAV is pressed (see *Using Channel Scan*).

NOTE: Only channels of one mode can be stored for Favorite Channel Scan.

1. On the remote control, press TV, VCR, DVD, SAT, or CBL once.
2. Press and hold SET until the LED (red light) blinks twice, then release SET.
3. Enter 9 - 9 - 6. The LED will blink twice.
4. Use the keypad to enter a favorite channel number (e.g., 031). Then press SET once.

   NOTE: If the original remote control required pressing an Enter key to change the channel, also press the Enter key after the channel number (e.g., 0 - 3- 1- Enter).

5. If desired, repeat step 4 (in this section) for each favorite channel to be stored, up to a total of 10 channels.

   NOTE: If you try entering more than 10 channels, the remote control will automatically exit programming.

6. To exit programming, press and hold SET for 3 seconds. The LED will blink twice.

USING LEARNING KEYS

Use the learning keys (L1 ~ L4) to add functions that are unique to your home entertainment devices (e.g., VCR Tracking Up or Down).

NOTE: Please have your original remote controls handy before programming learning. Be sure to press each key within 10 seconds of the previous entry. If not, the remote control will exit the programming mode.

Programming A Learning Key

1. Press and hold SET until the LED (red light) blinks twice, then release SET.
2. Enter 9 - 7 - 5. The LED will blink twice.
3. Press a device key once (e.g., TV) to assign a mode for learning.
4. Press an open learning key once (e.g., L1) to store a feature to be learned. The LED will blink rapidly for 4 seconds. If the LED does not blink rapidly, go back to step 1 and start again.
5. Place your original remote control (e.g., TV remote control) head-to-head (about 2" apart) from the One For All 8L Home Theater Upgradeable Universal Remote Control with Learning.
6. On your original remote control, press and hold the key (i.e., feature) to be learned until the LED on the One For All 8L Universal Remote Control blinks twice. If the LED does not blink twice, repeat steps 3 through 6.
7. To learn functions onto other learning keys (e.g., L2 ~ L4), repeat steps 3 through 6.
8. To lock in new feature(s) on the One For All 8L Universal Remote Control, press and hold SET until the LED blinks twice, then release SET.
9. To test a learned feature, press a device key (e.g., TV) once where the learning mode was assigned. Then press the learning key (e.g., L1) where the learned feature is stored.

Deleting Functions From The Learning Keys:

1. Press and hold SET until the LED (red light) blinks twice, then release SET.
2. Enter 9 - 7 - 6. The LED will blink twice.
3. Press the device key once where the learned feature is stored (e.g., TV).
4. Press the learning key (e.g., L1) to be deleted twice. The LED will blink twice after the second press.
5. To clear additional functions stored on other learning keys, repeat steps 1 through 4 (in this section).

RE-ASSIGNING DEVICE KEYS

The One For All 8L Home Theater Upgradeable Universal Remote Control with Learning can be set to control a second TV, VCR, DVD player, or other device. For example, to control a TV, a cable box, and two VCRs, you will need to re-assign the unused AUX key to operate the second VCR as follows:

1. On the remote control, press and hold SET until the LED (red light) blinks twice, then release SET.
2. Enter 9 - 9 - 2. The LED will blink twice.
3. Press VCR once, then press AUX once.
4. The AUX key is now ready to be programmed for your second VCR. See *Programming Device Control*.

To re-assign other device keys to the AUX key, repeat steps 1 through 4 above by substituting the sequence from the below chart:

To Re-Assign Device Key	Perform Sequence
AUX as 2nd TV key:	SET - 9 - 9 - 2 - TV - AUX
AUX as 2nd DVD key:	SET - 9 - 9 - 2 -DVD- AUX
AUX as 2nd SAT key:	SET - 9 - 9 - 2 - SAT- AUX
AUX as 2nd CD key:	SET - 9 - 9 - 2 -CD- AUX
AUX as 2nd CBL key:	SET - 9 - 9 - 2 -CBL- AUX
AUX as 2nd RCVR/AMP key:	SET - 9 - 9 - 2 - RCVR/AMP - AUX

You can also re-sassign another unused device key by substituting an open key for the AUX key in the above chart and performing the sequence. For example, to re-assign an unused SAT key as a 2nd CD key, perform SET - 9 - 9 - 2 -CD- SAT. When a re-assignment is done, the LED (red light) will blink twice to confirm your choice. At that time, you will need to program the remote control for the new device (see *Programming Device Control*).

USING KEYMOVER

The One For All 8L Home Theater Upgradeable Universal Remote Control with Learning includes a *Keymover* feature that allows you to map (or copy) keys from one mode (i.e., source mode) to another mode (i.e., destination mode).

NOTE: The following keys cannot be used as a source or destination: TV, VCR, DVD, AUX, SAT, HOME THEATER, CD, CBL, RCVR/AMP, and SET.

Programming Keymover

For example, if your VCR does not have volume control, you can map the volume and mute keys from the TV mode to the VCR mode as follows:

1. Press and hold SET until the LED (red light) blinks twice, then release SET.
2. Enter 9 - 9 - 4. The LED will blink twice.
3. For the source mode, press TV once.
4. For the source key, press VOL+ once.
5. For the destination mode, press VCR once.
6. For the destination key, press VOL + once.
7. The LED will blink twice indicating the keymoved sequence is correct.
8. Repeat steps 1 through 7 twice more, substituting VOL– and MUTE as source and destination keys in steps 4 and 6.

Upon completion of the above procedure, you can now use your One For All 8L Home Theater Upgradeable Universal Remote Control with Learning to control the TV's volume and mute in the VCR mode, as well as in the TV mode.

Restoring Keymoved Keys to Default Settings

Restoring A Single Keymoved Key

1. Press a device key that has a keymoved key.
2. Press and hold SET until the LED (red light) blinks twice, then release SET.
3. Enter 9 - 9 - 4. The LED will blink twice.
4. Press the destination key twice (where the keymoved key is stored). The LED will blink twice.

Restoring All Keymoved Keys In A Single Mode

1. Press and hold SET until the LED (red light) blinks twice, then release SET.
2. Enter 9 - 9 - 4. The LED will blink twice.
3. Press the destination mode twice (where keymoved keys are stored). The LED will blink twice.

CHANGING VOLUME LOCK

The One For All 8L Home Theater Upgradeable Universal Remote Control with Learning is set at the factory for independent volume control of each selected device. However, you may change the Volume Lock setting to Global Volume Lock so that a device's volume will be locked to one mode (e.g., to control TV volume in all other modes). After that, if desired, you can perform Individual Volume Unlock on a selected device to set its volume control for independent operation.

Locking Volume Control To One Mode (Global Volume Lock):

1. Press and hold SET until the LED (red light) blinks twice, then release SET.
2. Enter 9 - 9 - 3 and then press any mode key once (e.g., TV). The LED will blink twice.
3. Now, when you press VOL+, VOL–, or MUTE, the volume of the selected device (e.g., TV) will be controlled regardless of the mode you have selected.

Unlocking Volume Control For A Single Device (Individual Volume Unlock):

1. After performing Global Volume Lock (above), press and hold SET again until the LED (red light) blinks twice, then release SET.
2. Press a desired mode key where you want volume to be unlocked (e.g., RCVR/AMP) and controlled within its own mode.
3. Enter 9 - 9 - 3 and then press VOL– once. The LED will blink four times.
4. If desired, repeat steps 1 through 3 (of this section) for each device that you want volume to be unlocked.
5. Now, after you select a device that has volume unlocked (e.g., RCVR/AMP), pressing VOL+, VOL–, or MUTE, will control the device's volume only in its own mode.

Unlocking All Volume Control (Restoring Default Setting):

NOTE: Performing these instructions will restore independent volume control for all programmed devices (e.g., TV volume control in TV mode, VCR volume in VCR mode, etc.).

1. On the remote control, press and hold SET until the LED (red light) blinks twice, then release SET.
2. Enter 9 - 9 - 3 and then press VOL+ once. The LED will blink four times.
3. Volume will again be independently controlled according to its default states for all programmed devices.

ABOUT UPGRADING

The One For All 8L Home Theater Upgradeable Universal Remote Control with Learning has the largest infrared code library available. However, if you purchase a brand new home entertainment or home automation device, it may not respond to the codes stored in the remote control's memory.

If this happens, please contact our Customer Support department (see *Customer Support* below) to upgrade the remote control. The Customer Support representative will search our entire database for a code that matches your device and instruct you how to enter it into your One For All 8L Home Theater Upgradeable Universal Remote Control with Learning.

If the code for your home entertainment or home automation device is not in our database, we will need to "capture" the code for that device from its original remote control. A new code would then be created and entered into your One For All 8L Home Theater Upgradeable Universal Remote Control with Learning. If necessary, the Customer Support representative can instruct you how to begin the capture procedure.

NOTE: One For All reserves the right to replace a returned remote control with a new one of equal or superior functionality.

Upgrade Exclusions

- Home entertainment or home automation devices controlled by radio frequency (RF/UHF), wired, or ultrasonic remote controls. Only devices controlled by *infrared* remote controls are covered.
- Home entertainment or home automation devices not controlled by remote controls.
- Broken or defective product.
- Products that operate over 100 kHz.
- Infrared keyboards and infrared pointing devices (such as mouse substitutes).
- All products for sale and/or use outside the continental United States, Hawaii, Alaska, or Canada.

TROUBLESHOOTING

PROBLEM: If you own a satellite that uses code 0775 (Express Vu and Echostar) and your exit key does not work, perform the following sequence to activate this feature/function.

SOLUTION:
1. Press the CBL/SAT key
2. Press and hold the SET key until the red LED blinks twice
3. Press 9-9-4, the red LED will blink twice
4. Press SET and release (one blink on LED)
5. Press 3-3-6
6. Press the EXIT key, the red LED will blink twice.

The Exit key will now correctly perform the exit feature/function on your satellite.

PROBLEM: LED (red light) does not blink when you press a key.

SOLUTION: Replace batteries with four new AAA alkaline batteries.

PROBLEM: LED blinks when you press a key, but home entertainment device does not respond.

SOLUTION: Make sure the remote control is aimed at your home entertainment device and is not farther than 15 feet away.

PROBLEM: The unit does not control home entertainment devices or commands are not working properly.

SOLUTION: Try all listed codes for the device brands being set up. Make sure they can be operated with an infrared remote control.

PROBLEM: TV/VCR combo does not respond properly.

SOLUTION: Use the VCR codes for your brand. Some combo units may require both a TV code and a VCR code for full operation.

PROBLEM: Changing channels does not work properly.

SOLUTION: If original remote control required pressing ENTER to change channels, press ENTER on the remote control after entering the channel number.

PROBLEM: During learning, LED emits a long blink after pressing and holding key to be learned.

SOLUTION: A bad capture has occurred. Avoid high-ambient light sources, such as direct daylight and fluorescent bulbs. Try readjusting positions of remote controls before performing the procedure again.

PROBLEM: Tried *Search For Your Code* method and still could not find a working code.

SOLUTION: Clear the device key as follows: Press and hold SET until the LED (red light) blinks twice, then release. Next enter 9 - 9 - 2. Then press the device key to be cleared twice. Now repeat the *Search For Your Code* method.

PROBLEM: Remote control does not turn on Sony or Sharp TV/VCR Combo.

SOLUTION: For power on, these products require programming TV codes. For Sony, use TV code 0000 and VCR code 0032. For Sharp, use TV code 0093 and VCR code 0048.

PROBLEM: CH+ and CH- do not work for your RCA TV.

SOLUTION: Due to RCA design (1983-1987), only the original remote control will operate these functions.

PROBLEM: No remote control of volume.

SOLUTION: See *Changing Volume Lock* to lock/unlock volume.

This product has been discontinued and is no longer supported

ADDITIONAL INFORMATION

As you update your home entertainment system, One For All® has a universal remote control that will fit your needs. Look for these exciting products at a retailer near you.

One For All Access 3	URC-3605
One For All Video Expert 4 Device	URC-4081
One For All Video Expert Plus 4L	URC-4880
One For All Access 4	URC-4605
One For All Access 5	URC-5705
One For All 6 Device Home Theater	URC-6011
One For All 8 Device Home Theater	URC-8011
One For All 8L Device Home Theater with Learning Capability	URC-8811
One For All A/V LCD 8 Device With Learning	URC-8910
One For All IR/RF LCD 8 Device With Learning	URC-9910

ONE FOR ALL® is the registered trademark of Universal Electronics Inc. Computime International Ltd. is the Licensee of the ONE FOR ALL® brand for USA and Canada.

Copyright 2002 by Universal Electronics Inc. No part of this publication may be reproduced, transmitted, transcribed, stored in any retrieval system, or translated to any language, in any form or by any means, electronic, mechanical, magnetic, optical, manual, or otherwise, without the prior written permission of Universal Electronics Inc.

The One For All® 6 Device Universal Remote Control is compatible for use in North America, excluding Mexico.

URC-8810w/8811 02/02

Download from Www.Somanuals.com. All Manuals Search And Download.

MANUFACTURER'S CODES

Setup Codes For TVs

AOC	0030, 0019
Admiral	0093, 0463
Aiko	0092
Akai	0030
Alaron	0179
America Action	0180
Anam	0180
Audiovox	0451, 0180, 0623, 0092
Baysonic	0180
Belcor	0019
Bell & Howell	0154, 0016
Bradford	0180
Brockwood	0019
Broksonic	0236, 0463
CXC	0180
Candle	0030, 0056
Carnivale	0030
Carver	0054
Celebrity	0000
Cineral	0451, 0092
Citizen	0060, 0030, 0056, 0092
Concerto	0056
Contec	0180
Craig	0180
Crosley	0054
Crown	0180
Curtis Mathes	0047, 1147, 1347, 0054, 0154, 0051, 0451, 0093, 0060, 0030, 0056, 0145, 0016, 0166
Daewoo	0451, 0019, 0623, 0624, 0092
Daytron	0019
Denon	0145
Dumont	0017, 0019
Electroband	0000
Emerson	0154, 0236, 0463, 0180, 0178, 0179, 0019, 0623, 0624
Envision	0030
Fisher	0154
Fujitsu	0179
Funai	0180, 0179, 0171
Futuretech	0180
GE	0047, 1147, 1347, 0051, 0451, 0093, 0178, 0021
Gibralter	0017, 0030, 0019
GoldStar	0030, 0178, 0056, 0019
Gradiente	0053, 0056
Grunpy	0180, 0179
Hallmark	0178
Harley Davidson	0179
Harman/Kardon	0054
Harvard	0180
Hitachi	0056, 0145, 0016
Infinity	0054
Inteq	0017
JBL	0054
JCB	0000
JVC	0053
KEC	0180
KTV	0180, 0030
Kenwood	0030, 0019
Konka	0707, 0628, 0632, 0638, 0703
LG	0056
LXI	0047, 0054, 0154, 0156, 0178
Logik	0016
Luxman	0056
MGA	0150, 0030, 0178, 0019
MTC	0060, 0030, 0056, 0019
Magnavox	0054, 1254, 0030, 0179
Majestic	0016
Marantz	0054, 0030
Matsushita	0250
Megatron	0178, 0145
Memorex	0154, 0250, 0463, 0150, 0178, 0179, 0056, 0016
Midland	0047, 0017, 0051
Minutz	0021
Mitsubishi	0093, 0150, 0178, 0019
Motorola	0093
Multitech	0180
NAD	0156, 0178, 0166
NEC	0030, 0056, 0019
NTC	0092
Nikko	0030, 0178, 0092
Onwa	0180
Optimus	0154, 0250, 0166
Optonica	0093
Orion	0236, 0463, 0179
Panasonic	0051, 0250
Penney	0047, 1347, 0156, 0051, 0060, 0030, 0178, 0021, 0056, 0019
Philco	0054, 0463, 0030, 0145, 0019
Philips	0054
Pilot	0030, 0019
Pioneer	0166
Portland	0019, 0092
Prism	0051
Proscan	0047
Proton	0178
Pulsar	0017, 0019
Quasar	0051, 0250
RCA	0047, 1047, 1147, 1247, 1347, 1447, 0090, 0051, 0093, 0019
RadioShack	0047, 0154, 0180, 0030, 0178, 0056, 0019
Realistic	0154, 0180, 0030, 0178, 0056, 0019
Runco	0017, 0030
SSS	0180, 0019
Sampo	0030
Samsung	0060, 0030, 0178, 0056, 0019
Sansei	0451
Sansui	0463
Sanyo	0154
Scimitsu	0019
Scotch	0178
Scott	0236, 0180, 0178, 0179, 0019
Sears	0047, 0054, 0154, 0156, 0178, 0179, 0056, 0171
Semivox	0180
Semp	0156
Sharp	0093
Shogun	0019
Signature	0016
Sony	0000
Soundesign	0180, 0178, 0179
Squareview	0171
Starlite	0180
Supreme	0000
Sylvania	0054, 0030
Symphonic	0180, 0171
TMK	0178, 0056
TNCi	0017
Tandy	0093
Technics	0051, 0250
Technol Ace	0179
Techwood	0051, 0056
Teknika	0054, 0180, 0150, 0060, 0179, 0056, 0019, 0016, 0092
Telefunken	0056
Toshiba	0154, 0156, 0060
Toshiba	1256
Vector Research	0030
Victor	0053
Vidikron	0054
Vidtech	0178, 0019
Wards	0054, 0030, 0178, 0021, 0179, 0056, 0019, 0016
White Westinghouse	0463, 0623, 0624
Yamaha	0030, 0019
Zenith	0017, 0463, 0624, 0016, 0092

Setup Codes For VCRs

Admiral	0048, 0209
Adventura	0000
Aiko	0278
Aiwa	0037, 0000, 0307
Akai	0041
America Action	0278
American High	0035
Asha	0240
Audiovox	0037
Beaumark	0240
Bell & Howell	0104
Broksonic	0184, 0121, 0209, 0002, 0479
CCE	0072, 0278
Calix	0037
Canon	0035
Capehart	0020
Carver	0081
Cineral	0278
Citizen	0037, 0278
Colt	0072
Craig	0037, 0047, 0240, 0072, 0271
Curtis Mathes	0035, 0060, 0162, 0041
Cybernex	0240
Daewoo	0045, 0278, 0020, 0561
Daytron	0020
Denon	0042
Dynatech	0000
Electrohome	0037
Electrophonic	0037
Emerex	0032
Emerson	0037, 0184, 0000, 0121, 0043, 0209, 0002, 0278, 0479, 0561, 0208
Fisher	0047, 0104
Fuji	0035, 0033
Funai	0000
GE	0035, 0060, 0048, 0240
Garrard	0000
Go Video	0432, 0526, 0643
GoldStar	0037, 0038
Gradiente	0000, 0008
HI-Q	0047
Harley Davidson	0000
Harman/Kardon	0081, 0038
Harwood	0072
Headquarter	0046
Hitachi	0000, 0042, 0041
Hughes Network Systems	0042
JVC	0067, 0041, 0008
Jensen	0041
KEC	0037, 0278
KLH	0072
Kenwood	0067, 0041, 0038
Kodak	0035, 0037
LXI	0037
Lloyd's	0000, 0208
Logik	0072
MEI	0035
MGA	0240, 0043
MGN Technology	0240
MTC	0000, 0240
Magnasonic	0278
Magnavox	0035, 0039, 0081, 0000
Magnin	0240
Marantz	0035, 0081
Marta	0037
Matsushita	0035, 0162
Memorex	0035, 0037, 1037, 0048, 0039, 0047, 0162, 1162, 1262, 0000, 0240, 0104, 0209, 0479, 0046, 0307
Minolta	0042
Mitsubishi	0048, 0067, 0043
Motorola	0035, 0048
Multitech	0000, 0072
NEC	0067, 0104, 0041, 0038
Nikko	0037
Noblex	0240
Olympus	0035
Optimus	0037, 0048, 1048, 0162, 1062, 1162, 1262, 0104, 0432
Orion	0184, 0209, 0002, 0479
Panasonic	0035, 0162, 1062, 1162, 1262, 1362, 0616
Penney	0035, 0037, 0042, 0240, 0038
Pentax	0042
Philco	0035, 0209, 0479
Philips	0035, 0081, 1081, 1181, 0618
Pilot	0037
Pioneer	0067
Polk Audio	0081
Portland	0020
Profitronic	0240
Proscan	0060
Protec	0072
Pulsar	0039
Quarter	0046
Quartz	0046
Quasar	0035, 0162, 1162
RCA	0035, 0060, 0048, 0042, 0240
RCA	0060
RadioShack	1037, 0000
Radix	0037
Randex	0037
Realistic	0035, 0037, 0048, 0047, 0000, 0104, 0046
Replay/TV	0614, 0616
Runco	0039
STS	0042
Samsung	0045, 0240
Samtron	0643
Sanky	0048, 0039
Sansui	0000, 0067, 0209, 0041, 0479, 0271
Sanyo	0047, 0240, 0104, 0046
Scott	0184, 0045, 0121, 0043
Sears	0035, 0037, 0047, 0000, 0042, 0104, 0046
Semp	0045
Sharp	0048
Shintom	0072
Shogun	0240
Singer	0072
Sony	0035, 0032, 1032, 0000, 0636, 0033
Sylvania	0035, 0081, 0000, 0043
Symphonic	0000
TMK	0240, 0208
Tatung	0041
Teac	0000, 0041
Technics	0035, 0162
Teknika	0035, 0037, 0000
Thomas	0000
Tivo	0618, 0636
Toshiba	0045, 0043
Totevision	0037, 0240
Unitech	0240
Vector	0045
Vector Research	0038
Video Concepts	0045
Videosonic	0240
Wards	0035, 0060, 0048, 0047, 0081, 0000, 0042, 0240, 0072
White Westinghouse	0209, 0072, 0278
XR-1000	0035, 0000, 0072
Yamaha	0038
Zenith	0039, 0000, 0209, 0479, 0033, 0637

Setup Codes For TV/VCR Combos

Broksonic	0002, 0479 (for TV use 0463)
Citizen	0278
Colt	0072
Curtis Mathes	0035 (for TVuse 0051)
Daewoo	0278 (for TV use 0624)
Emerson	0002, 0278 (for TV use 0624), 0294 (for TV use 0236), 0479 (for TV use 0463)
Funai	0000
GE	0035 (for TV use 0051), 0048 (for TV use 0093), 0060 (for TV use 0047), 0240
GoldStar	0037 (for TV use 0056)
Harley Davidson	0000
Hitachi	0000
Lloyd's	0000
Magnasonic	0278
Magnavox	0000, 0081 (for TV use 0054)
Magnin	0240
Memorex	0037, 0162 (for TV use 0250), 1037, 1162, 1262
MGA	0240
Mitsubishi	0048 (for TV use 0093)
Optimus	0162 (for TV use 0250), 1162, 1262
Orion	0000, 0479 (for TV use 0463)
Panasonic	0035 (for TV use 0051), 0162 (for TV use 0250), 1162, 1262
Penney	0035 (for TV use 0051), 0037 (for TV use 0056), 0240
Quasar	0035 (for TV use 0051), 0162 (for TV use 0250)
RadioShack	1037
RCA	0035 (for TV use 0051), 0048 (for TV use 0093), 0060 (for TV use 0047), 0240
Sansui	0000, 0479 (for TV use 0463)
Sanyo	0240
Sears	0000, 0037 (for TV use 0056)
Sharp	0048 (for TV use 0093)
Sony	0000, 0032 (for TV use 0000)
Sylvania	0081 (for TV use 0054)
Symphonic	0000, 0563
Thomas	0000
White Westinghouse	0278 (for TV use 0624)
Zenith	0000, 0637 (for TV use 0624)

Setup Codes For DVD Players

Apex	0672
Denon	0490
Fisher	0670
GE	0522
GPX	0769
Gradiente	0651
Hitachi	0573, 0664
Hiteker	0672
JVC	0558, 0623
Kenwood	0534
Konka	0711, 0719
Magnavox	0503
Magnavox	0675
Marantz	0539
Mitsubishi	0521
Onkyo	0503
Optimus	0571
Oritron	0651
Panasonic	0490, 0677, 0632
Philips	0503, 0539
Pioneer	0525, 0571, 0632
Proscan	0522
RCA	0522, 0571
Samsung	0573
Sanyo	0670
Sony	0533
Technics	0490
Theta Digital	0571
Toshiba	0503
Yamaha	0490, 0545
Zenith	0503, 0591

Setup Codes For Cable Converters

Allegro	0153, 0315
Antronix	0022
Archer	0153, 0797, 0022
Cabletenna	0022
Cableview	0022
Century	0153
Citizen	0153, 0315
Colour Voice	0025, 0031
Comtronics	0040
Contec	0019
Eastern	0002
Emerson	0797
Everquest	0015, 0040
Focus	0400
Garrard	0153
Gemini	0015, 0797
General Instrument	0476
GoldStar	0040
Goodmind	0797
Hamlin	0020
Jasco	0015, 0153, 0315
Jerrold	0476, 0012, 0015
Magnavox	0027
Memorex	0000
Motorola	0476
Movie Time	0063
NSC	0063
Novaplex	0618
Oak	0019
Optimus	0021
Panasonic	0000, 0021
Paragon	0000
Philips	0305, 0153, 0025, 0031, 0027
Pioneer	0877, 0533
Pioneer	0533
Popular Mechanics	0400
Pulsar	0000
Quasar	0000
RCA	0021
RadioShack	0015, 0315, 0797, 0883
Recoton	0400
Regal	0020
Regency	0002
Runco	0000
SL Marx	0040
Samsung	0040
Scientific Atlanta	0477, 0877
Signal	0015, 0040
Sprucer	0021
Starcom	0015
Stargate	0015, 0040, 0797
Starquest	0015
TV86	0063
Teleview	0040
Timeless	0418
Tocom	0012
Toshiba	0000
Tusa	0015
Unika	0153, 0022
Universal	0153, 0022
Viewmaster	0883
Viewstar	0063, 0027
Zenith	0525, 0000
Zentek	0400

Setup Codes For Satellite Receivers

AlphaStar	0772
Echostar	0775, 1005
Expressvu	0775
GE	0566
General Instrument	0361, 0627, 0869
HTS	0775
Hitachi	0819
Hughes Network Systems	0749
JVC	0775
Jerrold	0361, 0627
Magnavox	0724, 0722
Memorex	0724
Mitsubishi	0749
Next Level	0869
Panasonic	0701
Philips	0749, 0724, 0722, 1076
Primestar	0361, 0627
Proscan	0392
RCA	0566, 0143, 0855, 0392
RadioShack	0869
Samsung	1109
Sony	0639
Star Choice	0869
Toshiba	0749, 0790
Uniden	0724, 0722
Zenith	0856

Setup Codes For CD Players

Aiwa	0157, 0124
Burmester	0420
California Audio Labs	0029, 0303
Carver	0157, 0179
DKK	0000
Denon	0003
Emerson	0305
Fisher	0179
Garrard	0420
Genexxa	0032, 0305
Harman/Kardon	0157, 0173
Hitachi	0032
JVC	0072
Kenwood	0826, 0626, 0028, 0037, 0190
Krell	0157
LXI	0305
Linn	0157
MCS	0029
MTC	0420
Magnavox	0157, 0305
Marantz	0626, 0029, 0157, 0180
Mission	0157
NSM	0157
Onkyo	0101
Optimus	1063, 0032, 0000, 0179, 0305, 0037, 0420, 0145, 0468
Panasonic	0029, 0303
Parasound	0420
Philips	0626, 0157
Pioneer	1063, 0032, 0305, 0468
Polk Audio	0157
Proton	0157
QED	0157
Quasar	0029
RCA	0032, 0179, 0305, 0053, 0468
Realistic	0179, 0420, 0180
Rotel	0157, 0420
SAE	0157
Sansui	0157, 0305
Sanyo	0179
Scott	0305
Sears	0305
Sharp	0861, 0037, 0180
Sherwood	1067, 0180
Sonic Frontiers	0157
Sony	0490, 0000, 0185
Soundesign	0145
Tascam	0420
Teac	0420, 0180
Technics	0029, 0303
Victor	0072
Wards	0157, 0053
Yamaha	0888, 0036, 0187

Setup Codes For Audio Amplifiers

GE	0078
JVC	0331
Sony	0689
Soundesign	0078
Victor	0331
Wards	0078
Yamaha	0354

Setup Codes For Audio Receivers

ADC	0531
Aiwa	1089, 1405, 0158, 0121
Capetronic	0531
Carver	1089, 1189, 0042, 0360
Casio	0195
Clarinette	0195
Denon	1104, 1160
Fisher	0042, 0360, 0219
Garrard	0463
Harman/Kardon	0110
JBL	0110
JVC	0074
Kenwood	1313, 1027, 1570, 1569, 0186, 0042
Lloyd's	0195
MCS	0039
Magnavox	1089, 1189, 0531, 0195, 0391
Marantz	1089, 1189, 0039
Modulaire	0195
NAD	0320
Nakamichi	0097, 0347
Onkyo	0135
Optimus	1023, 0531, 0670, 0186, 0042, 0219
Panasonic	1518, 0039
Penney	0195
Philips	1089, 1189, 1269, 1120
Philips	0391
Pioneer	1023, 0531, 0630
Proscan	1254
Quasar	0039
RCA	1023, 1254, 0531, 0360, 0530
Realistic	0195
Sansui	1089
Sanyo	0219
Sharp	0186
Sherwood	0491, 0502
Sony	1058, 1158, 1258, 0158, 0474
Soundesign	0670
Sunfire	1313
Teac	0463
Technics	1308, 1309, 1518, 0039
Thorens	1189
Victor	0074
Wards	0158
Yamaha	0176, 1176, 0186
Yorx	0195

Setup Codes For Miscellaneous Audio

Aiwa	0159, 0010
JVC	0073
Sony	0159, 0010

Setup Codes For Video Accessories

Archer	0160
GC Electronics	0160
Jebsee	0160
RadioShack	0160
TeleCaption	0171

Setup Codes For Home Automation

One For All	0167
Security System	0167
Universal X10	0167
X10	0167

This product has been discontinued and is no longer supported

Download from Www.Somanuals.com. All Manuals Search And Download.

Free Manuals Download Website

http://myh66.com

http://usermanuals.us

http://www.somanuals.com

http://www.4manuals.cc

http://www.manual-lib.com

http://www.404manual.com

http://www.luxmanual.com

http://aubethermostatmanual.com

Golf course search by state

http://golfingnear.com

Email search by domain

http://emailbydomain.com

Auto manuals search

http://auto.somanuals.com

TV manuals search

http://tv.somanuals.com