



## INSTALLATION INSTRUCTIONS FOR PART 99-5808

### APPLICATIONS

2004-2007 Ford Freestar  
2004-2007 Mercury Monterey  
2005-2007 Ford Focus  
2005-2007 F Series Super Duty

# 99-5808



#### KIT FEATURES

- DIN Head Unit Provisions with Pocket
- ISO DIN Head Unit Provisions with Pocket

#### KIT COMPONENTS

A) Radio Housing • B) ISO Brackets • C) Trim Plate



#### WIRING AND ANTENNA CONNECTIONS

(Sold Separately)

- Wiring Harness:
- 70-5520 - Ford harness 2003-up
- 70-5521 - Ford amplified harness 2003-up
- Antenna Adapter: Not required

TOOLS REQUIRED: Socket Wrench



1-800-221-0932



www.metraonline.com

© COPYRIGHT 2004-2009 METRA ELECTRONICS CORPORATION



# 99-5808

## TABLE OF CONTENTS

**Dash Disassembly**

- Ford Freestar 2004-2007 ..... 1
- Mercury Monterey 2004-2007 ..... 1
- Ford Focus 2005 -2007 ..... 1
- F Series Super Duty 2005-2007 .....2

**DIN Head Unit Provision ..... 3**

**ISO DIN Head Unit Provision ..... 3**

**Final Assembly ..... 4**

**Notes ..... 5**





### KNOWLEDGE IS POWER

Enhance your installation and fabrication skills by enrolling in the most recognized and respected mobile electronics school in our industry. Log onto [www.installerinstitute.com](http://www.installerinstitute.com) or call 800-354-6782 for more information and take steps toward a better tomorrow.

## FORD FREESTAR 2004-2007 MERCURY MONTEREY 2004-2007


- 1 Disconnect the negative battery terminal to prevent an accidental short circuit.
- 2 Unsnap and remove entire panel surrounding radio and climate controls. **(FIGURE A)**
- 3 Remove (4) 7mm screws to remove factory radio. **(FIGURE B)**

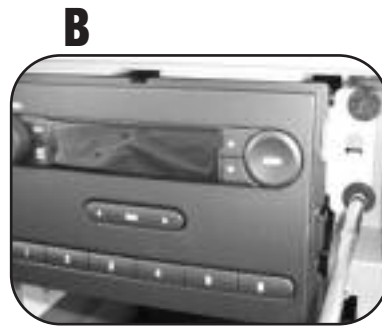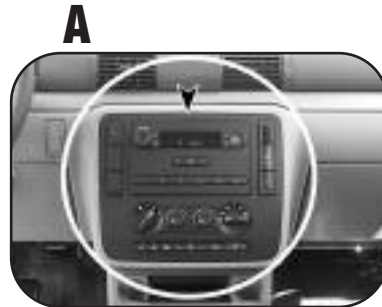

**DASH DISASSEMBLY**


## FORD FOCUS 2005-2007

- 1 Disconnect the negative battery terminal to prevent accidental short circuit.
- 2 Unsnap and remove entire panel surrounding the radio and climate controls. **(FIGURE A)**
- 3 Remove (4) 7mm screws to remove factory radio.

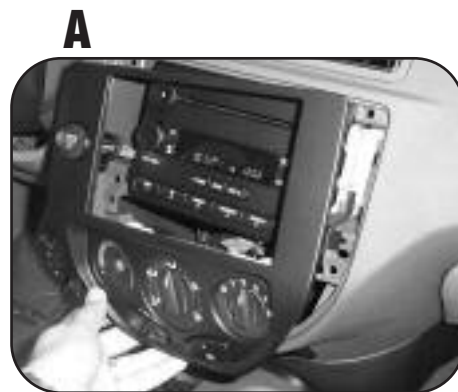


**F SERIES SUPER DUTY 2005-2007**

- 1** Disconnect the negative battery terminal to prevent an accidental short circuit.
- 2** Unsnap and remove entire panel surrounding radio and climate controls. **(FIGURE A)**
- 3** Remove (4) 7mm screws to remove factory radio.

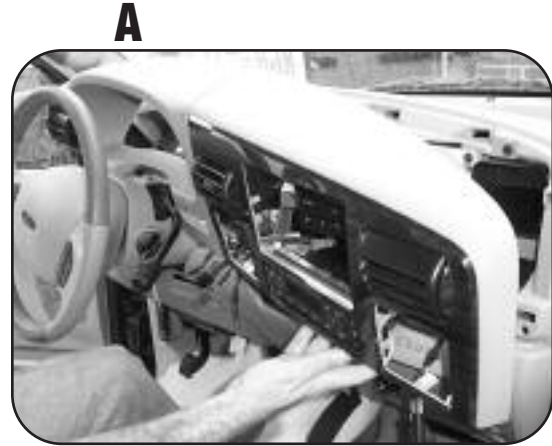


## DIN HEAD UNIT PROVISIONS:


- 1 Slide the DIN cage into the Radio Housing and secure by bending the metal locking tabs down. **(Figure A)**
- 2 Slide the after-market head unit into the cage and secure. **(Figure B)**

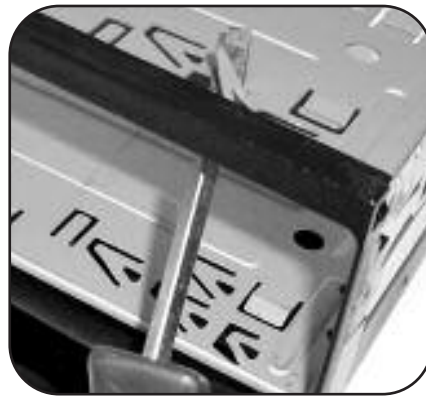

## ISO DIN Head Unit Provision

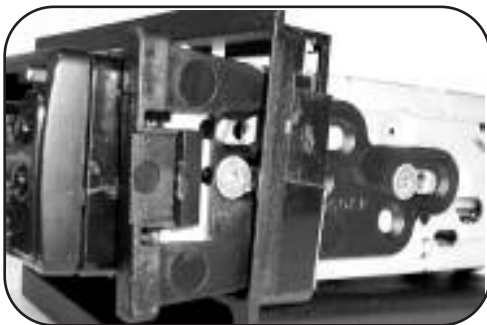

- 1 Mount the ISO Brackets to the head unit with the screws supplied with the unit.
- 2 Slide the head unit into the radio opening until the side clips engage.
- 3 Snap the Trim plate into the Radio Housing.

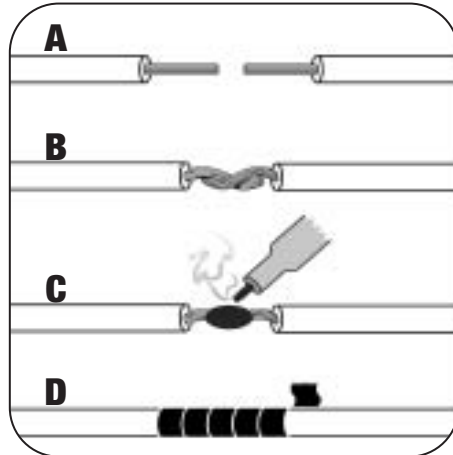**FINAL ASSEMBLY**

- A) Strip wire ends back 1/2"**
- B) Twist ends together**
- C) Solder**
- D) Tape**

- 1** Locate the factory wiring harness in the dash. Metra recommends using the proper mating adapter and making the connections as shown. (Isolate and individually tape off the ends of any unused wires to prevent electrical short circuit)
- 2** Re-connect the negative battery terminal and test the unit for proper operation.
- 3** Reassemble radio and dash assemblies in reverse order of disassembly.



**INST995808**

 **1-800-221-0932**  **[www.metraonline.com](http://www.metraonline.com)**

REV. 04-20-09 © COPYRIGHT 2004-2009 METRA ELECTRONICS CORPORATION INST99-5808



## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>