



INSTALLATION INSTRUCTIONS FOR PART GMLAN11-100

GMLAN11-100

***Read Important Warning On Page 1
Before Attempting Any Installation***

The GMLAN11-100 is designed to and MUST be used with the
GMOS-100i (SOLD SEPERATELY). Please refer to GMOS-100i
for 20 pin connector instructions.

APPLICATIONS

CHEVROLET
Cobalt 2007-10
HHR 2006-10
Malibu 2008-10

PONTIAC
G5 2007-08
G6 2009
Solstice 2006-09

SATURN
Aura 2006-09
Sky 2006-09



1-800-221-0932





axxessinterface.com

© COPYRIGHT 2004-2010 METRA ELECTRONICS CORPORATION



INTERFACE COMPONENTS

•A) 4 pin harness with stripped leads •B) 22 pin to 30 pin GMLAN car side harness

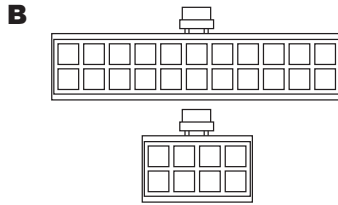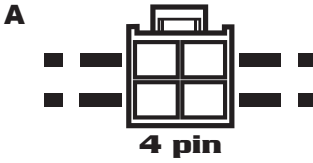

TOOLS REQUIRED FOR INSTALLATION

•Cutting Tool •Tape •Crimping Tool •Connectors (I.E. butt-connectors, bell caps, ECT...)








TABLE OF CONTENTS

Installing The Interface	1
Installing The GMLAN11-100	1
Programming SWC	2
Testing The GMLAN11-100	2

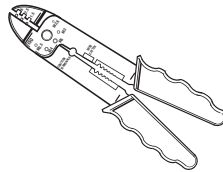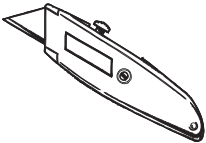

KNOWLEDGE IS POWER

Enhance your installation and fabrication skills by enrolling in the most recognized and respected mobile electronics school in our industry. Log onto www.installerinstitute.com or call 800-354-6782 for more information and take steps toward a better tomorrow.



Metra recommends MECP certified technicians



***Important: Before beginning any of the following, disconnect the negative battery terminal to prevent an accidental short circuit.**

INSTALLING THE INTERFACE

From the 22 way harness:

- Connect the Black wire with the ring terminal to the back of the aftermarket radios chassis
- Connect the 3.5mm jack to your aftermarket radios steering wheel control input (if equipped)

From the 30 way harness:

- Connect the Black wire to the ground wire of the aftermarket radio
- Connect the RCA's on 8 pin harness to the AUX in on the aftermarket radio (if equipped)

The XIA-LCD is need to view Satellite stations (sold separately)

- Connect the Yellow wire to the constant wire of the aftermarket radio.

The GMLAN11-100 comes set up for amplified systems. If the vehicle is not amplified disconnect the 4 pin harness located between the 30 way and 22 way connector.

Connect the supplied 4 pin speaker harness and connect the following:

- Connect the Violet wire to the right rear positive wire of the aftermarket radio
- Connect the Violet/Black wire to the right rear negative wire of the aftermarket radio
- Connect the Green wire to the left rear positive wire of the aftermarket radio
- Connect the Green/Black wire to the left rear negative wire of the aftermarket radio

INSTALLING THE GMLAN11-100

- With all the connections completed, plug the 20, 22, and 8 pin harnesses into the GMOS-100i (sold separately).



- Reconnect the negative battery terminal.
- Plug the 30 pin GM harness into the vehicle side harness, and plug the aftermarket radio harness into the aftermarket radio.
- Cycle the key by turning the ignition on then back off, then back on again to test the radio.

PROGRAMMING SWC

- Turn on the ignition
- The LED will begin to blink rapidly

The following buttons must be pressed in the following order:

Volume up, Seek up, Band, PTT/Mute, Fan up (Each button press will be acknowledged with the LED on steadily)

If any of the above buttons are not present, substitute with Volume up. For example, if a vehicle does not Band and Fan up, you would press Volume up, Seek up, Volume up, PTT/MUTE, Volume up.

After you have pressed five buttons, the LED will turn off, then blink a number of times according to the detected vehicle type. If SWC does not recognize, please note the number of blinks and contact tech support.

If you press the buttons incorrectly, turn off the ignition and repeat the above steps. If you do it wrong, it can be done again by pressing the volume up button for 15 seconds until the LED goes into fast blink mode again.

TESTING THE GMLAN11-100

- Turn the ignition on, and then turn the aftermarket radio on.
- Push the Onstar button, the radio should turn off (radio will mute if mute wire is connected) and you should hear Onstar.
- Push the Onstar cancel button and the radio should come back on.



INSTALLATION INSTRUCTIONS FOR PART GMLAN11-100

REV. 4/2/2010



1-800-221-0932



axxessinterface.com

© COPYRIGHT 2004-2010 METRA ELECTRONICS CORPORATION

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>