


Part # CHR-SMOOCH-X

April 2006

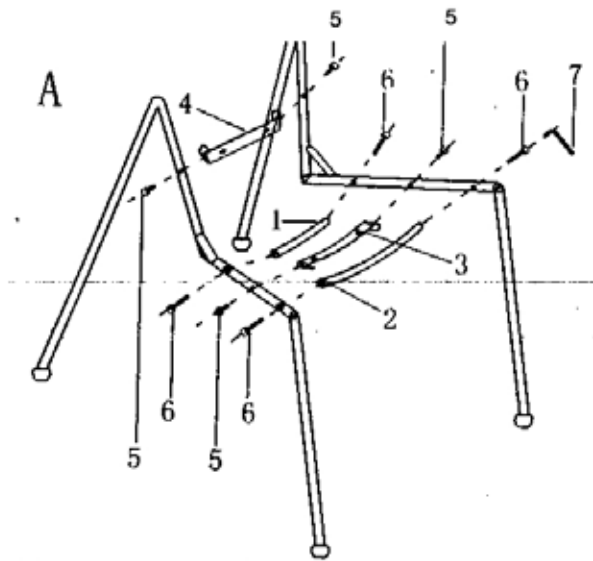


Step 1: Place short pontil 1 in proper position, then use screw 6 to fix it, but not too tight on both ends.

Step 2: Place long pontil 2 in proper position, then use screw 6 to fix it, but not too tight on both ends.


Step 3: Place long plank 3 in proper position, then use screw 5 to fix it, but not too tight on both ends.

Step 4: Place short plank 4 in proper position, then use screw 5 to fix it on both ends.


Step 5: Use screwdriver 7 to tighten all screws.

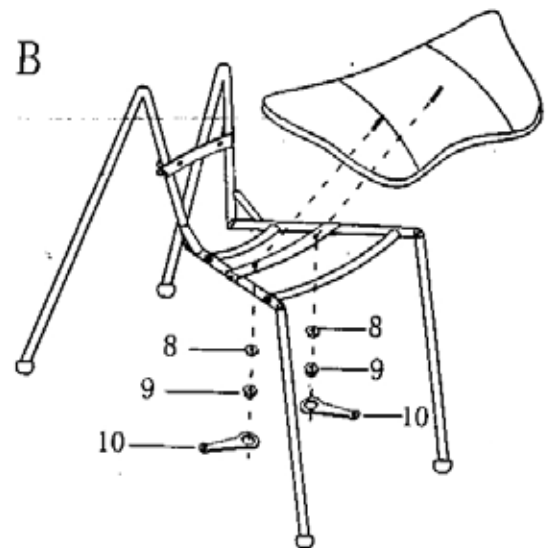

Step 6: Put the bottom cushion on metal frame, then let the screws get through the pole on plank 3, use nut 8 to fix it and place nut 9 on nut 8, then use wrench 10 to tighten the nuts.

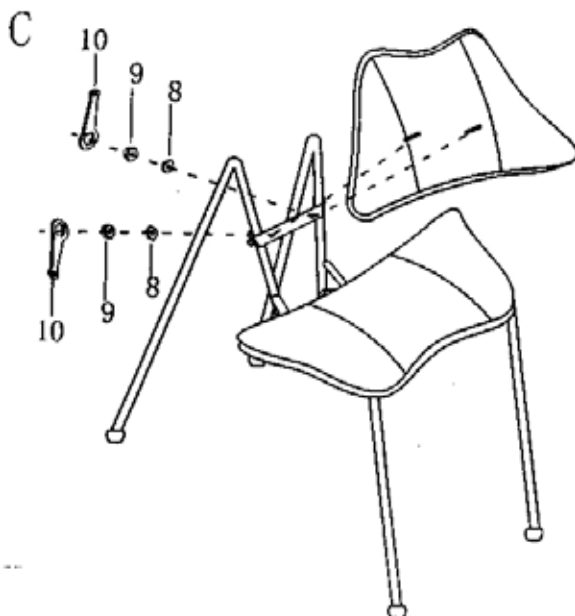

Step 7: Place top cushion onto metal frame, you must push HARD! Assemble nuts 8 and 9 as in step 6.

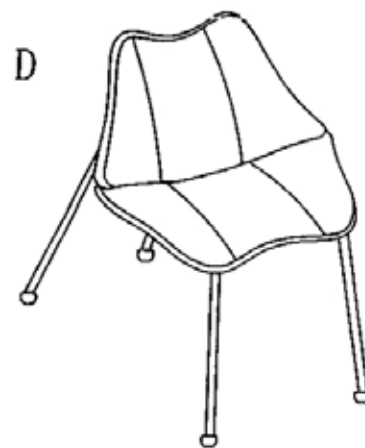

Finished chair

Number	Picture	Description	Qty
1		Short pontil Ø14*L180mm	1
2		Long pontil Ø14*L300mm	1
3		Long plank L270mm	1
4		Short plank L230mm	1
5		Screw M6*20	4
6		Screw M6*25	4
7		Screwdriver H15	1
8		Nut M8	4
9		Nut M8	4
10		Wrench H14	1

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>