




## PP-TL INSTALLATION INSTRUCTIONS

**WARNING:** For added safety and ease of installation, use a qualified professional to properly install the correct mounting accessories. The mounting surface being used must hold the weight requirements indicated on your TV mount instruction sheet. If monitor size is greater than 27", model PVUM must be used for added stability.

**NOTE:** The lag bolts and washers are used to mount the bracket to the stud through the holes in the back of the ceiling plate. It may be easier to mount the plate first, before assembling the entire product. Use an 1/8" drill bit to drill pilot holes 1-1/2" deep.

1. Set the coupler assembly in place in the center of the ceiling plate.
2. Slide the 1/2" x 3 1/2" bolt through the holes in both parts and secure with the 1/2"-13 Nylock nut.
3. Insert the two (2) M8 x 16mm screw and the two (2) 3/4" flat washers through the adjusting slots on either side of the bracket and then screw them into the holes in the coupler assembly.
4. Tighten the screws after determining the proper angle for the coupler.
5. Use the M6 x 12mm set screw to secure the connecting pipe.
6. Use a pipe wrench to secure all the connections.

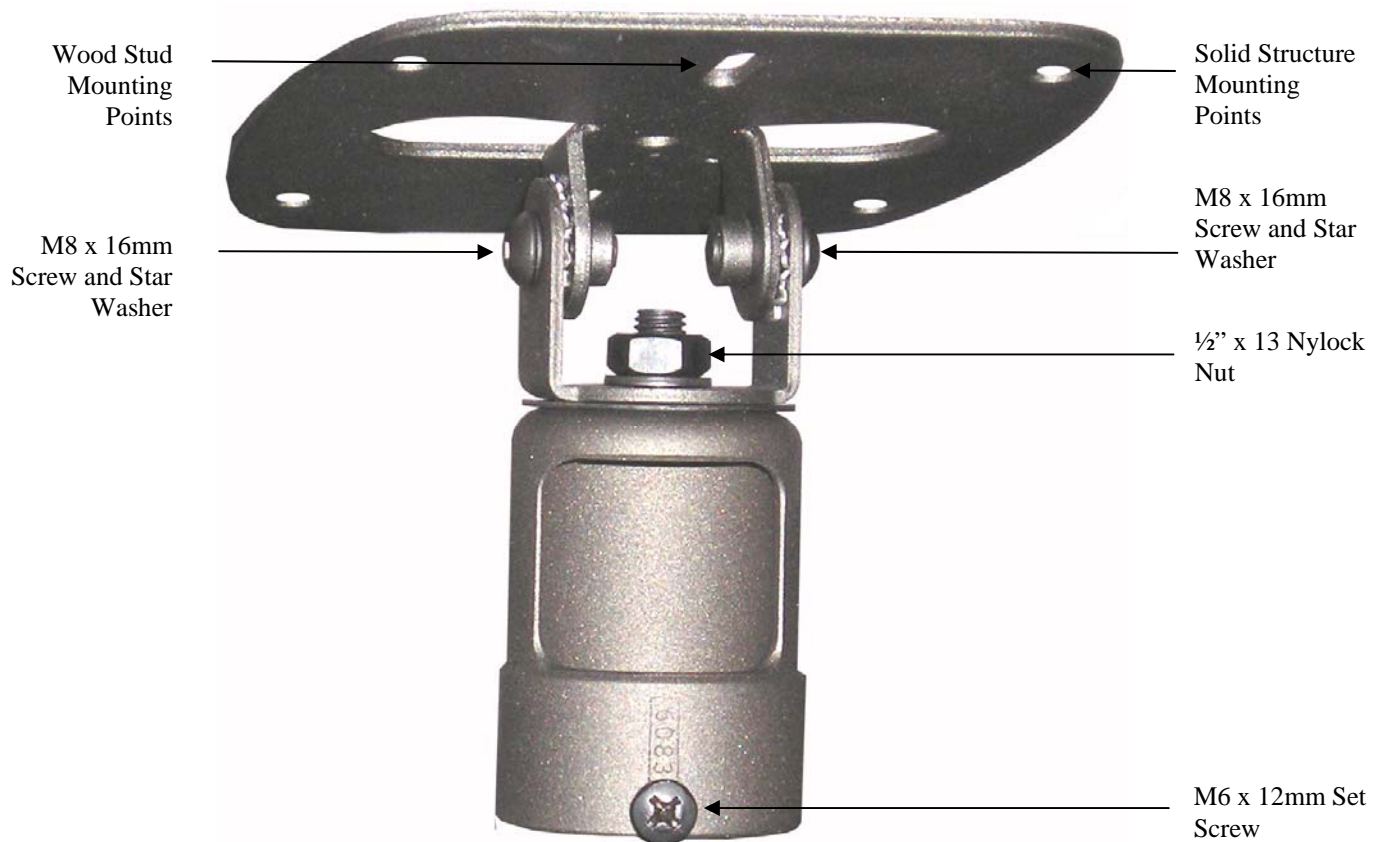

**Figure 1. PP-TL Assembly**

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>