


PDS-023 Projector Bracket Installation Instructions




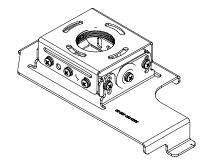



Premier Mounts 3130 E. Miraloma Ave. Anaheim, CA 92806 Phone: (800) 368-9700 Fax: (800) 832-4888 techsupport@mounts.com www.mounts.com

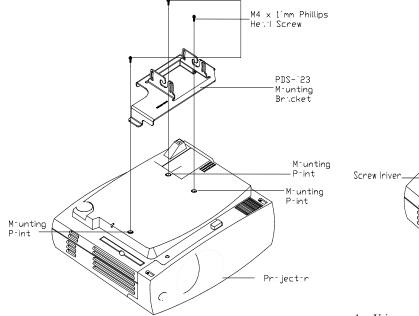

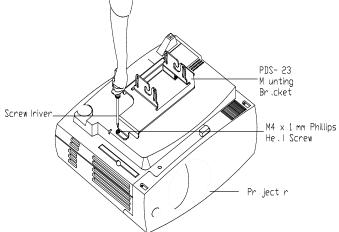

- 1. Invert the projector and place it on a soft and flat surface. Remove any foot levelers that might possibly prevent the correct installation of the bracket.
- 2. Locate the three mounting points located on the bottom of the projector.
- 3. Line up the mounting points on the projector with the mounting holes on the PDS-023 mounting bracket.
- Using a screwdriver, secure the PDS-023 mounting bracket using three (3) M4 x 10mm Phillips Head screws. Do not over tighten these screws. Overtightening the screws may result in damaging the threaded inserts on the projector.
- NOTE: Please refer to the PDS Base Box Installation Instructions to attach the PDS Base Box to the PDS-023 mounting bracket.

NOTE: The projector (shown above) is for illustration purposes only.








LOCK-IT[™] Security System

Premier Mounts 3130 E. Miraloma Ave. Anaheim, CA 92806 Phone: (800) 368-9700 Fax: (800) 832-4888 techsupport@mounts.com www.mounts.com

- NOTE: To utilize the LOCK-IT[™] Security System, all M6 x 12mm Phillips Pan Head screws (A) must be removed prior to installing the M6 x 12mm Security Screws (D).
- 1. Remove all pre-installed M6 x 12mm Phillips Pan Head screws (A 6 total).
- 2. Use the M5 Security Wrench (**B** supplied) to install and tighten the M6 x 12mm Security Screws (D).
- 3. Using the security wrench (supplied), remove the M6 x 8mm standard set screw and replace it with the M6 x 8mm security set screw (**C**).
- 4. Insert the nylon washer (G), 1/4" flat washer (H) and the M6 x 12mm Security Screw (D) into the pivot point (I).
- 5. Attach bracket to projector using security screws.
- 6. Once the Phillips Pan Head screws have been replaced with the security screws, re-attach the bracket (E) to the mount (F).
- 7. Insert the four tilt adjustment security screws (two per side).
- 8. Follow the instructions in the PDS Manual to complete the installation.

Mounting Bracket Security Screws

1. Using a security wrench (supplied), secure the PDS-023 mounting bracket using three (3) M4 x 10mm Security Head screws. Do not over tighten these screws. Overtightening the screws may result in damaging the threaded inserts on the projector.

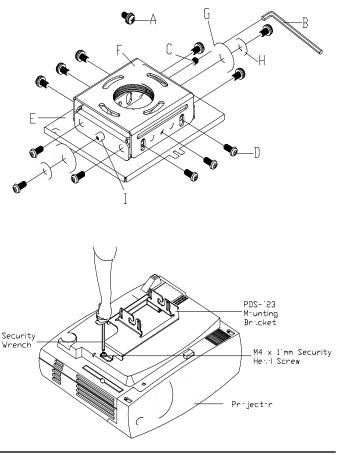

Installation Instructions

Free Manuals Download Website <u>http://myh66.com</u> <u>http://usermanuals.us</u> <u>http://www.somanuals.com</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.com</u> <u>http://www.404manual.com</u> <u>http://www.luxmanual.com</u> <u>http://aubethermostatmanual.com</u> Golf course search by state

http://golfingnear.com Email search by domain

http://emailbydomain.com Auto manuals search

http://auto.somanuals.com TV manuals search

http://tv.somanuals.com