



**SonyEricsson W350a**

**Carrier: AT&T**

**Software tested:** R11AA004prg1205-7398\_CINGULAR\_JH R11AA004

**How to find the software version:** On the Home screen press **RightCursor** → \* → **LeftCursor** → **LeftCursor** → \* → **LeftCursor** → \*, then go to **Service Info** → **Software Info**

**Note:** **BMW makes no guarantees or warranties as to the performance of each phone while connected to your BMW via Bluetooth® Wireless Technology. Furthermore, software releases by BMW, the phone supplier or the wireless carrier dated after testing might alter compatibility results.**

**Vehicles compatible:**


- 1-series
- 3-series
- 5-series
- 6-series
- 7-series
- X5
- X6

**Produced after:**

- March 2005
- March 2005
- March 2005
- March 2005
- September 2008
- March 2005
- March 2008

**Pairing Instructions:**

1. Set vehicle in pairing mode. For details please see the vehicle user's manual.
2. To turn on Bluetooth at phone: **Menu** → **Settings** → **Connectivity** → **Bluetooth** → **Turn on**  
 To search for Devices: On the Home screen press **Menu** → **Settings** → **Connectivity** → **Handsfree** → **My Handsfree** → **add**  
 Your phone will display a list of any Bluetooth device(s) that it discovers in range and available to be paired  
  
 Select the name of the Bluetooth enabled device (e.g. BMW xxxx) with which you are pairing. Please note that the Bluetooth enabled device name may first appear as "Handsfree".
3. Type in a passkey on the cell phone first (on some BMW models like X3, Z4 and 7 series the passkey that is required for this step is fixed. See the car manual for the passkey. On all other cars the passkey can be selected by the user).
4. Then the Confirm Passkey dialog appears in the display of the car:

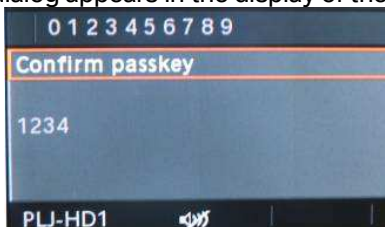



Repeat the passkey that was used on the device to authenticate the cell phone and press Confirm passkey.

---

### Limitations:

- 1. No entries from SIM card are transferred to car kit**  
The telephone directory of the SIM card is not accessible over Bluetooth interface. Please copy entries from SIM card to the internal telephone directory.
- 2. No automatic audio transfer during active call after reconnecting to car kit**  
After phone reconnects automatically to car kit during an active call (Active Call screen displayed at Headunit), user has to transfer audio manually to car kit by Pressing More -> Transfer Sound -> then choose your car identification (BMW xxxxx) -> Select. Call is transferred to hands free then. To come back to usual call screen on phone press OK.  
Scenarios:
  - User turns off Bluetooth on Headunit during an active call and on again.
  - User turns off Bluetooth at handset during an active call and on again.
  - User enters car with active call on handset.
  - User takes handset out of Bluetooth range and re-enters the range area with an active call
- 3. Automatic reconnection to car**  
If phone does not reconnect automatically, please double-check security feature of phone. Press Menu → Settings → Connectivity → Bluetooth → Handsfree → My Handsfree → your car (BMW xxxxx) → Options → Allow connection. Set to "Always allow".
- 4. Call Waiting is not completely supported**
- 5. Transfer sound screen**  
With some car kits the cell phone for each outgoing call will display "Sound in headset. Transfer to phone?" yes / no. The user can select no to make the message go away and the call will continue in handsfree mode

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>