

Installation

LGA 1366 Standard Cooler

Installation Process

- 1 Position heat sink over the processor. Align fasteners with motherboard hole pattern (see Figure 1).
- 2 Thumb pressure to the top of each of the 4 fastener caps (see Figure 2). You will hear an audible "click" upon full engagement.
- 3 Make sure all the fasteners are fully engaged. Installation is now complete (see Figure 3).

Remove Process

- 1 Turn the cap conter-clockwise to the finish position. (See the Figure 4.)
- 2 Pull up the Cap, thus releasing the fastener from the motherboard. Repeat this step for each fastener. (See the Figure 4.)

Figure 1

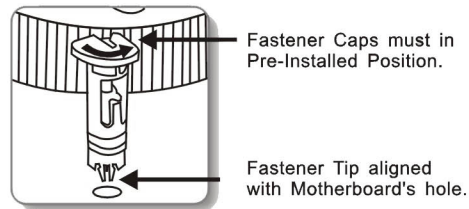


Figure 2

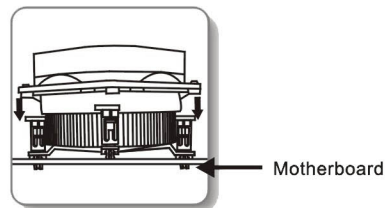


Figure 3


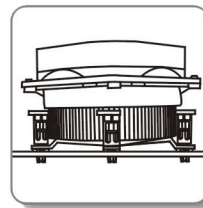


Figure 4

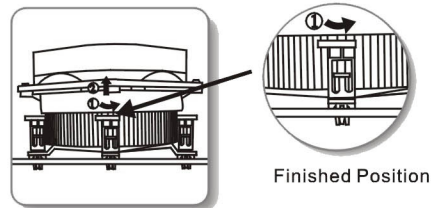

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>