

1994 TOYOTA TRUCK WITH 4 CYL. ENGINE THROTTLE LEVER ADAPTOR PACKAGE 250-3642

1. Remove the throttle shaft nut and lock washer from the throttle shaft. Install the Throttle Lever Bracket. Reinstall the lock washer and hex nut. **NOTE:** Start the nut by hand to prevent cross-threading. Do not over tighten.
2. Install the Snap-in adapter from the cruise control kit onto the cruise control cable. **NOTE:** A minimum of 1/8" of the cruise control cable must be exposed past the end of the snap-in adaptor. See Figure 1.

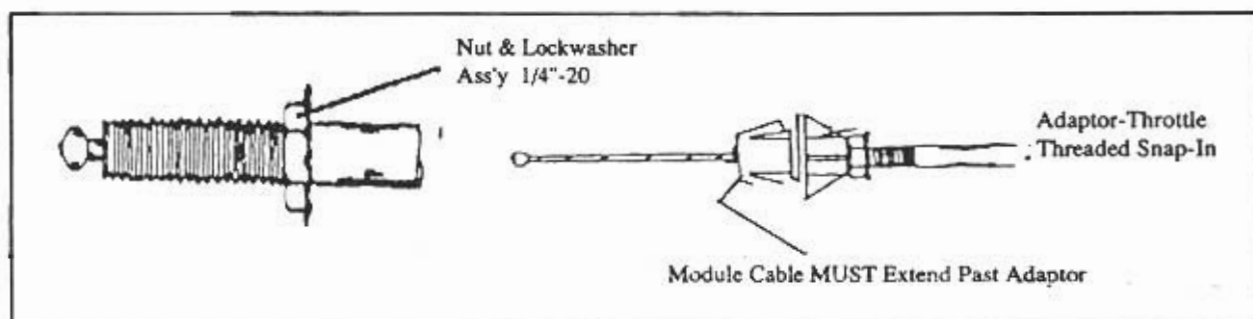


Figure 1

3. Install the cruise control cable bracket on vehicle accelerator cable bracket by loosening only the REAR accelerator cable nut and inserting the cable bracket between the nut and vehicle accelerator cable bracket. Retighten the accelerator cable nut.
4. Install cruise control cable into cable bracket by pushing the snap-in adaptor into the square hole of the cable bracket.

5. Connect cruise control cable to the throttle lever using bead chain and the eyelet connector from the cruise kit. Secure the eyelet connector to the throttle lever using the two plain washers and self-locking pin provided in the throttle adaptor kit. See Figure 2.

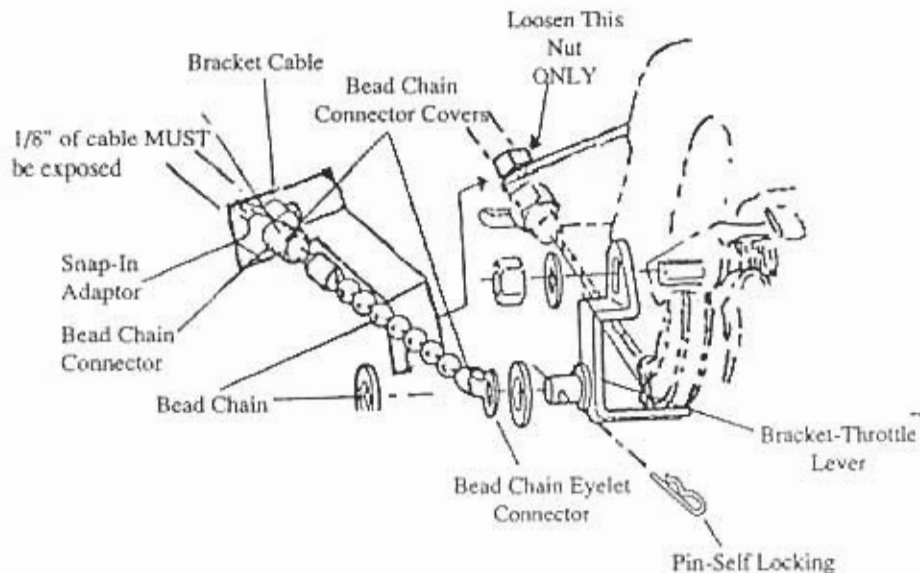


Figure 2

6. Insure that the cruise control cable is not holding the throttle open in any way and allows freedom of movement without possibility of binding or hanging up.



ALL RIGHTS RESERVED PRINTED IN THE USA

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>