


# T8200HRC ASSEMBLY INSTRUCTIONS

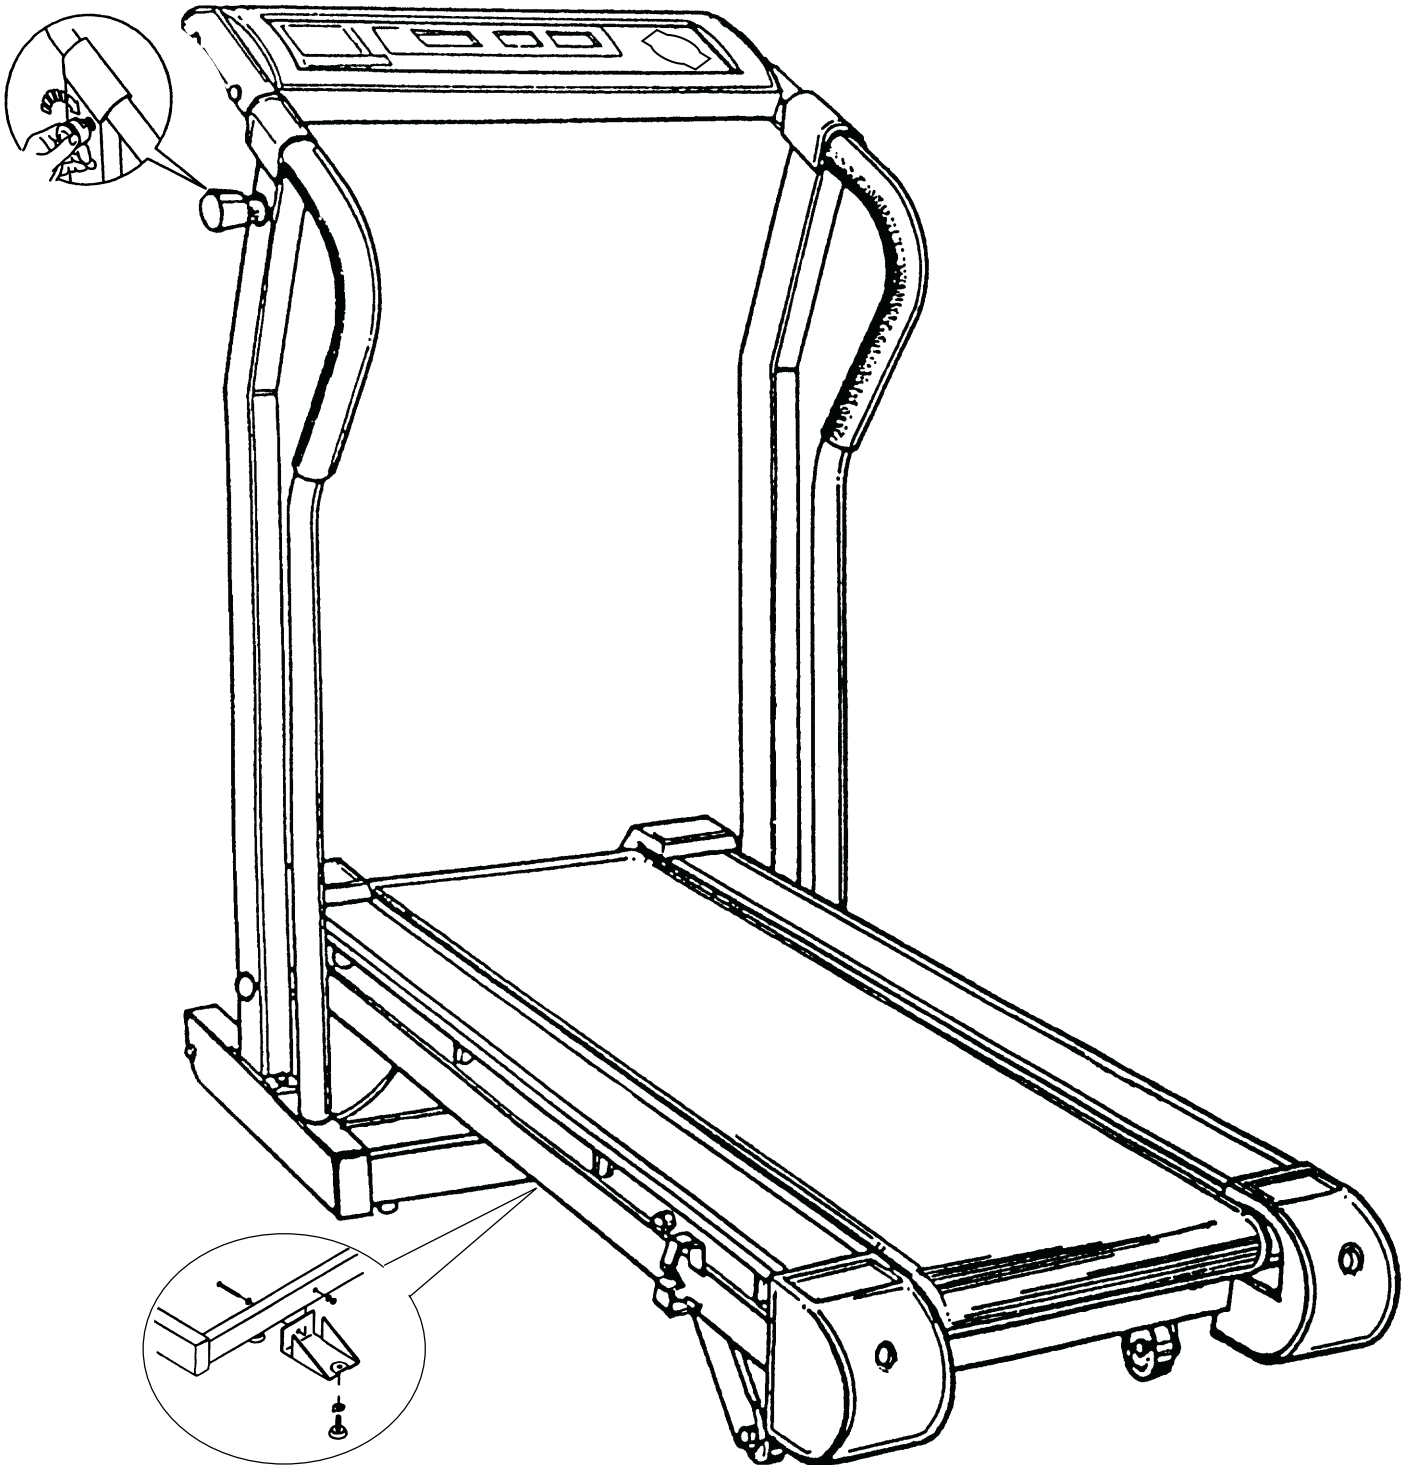

## 1) ATTACH LOCKING KNOB

Thread the locking knob into the left side support.

## 2) ATTACH FRAME STABILIZER

Thread the rubber based foot into the frame stabilizer, so that the rubber side will rest on the floor. Attach the frame stabilizer to the frame using the enclosed 5 mm allen wrench and bolt.

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>