

Setup Instructions

Spiderlite TD5 Large Daylight Kit Plus


Style Series: 4893

Description

This kit serves as an ideal main or fill light providing over 900 watts of power utilizing Westcott's new and powerful 50-watt fluorescent lamps. These lamps give you the natural look of window light or daylight 24 hours a day. When shooting in a tight space, these lamps generate little heat and are rated for over 8,000 hours of use. This kit comes standard with a 36" x 48" Soft Box, fluorescent lamps, 10' heavy-duty light stand and carry case and provide solutions for varying applications. Instructional DVD included featuring Master Photographer James Schmelzer.

Product Contains

- [1] Spiderlite TD5
- [1] Tilter Bracket
- [1] 36" x 48" Silver Soft Box
- [4] 50-watt fluorescent Lamps
- [1] 20-watt fluorescent Lamp
- [1] 10' Heavy-Duty Light Stand
- [1] Location Travel Case
- [1] Instructional DVD - Volume 2

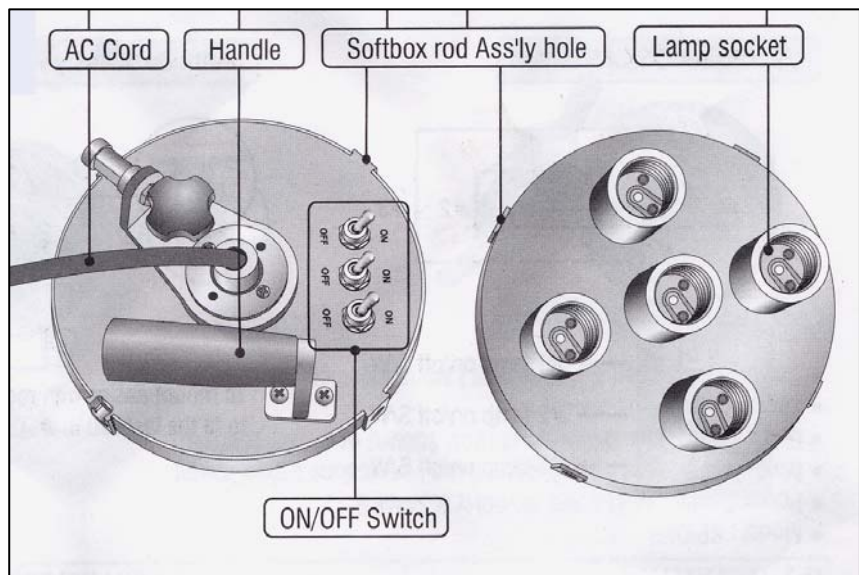

INSTRUCTIONS

Set up the included light stand(s) and adjust to your required height using the turn knobs located on the stem of the stand. Secure each knob to lock into place.

Attach the included tilter bracket(s) onto the top of the light stand insuring the umbrella receptacle is located towards the top. Tighten knob to lock into place.

Next, insert the support rods into the rod sleeves in the corner of the fabric shell of the included **soft box(es)** all the way into the end of the pockets. Before putting on the exterior diffusion panel, place the soft box onto a table or the floor and spread rods apart so the soft box is rectangular in shape. Insert one rod into the hole located on the Spiderlite TD5 head next to the slotted hole. Insert the next rod into the hole directly across from the first hole. Repeat the steps using the two open holes. The slotted hole should be the last rod you insert.

With the soft box attached, place the Spiderlite TD5 onto the tilter bracket by inserting the gold stud into the open hole located on the top of the tilter bracket. Tighten knob to lock into place. The light can be tilted by using the outside larger handle located on the side of the tilter bracket.

Insuring the unit is not plugged in, place your (5) lamps into the (5) sockets located on the Spiderlite TD5. If you are using the (5) pack of Westcott's new 50-watt Daylight Balanced Fluorescent lamps, the smaller 20-watt lamp included goes into the center socket. This lamp must be inserted first. The (4) remaining 50-watt lamps will go into the (4) outer sockets.

Next, the external soft box diffuser may be fastened onto the front of the soft box. The external diffusion panel can be used in either the recessed or flat front positions. It is not recommended to use the internal baffle in conjunction with the fluorescent lamps.

Plug your light in, power it using the three controls located on the back of the Spiderlite TD5. You are now ready to begin.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>