



MODEL CP-250

INSTALLATION GUIDE FOR:

CHRYSLER, PLYMOUTH, & DODGE VEHICLES

Printed in Korea

Form No. 128-4729A

RADIO PREPARATION:

1. Select two of the five mounting tabs provided and match the radio mounting style of the vehicle according to Figures 1 through 3 below.

NOTE: Tab number is stamped on bottom of tab.

2. Attach the mounting tabs to the radio chassis with the two M4 X 5 screws provided.

3. Attach the 14-pin connector harness provided to the radio.

FIG. 1

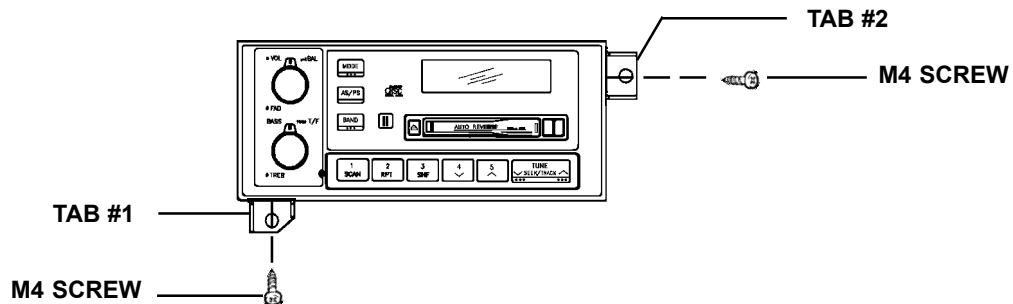


FIG. 2


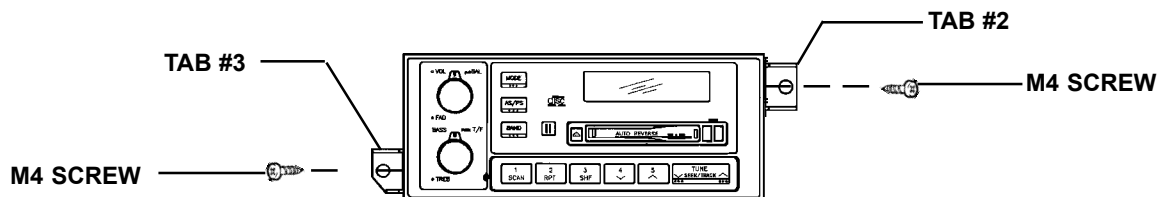



FIG. 3

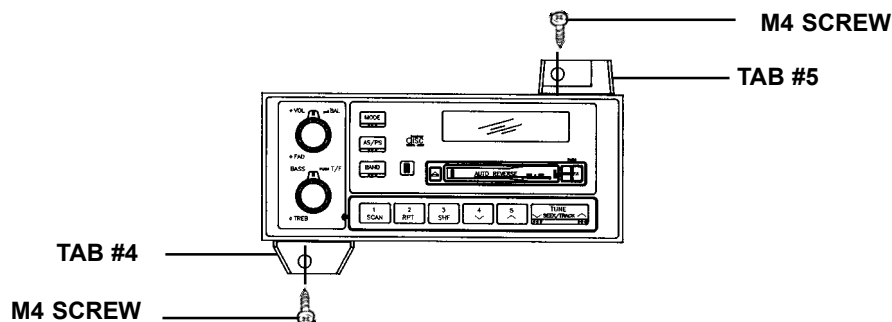

RADIO INSTALLATION:

1. Remove dash panel from vehicle to expose sub-dash.
2. Remove and discard radio dummy panel attached to sub-dash.
NOTE: Do not discard hardware for dummy panel.
3. Pre-wire radio including antenna wire. Attach ring lug on ground wire (black w/white stripe) from radio harness side and the vehicle side grounding strap to the rear of the radio chassis using the M5 x 8 screw provided. See Fig. 4 below.
4. Install radio into sub-dash of vehicle using the M6 x 18 self-tapping screws provided.
5. Conduct a brief performance test to verify proper operation.
6. Replace dash panel.

FIG. 4

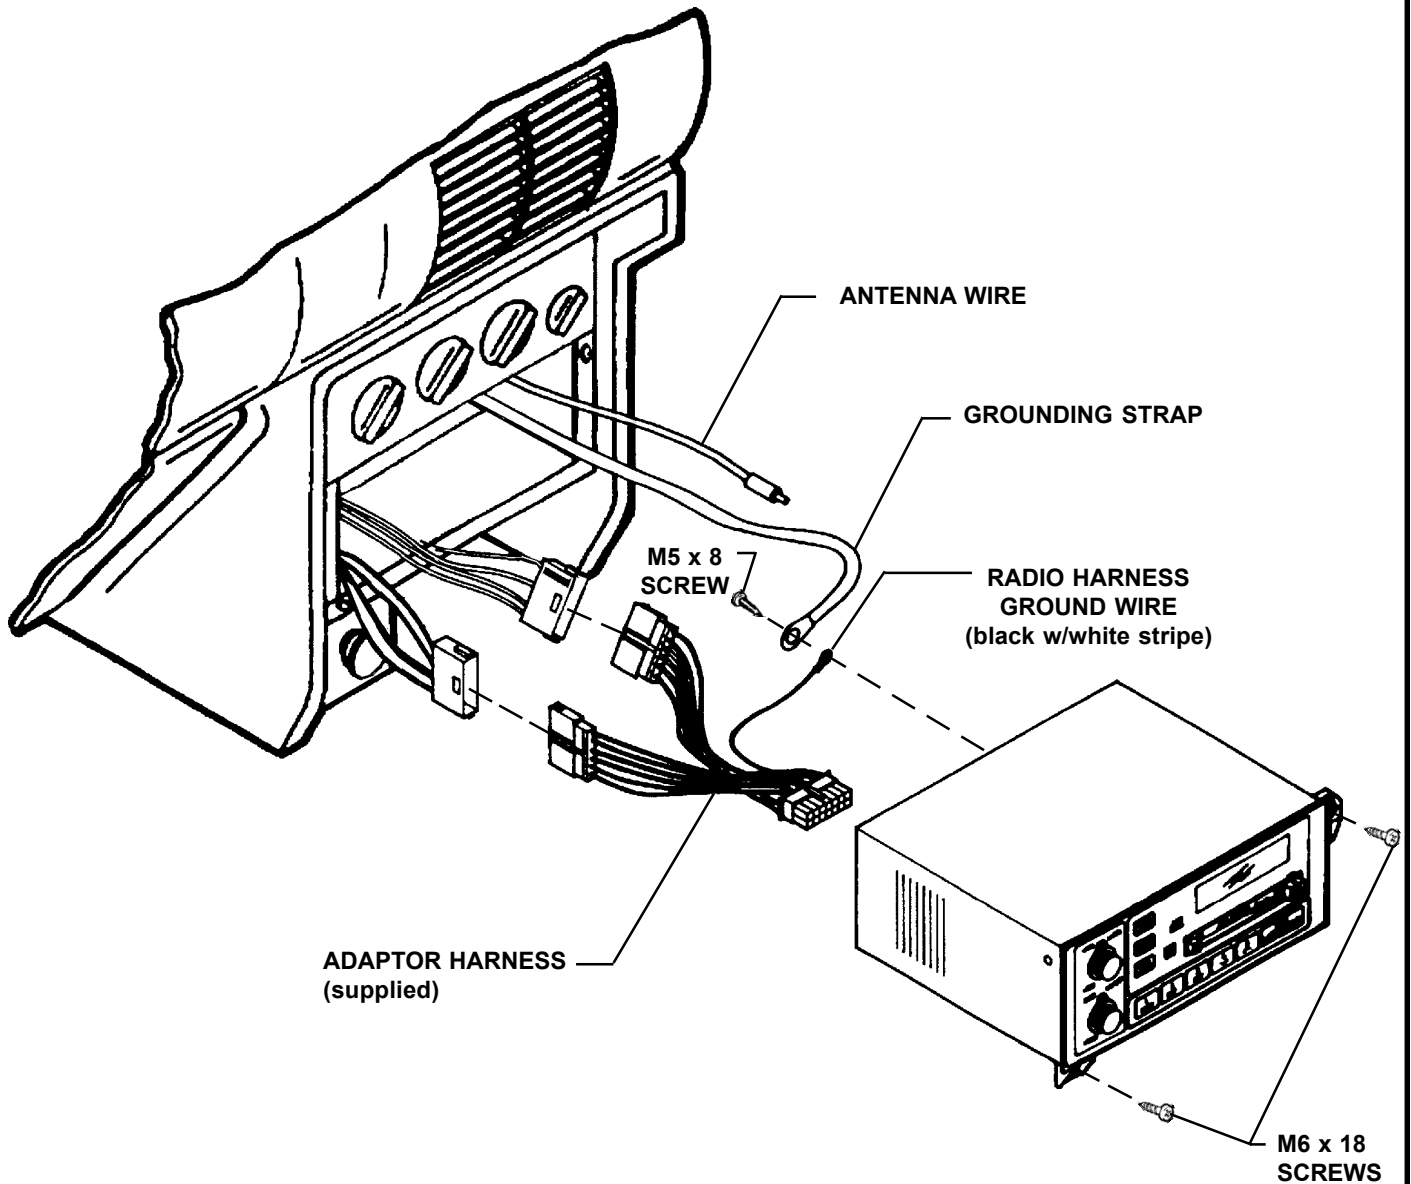

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>