



**Models CDC-FDN & CDC-FDW**

INSTALLATION GUIDE FOR:

**CD CHANGER  
INTERFACE CABLE  
for 1998-99 FORD VEHICLES**

Form No. 128-5399A

**CAUTION:** FOLLOW THE CONNECTION SEQUENCE DESCRIBED BELOW TO ENSURE PROPER RECOGNITION OF THE CD CHANGER BY THE FACTORY RADIO.  
DO NOT FORCE CONNECTORS TOGETHER. LINE UP LOCATING TABS AND CAREFULLY MATE CONNECTORS.

### **INSTALLATION INSTRUCTIONS FOR THE CDC-FDW: (Fig. 1)**

**IMPORTANT :** Installation must be done with vehicle and radio in OFF position.

1. Mount the CD Changer at the desired location in the trunk following the installation instructions supplied with the CD Changer.
2. Carefully connect the 8-pin circular DIN connector from the CDC-FDW to the mating socket on the CD Changer.
3. Route the CDC-FDW cable toward the existing factory CD Changer connector located in the trunk area.
4. With the vehicle off, carefully connect the CDC-FDW female connector to the male factory CD Changer connector.

---

### **INSTALLATION INSTRUCTIONS FOR THE CDC-FDN: (Fig. 2)**

**IMPORTANT :** Installation must be done with vehicle and radio in OFF position.


1. Mount the CD Changer at the desired location either in the center console (CDC-620 only) or in the rear of the vehicle. Refer to the installation instructions supplied with the CD Changer.
2. Carefully connect the 8-pin circular DIN connector from the CDC-FDN to the mating socket on the CD Changer.
3. Route the CDC-FDN cable toward the factory radio.
4. Remove the factory radio from the dash panel using the factory removal tools.
5. Unplug both the J1 power/speaker and the J3 CD Changer connector from rear of the factory radio.
6. Carefully connect the vehicle CD Changer J3 connector to the respective mating connector on the CDC-FDN and CD Changer connector of the CDC-FDN to the respective mating connector at the rear of the radio.
7. Carefully reconnect the vehicle side J1 power/speaker connector to the mating connector at the rear of the factory radio.
8. Depending on the application, connect the Black/Green wire to the ground tab on the back of the factory radio chassis or splice wire to Pin #11 of the vehicle side J1 connector.
9. Either by splicing or using the T-tap provided, connect the Grey/Purple wire from the CDC-FDN to Pin #9 wire of the vehicle side J1 connector.

---


### **OPERATION CHECK:**

1. Load CD's into the CD Changer cartridge and insert the cartridge into the changer.
2. Start vehicle and allow CD Changer to cycle.  
Perform a brief functional test to verify proper operation according to the owner's manual.

# CDC-FDW Installation Diagram (Fig. 1)

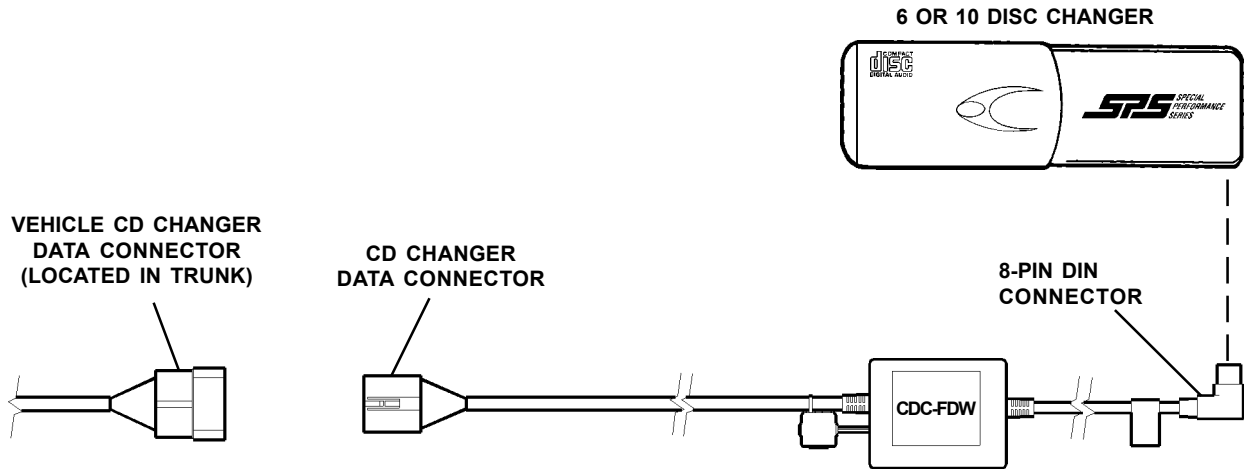

# CDC-FDN Installation Diagram (Fig. 2)

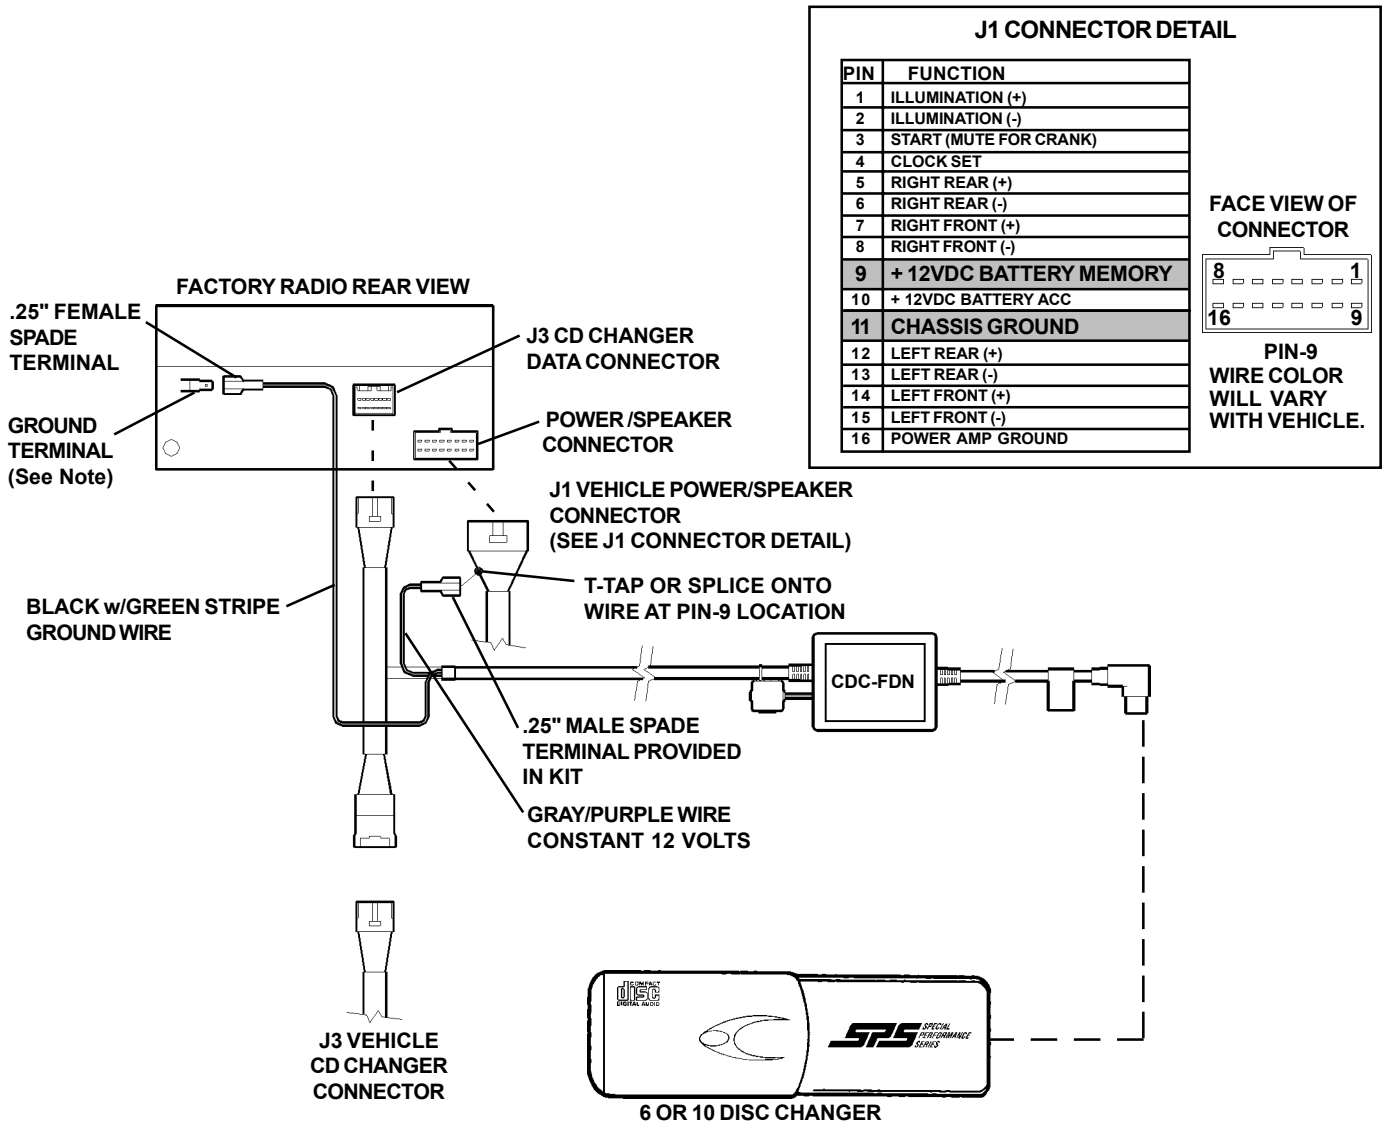

NOTE: For vehicles without ground terminal, splice Black w/Green stripe wire into Pin #11 of the vehicle side J1 connector.

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>