


# ADDONICS TECHNOLOGIES


Model: ADSAIDE44

## Installation Guide


### Front View

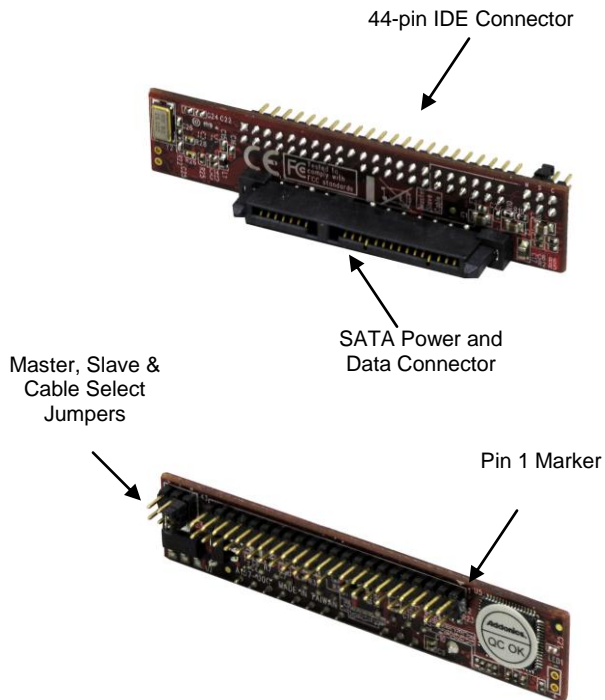


### Jumper Settings



Master



Slave



Cable Select

Note: To set the SATA hard drive as a Master Device when connected to an IDE channel, you need to short the top pins located on the converter by placing a jumper. As a Slave Device short the middle pins.

1. Locate the SATA connector of your 2.5" SATA drive.



15-pin SATA Power & 7-pin Data Connector

2. Connect the converter board to the SATA connector of the hard drive.



3. (Optional) Connect the IDE ribbon cable to the 44-pin connector on the converter. The red edge of the ribbon cable needs to line up to pin 1 marker of the 44-pin connector. The other end of the ribbon cable will be connected to your motherboard's 44-pin IDE channel.



## TECHNICAL SUPPORT

Email: <http://www.addonics.com/sales/>  
Internet: <http://www.addonics.com>

Technical Support (8:30 am to 6:00 pm PST)  
Phone: 408 573-8580  
Email: <http://www.addonics.com/support/ticketid/>

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>