## American Standard


# Installation Instructions

#### **GREEN TEA ACCESSORIES**

TOWEL RING ROBE HOOK DOUBLE ROBE HOOK TISSUE HOLDER 7010.190 7010.210 7010.211 7010.230

Thank you for selecting American-Standard...the benchmark of fine quality for over 100 years.

To ensure that your installation proceeds smoothly--please read instructions carefully before you begin.

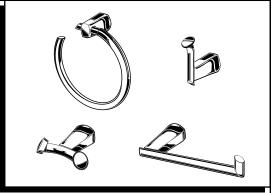


Certified to comply with ANSI A112.18.1

M968630 Rev. 1.1

#### **Recommended Tools**






#### **CARE INSTRUCTIONS:**

DO: SIMPLY RINSE THE PRODUCT CLEAN WITH CLEAR WATER. DRY WITH A SOFT COTTON FLANNEL CLOTH.

DO NOT: CLEAN THE PRODUCT WITH SOAPS, ACID, POLISH, ABRASIVES, HARSH CLEANERS, OR A CLOTH WITH A COARSE SURFACE.

## TOWEL RING, ROBE HOOK and TISSUE HOLDER MOUNTING BRACKET INSTALLATION


- The TOWEL RING, ROBE HOOK and TISSUE HOLDER work best if secured to a wall stud or cross brace within the wall, using 1-1/2" long SCREWS (3) not supplied.
- If the TOWEL RING, ROBE HOOK and TISSUE HOLDER are to be installed on a tile or plaster wall the ANCHORS (4) and SCREWS (2) should be used.
- Determine desired height and location (optional) for the accessory and mark a center line. If MOUNTING BRACKET (1) is secured to a stud or cross brace drill small pilot holes for SCREWS (3). (NOTE PROPER POSITION OF MOUNTING BRACKET FOR ACCESSORY TO BE INSTALLED.)
- For installations on drywall or tiled walls, use ANCHORS (4) and SCREWS (2) for securing MOUNTING BRACKETS (1) to wall. Use MOUNTING BRACKET (1) as a template and mark the mounting holes. Drill three 1/8" diameter holes a minimum of 1-1/4" deep. Insert the three ANCHORS (4) flush with face of the finished wall.
- Secure MOUNTING PLATES (1) to wall with SCREWS (2).

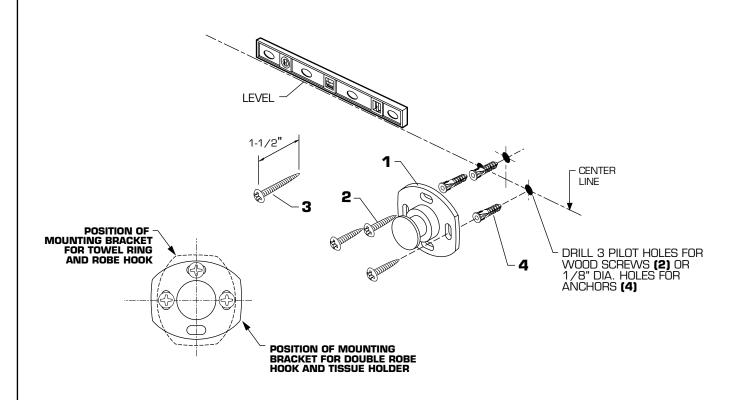

## 2 TOWEL RING INSTALLATION

■ Align accessory (A, B) and place ESCUTCHEON (1) onto MOUNTING BRACKET (2). Secure accesory with SET SCREW (3) using 2.5mm HEX WRENCH (4) supplied.


(NOTE POSITION OF MOUNTING BRACKET.)

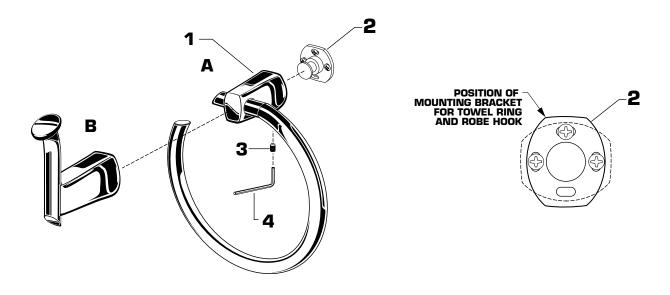

### ROBE HOOK AND TISSUE HOLDER INSTALLATION

Align accessory (C, D) and place ESCUTCHEON (1) onto MOUNTING BRACKET (2). Secure accesory with SET SCREW (3) using 2.5mm HEX WRENCH (4) supplied.

(NOTE POSITION OF MOUNTING BRACKET.)

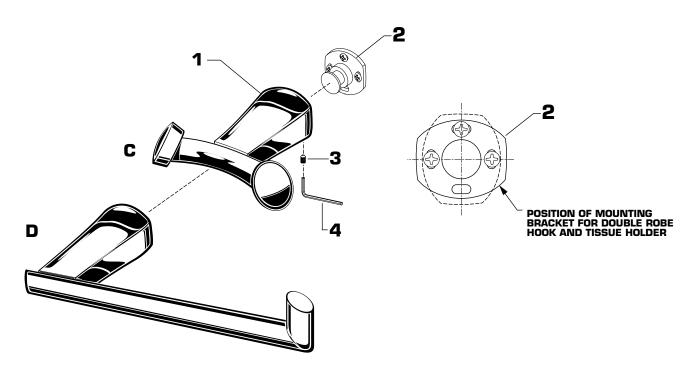

Free Manuals Download Website

http://myh66.com

http://usermanuals.us

http://www.somanuals.com

http://www.4manuals.cc

http://www.manual-lib.com

http://www.404manual.com

http://www.luxmanual.com

http://aubethermostatmanual.com

Golf course search by state

http://golfingnear.com

Email search by domain

http://emailbydomain.com

Auto manuals search

http://auto.somanuals.com

TV manuals search

http://tv.somanuals.com