



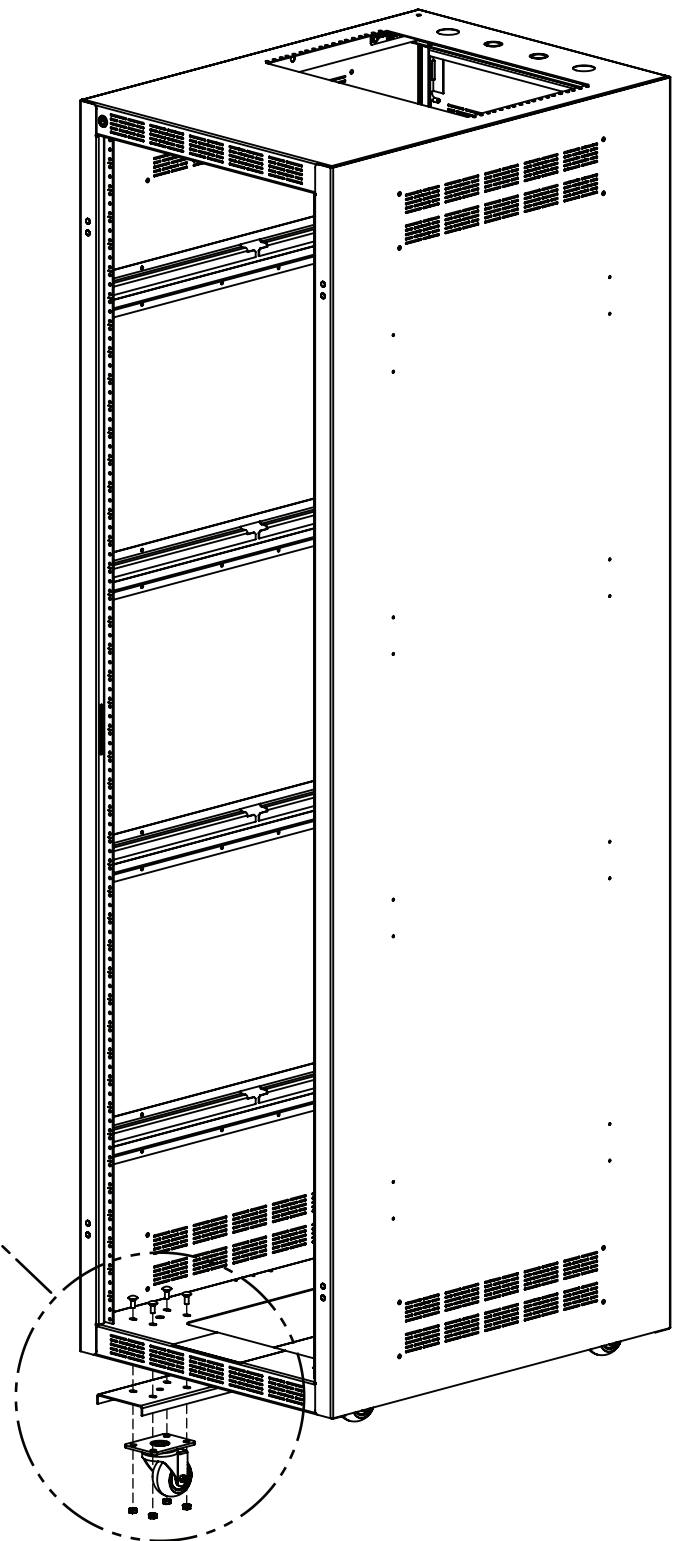

INSTALLATION NOTES:

1. THE 1/4-20 CARRIAGE BOLTS GET INSTALLED FROM THE INSIDE OF THE CABINET.
2. THE BRACKETS AND CASTERS MOUNT UNDERNEATH THE CABINET WITH THE BRACKET FLANGES FACING DOWN. THE BRACKETS ARE DESIGNED TO EXTEND FROM THE FRONT OF THE CABINET TO THE REAR OF THE CABINET.

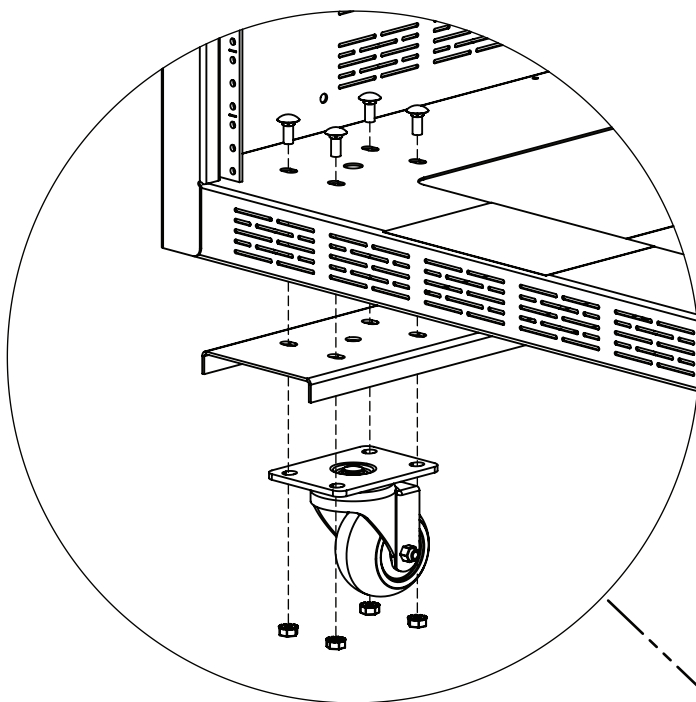

Specifications are subject to change without notice



**Atlas
Sound**

AtlasSound.com

1601 JACK MCKAY BOULEVARD ENNIS, TEXAS 75119 U.S.A. •
©2007 ATLAS SOUND LP

Printed in U.S.A.

TELEPHONE: (800) 876-3333 • FAX: (800) 765-3435
ATS002742 RevA 3/07 PN 491494

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>