

INSTALLATION INSTRUCTIONS

MAZDA 6
(2003-2007)



NOTE: READ INSTRUCTIONS COMPLETELY BEFORE INSTALLING THIS BRACKETRON PHONE MOUNT.


All instructions are written from the drivers seat position looking forward at the vehicle dash. We advise caution whenever you are removing or handling plastic parts of a vehicles dash. **WARNING:** Unnecessary force or pressure can cause pieces to crack or break.

Logo and part number will be right side up and readable when installed.

TOOLS NEEDED: Dash Trim Tool, (Part #SIT-104), #2 Phillips Screwdriver, 10mm socket and driver.


PARTS INCLUDED: One Custom Bezel Mount and Instructions.

LOCATION OF MOUNT: To the right of the air vent.

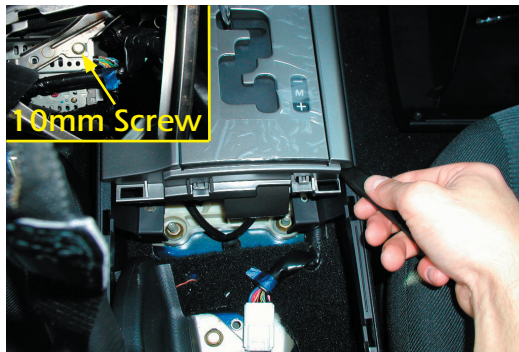

Step 1.

Begin installation by opening the glove box door. Remove the cable attached to the right hand side. Push inward on both sides of the glove box door and release two tabs. Pull the glove box off of its hinges and set aside. With the 10mm socket and driver, locate and remove the horizontal screw inside the glove box cavity. Set the screw aside. **Note:** See inset in top picture for guidance.

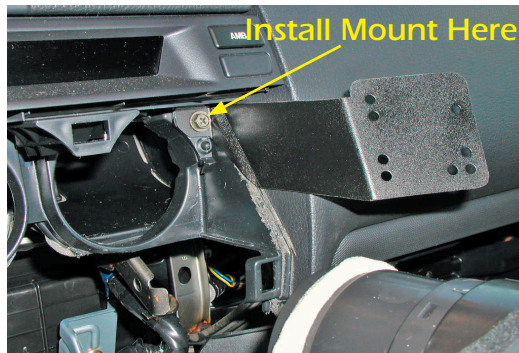

Step 2.

Apply the emergency brake, unscrew the shift knob and set it aside. Use the Dash Trim Tool (Part #SIT-104) to remove the bezel that surrounds the emergency brake lever. There are six clips that secure this bezel to the center console, and two that secure it to the bezel that surrounds the shifter knob. Release these clips and set bezel aside. Continue by releasing the bezel that surrounds the shift knob. There are two clips on each side of this bezel. Disconnect all wiring and set bezel aside.

Step 3.

Locate and remove two Phillips screws from underneath the climate control. Set the screws aside. With manual climate control, remove three control knobs and set aside. Locate and remove two Phillips screws from behind the two outside knobs. Use the Dash Trim Tool to release three clips from each side of the radio. Carefully set the radio on a protective cloth to prevent any scratches.



Step 4.

Locate and Remove one Phillips screw from the upper right corner of the radio cavity and set screw aside. Place **Custom Bezel Mount** over existing screw hole and replace factory screw.

Step 5.

Carefully reinstall the dash in reverse order securing all wiring, clips, and screws. Install any **Bracketron** phone holder or **Amps** compatible device to your **Custom Bezel Mount**. Your installation is complete.

© Bracketron Inc, 2007 All rights reserved.

The information in this document is subject to change without notice. **Bracketron Inc.** assumes no responsibility for any errors that may appear in this document nor do we assume any liability in connection with its use. This supersedes and voids all previous literature. Please contact the sales department for additional information.

Bracketron Inc will not be responsible or liable for damage to vehicles in the installation and or removal of this **Bracketron Inc** mount.

Bracketron Inc will not be liable for personal injuries or damage to property resulting from a motor vehicle accident and or improper installation of this **Bracketron Inc** mount.

Bracketron Inc. 5249 West 73rd Street, Suite G, Edina, MN 55439, Ph: 952-746-7775 Fax: 1-800-660-1784 Toll Free: 1-866-237-4443

Web Address: www.bracketron.com

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>