



DRYWALL, CONCRETE, STUD MOUNT
CLOISON SÈCHE, BÉTON, MONTANT
MONTAJE EN MURO SECO, CONCRETO, MONTANTE

DRYWALL
CLOISON SÈCHE
MURO SECO

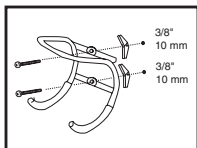


Drill 3/8" holes, use toggle bolts
Perçer des trous de 9 mm; utiliser des boulons à ailettes.
Perfore agujeros de 9 mm, use pemos de palanca

CONCRETE
BÉTON
CONCRETO

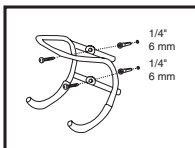


Drill 1/4" holes, use screws and anchors
Perceç des trous de 6 mm; utiliser des vis et des chevilles d'ancrage.
Perfore agujeros de 6 mm, use tornillos y tarugos

STUD
MONTANTE
MONTANT

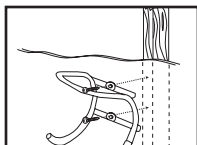


Use screws
Utiliser des vis
Use tornillos

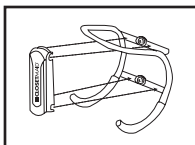

Attach plastic cover
Installer le revêtement de plastique
Instale la cubierta de plástico




MAXIMUM LOAD® STANDARD MOUNT
INSTALLATION MAXIMUM LOAD® SUR RAIL VERTICAL
INSTALACIÓN MAXIMUM LOAD® EN RIEL VERTICAL

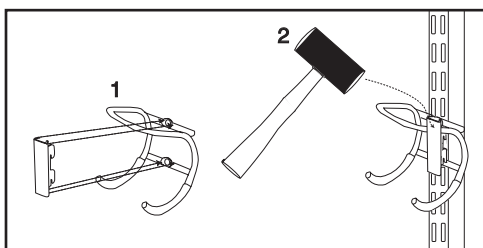

Place bracket against hook. Hold in place; push into slots. Lock with mallet. Snap on plastic cover.

Placer le support contre le crochet. Maintenir en place; pousser dans les fentes. Verrouiller avec un mallet. Installer le revêtement de plastique à pression.

Coloque el soporte contra el gancho. Manteniéndolo en su lugar, empujelo en las ranuras. Fijelo con un mazo. Encaje la cubierta de plástico.

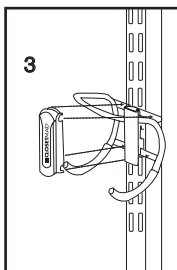

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>