



Catalog #R09392S
Russell DOT Rear Brake Hose Kit
for 2006 Honda CBR1000RR
INSTALLATION INSTRUCTIONS

Please study these instructions carefully before installing your new Brake Hose Kit. If you have any questions, please call our **Technical Hotline at: 1-800-416-8628**, 7:00 am to 5:00 pm, Monday - Friday, Pacific Standard Time or e-mail us at **Edelbrock@Edelbrock.com**.


IMPORTANT NOTE:

Proper installation is the responsibility of the installer. Improper installation will void warranty and may result in poor performance and engine or vehicle damage.

INSTALLATION PROCEDURE

IMPORTANT NOTE: Do not allow the master cylinder to completely drain of brake fluid at any time during this process. Also, use care when handling brake fluid, as it can quickly damage finished surfaces (paint, plating, etc.).

1. Remove factory rear brake hose, noting routing.
2. Install bent banjo hose end onto master cylinder so hose loops upward, similar to factory.
3. Install straight hose end onto caliper oriented approximately 30° inward (**See Fig. 1**).
4. Use supplied cushion clamp to secure hose at factory location on swingarm.
5. Check hose clearance throughout entire suspension travel range.
6. Bleed system and check for leaks while applying pressure.

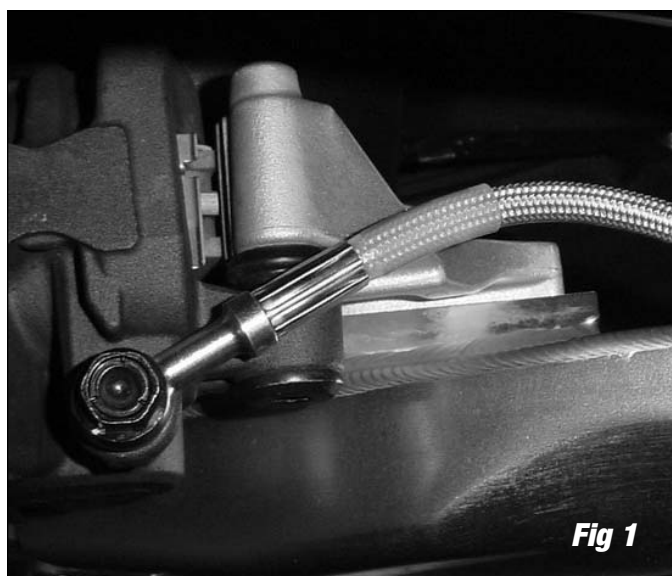

Edelbrock Corporation, 2700 California St., Torrance, CA 90503
Tech Line: 800-416-8628
Office: 310-781-2222
E-Mail: Edelbrock@Edelbrock.com

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>