

C-AS-MMP ANGLED SERIES CONSOLES INSTALLATION INSTRUCTIONS FOR MODELS C-AS-1025, 1325, 1525 & 1725

TOOLS REQUIRED:

Standard and Metric Socket Set with 6" Extension
Standard and Metric Wrench Set
Torx driver #T15 and #T20

HARDWARE:

QTY: DESCRIPTION:


12 #8 X 3/8 Black Torx Screw
4 1/4-20 X 1/2" Pem Stud
4 1/4" Lock Washer
4 1/4-20 Hex Nut

PART #:


CM86508
GSM32220
GSM31026
GSM30005

PARTS SUPPLIED


1 CM93569 – Monitor Platform Frame
1 CM93628 – Support Plate
1 Pair of Wire Panels

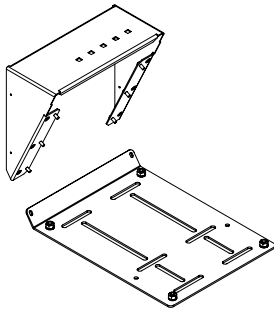

C-AS-MMP
Monitor Mounting Platform

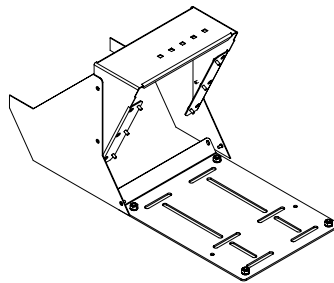

C-AS-MMP-CV
**Monitor Mounting Platform
& Wire Panels Crown Vic**

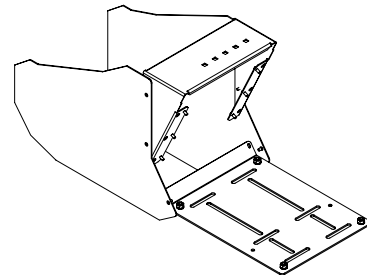


C-AS-MMP-IMP
**Monitor Mounting Platform
& Wire Panels Impala**

INSTALLATION: (Refer to pictures on page 2)

1. Turn console over and remove (2) #8 X 3/8" Black torx screws on bottom of console.
2. Place support plate on bottom of console as shown and replace (2) #8 X 3/8" Black torx screws.
3. Turn console back over and place (4) 1/4-20 X 1/2" pem studs on bottom of support plate and insert (4) 1/4" lock washers and (4) 1/4" Hex nuts over studs on inside of console housing, then tighten.
4. Place monitor platform on front side of console and secure with (6) #8 X 3/8" Black torx screws.
5. Place wire panels on front sides of console and secure with (6) #8 X 3/8" Black torx screws.
6. Console is ready for mounting in car.

FORD CROWN VICTORIA APPLICATION SHOWN

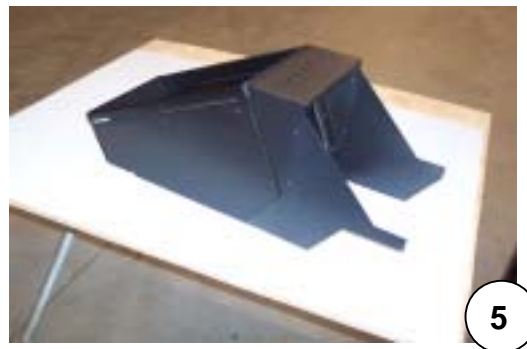

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>