# **User's Guide 5623**

# ENGLISH

**CASIO** 

Congratulations upon your selection of this CASIO watch.



The Bluetooth<sup>®</sup> word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by CASIO COMPUTER CO., LTD. is under license.

E-1

E-3

E-5

- This product has a Mobile Link function that lets it communicate with a Bluetooth® capable phone to perform automatic time adjustment and other operations.
- benom automate the adjustment and other operations.
  This product complies with or has received approval under radio laws in various countries and geographic areas. Use of this product in an area where it does not conform to or where it has not been approved under applicable radio laws may be punishable under local laws. For details, visit https://world.casio.com/ce/BLE/.
  Use of this product inside of an aircraft is restricted by the aviation laws of each country. Be sure to the sure to the
- obey instructions provided by flight personnel concerning use of devices such as this product.

#### Contents

Using the Watch	
Charging	
General Guide	E-5
Selecting a Mode	E-7
Setting the Time	E-8
Changing the Dual Time, Alarm Time, or Timer Time Setting	E-10
Specifications	E-11

### **Using the Watch**

#### Charging

- Remove the watch from your wrist and place it in a brightly lit area.
- The watch may become hot when exposed to light for charging. Take care to avoid burn injury. . Avoid charging in locations where it is very hot.

# Power Saving


- Leaving the watch in a dark location for about one hour between the hours of 9 p.m. and 6 a.m. will cause the second hand to stop at 12 o'clock.
  Leaving the watch in a dark location for about one week will cause all hands to stop.

### **Battery Alerts**

Low Battery Second hand jumps every two seconds (Low Battery Alert).


Dead Battery All hands stopped.

#### General Guide

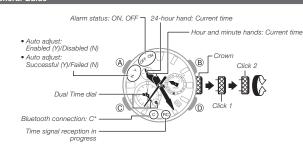


\* Hold down (D) for at least 2.5 seconds to establish a Bluetooth connection with a phone.

F-4

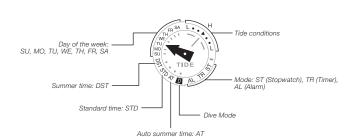

# Selecting a Mode

Each press of ⓒ cycles between modes as shown below. • Hold down ⓒ for at least one second to enter the Calendar Mode. • Hold down ⓒ for at least two seconds to enter the Diving Mode.

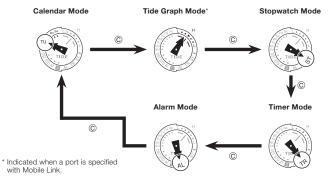

# **User's Guide 5623**

#### Setting the Time


- 1. Rotate the crown towards you to loosen it.
- 2. Pull the crown out to the second click.
- 3. Hold down (C) for at least one second.
- This enables setting of the hour and minute.
- 4. Rotate the crown to change the current minute setting.
- 5. Press ©
- . This enables setting of the hour.
- 6. Botate the crown to change the current hour setting. The 24-hour hand indicates whether a time setting is a.m. (A) or p.m. (P).
- 7. Press (C)
- . This enables the year 10's digit setting.
- 8. Rotate the crown to change the year 10's digit setting.



E-8

#### Changing the Dual Time, Alarm Time, or Timer Time Setting

- 1. Use (C) to navigate to the mode whose time setting you want to change.
- 2. Rotate the crown towards you to loosen it.
- 3. Pull the crown out to the first click.



5. After the setting is the way you want, push the crown back in and then screw it securely into place



#### 9. Press (C)

- This enables the year 1's digit setting.
- 10. Rotate the crown to change the year 1's digit setting.

Year 1's Digit Setting

**CASIO** 

- 11. Press © This enables the month setting.
- 12. Rotate the crown to change the month setting.
- 13. Press ©. . This enables the day setting.
- 14. Rotate the crown to change the day setting.
- 15. After the settings are the way you want, push the crown back in and then screw it securely into place.



## E-9

## Specifications

#### Accuracy at Normal Temperature: ±15 seconds a month

Timekeeping: Hour, minute (hands move at 5-second intervals), second; date, day of the week Calendar system: Full-auto calendar from 2000 to 2099 Others: Dual time (hour, minute, 24-hour timekeeping, 27 time zones, auto summer time setting, Home Time/Dual Time swapping)

- Signal Receive Function: Auto receive, manual receive Auto transmitter selection (for JJY, MSF/DCF77) Receivable call signs: JJY (40 kHz/60 kHz), BPC (68.5 kHz), WWVB (60 kHz), MSF (60 kHz), DCF77 (77.5 kHz)

Note that battery operating time may be reduced by illumination conditions, and by dive time and

#### Tide Graph Function: Tide level/high tide time selection Stopwatch:

Measuring unit: 1 second Measuring capacity: 23:59'59" (24 hours)

Not exposed to light under the conditions below. Bluetooth connection time: 10 hours/day Alarm: Once (10 seconds)/day

Alam: Once (10 seconds)/day
 Illumination: Once (3 seconds)/day
 Hand sleep: 6 hours/day
 Diving: 3 dives/month
 Dive time measurement: 45 minutes/dive
 Surface time measurement: 15 minutes/dive
 Illumination: 6 seconds (3 seconds × 2)/dive

Specifications are subject to change without notice.

- Alarm:
- Setting units: Hour, minute Beeper: 10 seconds

- Countdown Timer: Countdown unit: 1 second Countdown range: 24 hours Setting unit: 1 minute Time up: 10-second beeper

Battery Operating Time: Approximately 5 months

Bluetooth connection duration.

Conditions

#### E-10

#### **Diving Function:**

- Dive time measurement: Up to 2 hours (1-second units) Surface time display: Up to 24 hours Log memory: 30 records (dive start and end dates and times, or surface start and end dates and times) Mobile Link Functions:

- Note that Critections: Auto Time Correction Phone finder Watch operation sounds the alert sound of the mobile phone. World Time
- Current time for approximately 300 cities selected for the watch

- Home Time World Time swapping Auto summer time World Time swapping Auto summer time switching Automatic switching between standard time and summer time Tide Graph (6 levels) Information on approximately 3,300 global locations Timer Setting Alarm Setting

- Hand position correction

Hand position correction Data Communication Specifications Bluetooth® Frequency Band: 2400MHz-2480MHz Maximum Transmission: 0 dBm (1 mW) Communication range: 2 meters max. (depends on environment) Other: Power Saving, High-brightness LED light, Auto Correction of Hand Home Positions, Hand Shift Power Supply: Solar panel and 1 rechargeable battery



E-11





Free Manuals Download Website <u>http://myh66.com</u> <u>http://usermanuals.us</u> <u>http://www.somanuals.com</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.com</u> <u>http://www.404manual.com</u> <u>http://www.luxmanual.com</u> <u>http://aubethermostatmanual.com</u> Golf course search by state

http://golfingnear.com Email search by domain

http://emailbydomain.com Auto manuals search

http://auto.somanuals.com TV manuals search

http://tv.somanuals.com