


















Keep this manual for future reference. If you sell or give this stroller away, make sure you give this manual to the new owner. Ask them to read instructions completely.

# STROLLER/FRAME CARRIER

## SB100 Operating Instructions

**Important:** Read and follow these Safety Rules and Assembly Instructions before operating stroller/frame carrier. If you have any questions concerning the safe use of this product, contact InSTEP, LLC at 1-800-242-6110, M-F, 8:00 a.m. - 5:00 p.m. CST or visit our web site at [www.instep.net](http://www.instep.net) or E-mail us at [info@instep.net](mailto:info@instep.net) before using.

### Safety Rules:

-  **WARNING:** Failure to follow these warnings and assembly instructions could result in serious injury or death.
-  **WARNING:** Immediately discard any plastic wrapping.
-  **WARNING:** Never allow children to fold, assemble or disassemble the stroller/frame carrier.
-  **WARNING:** Do not use stroller/frame carrier until your child is old enough to hold his/her head up on his/her own.
-  **WARNING:** Maximum weight capacity for a child in this stroller/frame carrier is 30 lbs. or 14 kg.
-  **WARNING:** Avoid serious injury from falling or sliding out. Always use seatbelt and shoulder harness.
-  **WARNING:** Never leave child unattended.
-  **WARNING:** Never use this stroller/frame carrier with roller skates or in-line skates.
-  **WARNING:** Never allow stroller/frame carrier to be used as a toy or allow children to give rides to others.
-  **WARNING:** Never use if product becomes damaged.
-  **WARNING:** Always be aware of traffic around you when walking
-  **WARNING:** Always engage brakes when you stop or when you let go of handle.
-  **WARNING:** Accessories or parcels placed in or on the stroller may cause it to become unstable.
-  **WARNING:** Maximum weight for objects in back pouch is 1 lb. or .5 kg., bottom basket is 2.2 lbs. or 1 kg. Excessive weight may cause a hazardous unstable condition.
-  **WARNING:** For child's safety it is best to have another adult help you put on the carrier while child is in it. Make sure the child is securely strapped in with both shoulder straps and waist straps prior to putting on the carrier.


# IMPORTANT

We appreciate your purchase of one of our many fine products. We are sure that you will be satisfied with your selection. We regret that although great care and effort have been taken, occasionally problems may occur. PLEASE DO NOT RETURN PRODUCT TO THE STORE. To ensure prompt and correct handling of problems, or to answer questions, please contact us at either our Toll-Free Customer service Number or Email us at our number listed below. Service will be quicker if you have your model number (found on the product and box) along with this instruction sheet ready when calling. If you have any questions concerning the safe use of this product, Please contact us 1-800-242-6110 press "1" for customer service and then "2" to speak to a representative or E-mail us at info@instep.net or visit our web site at www.instep.net

## SB100 Assembly Instructions

### Parts List

Description	Qty.
Frame assembly with seat, belly bar and headrest	1
Canopy	1
Dual Front wheel assemblies with booties	2
Rear wheel axle assembly	1



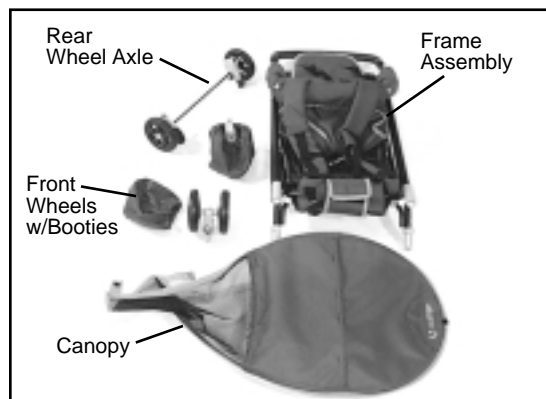


## Stroller Assembly Instructions

### Step 1. Unfold Stroller


Push in the handle buttons located on each side of the stroller (Picture A). While holding buttons, grasp handle on each side, lift up so stroller raises off the ground. Shake gently - the stroller will automatically unfold. Continue extending handle until the handle buttons snap into place.

Lift up on the front belly bar until it snaps into place (Picture B). To lower belly bar for storage, push in the latches located on each side of the belly bar (under the material) and then push belly bar down (Picture C). Return belly bar to upright position so it snaps in place.

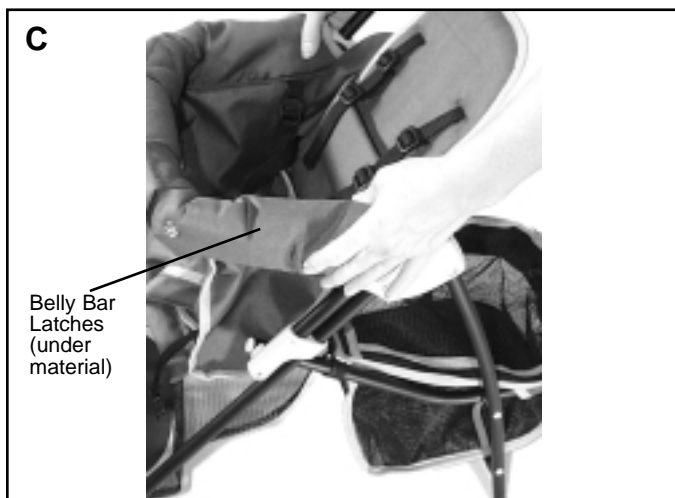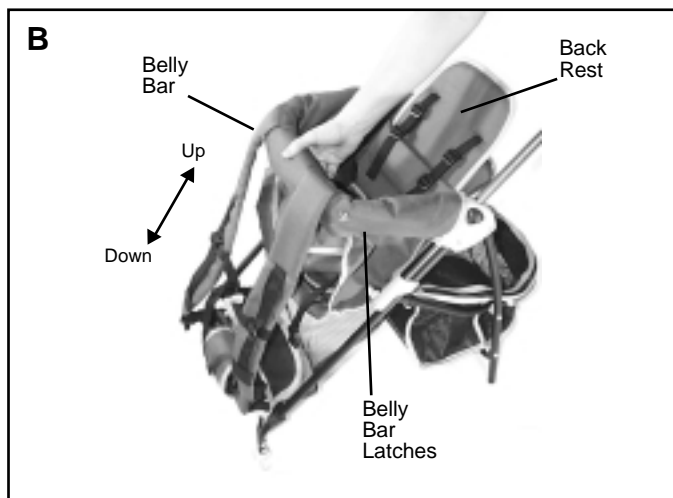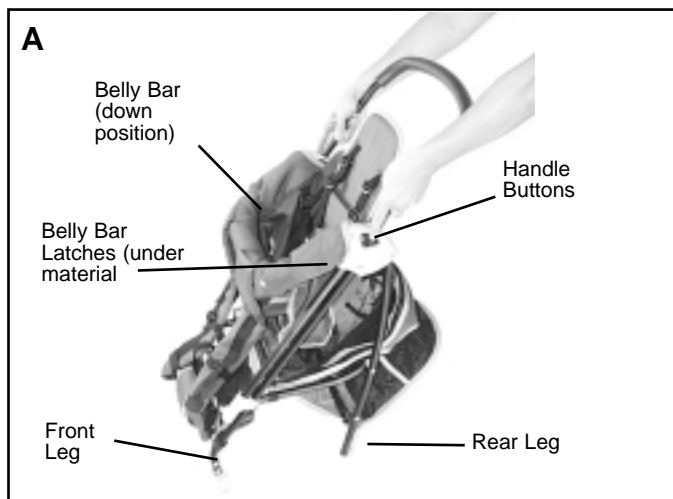

## Step 2. Rear Wheel Axle Assembly


Tip stroller so the belly bar is on the ground and the rear legs are up. Hold the axle with the brake levers up. Align the wheel brackets with the legs and push on wheel bracket until they lock into place on both sides (Picture D). Pull on wheels to make sure they are locked in place. In the future, if you need to remove rear axle, push tab that is located inside the wheel brackets and pull each side off (Picture E).

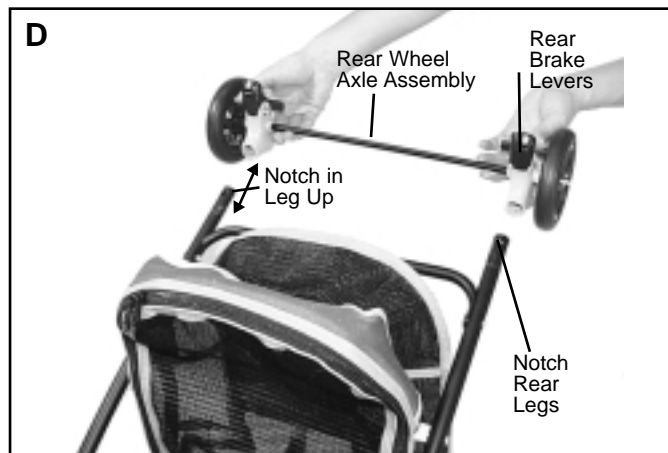

## Step 3. Front Wheel Assembly


Turn stroller on its side. Slide the front wheel assembly onto the front fork and push until it locks in place (Picture F). Pull on wheel to make sure that it is locked in place. Repeat for other side. In the future, if you need to remove front wheels, push tab that is located on bottom of wheel assembly and pull off (Picture G).

Note: There is a lever on the wheel assembly that locks the wheels from swiveling when used as a frame carrier.


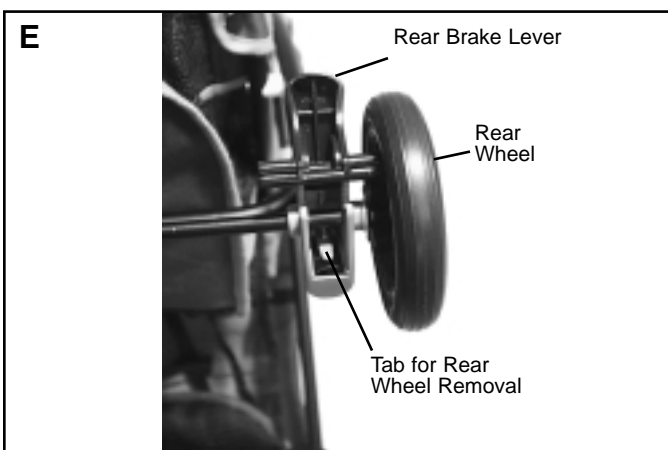


## Step 4. Canopy Assembly

Turn stroller upright. Place the canopy so the rounded edge is positioned behind the headrest and snap it onto the back of headrest. Bend the canopy and snap both sides onto the belly bar (Picture H).

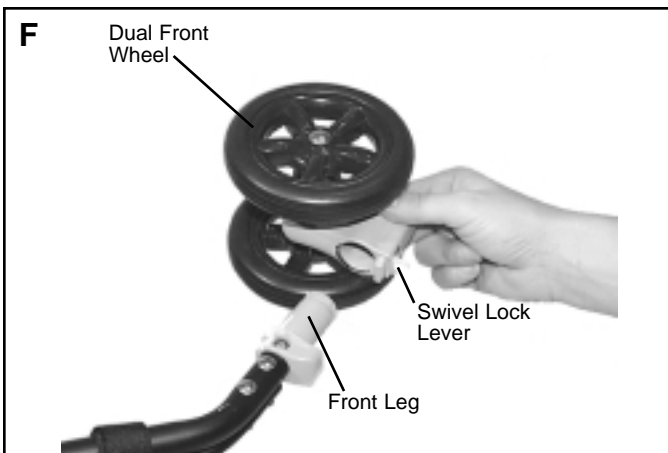

**Congratulations - assembly is now complete!**

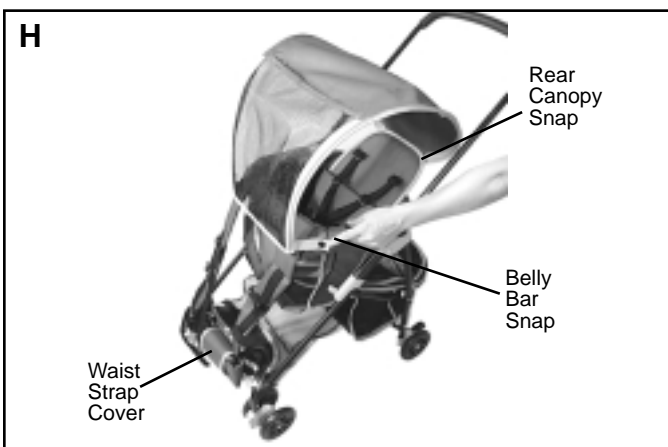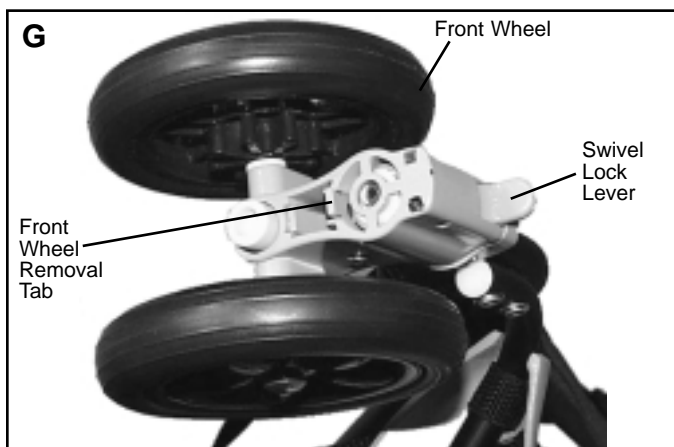

# Use Instructions

## To close stroller:



While pushing in the handle buttons, grasp the handle tubes and push the handle in. The stroller will fold as handle is pushed in (Picture I)

## To open stroller:


Push in the handle buttons located on each side of the stroller. While holding buttons, grasp handle on each side, lift up so stroller raises off the ground. Shake gently - the stroller will automatically unfold. Continue extending handle until the handle buttons snap into place.

## To engage rear brakes:



Step lightly on the levers next to the rear wheels until the cogs of the brakes engage the cogs of the wheel. Repeat on other side. To release brake, lift levers with toe until cogs disengage. (Picture J)

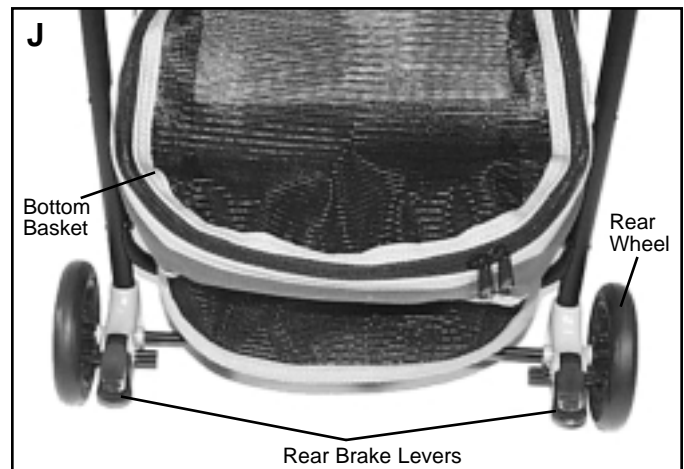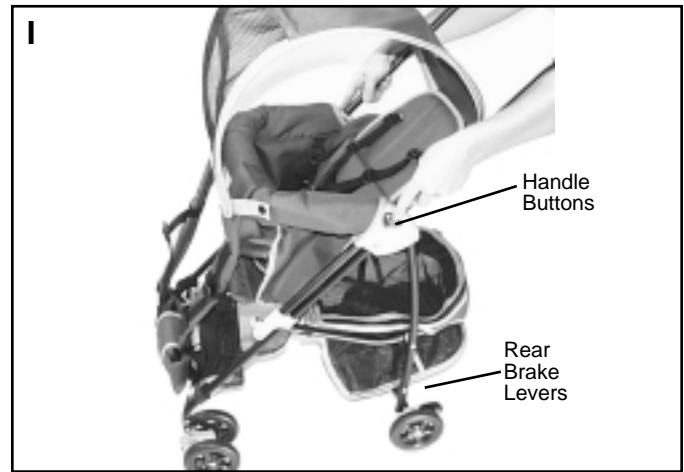

## PROPER USE OF SEAT HEIGHT ADJUSTMENT, CROTCH STRAP & SHOULDER STRAP:

 **WARNING:** Avoid Serious Injury from falling or sliding out. Always use seat belts





1. Place child in seat. Adjust the seat height by pulling or loosening straps located on the sides (Picture K). Make sure crotch strap buckle is between the child's legs, adjust length by sliding strap through plastic slide (Picture L).
2. Place shoulder straps over child's shoulders and buckle into center crotch buckle. Adjust shoulder straps to a snug fit by sliding strap through plastic slide (Picture L).
3. Buckle waist strap around child's waist and adjust to a snug fit (Picture L)

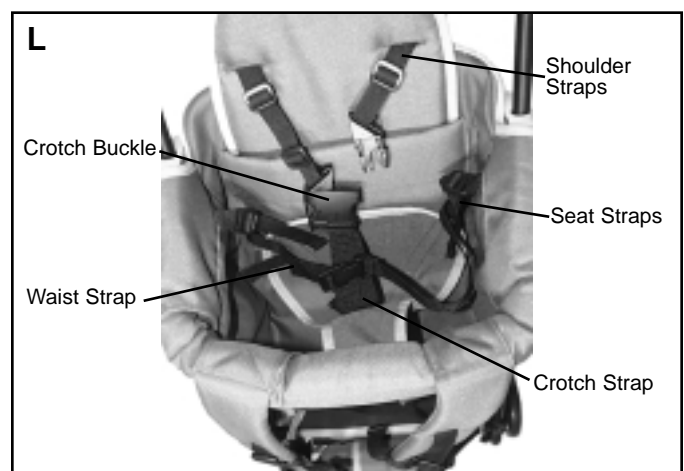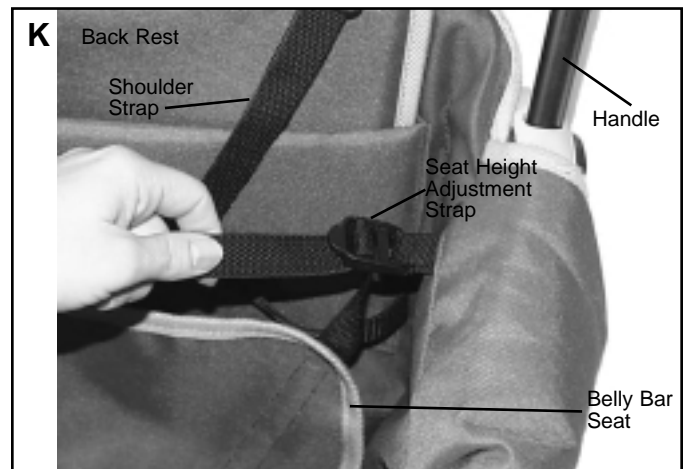

## To convert stroller to a frame carrier

**WARNING:** Please request the help of another adult to help you put the frame carrier on.

1. With rear wheels locked, release the Frame carrier waist strap cover located between the front legs (Picture M).
2. Push the lever up on the front wheels to lock them from swiveling. Tilt the stroller back slightly, and slide the booties onto the front wheels. This will prevent your clothes being soiled by the wheels (Picture M).
3. Release the waist buckle and sternum (chest) buckle (Picture N).
4. To close the stroller, step behind the stroller, then push the handle buttons located on the sides of the stroller frame.
5. With the help of another adult to steady the child in the seat, stand in front of the stroller. Place one arm through the shoulder strap and lift stroller onto your shoulder/back. You will find this much easier if the other adult also assists you with holding the other shoulder strap and guiding it over your other shoulder.
6. Once both shoulder straps are on, pull down on the shoulder strap ends to tighten. This will position the child higher onto your shoulders (Picture O).
7. Adjust the height of the sternum straps by sliding them up or down. Buckle the sternum strap then pull the end of the sternum strap to tighten (Picture P).
8. Buckle the waist strap and pull end of the waist strap to tighten (Picture Q).

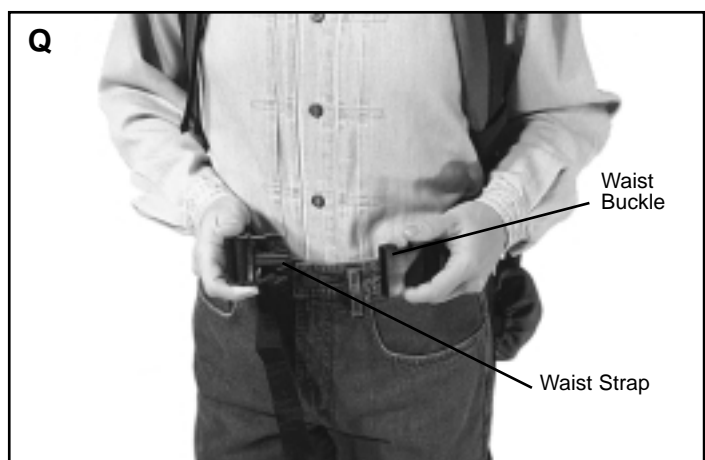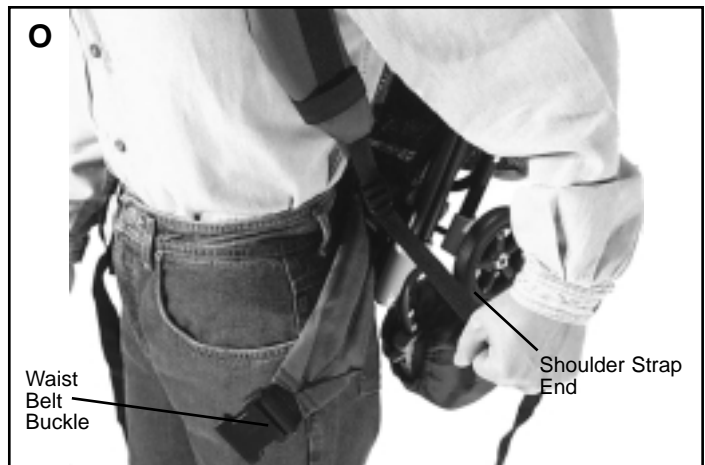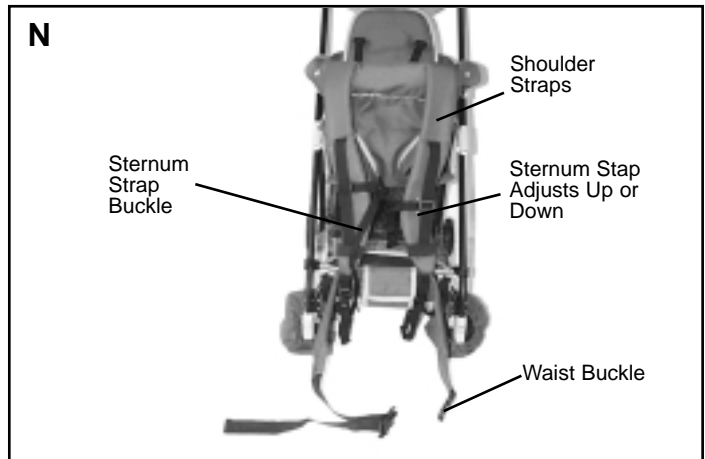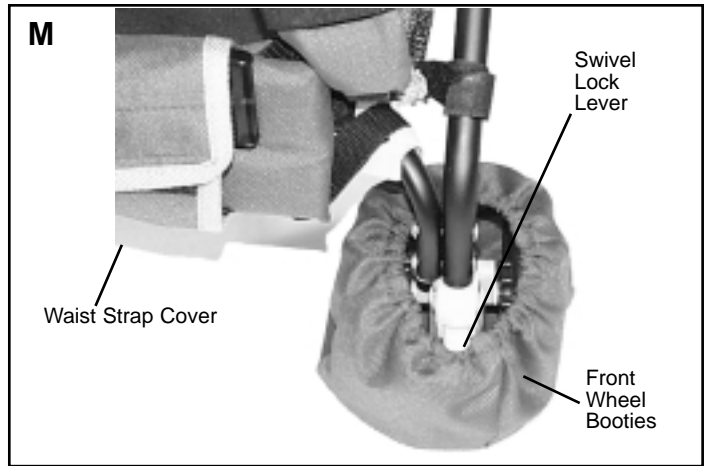

# Care and Maintenance

## Check fasteners

After one hour of use, check all fasteners to make sure they are secure. Adjust if necessary.

Periodically check the stroller to ensure that it is in good operating condition.

## To clean seat:

If cleaning is required, use a soft cloth with warm water and mild soap; air dry. **DO NOT BLEACH.**

## To clean canopy:

Spot clean using a soft cloth with warm water and mild soap. **DO NOT BLEACH.** Do not put in a washing machine.

## To clean frame:

Wipe using a soft cloth with warm water and mild soap. Air dry. **DO NOT USE** polish or harsh abrasives.



**\*\*WARNING:** If you have any questions concerning the safe use of this product, please contact InSTEP LLC. before using.

# 1-800-242-6110

8am-5pm CST, Monday-Friday, or MAIL to:



2425 Enterprise Drive, Suite #900  
Mendota Heights, MN 55120  
Tel: 1-800-242-6110

or visit our web site at [www.instep.net](http://www.instep.net)  
email: [info@instep.net](mailto:info@instep.net)

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>