

# Remote Head Monochrome CCD Camera

# *CV-M532*

# **Operation Manual**

(Rev.E)

Download from Www.Somanuals.com. All Manuals Search And Download.

# CE

# **DECLARATION OF CONFORMITY**

AS DEFINED BY THE COUNCIL DIRECTIVE

89/336/EEC EMC (ELECTROMAGNETIC COMPATIBILITY)

WE HEREWITH DECLARE THAT THIS PRODUCT

COMPLIES WITH THE FOLLOWING PROVISIONS APPLYING TO IT.

EN-50081-1

EN-50082-1

## Table of Contents

Tab	le of Contents	
1.	General	
2.	Standard Composition	3
3.	Main Features	
4.	Locations and Functions	5
	4.1. CCU	
	4.2. HEAD	5
5.	Pin Assignment	
	5.1. 12-pin Multi-connector (DC-IN/SYNC.)	6
	5.2. 6-pin Multi-connector (TRIGGER)	6
6.	Functions and Operations	7
	6.1. Input/Output of HD/VD Signal	7
	6.1.1. Input of External HD/VD Signal	7
	6.1.2. Output of Internal HD/VD Signal	7
	6.2. Normal Shutter Mode	7
	6.3. External Trigger Mode	7
	6.3.1. Edge Pre-select Mode	7
	6.3.2. Pulse Width Control Mode	9
	6.3.3. Start/Stop Trigger Mode	11
	6.3.4. Long Time Exposure Mode	
7.	Mode Setting	
	7.1.1. SW1 Switch on the Rear Panel	15
	7.1.2. Table for SW 1 Setting	15
	7.1.3. Table for Shutter Time	15
	7.1.4. Ext. Trigger Shutter Mode	16
	7.1.5. Trigger Select	16
	7.1.6. CD Accumulation	16
	7.1.7. Scanning System	16
	7.1.8. Gamma Correction	16
	7.1.9. Gain Control	16
	7.2. SW2 on PK8057 Board	
	7.3. Jumper Settings	17
	7.3.1. Jumper on PK8054 Board	17
	7.3.2. Jumper on PK8057 Board	17
	7.3.3. Pixel Clock Output	17
	7.4. Location of SW2 and Jumpers	
	7.4.1. Board PK8054 Side B	
	7.4.2. Board PK8057 Side A	
8.	Adjustment of Video Signal Output Level	
9.	External Appearance	20
	9.1. CCU	20
	9.2. HEAD	20
10.	Specifications	
	10.1. Spectral Sensitivity	
11.	Appendix	22
	11.1. Precautions	22
	11.2. Typical CCD Characteristics	
12.	User's Record	23

#### 1. General

The model CV-M532 is a new remote micro-head camera system featuring virtually identical performance and function of the popular CV-M50 standard machine vision camera.

Precisely installed CCD imager (1/3") and miniature size (Ø12mm) allows access to very contained spaces. The remote micro-head weights only 5g (0.031lbs).

The new 1/3" Hyper HAD imager employed in the CV-M532 provides superior sensitivity and higher dynamic range with improved smear level.

High speed shutter and asynchronous random trigger functions allow a superb image quality in machine vision and image processing applications such as dynamic motion image capturing, on-line inspection, gauging, printing and graphics.

Model		Cable length
CV-M532	2.0m (6.45 feet)	(Cable is directly mounted on camera head)

#### Important Notice!

CV-M532 has inter-changeability between camera head and CCU within the same model.

#### 2. Standard Composition

- 1) Camera head
- x1 (incl. camera cable)
- 2) Camera control unit x1
- 3) Operation manual x1

Options (Following optional accessories are available upon request.)


- 1) 12pin Multi Connector (HR10A-10P-12S)
- 2) 6pin Multi Connector (HR10A-7P-6S)
- 3) MP-40 Tripod mount adaptor
- 4) MP-35 Micro-head fixing mount adaptor
- 5) MP-25 C-mount adaptor
- 6) OP-105 Special lens (7.5mm, F1.6)

#### 3. Main Features


- Miniature-sized remote head ø12mm (0.47")
- 1/3" Hyper HAD interline transfer CCD imager, 768(H) x 494(V) for EIA and 752(H) x 582(V) for CCIR
- High resolution horizontal 570 TV lines for EIA
- Excellent S/N better than 56dB
- High sensitivity 0.2 Ix minimum illumination on CCD imager
- Improved low smear and higher dynamic range
- Edge pre-select and pulse width external trigger modes
- High speed and random trigger shutter up to 1/10,000 sec.
- Long-time exposure mode 1/30 sec. ~∞ (EIA)
- WEN and EEN output (pixel clock output : user option) to support further advanced image capturing
- Internal, external HD/VD synchronization
- Easy access for mode-setting of shutter and other function from rear panel
- Lens mount Special mount type
- Durable camera cable for industrial environment available from 2m (6.56 feet)

#### 4. Locations and Functions

4-1. CCU

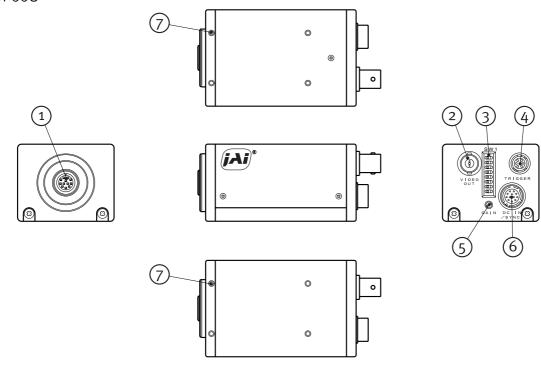

#### 4-2. HEAD




- 12P connector 1 (For Camera Head)
- 2 Video output connector (BNC connector)
- SW1 switch 3
- 4 6-pin Multi connector
- 5 GAIN
- 6 12P Multi connector
- 7
- CCD sensor 8
- 9 Focus adjustment ring
- 10 Camera head
- 11 connector

- : To connect camera head with camera control unit
- : To output video VS1.0Vp-p
- : To set shutter speed and function modes
- : Output WEN/EEN signal and input external trigger pulse, etc.
- : To adjust gain level
- : Input DC+12V power and input/output of HD/VD signal, etc.
- Screw holes for Tripod mount plate : To fix tripod mount plate (optional) on camera
  - : 1/3" Hyper HAD Interline transfer CCD sensor
  - : To adjust lens focus
  - : To connect camera head with camera control unit

#### 5. Pin Assignment

#### 5.1. 12-pin Multi-connector (DC-IN/SYNC.)

Type: HR10A-10R-12PB (Hirose) male Seen from rear.

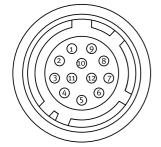

Pin no. Signal		Remarks				
1 GND						
2	+12 V DC input					
3	GND					
4	Video output	Parallel with the BNC video output. Avoid double termination.				
5 GND						
6	HD input/output	HD in as factory setting. *1)				
7 VD input/output		VD in as factory setting. *1) *2)				
8 GND						
<b>9</b> NC		NC as factory setting. Pixel clock output. *1)				
10 GND						
11	+12 V DC input					
12	GND					

Notes:


\*1) Signals on pin no. 6, 7 and 9 can be changed by jumper setting.

See "7.3. Jumper Settings" for more information.

\*2) In Edge Pre-select and Pulse Width Control mode do not input ext. VD signal.

#### 5.2. 6-pin Multi-connector (TRIGGER)

Type: HR10A-7R-6PB (Hirose) male Seen from rear.

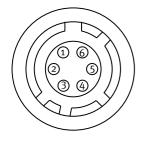

Pin no.	Signal	Remarks	
1 NC			
2 EEN output		* Note	
3	GND		
4	NC		
5 Ext. Trig input		* Note	
6 WEN output		* Note	

\* Notes:

The functions available on the 6-pin multi-connector are not effective in long time exposure mode.

- 6 -

#### 6. Functions and Operations

#### 6.1. Input/Output of HD/VD Signal

#### 6.1.1. Input of External HD/VD Signal

As factory setting the camera can be synchronized by external HD/VD signals. The signal level must be 4.0V p-p +/- 2.0V at the input with the 75 Ohm termination ON. To change to non-terminated input, see instructions in "7. Mode Setting".

If no ext. HD is connected, the camera will switch to the internal X-tal controlled HD.

If no ext. VD is connected, the camera will continue with its internal VD.

#### 6.1.2. Output of Internal HD/VD Signal

The internal HD/VD output is 4.0V p-p from a 75 Ohm source. To select this mode, see instructions in "7. Mode Setting".

#### 6.2. Normal Shutter Mode

When trigger select SW1-4 is OFF, the camera is in normal mode. The SW1-1, SW1-2 and SW1-3 are for selecting the shutter speed. The range is from OFF to 1/10,000 second in 8 steps. The camera is running continuously with an exposure as the selected shutter time.

The shutter time setting is shown in "7.1.3. Table for Shutter Time".

#### 6.3. External Trigger Mode

External trigger mode of CV-M536/538/539 allows 4 different driving modes, as follow.

- 1 *Edge pre-select mode.* (Asynchronous reset and exposure start by an ext. trigger)
- 2 *Pulse width control mode.* (Exposure control by the low period of the ext. trigger)
- 3 Start/Stop trigger mode. (Exposure start by the ext. trigger and end by the ext. VD signal)
- Long time exposure mode. (Exposure control by the interval of the ext. VD signal) 4

The trigger input is AC coupled, so there is a maximum pulse width for the trigger pulse about 60 msec. The signal level must be 4.0V p-p +/- 2.0V on the input with the 75 Ohm termination ON. To change to non-terminated input, see instructions in "7. Mode Setting". The following describes the details of each trigger mode.

#### 6.3.1. Edge Pre-select Mode

The edge pre-select mode operation will only work in non-interlaced and field accumulation mode. The CV-M50 starts the exposure (= accumulation of photoelectric charge) at the first HD pulse after the falling edge of the ext. trigger pulse. The exposure ends after the time set by the 3 shutter switches SW1-1 to SW1-3. The range is 8 steps from OFF (1/60 or 1/50) to 1/10,000 second.

In this mode, the EEN (Exposure ENable) pulse and WEN (Write ENable) pulses are generated and output from the camera. The EEN pulse indicates the exposure time and can be used to control the illumination such as strobe light. The EEN pulse is output from pin 2 of the 6-pin multi connector. The signal level is 4.0 Vp-p from a 75 Ohm source.

The WEN pulse indicates the time period of the effective video signal output, and is useful for the timing and interfacing of external devices such as frame grabbers. The WEN pulse is output from pin 6 of the 6pin multi connector. The signal level is 4.0 Vp-p from a 75 Ohm source.


The video must be read out before a new trigger can be applied. The interval between trigger pulses must be longer than the time for 1 field + the shutter time. It is the limit for the field rate.

To use this	mode
Set:	SW1-4 to ON for ext. trigger shutter
	SW1-5 to OFF for field accumulation
	SW1-6 to ON for non-interlaced
	SW1-1,2 and 3 to shutter speed
Input:	Ext. trigger to pin 5 on 6 pin multi connector.
-	Ext. HD to pin 6 on 12-pin multi connector. (If used).
	75 Ohm termination is done with SW2-1 (HD) and SW2-2 (ext.trigger) on PK8057 board.

Refer to Timing Chart and Cautions below. Detailed switch and jumper setting is described in "7. Mode Setting". For connections see "5. Pin Assignment".


#### Cautions in the Edge Pre-select Mode.

- 1. Edge pre-select mode is effective only in non-interlaced, field accumulation mode.
- The exposure start may delay up to 1H max., when the falling edge of ext. trigger pulse is not synchronized with the falling edge of ext. HD signal. To avoid this 1H delay and jitter, the falling edge of the trigger pulse should be synchronized with the HD pulse as shown below. It can be the ext. HD input or the Internal HD output.



 $A=4.4 \mu S$ 

- The ext. trigger input is 75 Ohm terminated as factory setting. (R127 short and SW2-2 ON). The voltage level of the ext. trigger has to be 4.0 Vp-p ± 2.0 V. The duration should be more than 1 H negative going. >64 μsec. and < 60 msec. The input is AC coupled.</li>
- If the ext. trigger input and ext. HD input are from a source with TTL level, set SW2-1 and SW2-2 OFF for non-terminated. SW2-1 for HD signal, SW2-2 for ext. trigger pulse. See "7.2 SW2 on PK8057 Board".

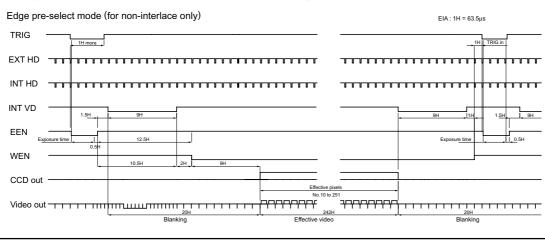

#### EIA (Non-interlaced / Field accumulation mode)

<sup>- 8 -</sup>

#### 6.3.2. Pulse Width Control Mode

The pulse width control mode will only work in non-interlaced field accumulation mode.

The exposure is controlled by the low period of the ext. trigger pulse. The exposure starts at the first HD pulse after the falling edge of the ext. trigger pulse. The exposure ends at the first HD pulse after the rising edge of the ext. trigger. The Shutter can be controlled to be within the range from >1H (>64  $\mu$ sec.) to <60 msec. The AC coupling causes the upper limit.

EEN (Exposure ENable) pulse and WEN (Write ENable) pulses are generated and output from the camera.

The EEN pulse indicates the exposure time. The EEN pulse is output from pin 2 of the 6-pin multi connector. The signal level is 4.0 Vp-p from a 75 Ohm source.

The WEN pulse indicates the time period of the effective video signal output and is useful for the timing and interfacing of external devices such as frame grabbers. The WEN pulse is output from pin 6 of the 6-pin multi connector. The signal level is 4.0 Vp-p from a 75 Ohm source

The video must be read out before a new trigger can be applied. The interval between trigger pulses must be longer than the time for 1 field + the shutter time. It is the limit for the field rate.

To use this mode

Set:	SW1-1, 2 and 3 to OFF	
	SW1-4 to ON for ext. trigger shutter	
	SW1-5 to OFF for field accumulation	
	SW1-6 to ON for non-interlaced	
	JP12 on PK8057 to OPEN	
Input:	Ext. trigger to pin 5 on 6-pin multi connector.	
-	Ext. HD to pin 6 on 12-pin multi connector. (If used).	

75 Ohm termination is done with SW2-1 (HD) and SW2-2 (ext.trigger) on PK8057 board.

Refer to Timing Chart and Cautions on next page.

Detailed switch and jumper setting is described in "7. Mode Setting". For connections see "5. Pin Assignment".

#### Cautions in the Pulse Width Control Mode.

- 1. Pulse width control mode is effective only in non-interlaced field accumulation mode.
- 2. The exposure start may be delayed up to 1H max., when the falling edge of ext. trigger pulse is not synchronized with the falling edge of ext. HD signal. To avoid this 1H jitter and delay, the falling edge of the ext. trigger pulse should be synchronized within 4.4 µsec. to the HD pulse. It can be the ext. HD in or the Internal HD out.

See cautions in Edge Pre-select Mode page 7.

- The ext. trigger input is 75 Ohm terminated as factory setting. (R127 short and SW2-2 on). The voltage level of the ext. trigger has to be 4.0 Vp-p ± 2.0 V. The duration should be more than 1 H negative going. >64 μsec. and < 60 msec. The input is AC coupled.</li>
- If the ext. trigger input and ext. HD input are from a source with TTL level, set SW2-1 and SW2-2 OFF for non-terminated. SW2-1 for HD signal, SW2-2 for ext. trigger pulse. See "7.2 SW2 on PK8057 Board".

#### Pulse width control mode (for non-interlace only) EIA: 1H = 63.5µs TRIG TRIG in 1H mor EXT HD INT HD INT VD 1.<u>5</u>ł 9H EEN 12.5H Exp re tirr WEN 2H CCD out Video out T Eff

#### EIA (Non-interlaced / Field accumulation mode)

#### 6.3.3. Start/Stop Trigger Mode

The Start /Stop trigger will work in 3 modes:

- 1. Interlaced with frame accumulation.
- 2. Interlaced with field accumulation.
- 3. Non-interlaced with field accumulation.

The exposure time is controlled by the interval between the ext. trigger pulse and the ext. VD signal. The exposure starts at the first HD pulse after the falling edge of the ext. trigger, and stops at the rising edge of the VD pulse. The range can be within 1/77 to 1/10,000 sec.

The Start/Stop mode is a continuous mode where the VD signal must be given continuously. It is not possible to input ext. VD randomly.

For the interlaced modes 2 ext. trigger pulses should be applied for each frame. It is one for each field. In this way it is possible to have different exposure time for the 2 fields within an interlaced frame. The difference between interlaced frame accumulation or field accumulation can be explained as follow. Both modes have 2 fields output in an interlaced frame. With frame accumulation the contents in the ODD and EVEN sync. fields will come from sensing field 1 and 2 on the CCD sensor. With field accumulation both ODD and EVEN sync. field will contain the signal from sensing field 1 and 2 added together.

Non-interlaced with field accumulation needs only 1 trigger pulse for each field.

To use this mode

Set:	SW1-1,2 and 3 to ON for 1/10,000 sec.
	SW1-4 to OFF for normal shutter.
	SW1-5 to ON for frame accumulation or OFF for field accumulation.
	SW1-6 to OFF for 2:1 interlaced or ON for non-interlaced.
	Jumper JP R127 on the PK8054 board OPEN
	Jumper JP8, JP9, JP10 on PK8057 to SHORT
	Jumper JP7 on PK8057 to OPEN
Input:	Ext. trigger to pin 5 on 6 pin multi connector. (Cannot be 75 Ohm terminated.)
	Ext. VD to pin 7 on 12 pin multi connector.
	Ext. HD to pin 6 on 12 pin multi connector. (If used).
	HD/VD 75 Ohm termination is done with SW2-1 and SW2-2 on PK8057 board.

Refer to Timing Chart and Cautions on next page.

Detailed switch and jumper setting is described in "7. Mode Setting".


For connections see "5. Pin Assignment".

#### Cautions in the Start/Stop Trigger Mode.


- 1. The input of ext. VD signal must be given continuously to synchronize with int. VD signal. It is not possible to input ext. VD signal randomly.
- 2. The exposure start may delay up to 1H max., when the falling edge of ext. trigger pulse is not synchronized with the falling edge of ext. HD signal. To avoid this 1H jitter and delay, the falling edge of the ext. trigger pulse should be synchronized within 4.4 µsec. to the HD pulse. It can be the ext. HD input or the internal HD output.

Shown under cautions in Edge Pre-select Mode page 7.


- 3. In this mode, the ext. trigger has to be TTL level (2.0 to 5.0 V). It cannot be 75 Ohm terminated. The duration should be more than 1 H negative going. >64 µsec. and < 1 msec. The input is AC coupled.
- 4. If the ext. VD input and ext. HD input are from a source with TTL level, set SW2-1 and SW2-2 on PK8057 board OFF for non-terminated. SW2-1 for ext. HD signal, SW2-2 for ext. VD signal. See "7.2 SW2 on PK8057 Board".
- 5. Each scanning mode requires the following number of external trigger pulses:
  - 2:1 interlaced: 2 external trigger pulses per frame
  - Non-interlaced: 1 external trigger pulse per field
  - a) Interlaced mode (Frame accumulation mode)



b) 2:1 Interlaced mode (Field accumulation mode)



c) Non-interlace moded (Field accumulation mode)



#### 6.3.4. Long Time Exposure Mode

The Long time exposure will work in 3 modes:

- 1. Interlaced with field accumulation.
- 2. Interlaced with frame accumulation.
- 3. Non-interlaced with field accumulation.

The exposure time is the interval between 2 ext. VD pulses sent to the camera VD input. Each ext. VD pulse will reset and restart the internal VD in the camera as for ext. HD/VD input. So the camera is synchronized to the external HD/VD supply after each VD input.

An exposure starts after input of an external VD pulse, and ends after the next input of ext. VD, which again starts a new exposure.

The long time exposure is a continuous process where each external VD will synchronize the camera, stop an exposure, start a new exposure and read out the previous accumulated signal as interlaced or non-interlaced fields.

The exposure control can be done by feeding every N<sup>th</sup> VD pulse from the external HD/VD supply to the camera. N is the wanted exposure time in number of fields. This is typically done in the frame grabber PC.

The range for long time exposure is from 1 V (a single field) to  $\infty$ . However the dark current signal will increase by longer time, so >2 seconds are not recommended at normal ambient temperature.

To use this mode:

Set:	SW1-1, 2 and 3 to OFF SW1-4 to OFF for normal shutter. SW1-5 to ON for frame accumulation or OFF for field accumulation. SW1-6 to OFF for 2:1 interlaced or ON for non-interlaced. Jumper JP6 on PK8057 to CLOSE
Input:	Ext. VD pulses with the exposure interval to pin 7 on 12 pin multi connector. Ext. HD to pin 6 on 12 pin multi connector. 75 Ohm termination is done with SW2-1 and SW2-2 on PK8057 board.

The timing for the external VD interval has to be as follow. (V is the time for a single field)Interlaced with field accumulation.1 V or moreInterlaced with frame accumulation.2 V or integral number of 2VNon-interlaced with field accumulation.2 V or more

Note: The external HD/VD sync. generator, which supply the ext. VD an HD signals should follow the scanning standard for the camera setting.

	EIA
Interlaced and field accumulation.	1 V = 262.5 H
Interlaced and frame accumulation.	2 V = 525.0 H
Non-interlaced and field accumulation.	2 V = 524.0 H


Refer to Timing Chart and Cautions on next page. Detailed switch and jumper setting is described in "7. Mode Setting".

For connections see 5. "Pin Assignment".


#### Cautions in the Long Time Exposure Mode.

- 1. Theoretical exposure time is as follows. EIA: 1/30 sec. to  $\infty$ .
- 2. It is recommended not to use exposure >2 sec. since visible dark-current noise may occur.
- 3. Ext. HD signal (4.0 Vp-p ± 2.0V at 75 Ohm terminated) has to be input continuously The falling edge of Int. HD signal and Ext. VD signal are phase-synchronized.
- 4. Timing of ext. VD signal in each accumulation mode has to be set, as described before.


#### a) 2:1 Interlaced mode (Field accumulation mode)



#### b) 2:1 Interlaced mode (Frame accumulation mode)



c) Non interlaced mode (Field accumulation mode)

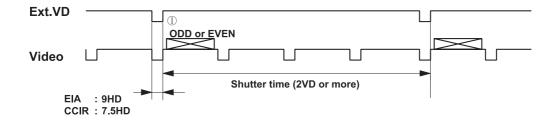


#### 7. Mode Setting

#### Caution on Mode Setting.

Before making any mode or jumper setting turn the power OFF.

#### 7.1.1. SW1 Switch on the Rear Panel

Factory settings for SW1 are with all 8 switches in OFF position.

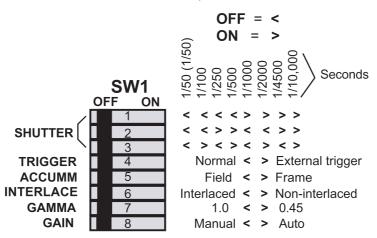

#### 7.1.2. Table for SW 1 Setting

Switch no.	Switch function	Modes	setting	
Switch no.	Switch function	OFF	ON	
1	Shutter data MSB	E de la la la la la		
2	Shutter data	For shutter speed select. Refer to shutter table 7.1.3.		
3	Shutter data LSB	Kelel to shutt	er table 7.1.3.	
4	Trigger select	Normal	Ext. trigger	
5	CCD accumulation	Field accumulation	Frame accumulation	
6	Scanning system			
7	Gamma correction			
8	Gain			

#### 7.1.3. Table for Shutter Time

SW1-1	SW1-2	SW1-3	Shutter sp	peed (sec.)	
MSB		LSB	Normal shutter	Ext. trigger shutter	
OFF	OFF	OFF	Off	1/60 (1/50)	
OFF	OFF	ON	1/100 1/125		
OFF	ON	OFF	1/250		
OFF	ON	ON	1/500		
ON	OFF	OFF	1/1000		
ON	OFF	ON	1/2000		
ON	ON	OFF	1/4500		
ON	ON	ON	1/10,000		

#### Caution on Shutter.

The image can flicker when the illumination is AC powered. Highlighted parts of the image will show increasing smear at a shorter shutter time.

- 15 -

#### 7.1.4. Ext. Trigger Shutter Mode

When trigger select SW1-4 is ON. The camera is in ext. trigger shutter mode. The SW1-1, SW1-2 and SW1-3 are for selecting the shutter speed. The range is from OFF to 1/10,000 second in 8 steps. For each external trigger pulse, the camera will make an exposure with the selected shutter speed. The shutter time setting is shown in "7.1.3. Table for Shutter Time".

#### 7.1.5. Trigger Select

SW1-4 is will select the camera operation mode.

OFF is normal mode, where the camera is running continuously.

ON is the ext. trigger shutter mode. Here the external trigger pulse will start the exposure.

#### 7.1.6. CCD Accumulation

SW1-5 will select the CCD accumulation mode. OFF is field accumulation. It is used for moving objects. ON is frame accumulation. It is for still objects.

#### 7.1.7. Scanning System

SW1-6 will select the scanning system.

OFF is 2.1 interlaced. It will follow the EIA or CCIR standard for interlaced scanning.

ON is non-interlaced.

In EIA the non-interlaced output is continuous ODD field. In CCIR the non-interlaced output is continuous EVEN field.

If the camera is ext. HD/VD synchronized with a non-interlaced sync, SW1-6 be in ON position.

#### 7.1.8. Gamma Correction

SW1-7 will select the gamma correction.

OFF is gamma 1.0. It is linear. Recommended for machine vision and image processing. ON is gamma 0.45. It is non-linear.

#### 7.1.9. Gain Control


SW1-8 is for gain select.

OFF is manual gain. Here the gain can be controlled by the GAIN potmeter on the rear panel. ON is the AGC mode. Here the gain is adjusted automatically. The AGC level can be adjusted by VR3 on PK8056 board. See "8. Adjustment of Video Signal Output Level".

#### 7.2. SW2 on PK8057 Board

This switch is to select 75 Ohm termination or TTL for ext. HD and ext. VD.

SW2-1 is for HD signal. SW2-2 is for VD signal, or for ext. trigger in. ON is 75 Ohm terminated. (Factory setting). OFF is TTL level.



#### 7.3. Jumper Settings

#### Caution on Jumper Setting.

Before making any mode or jumper setting turn the power OFF.

Jumpers for mode setting are found on the boards PK8054 & PK8057.

The following modes are available with jumper setting: Input/Output Mode of HD/VD signal. (HD/VD input is factory setting) Edge Pre-select Mode. (Factory setting) Pulse Width Control Mode Start/Stop Trigger Mode Long Time Exposure Mode

Set the jumpers according to the list below in 7.3.1. and 7.3.2. The jumper positions are shown in "7.4.1. Board 8054 Side B" and "7.4.2. Board 8057 Side A". Switch SW2 on PK8057 is shown in "7.2. SW2 on PK8057 Board".

#### 7.3.1. Jumper on PK8054 Board

	HD/VD	in/out		External tri	gger modes		
Jumper	Ext. HD/VD input *)	Int. HD/VD output	Edge pre- select	Pulse width control	Start/ stop trigger	Long time expose	Remarks
R127	Short	Short	Short	Short	Open	Short	Factory set SHORT

\*) Factory Setting

#### 7.3.2. Jumper on PK8057 Board

	HD/VD in/out		External trigger modes				
Jumper	Ext. HD/VD input *)	Int. HD/VD output	Edge pre- select	Pulse width control	Start/ stop trigger	Long time expose	Remarks
JP1	Short	Open	Short	Short	Short	Short	HD input /output. Factory set input
JP2	Open	Short	Open	Open	Open	Open	HD input /output. Factory set input
JP3	Short	Open	Short	Short	Short	Short	VD input /output. Factory set input
JP4	Open	Short	Open	Open	Open	Open	VD input /output. Factory set input
JP5	Short	Short	Short	Short	Short	Short	
JP6	Open	Open	Open	Open	Open	Short	Long time integration
JP7	Short	Short	Short	Short	Open	Short	
JP8	Open	Open	Open	Open	Short	Open	
JP9	Open	Open	Open	Open	Short	Open	
JP10	Open	Open	Open	Open	Short	Open	
JP11	Open		-	-	-	-	Pixel clock out. Factory set OPEN
JP12	Short	Short	Short	Open	Short	Short	Pulse width
SW2-1	ON	-	ON	ON	ON	ON	HD in 75 Ohm term. Factory set ON
SW2-2	ON	-	ON	ON	ON	ON	VD in 75 Ohm term. Factory set ON

\*) Factory Setting

#### 7.3.3. Pixel Clock Output

To use pixel clock output (TTL level: 4.0 V), make the jumper JP11 on PK8057 board shorted-circuited. The jumper position is shown in "7.4.1. Board PK8057 Side A". Pixel clock pulse will be output from pin no.9 of 12-pin multi-connector.


#### Caution for Pixel Clock Output.

When the pixel clock is enabled, it may cause interference with external equipment if it not properly shielded.


#### 7.4. Location of SW2 and Jumpers

Jumpers are shorted with a 0 Ohm resistor or by a soldering between the 2 points. To remove the solder tin from a jumper position, use a special tin remover such as de-soldering wick.

#### 7.4.1. Board PK8054 Side B

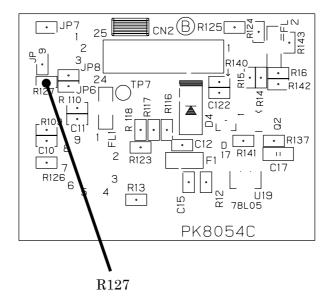

#### 7.4.2. Board PK8057 Side A

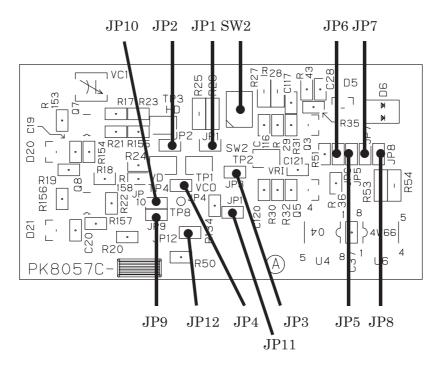

#### 8. Adjustment of Video Signal Output Level

When an alignment of a video output signal is required, remove the camera housing and adjust potentiometers VR3, VR4 and VR5 on the PK8056 board while measuring their levels at the video output connector.

This adjustment should only be done in a setup with a standard TV test chart and controlled illumination.

VR3: To adjust the gain level of AGC. (Factory setting: 700 mVp-p ± 30 mV)


VR4: To adjust the white level. (Factory setting: 800 mVp-p  $\pm$  20 mV)

VR5: To adjust the black level. (Factory setting: 20 mVp-p ± 5 mV)

#### CAUTION.

Do not touch these potentiometers unless you are familiar with camera adjustments.


Location of VR3 to VR5 on PK8056 board is as follow.

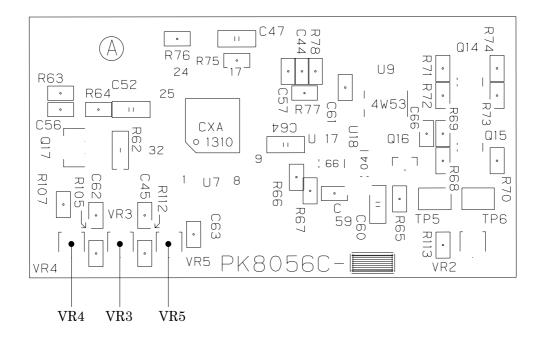



## 9. External Appearance


#### 9.1 CCU


Unit : mm (inches)

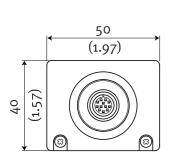

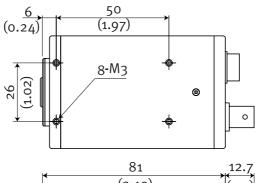




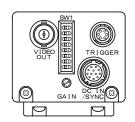

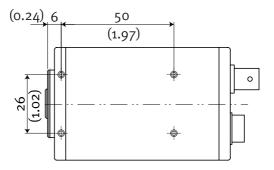

9.2 HEAD

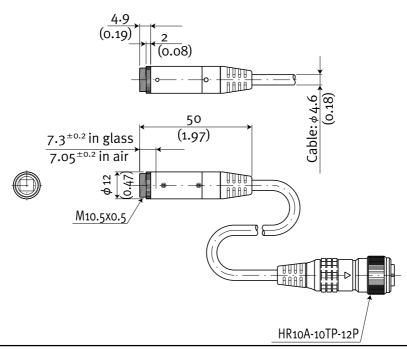


- 20 -

### 10. Specifications

Scanning system	EIA 525 lines 30 frames/sec.				
CCD sensor	Monochrome "1/3" Hyper HAD IT CCD				
Sensing area	4.9 mm (h) x 3.7 mm (v)				
Effective pixels	768 (h) x 494 (v)				
Elements in video output	758 (h) x 486 (v)				
Cell size	6.35 (h) x 7.4 (v) μm				
Resolution (horizontal)	570 TV lines				
Resolution (vertical)	485 TV lines				
Sensitivity on sensor	0.2 lx				
S/N ratio	>56 dB (AGC off, Gamma 1)				
Video output	Composite VS signal 1.0 Vpp, 75 Ohm				
Gamma	0.45 or 1.0				
Gain	Manual – Automatic. 0 to +15 dB by potentiometer or AGC				
Scanning	2:1 interlace – non-interlace				
Accumulation	Field – frame				
Synchronization	Int. X-tal. Ext HD/VD or random trigger				
HD sync. input/output	4V. 75 Ohm*				
VD sync. input/output	4V, 75 Ohm*				
Trigger input	4V, 75 Ohm*				
Trigger input duration	>64 µsec to <1 msec.				
WEN output (write enable)	4V, 75 Ohm				
EEN output (exposure enable)	4V, 75 Ohm 4V, 75 Ohm				
Pixel clock output (optional)	4V, 75 Ohm sine				
Normal shutter	Off, 1/100, 1/250, 1/500, 1/1000, 1/2000, 1/4500, 1/10,000 sec.				
Edge pre-select shutter	1/60, 1/125, 1/250, 1/500, 1/1000, 1/2000, 1/4500, 1/10,000 sec.				
Pulse width controlled shutter	>1 H (64 µsec.) to <60 msec.				
Start/stop trigger shutter	1/77 sec to 1/10,000 sec.				
1 00	1 field to ∞. Duration between ext. VD pulses				
Long time exposure Operating temperature	-5°C to +45°C				
Humidity	-5 C t0 +45 C 20 – 80% non-condensing				
Humidity Storage temp./humidity	-25°C to 60°C/20 - 90%				
Power	-25 C 10 80 C/20 - 90%				
	M10.5 x 0.5				
Lens mount					
Dimensions (camera Head)	ø12x 50 mm				
Mass	230 g				

Note: Above specifications are subject to change without notice.

#### 10.1. Spectral Sensitivity

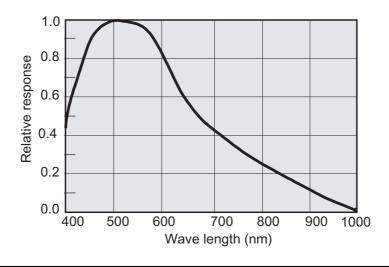

- 21 -

#### 11. Appendix

#### 11.1. Precautions

Personnel not trained in dealing with similar electronic devices should not service this camera.

The camera contains components sensitive to electrostatic discharge. The handling of these devices should follow the requirements of electrostatic sensitive components.

Do not attempt to disassemble this camera.

Do not expose this camera to rain or moisture.

Do not face this camera towards the sun, extreme bright light or light reflecting objects. Even when this camera is not in use, put the supplied lens cap on the lens mount.

Handle this camera with the maximum care. Operate this camera only from the type of power source indicated on the camera.

Power off the camera during any modification such as changes of jumper and switch setting.

#### 11.2. Typical CCD Characteristics

The following effects may be observed on the video monitor screen. They do not indicate any fault of the CCD camera, but do associate with typical CCD characteristics.

#### V. Smear

Due to an excessive bright object such as electric lighting, sun or strong reflection, vertical smear may be visible on the video monitor screen. This phenomenon is related to the characteristics of the Interline Transfer System employed in the CCD.

#### V. Aliasing

When the CCD camera captures stripes, straight lines or similar sharp patterns, jagged image on the monitor may appear.

#### **Blemishes**

Some pixel defects can occur, but this does not have en effect on the practical operation.

#### **Patterned Noise**

When the CCD camera captures a dark object at high temperature or is used for long time integration, fixed pattern noise (shown as white dots) may appear on the video monitor screen.

#### 12. User's Record

Camera type:	CV-M532
Scanning system:	EIA
Revision:	(Revision E)
Serial No.	

**Users Mode Settings** 

**Users Modifications** 

JAI A·S, Denmark

Produktionsvej 1, 2600 Glostrup Copenhagen, Denmark Phone +45 4457 8888 Fax +45 4491 8880 www.jai.com JAI Corporation, Japan German Industry Center 1-18-2 Hakusan, Midori-ku Yokohama, Kanagawa 226-0006, Japan Phone +8145 933 5400 Fax +81 45 931 6142 www.jai-corp.co.jp JAI America, Inc., USA Suite 450 23046 Avenida de la Carlota Laguna Hills, CA 92653 USA Phone + 1949 472 5900 Fax +1 949 472 5908 www.jai.com



THE MECHADEMIC COMPANY

Free Manuals Download Website <u>http://myh66.com</u> <u>http://usermanuals.us</u> <u>http://www.somanuals.com</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.com</u> <u>http://www.404manual.com</u> <u>http://www.luxmanual.com</u> <u>http://aubethermostatmanual.com</u> Golf course search by state

http://golfingnear.com Email search by domain

http://emailbydomain.com Auto manuals search

http://auto.somanuals.com TV manuals search

http://tv.somanuals.com