

KitchenAid®

**5 QT. STAND MIXER - TILT HEAD
ARCHITECT SERIES - GLASS BOWL**

MODELS:

KSM150AGBCA0 (Candy Apple)


KSM150AGBCS0 (Cocoa Silver)

KSM150AGBRI0 (Raspberry Ice)

KSM150AGBES0 (Espresso)

KSM150AGBFP0 (Frosted Pearl)

COLOR VARIATION PARTS

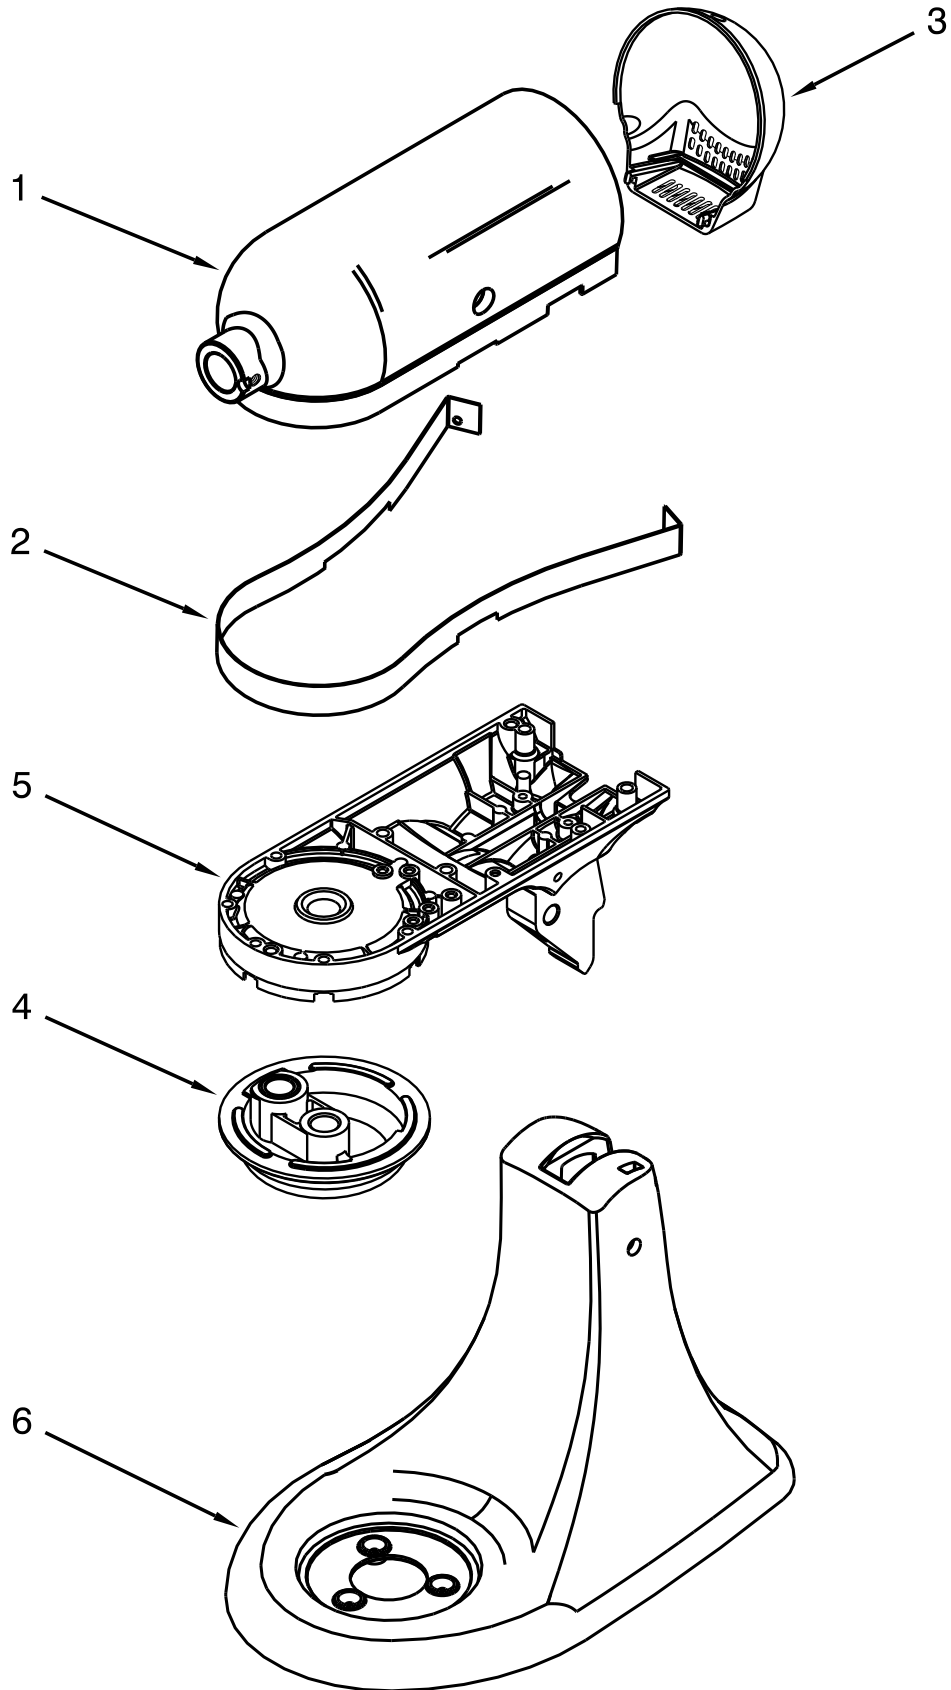


COLOR VARIATION PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Motor Housing
	W10239115	Candy Apple
	W10171586	Cocoa Silver
	W10384420	Raspberry Ice
	W10383627	Espresso
	W10477204	Frosted Pearl
2		Trim Band
	W10171580	Dark Platinum

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
3		End Cover
	W10239110	Candy Apple
	W10171581	Cocoa Silver
	W10384429	Raspberry Ice
	W10383633	Espresso
	W10477198	Frosted Pearl
4		Planetary
	W10239112	Candy Apple
	W10171583	Cocoa Silver
	W10384425	Raspberry Ice
	W10383631	Espresso
	W10477206	Frosted Pearl

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
5		Lower Gearcase
	W10239118	Candy Apple
	W10171589	Cocoa Silver
	W10384415	Raspberry Ice
	W10383623	Espresso
	W10477200	Frosted Pearl
6		Pedestal w/Feet
	W10239121	Candy Apple
	W10171592	Cocoa Silver
	W10392122	Raspberry Ice
	W10403051	Espresso
	W10606159	Frosted Pearl


BASE AND PEDESTAL UNIT

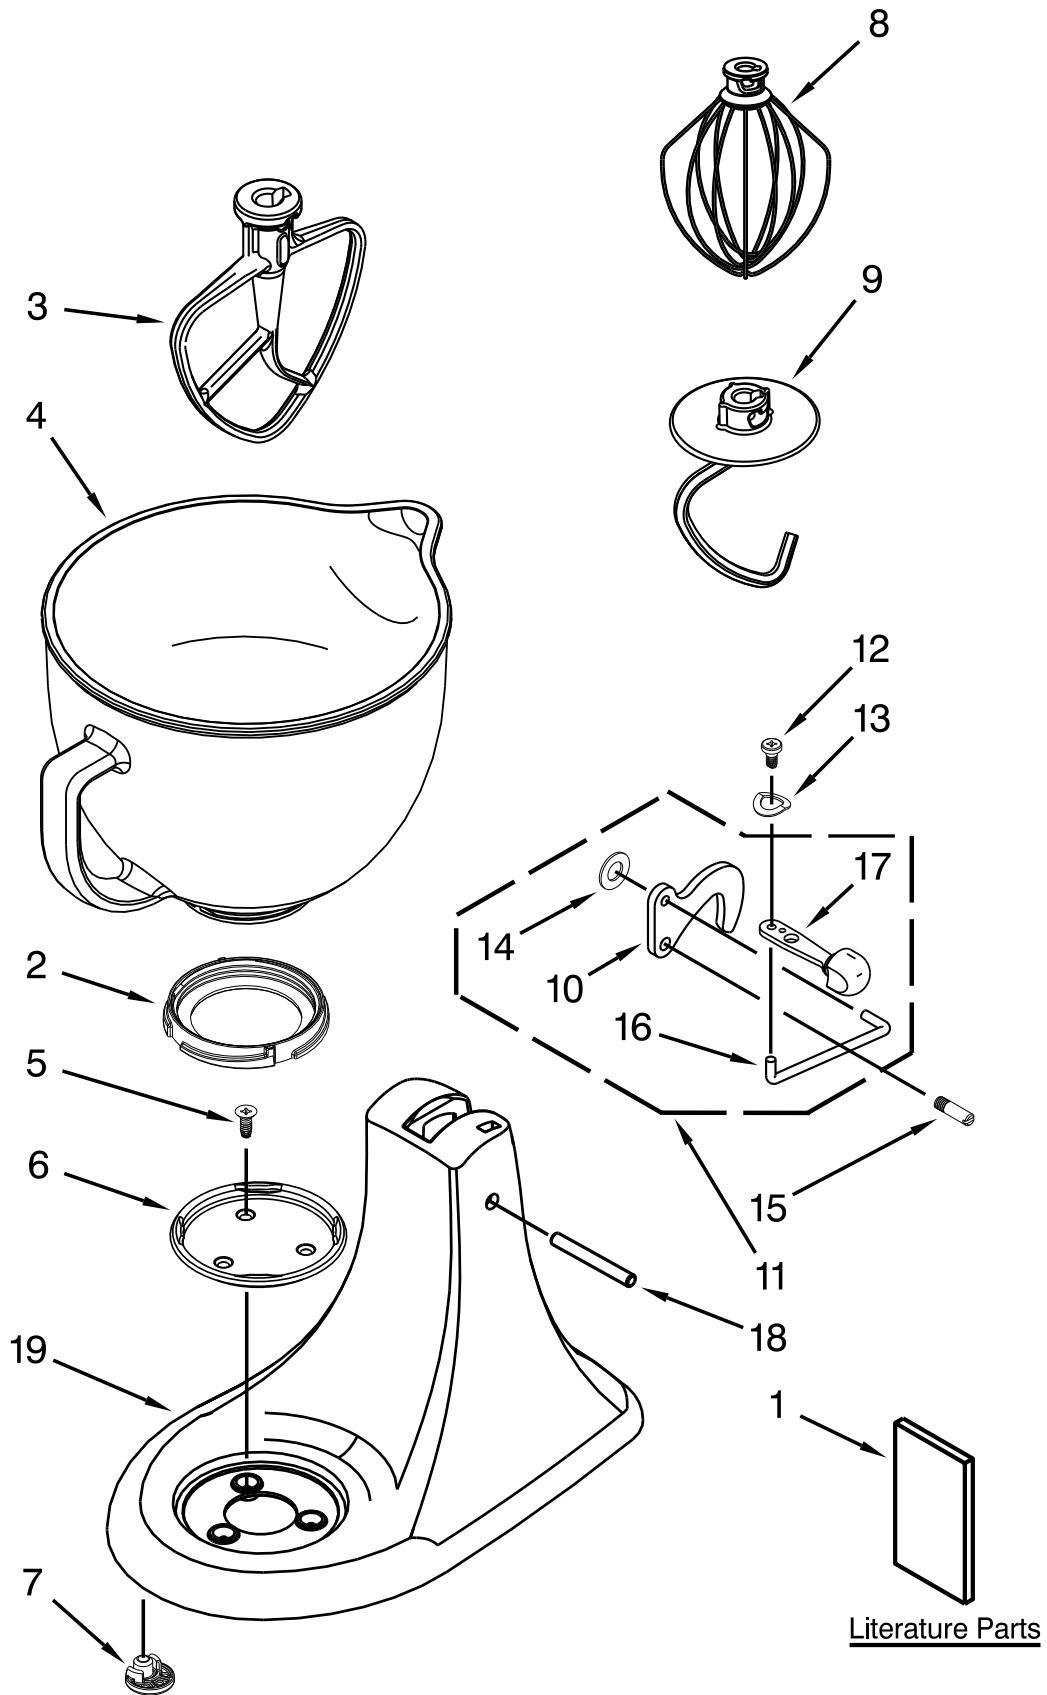

BASE AND PEDESTAL UNIT

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	8	9704329	Whip, Wire	15	103993	Screw, Latch Bearing
	9709785	Use and Care Guide	9	9706626	Hook, Dough (Burnished)	16	24450	Link, Latch
2	W10220977	Ring, Thread	10	9709055	Latch	17		Lever, Latch
3		Beater, Flat	11		Latch, Link and Lever Assembly		9709280	Black
	9707572	Beater, Flat (Burnished)		24452	Black		W10608281	Silk Chrome
4	W10154769	Bowl, Glass 5 Qt. (K5GB)		W10608282	Silk Chrome	18	16910	Pin, Hinge
5	3400020	Screw	12	110679	Screw	19		Pedestal
6	W10191926	Cap, Bowl Screw	13	116241	Washer, Spring			(Refer to Color Variation Parts Page)
7	9709707	Foot	14	8533912	Washer			


CASE, GEARING AND PLANETARY UNIT

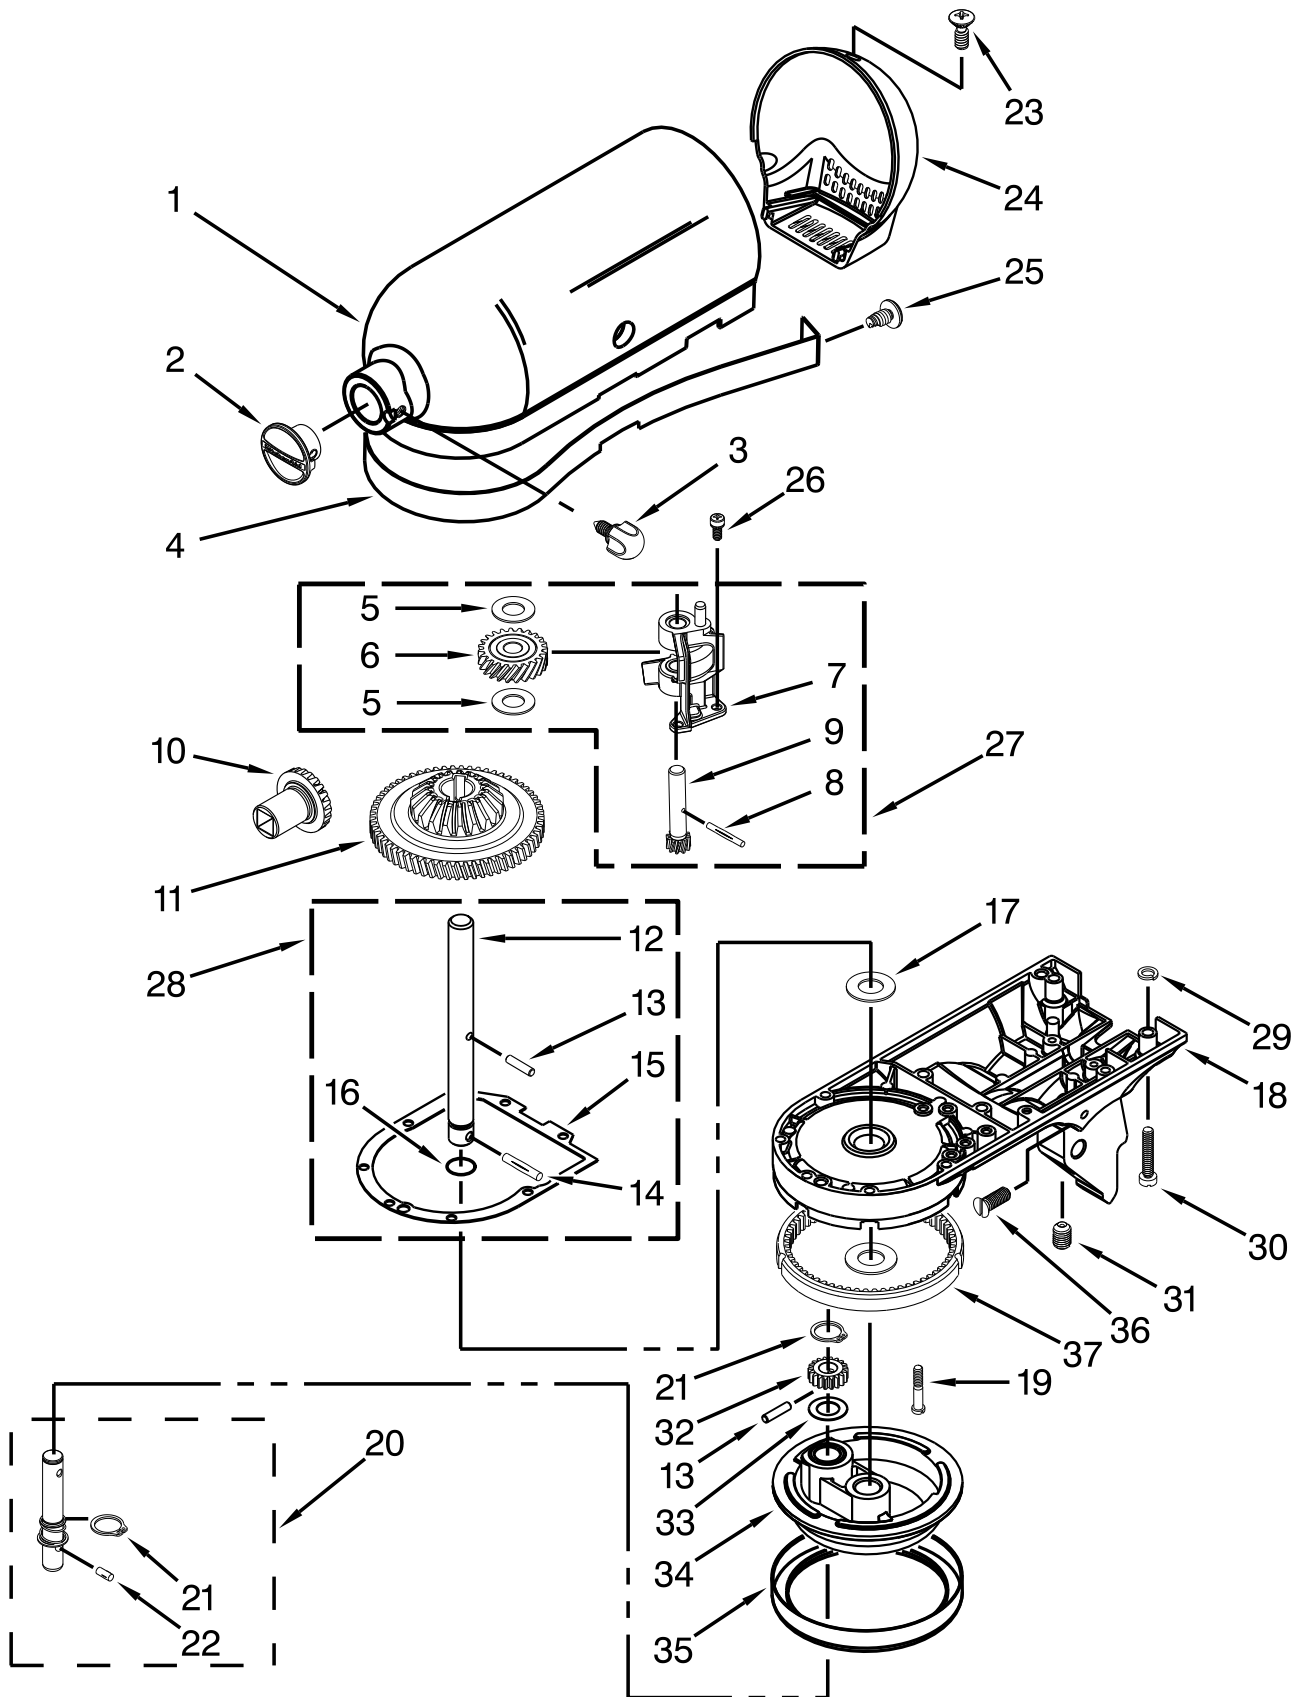

CASE, GEARING AND PLANETARY UNIT

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Gearcase Motor Housing (Refer to Color Variation Parts Page)	12	240026	Shaft, Vertical Center	28	4160474	Shaft, Center Agitator Assembly
			13	240018-1	Pin, Agitator Shaft	29	8533914	Washer, Lock
2		Cap, Attachment Hub	14	9705443	Pin, Grooved	30	3400025	Screw
	242765-2	Chrome	15	4162324	Gasket, Transmission	30	9708652	Screw
	W10163146	Satin	16	67500-55	"O" Ring	31	3400203	Screw
3		Thumb Screw	17	W10323378	Washer	32	9703903	Gear, Pinion
	9709194	Black	18		Lower Gearcase (Refer to Color Variation Parts Page)	33	9706090	Washer
	W10615629	Silk Chrome				34		Planetary (Refer to Color Variation Parts Page)
4		Band, Trim (Refer to Color Variation Parts Page)	19	9708651	Screw	35	240285	Ring, Planetary Drip (Standard)
5	W10323373	Washer, Fiber	20	4176067	Shaft, Agitator	36	89411	Screw
6	W10112253	Gear, Worm	21	9703438	Ring, Retaining	37	9703904	Gear, Internal
7	240308	Bracket, Worm Gear and Bearing	22	9704677	Pin, Groove			
8	9705444	Pin, Grooved	23	4162914	Screw			
9	240210-2	Gear, Pinion and Shaft	24		Cover, End (Refer to Color Variation Parts Page)			
10	9705130	Gear, Attachment Hub	25	311932	Screw			
11	9709627	Gear, Center Bevel Pinion	26	3400022	Screw			
			27	240309-2	Worm Gear Bracket and Gear Assembly			

MOTOR AND CONTROL UNIT PARTS

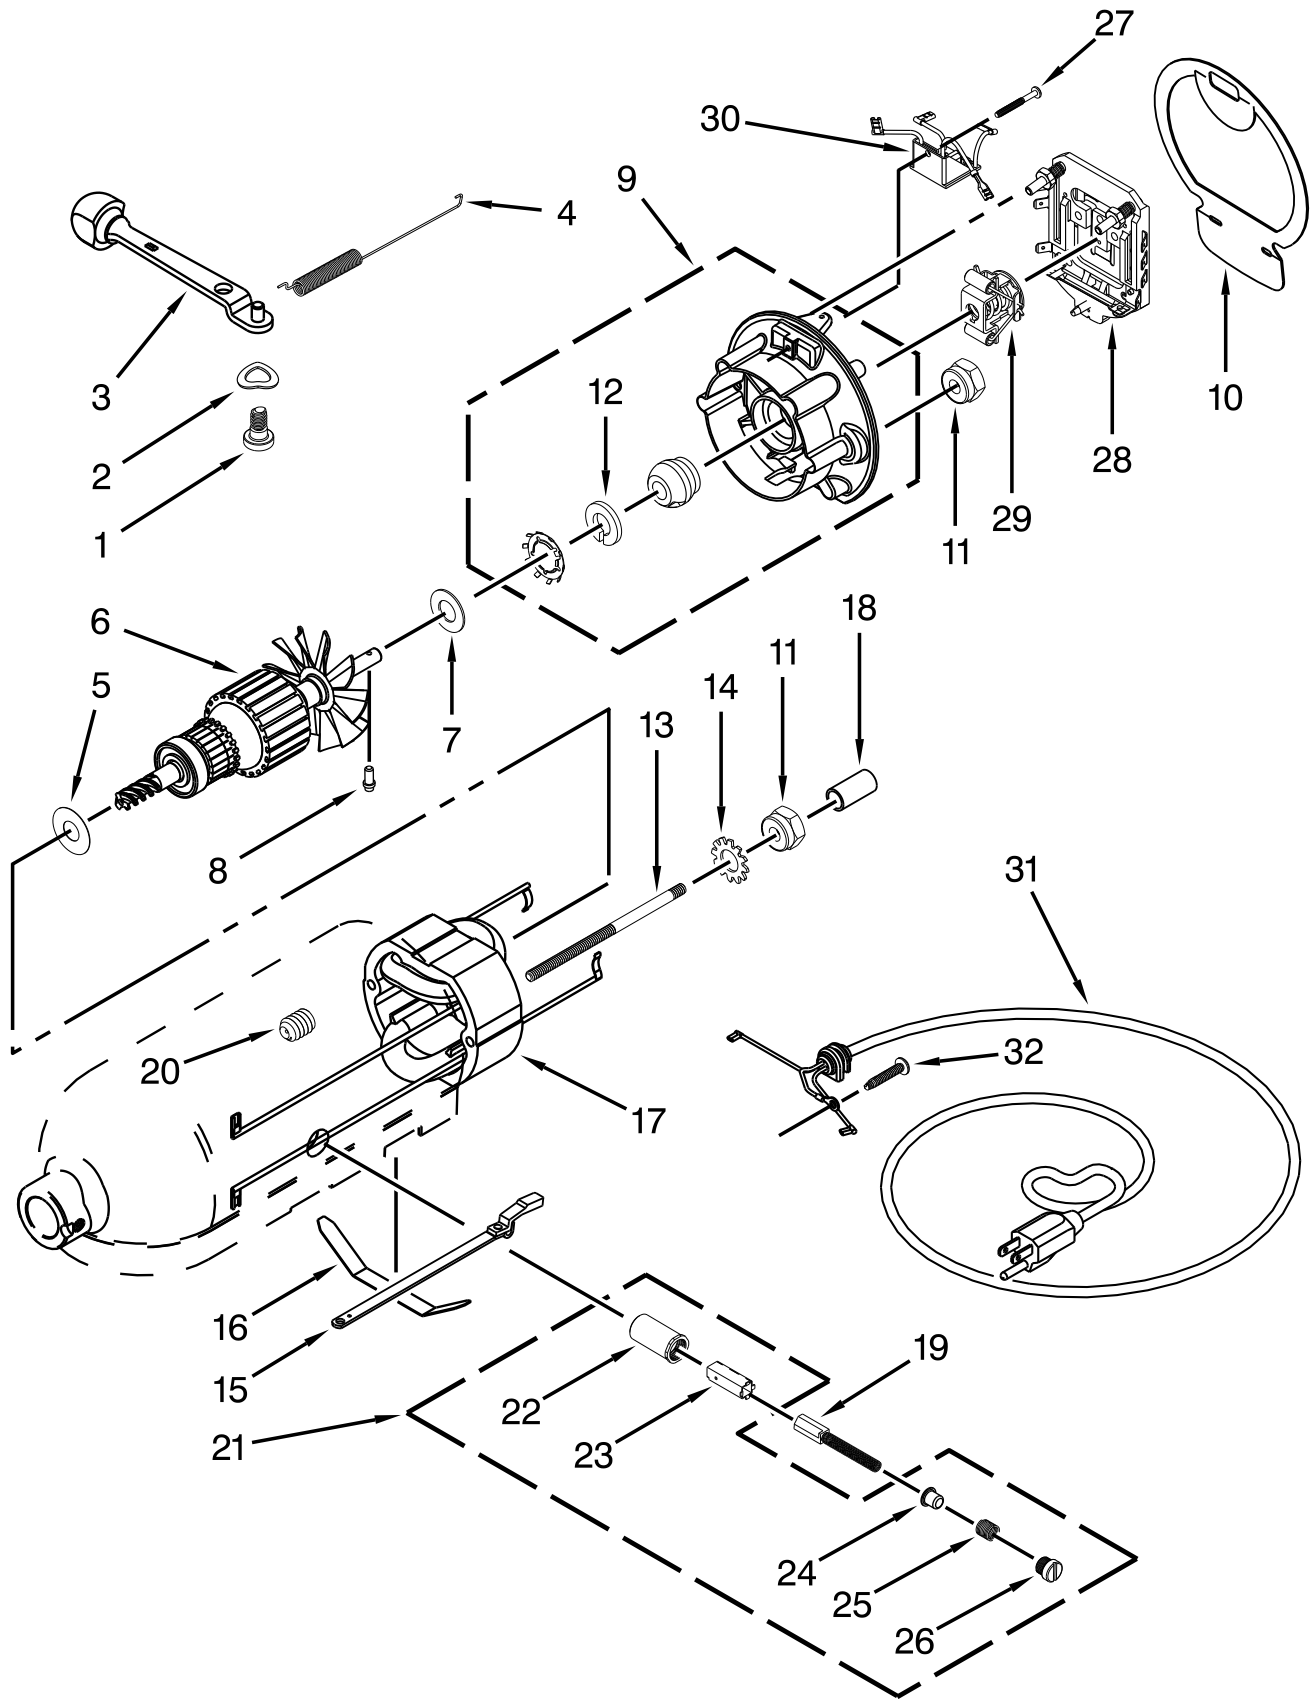

MOTOR AND CONTROL UNIT PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	110679	Screw	11	W10131078	Nut	24	116286	Spring, Seat-Cap
2	116241	Washer, Spring	12	3180238	Washer, Felt	25	116287	Spring, Cap
3		Lever, Speed Control Assy	13	240769	Screw, Stator	26		Cap, Brush Holder
	9709276	Black	14	W10068270	Washer, Lock		3184212	Black
	W10615606	Silk Chrome	15	3184176	Link, Speed and Cam Assembly		3184211	White
4	3183680	Spring, Control Plate	16	240205	Spring, Flat	27	W10068260	Screw
5	9704324	Washer, Ball Bearing (Front)	17	W10477029	Field Assembly, 120 Volt	28	W10119326	Control Plate Assembly
6	W10477035	Armature and Bearing Assembly, 120 Volt	18	4162634	Sleeve, Motor Stud	29	W10330804	Governor Assembly
7	W10323376	Washer, Spacing	19	W10380496	Brush, Cap and Spring	30	W10325124	Board, Phase Control (120 Volt)
8	16998	Stud, Governor Drive	20	9707926	Screw, Set	31		Cord, Power
9	3180526	Bearing and Bracket Assembly	21	4162546	Brush Holder Assembly		W10164883	Black
10	240775-1	Seal, End	22	3179908	Housing, Brush Holder		W10325327	White
			23	240680	Insert, Brush Holder	32	3184609	Screw

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>