

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

OVEN PARTS


For Models: KEBS177SBL04, KEBS177SWH04, KEBS177SSS04
(Black) (White) (Stainless)

Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION
1		Literature Parts Installation Instructions	9	4452158	Tube, Vent	25	4455641	Side, Chassis
	8304336	Oven	10	W10169756	Lens, Light	26	8304304	Back, Chassis
	8304571	Undercounter	11	W10009940	Oven Light Assembly	27		Liner, Oven (Not serviceable)
	W10162180	Use & Care Guide Tech Sheet	12	W10169757	Bulb, Light	28	8304452	Thermal Fuse 105C
	W10220952	English	13	3400832	Screw (2)	29	W10131825	Sensor
	W10220953	French	14	8304629	Frame, Front	31	8303772	Base, Chassis
	8304335	Easy Set Guide Safer Cooking Tips	15	8304494	Gasket, Door	32	8304478	Retainer, Gasket
	9762761	English	16	3196176	Screw	33	8303517	Cover, Back
	W10065852	French	17	4449040	Screw	34		Trim, Bottom Vent
2	W10153090	Bracket, Base	18	4449154	Screw		8303706BL	Black
3		Hinge Receiver	19	4451477	Support, Insulation		8303706WH	White
	4455606	Right	20	W10169348	Bracket, Thermostat		W10165444	Stainless
	4455605	Left	21		Mounting Rail, Side Right	35	4448444	Grommet, Mounting Rail
4	W10105790	Bumper, Door (2)		8303675BL	Black	36	3400893	Screw (12)
5	8303829	Exhaust, Vent Slope		8303675WH	White Left	FOLLOWING PARTS NOT ILLUSTRATED		
6	W10181198	Divider, Center Vent		8303676BL	Black	INSULATION		
7	W10204469	Top Chassis		8303676WH	White		8303966	Insulation, Wrap
8	4449809	Screw	22	W10195935	Latch, Mortorized		8303968	Insulation, Back
			23	4449743	Screw			
			24	4449748	Screw			

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

CONTROL PANEL PARTS

For Models: KEBS177SBL04, KEBS177SWH04, KEBS177SSS04
(Black) (White) (Stainless)

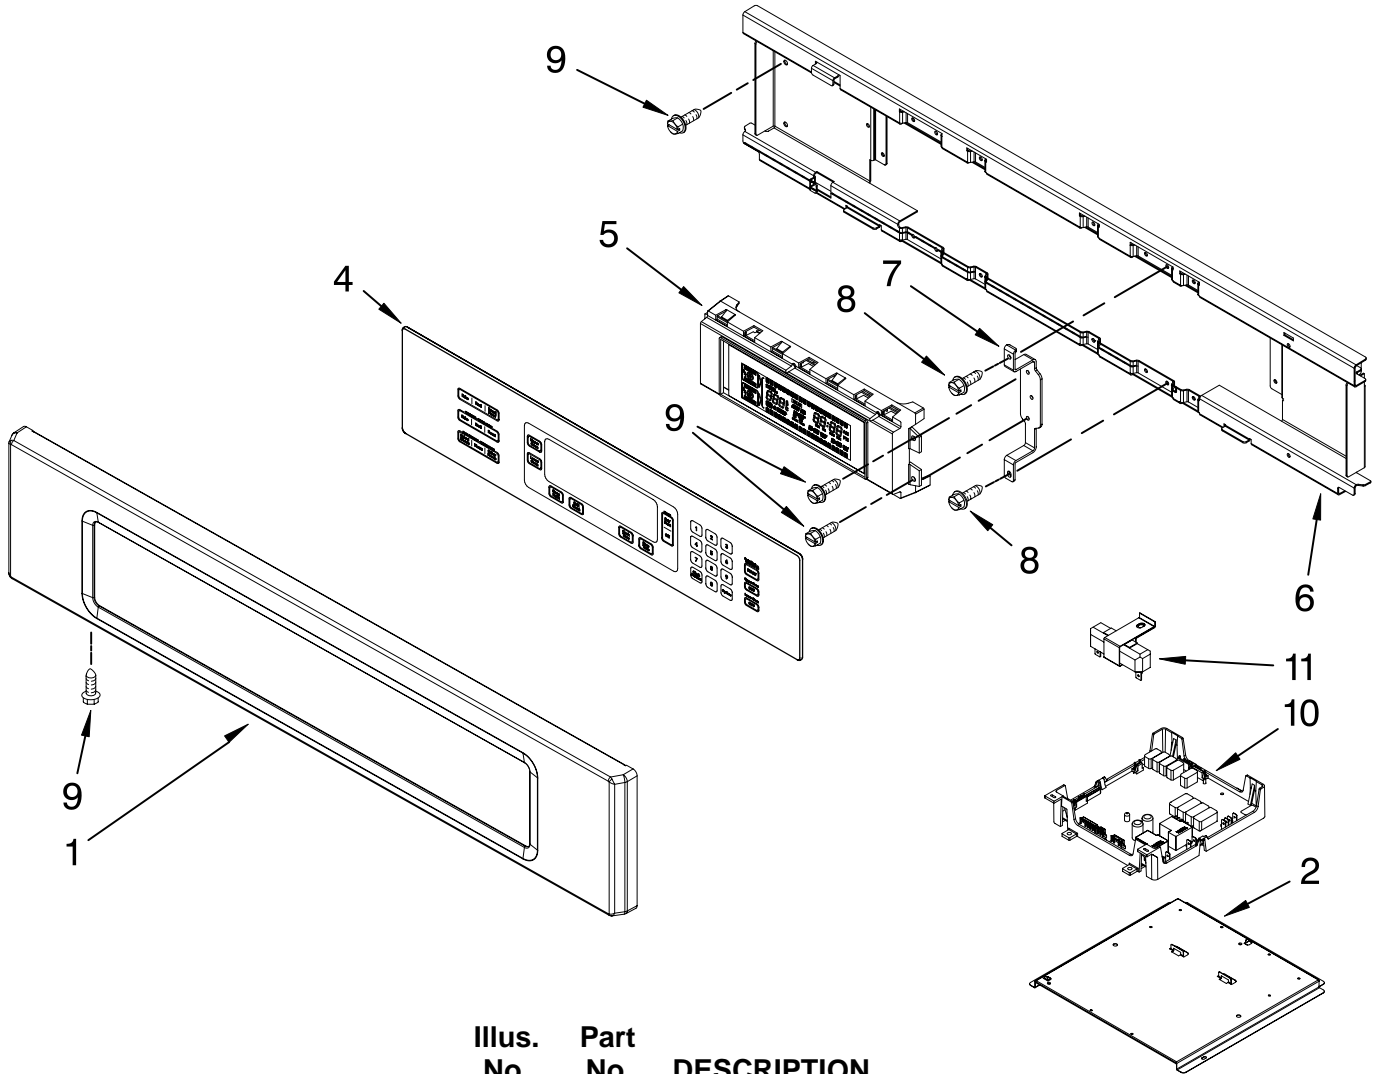


Illus. No.	Part No.	DESCRIPTION
1	8303717BL 8303717WH W10165446	Panel, Control Black White Stainless
2	8303687	Support, Appliance Manager
4	8303879	Keyboard, Glass Touch
5	W10118733	User Interface
6	8303720	Backer, Control
7	8303887	Bracket, Enclosure (2)
8	4449154	Screw
9	3400832	Screw
10	W10119143	Appliance Manager
11	8304441	Resistor, Drop

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

OVEN DOOR PARTS

For Models: KEBS177SBL04, KEBS177SWH04, KEBS177SSS04
(Black) (White) (Stainless)

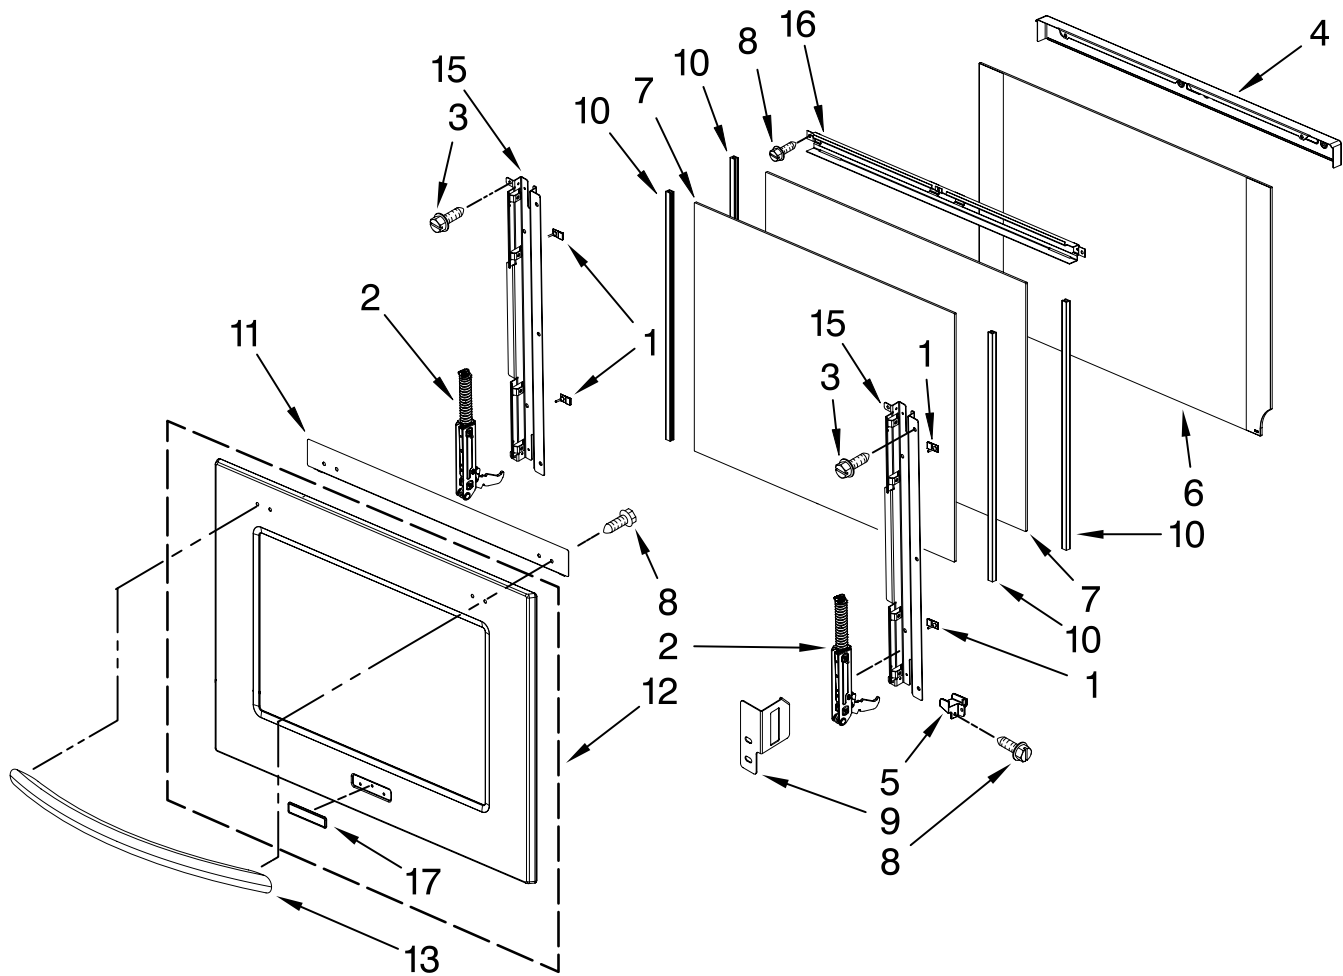

Illus. No.	Part No.	DESCRIPTION
1	8304522	Bumper, Door
2	W10174288	Hinge, Door (2)
3	3196183	Screw
4	8304580BL	Vent, Door Top
5		Bracket, Door
	8304377	Right
	8304378	Left
6	8303738BL	Door Liner
7	8303732	Glass, Inner
8	4449743	Screw



Illus. No.	Part No.	DESCRIPTION
9		Cover, Hinge
	W10137044	Right
	W10137043	Left
10	8304523	Seal
11	8304361BL	Bracket, Handle
12		Door Glass, Assembly
		Includes #17
	8304001	Black
	8304003	White
	8303999	Stainless

Illus. No.	Part No.	DESCRIPTION
13		Door Handle
	8303775BL	Black
	8303775WH	White
	8303775SS	Stainless
15	8303745BL	Frame, Door Side(2)
16	8303754	Door, Top Bracket
17		Badge
	8304603BL	Black
	8304603WH	White
	8304603SS	Stainless

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

INTERNAL OVEN PARTS

For Models: KEBS177SBL04, KEBS177SWH04, KEBS177SSS04
(Black) (White) (Stainless)

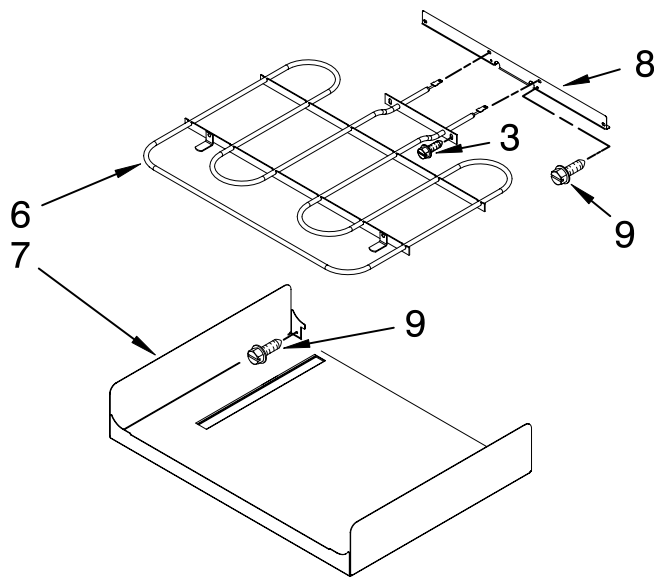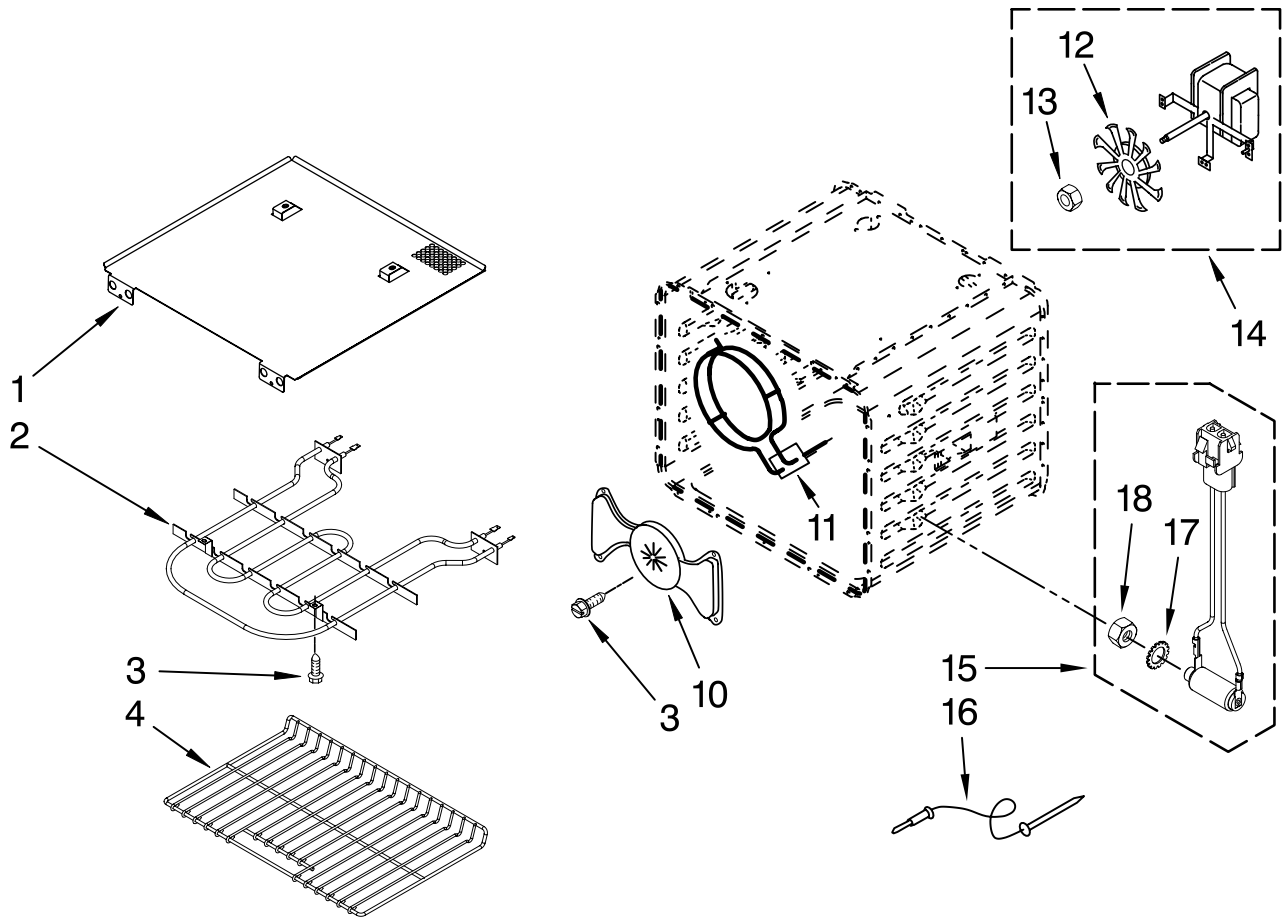


Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------

1	8304602	Element, Broil Shield
2	9760774	Element, Broil
3	4449154	Screw
4	8303842	Rack, Oven
6	9760768	Element, Bake
7	4455036	Tray, Bake
8	4450039	Cover, Bake Tray
9	4449809	Screw
10	8304422BU	Cover, Fan
11	9760769	Element Convection
12	W10116351	Blade, Fan
13	W10116349	Nut
14	W10116228	Fan, Convection
15	9755543	Jack, Meat Probe
16	9755542	Probe, Meat
17	9755547	Washer, Lock
18	9755546	Nut, Hidden

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

TOP VENTING PARTS

For Models: KEBS177SBL04, KEBS177SWH04, KEBS177SSS04
 (Black) (White) (Stainless)

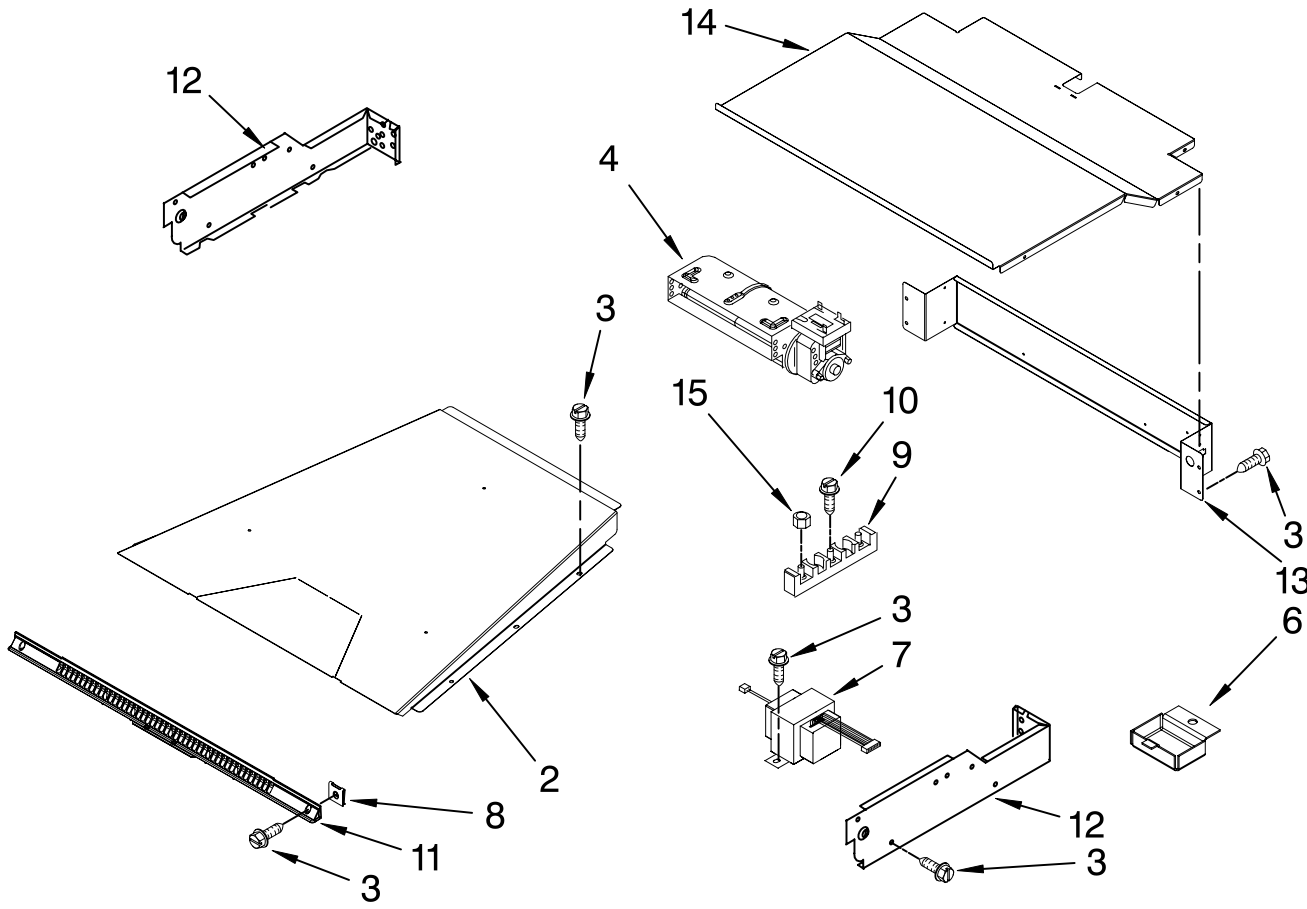

Illus. No.	Part No.	DESCRIPTION
2	8304643	Duct, Air Outlet
3	4449809	Screw
4	8303972	Blower, 60mm
6	8285593	Connector, Cover
7	W10111628	Control, Transformer
8	4450118	Nut
9	4449868	Block, Terminal
10	3400080	Screw
11	8303722	Vent, Control Panel
12	8303518	Side, Control Top Right
	8304255	Left
13	8303520	Back, Control
14	8304220	Cover, Top
15	7103P027-60	Nut (3)

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

OPTIONAL PARTS (NOT INCLUDED)

For Models: KEBS177SBL04, KEBS177SWH04, KEBS177SSS04
(Black) (White) (Stainless)

<u>Illus. No.</u>	<u>Part No.</u>	<u>DESCRIPTION</u>
-------------------	-----------------	--------------------

PAINT, TOUCH-UP (1/2oz.)

72017 White
261869 Cord Brown
72032 Black

PAINT, SPRAY

350930 White
261900 Citrine White
830864 Black

ADHESIVE

591014 Adhesive
Loctite (1/3 oz.)
482338 Sealer, Silastic
(3 oz.)

WIRING HARNESS PARTS

W10143473 Harness, Latch
W10155291 Connector, Flex
W10171559 Harness, GOC
8304051 Harness,
Communication
8304438 Conduit, Single
4450800 Screw, Ground
4452260 Spacer, Foam

Miscellaneous

4448950 Screw, Install (4)
98997 Clip

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>