


For Models: KESS908SPB01, KESS908SPW01, KESS908SPS01
(Black) (White) (Stainless)

30" SLIDE-IN
ELECTRIC OVEN
SELF CLEAN

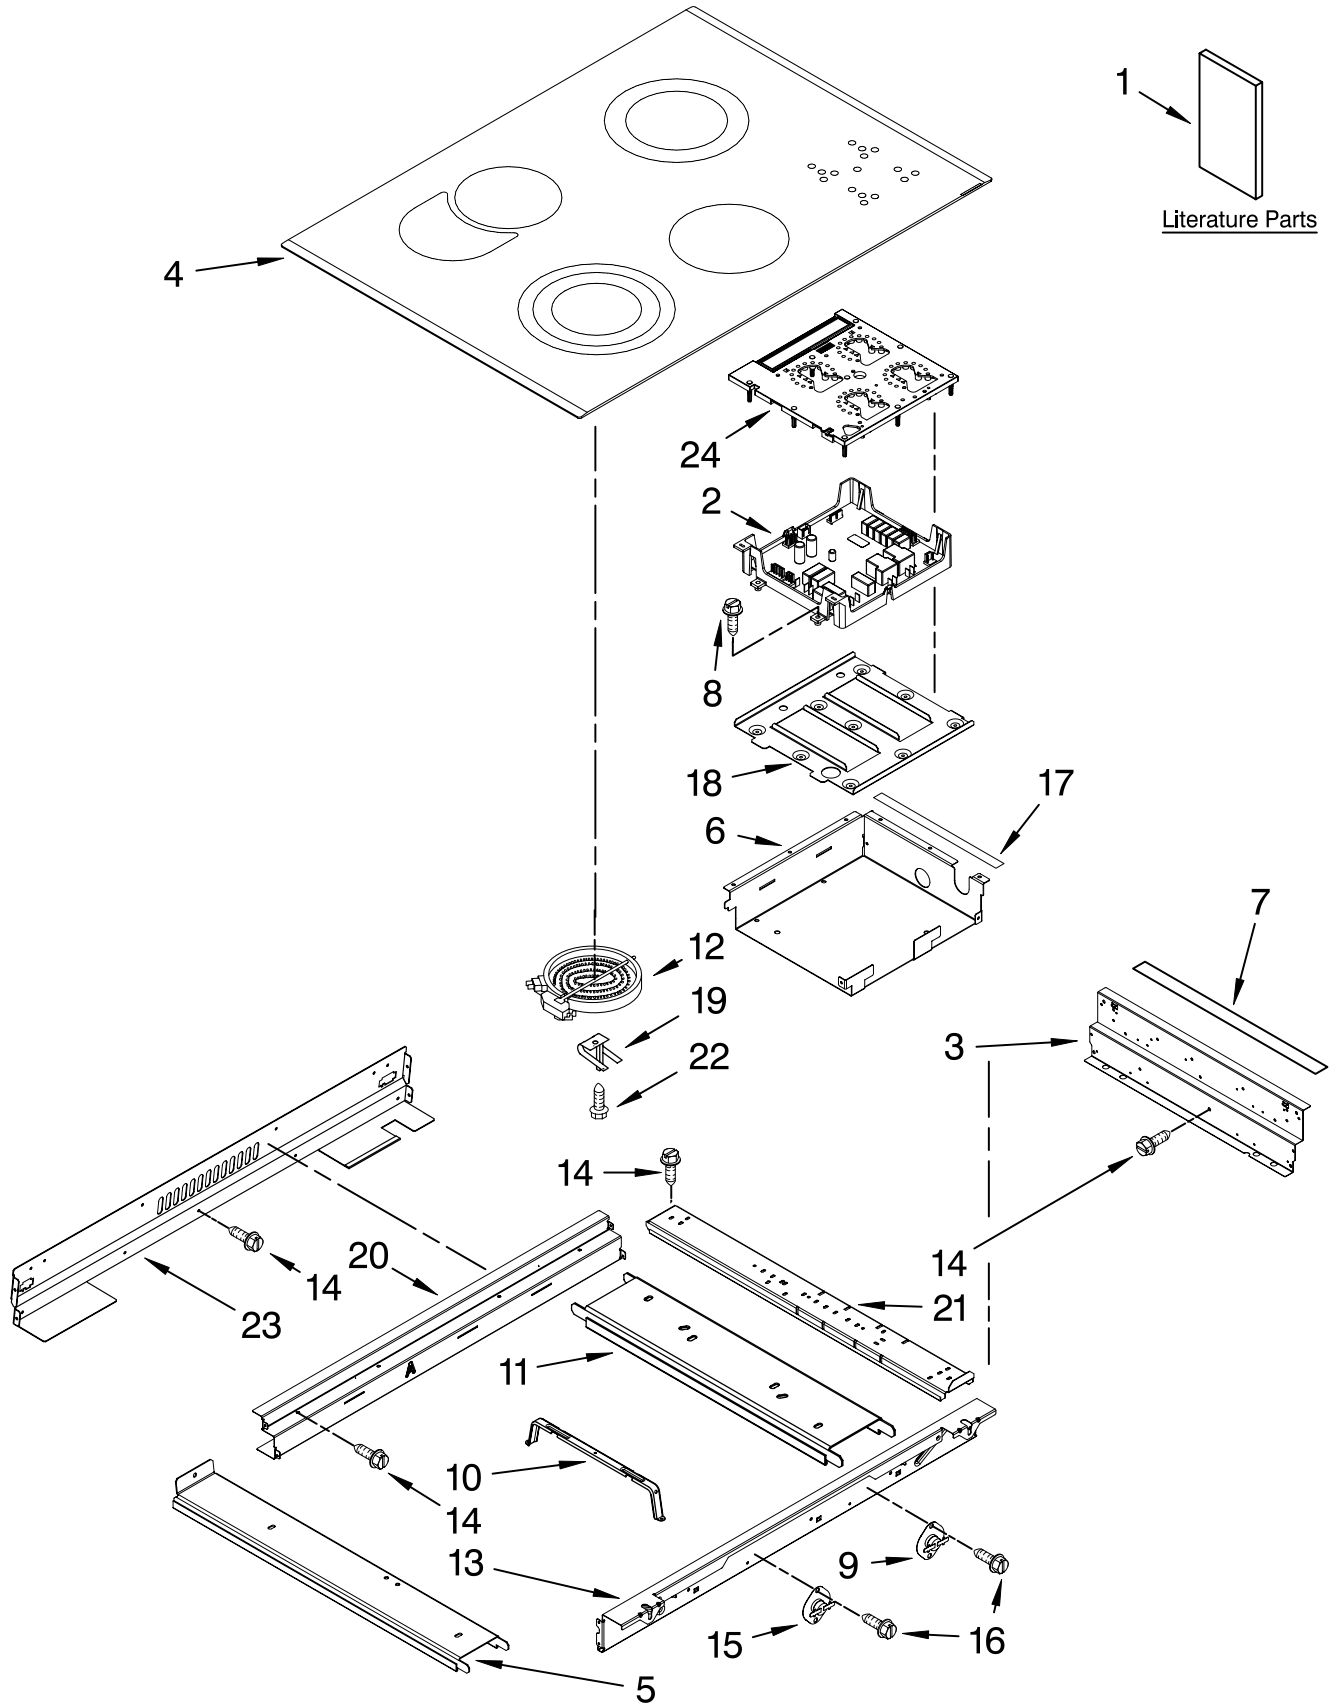

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

COOKTOP PARTS

For Models: KESS908SPB01, KESS908SPW01, KESS908SPS01

(Black)

(White)

(Stainless)

Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION
1		Literature Parts	4		Cooktop	13	9761423	Frame, Cooktop Front
	W10118260	Installation Instructions		W10110273	Black/Stainless			
	W10118258	Use & Care Guide		W10110272	White	14	3196537	Screw
	W10112131	Tech Sheet	5	9757824	Rail, Element Side	15	341196	Thermostat
	9763467	Easy Set Guide	6	9761638	Box, Tap Touch	16	3196160	Screw
	9757680	Anti-Tip Instructions	7	W10076030	Gasket (2)	17	9761663	Seal, Heat
		Safe Cooking Tips	8	4449745	Screw	18	9757815	Support, Module
	3191638	English	9	9759944	Thermostat	19	9759094	Spring, Locator
	9759133	French	10	9756821	Support, Wiring	20	9761768	Frame, Cooktop Rear
2	8285348	Module, Appliance Manager	11	9757825	Rail, Element Center (1)	21	9763517	Rail, Element (2)
3	9761422	Frame, Cooktop Side	12		Element, Surface	22	246119	Screw
				8285232	LR/1000W	23	9761723	Cover, Cooktop Rear
				4453907	RF/1500W	24	9757063	Module, Tap Touch
				4453910	RR/1900W			
				4453908	LF/2300W			

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST


OVEN PARTS

For Models: KESS908SPB01, KESS908SPW01, KESS908SPS01

(Black)

(White)

(Stainless)

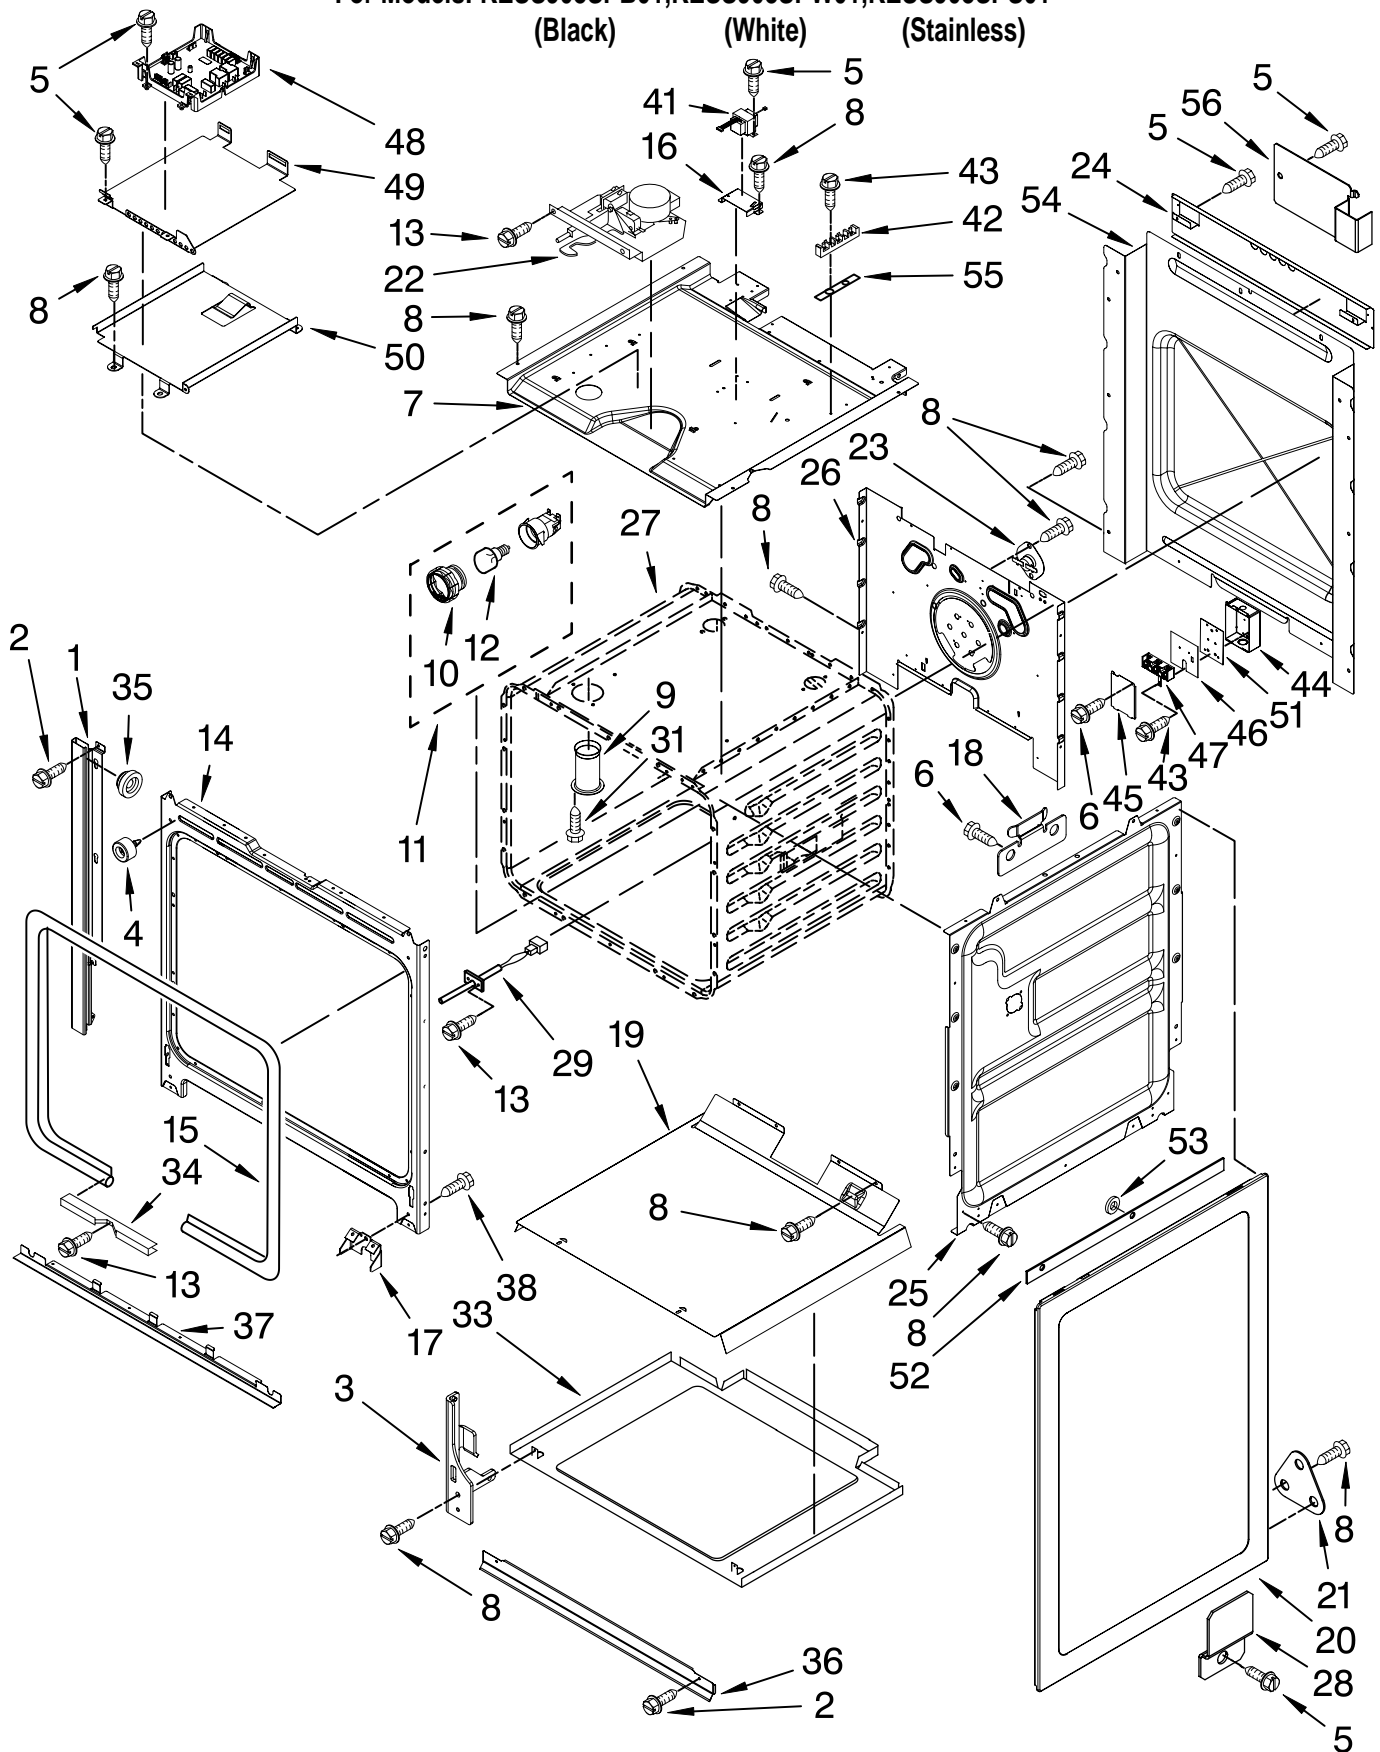

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

OVEN PARTS

For Models: KESS908SPB01, KESS908SPW01, KESS908SPS01

(Black)

(White)


(Stainless)

Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION
1		Trim, Side Right	20		Body, Side	42	4449868	Block, Terminal
	W10109540	Black		9760723PB	Black/Stainless	43	3400080	Screw
	W10109570	White		9760723PW	White	44	9757404	Box, Terminal
	W10140548	Stainless	21	9757461	Bracket, Side Panel	45	9757405	Cover, Terminal Box
		Left	22	9760888	Latch, Motorized	46	9759721	Insulator, Terminal Box
	W10109490	Black	23	9759242	Thermostat	47	9761958	Block, Terminal
	W10109520	White	24	9757811	Brace, Side Panel	48	9761801	Appliance, Manager
	W10140547	Stainless	25	4455641	Side, Chassis	49	W10083460	Slide, GOC
2	3400832	Screw	26	9759761	Back, Chassis	50	9756454	Bracket, Appliance Manager
3		Hinge Receiver	27		Liner, Oven (Not Serviceable)	51	9759884	Insulation
	4455606	Right	28	9759890	Clip, Side Panel	52	9759722	Insulation, Body Side
	4455605	Left	29	W10131825	Sensor	53	9760481	Washer
4	W10105790	Bumper, Door (2)	31	3196176	Screw	54	9758583	Cover, Back
5	3196537	Screw	33	9759713	Base, Chassis	55	9759885	Pad, Insulation(2)
6	3196160	Screw	34	4448933	Retainer, Gasket	56	9759945	Standoff, Rear
7	8303099	Top Chassis	35	4448444	Grommet, Mounting Rail	FOLLOWING PARTS NOT ILLUSTRATED		
8	4449809	Screw	36		Vent, Bottom Upper	INSULATION		
9	4452158	Tube, Vent		9756481BL	Black	9756817		Insulation, Wrap
10	W10067870	Lens, Light (2)		9756481WH	White	9756470		Insulation, Back
11	W10009930	Oven Light, Assembly (2)		W10140533	Stainless			
12	4452166	Bulb, Light (2)	37		Vent, Bottom Lower			
13	4449154	Screw		W10104890	Black			
14	W10130368	Frame, Front		W10104910	White			
15	W10074200	Gasket, Door		W10140546	Stainless			
16	9757829	Bracket, Transformer	38	4449743	Screw			
17	4452152	Bracket, Mounting	41	W10111628	Transformer, Control			
18	9757685	Guide, Side Panel						
19	4451478	Support, Insulation						

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

DOOR PARTS

For Models: KESS908SPB01, KESS908SPW01, KESS908SPS01
(Black) (White) (Stainless)

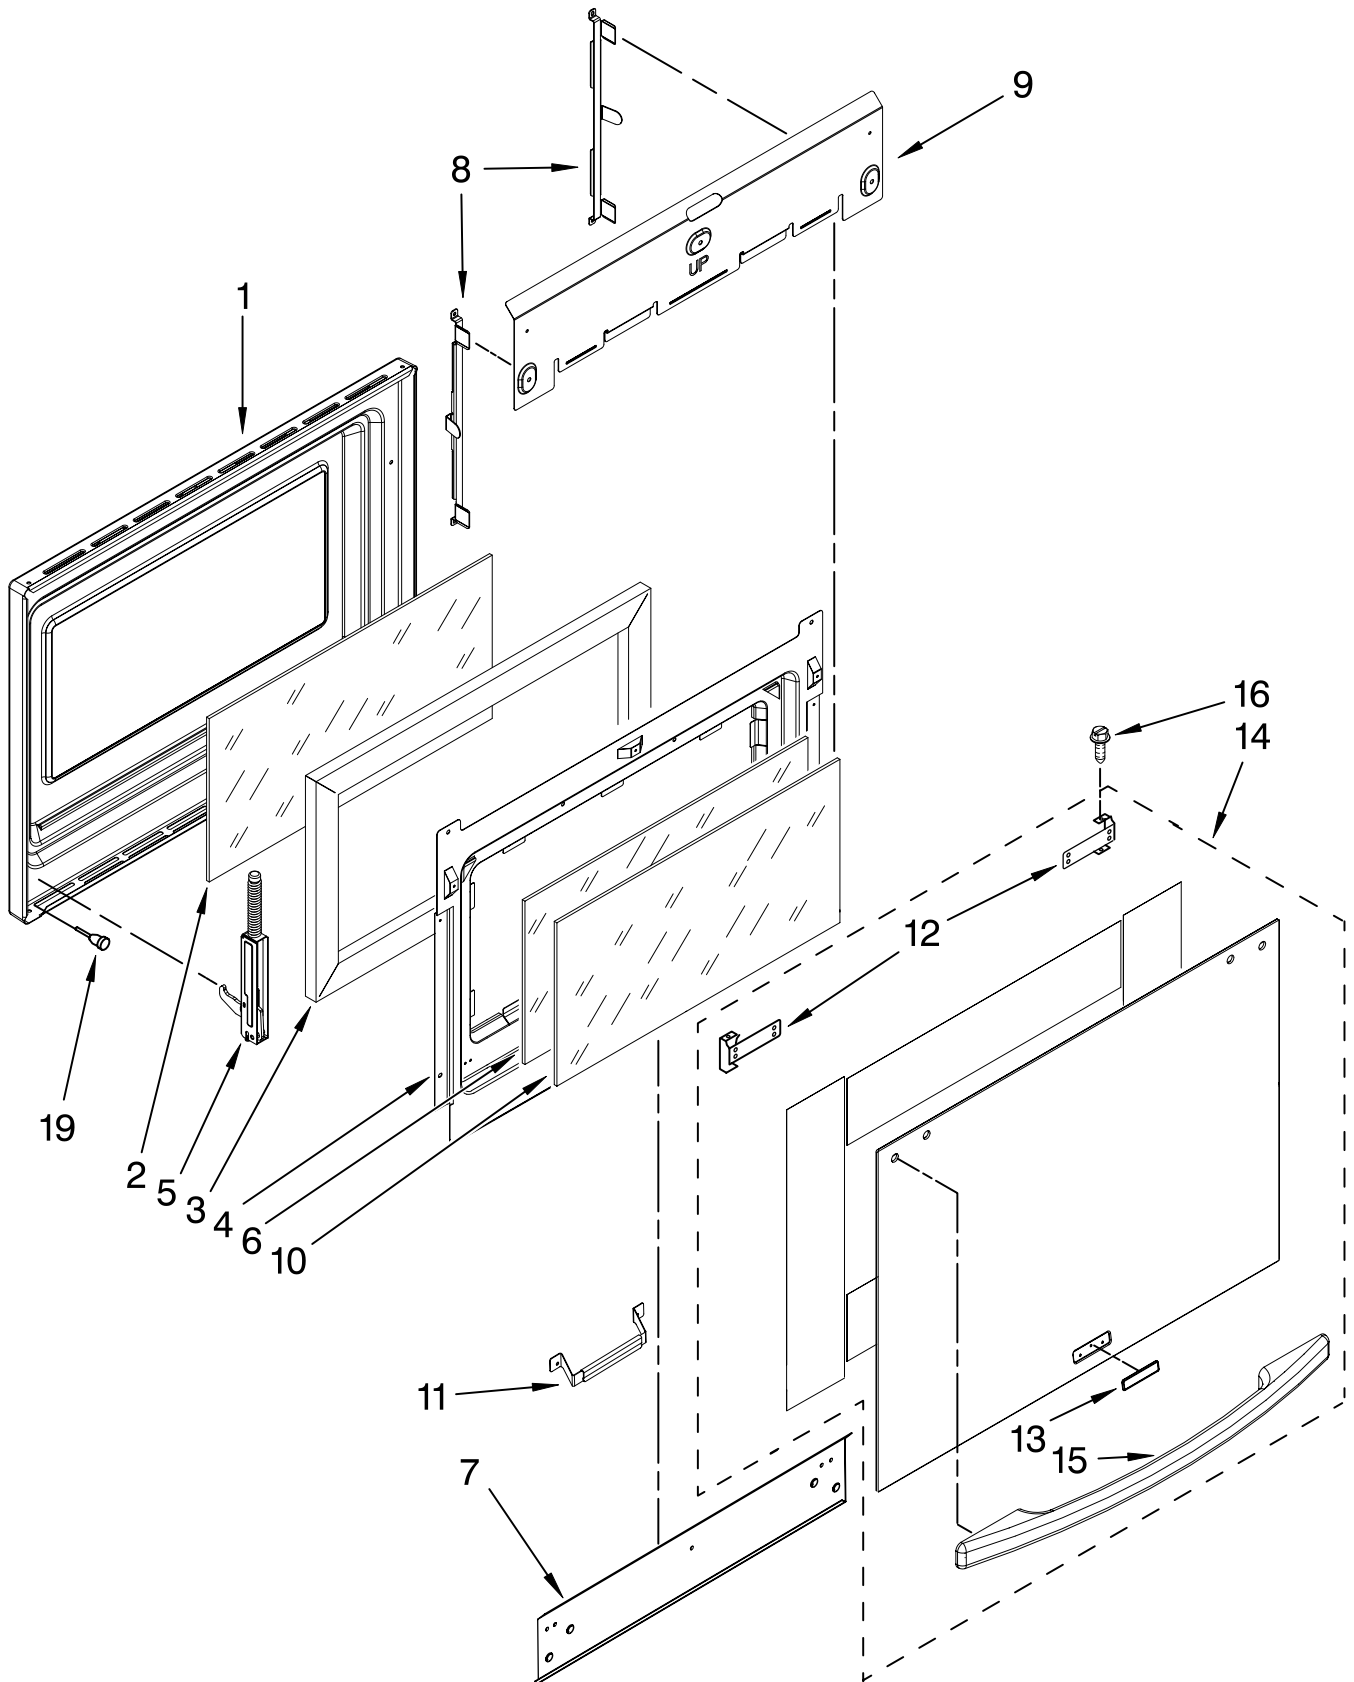

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

DOOR PARTS

For Models: KESS908SPB01, KESS908SPW01, KESS908SPS01

(Black)

(White)

(Stainless)

Illus. No.	Part No.	DESCRIPTION
1	9759413	Panel, Door
2	9757706	Glass, Inner
3	4451722	Insulation, Door
4	4457132	Retainer, Glass
5		Hinge, Oven Door
	9760579	Right
	9760580	Left
6	9759225	Glass, Inner
7	4457114	Shield, Heat Bottom
8	9759229	Bracket, Glass Side
9	4457103	Shield, Heat Top
10	9759225	Glass, Inner Door
11	9759230	Bracket, Central
12		Bracket, Handle
	9763497	Right
	9763496	Left
13		Badge
	8304603BL	Black
	8304603WH	White
	8304603SS	Stainless
14		Assembly, Door Kit
	W10131888	Black
	W10131889	White
	W10155557	Stainless
15		Handle, Door
	8303774BL	Black
	8303774WH	White
	8303774SS	Stainless
16	3196184	Screw
19	4448520	Bumper, Door

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST


DRAWER PARTS

For Models: KESS908SPB01, KESS908SPW01, KESS908SPS01

(Black)

(White)

(Stainless)

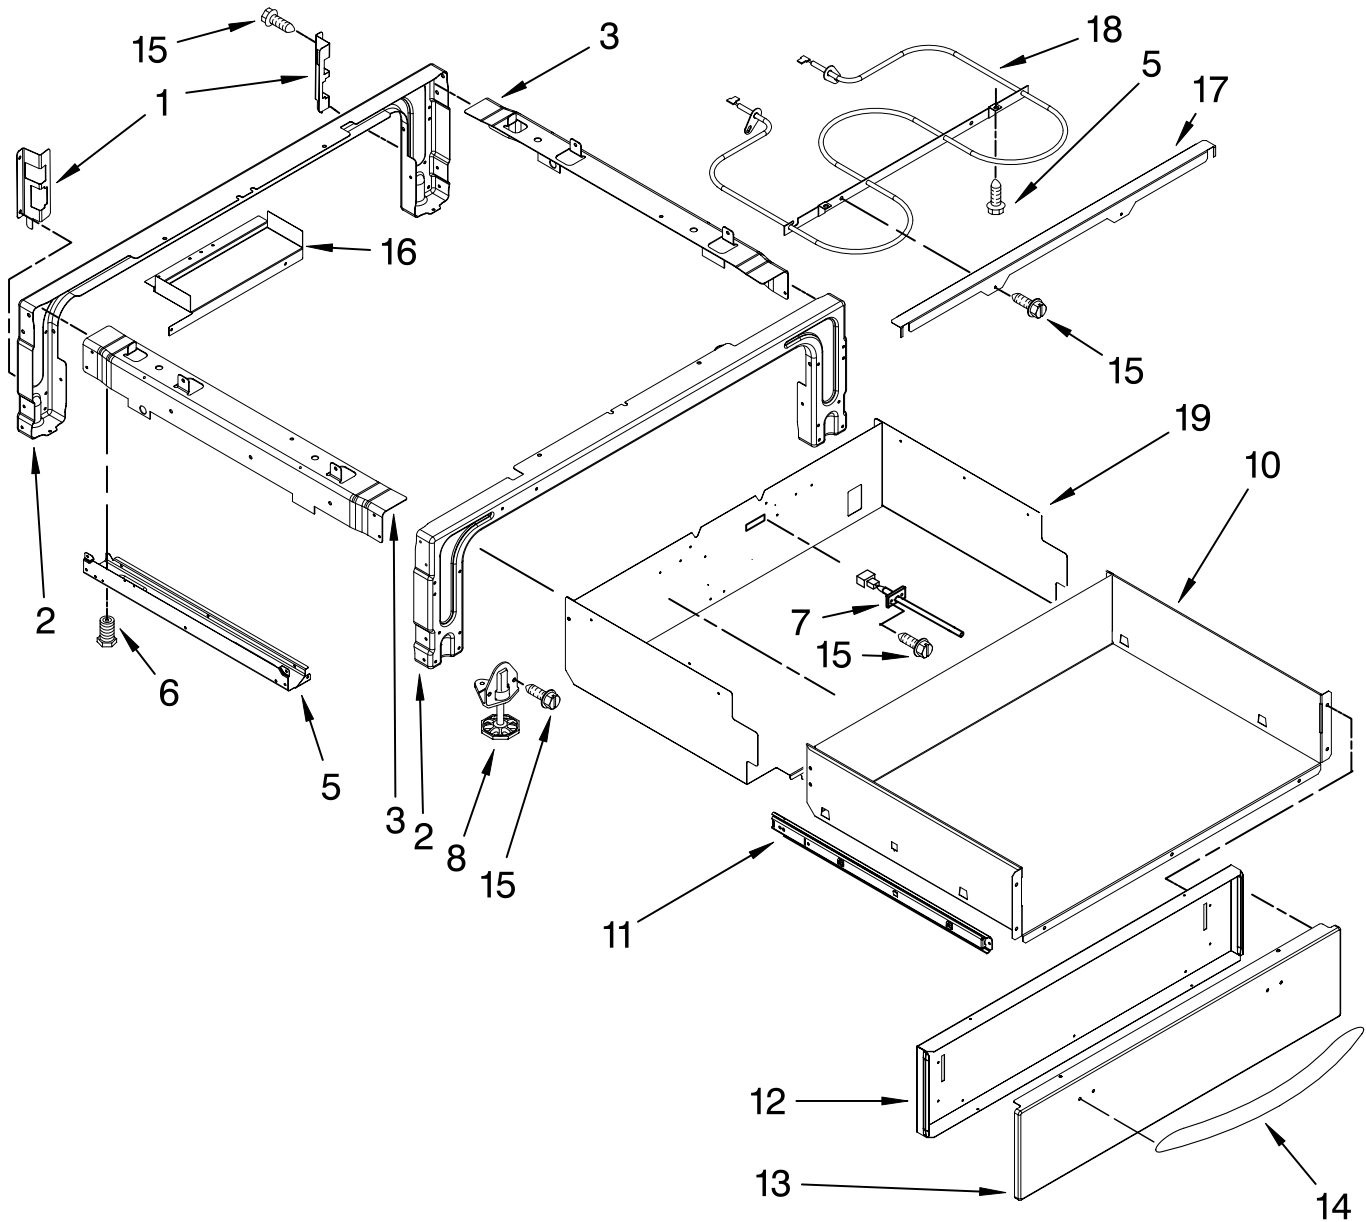

Illus. No.	Part No.	DESCRIPTION
1		Support, Drawer Rail
	9757687	Right
	9757686	Left
2	9763501BL	Support, Front & Rear
3		Brace, Drawer
	4453720	Right
	4453721	Left
5		Side, Base
	9759953	Right
	9759954	Left


Illus. No.	Part No.	DESCRIPTION
6	W10058460	Foot
7	8274149	Thermistor
8	3196037	Foot Assembly
10	W10144430	Drawer
11		Drawer Slide
	W10019810	Right
	W10019800	Left
12	W10140544	Panel, Drawer Front, Drawer
13		
	9761747BL	Black
	9761747WH	White
	W10140545	Stainless

Illus. No.	Part No.	DESCRIPTION
14		Handle, Drawer
	9761573BL	Black
	9761573WH	White
	9761573SS	Stainless
15	3196537	Screw
16	W10045140	Cover, Terminal
17	9758676	Support, Element
18	9760775	Element, Warming Drawer
19	9763518	Enclosure, Warming Drawer

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

CONTROL PANEL PARTS

For Models: KESS908SPB01, KESS908SPW01, KESS908SPS01
 (Black) (White) (Stainless)

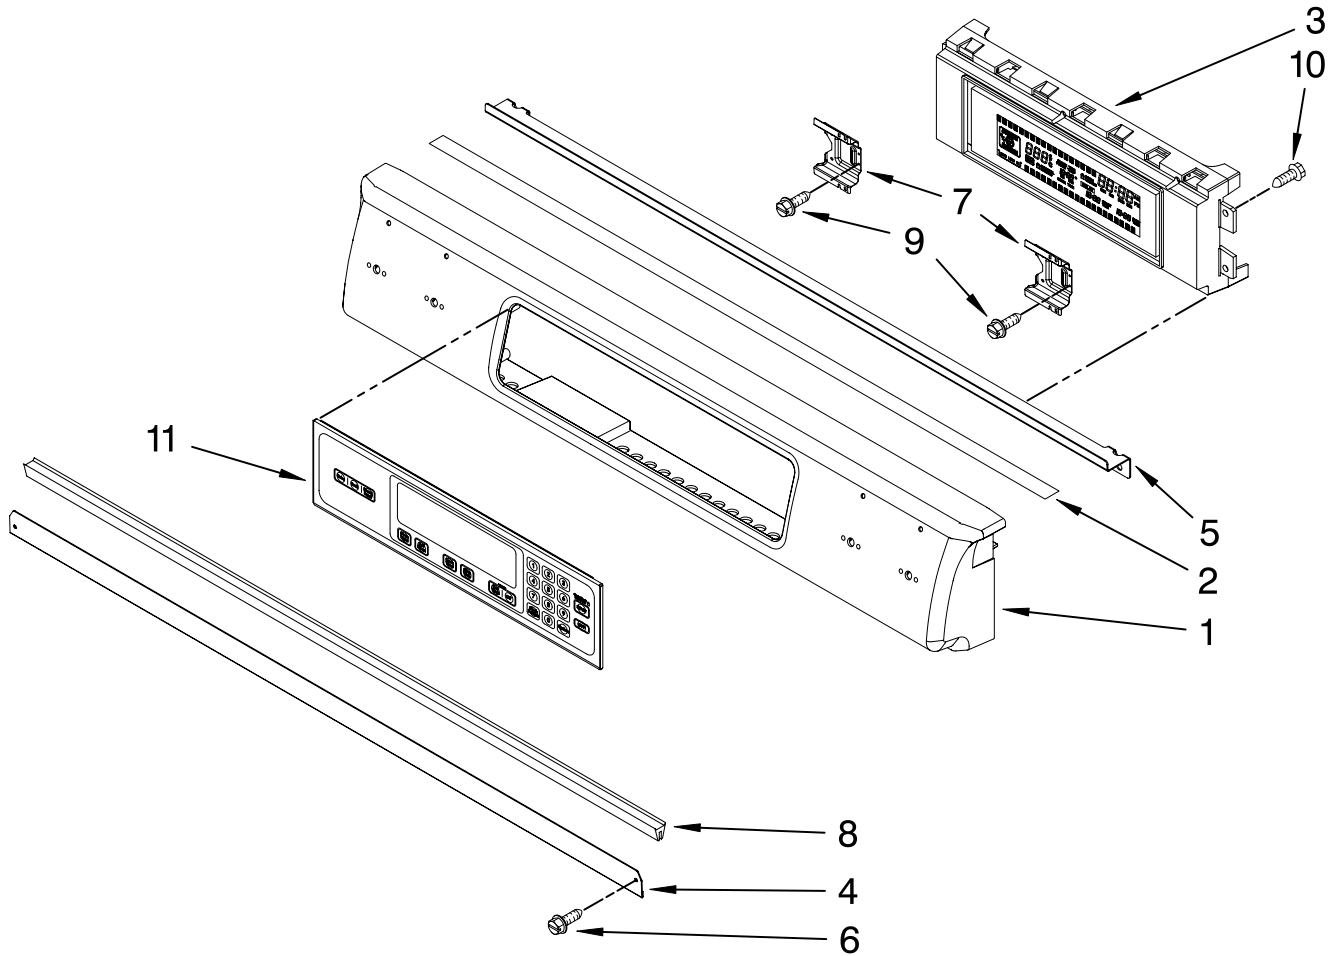

Illus. No.	Part No.	DESCRIPTION
1		Control Panel
	W10117033	Black
	W10117034	White
	W10156272	Stainless
2	W10110246	Gasket, Console
3	9761799	Control, Electric

Illus. No.	Part No.	DESCRIPTION
4	W10105370	Shield, Console Vent
5	W10117524	Bracket, Console
6	3196160	Screw
7	9761745	Bracket, Thermostat (2)

Illus. No.	Part No.	DESCRIPTION
8	W10116195	Gasket, Vent Shield
9	3196537	Screw
10	9780271	Screw
11	9761566	Membrane, Switch

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST


INTERNAL OVEN PARTS

For Models: KESS908SPB01, KESS908SPW01, KESS908SPS01

(Black)

(White)

(Stainless)

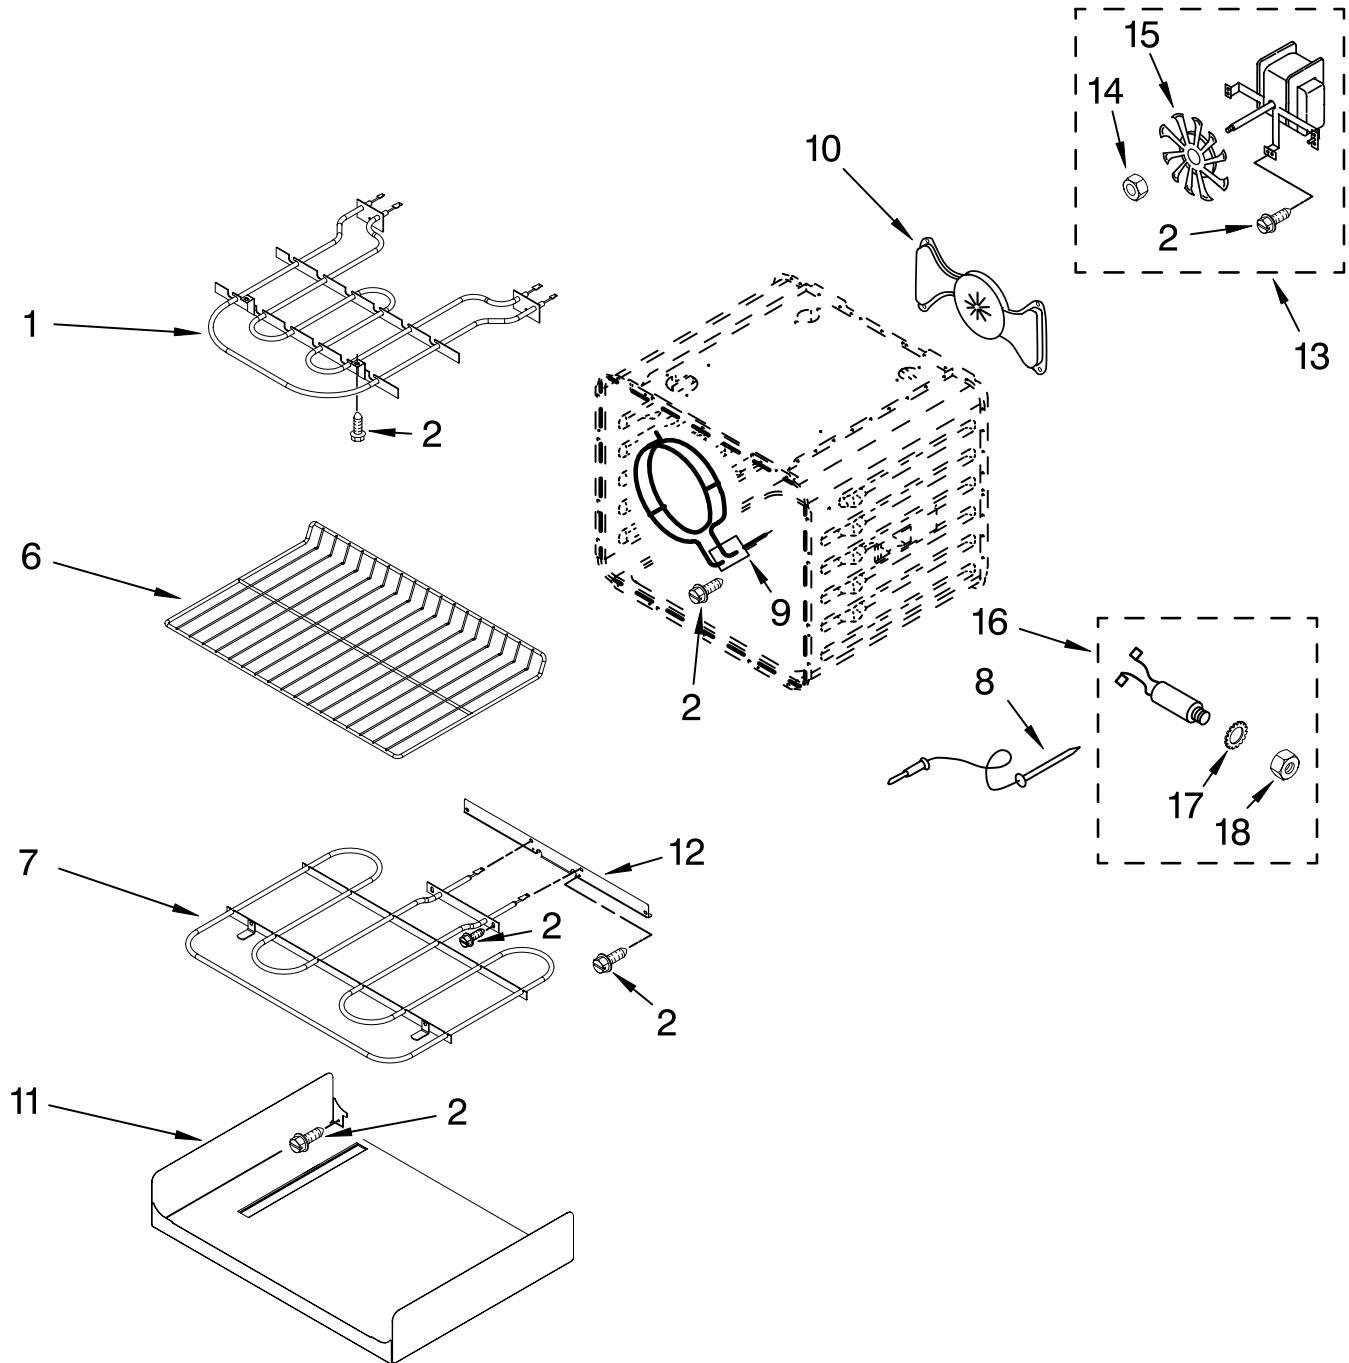

Illus. No.	Part No.	DESCRIPTION
1	9760774	Element, Broil
2	4449154	Screw
6	4448717	Rack, Oven
7	9760768	Element, Bake
8	9755542	Probe, Meat


Illus. No.	Part No.	DESCRIPTION
9	9760769	Element, Convection
10	9756690	Cover, Fan
11	4455037	Tray, Hidden Bake
12	4450039	Cover, Bake Tray
13	4451583	Motor, Convection

Illus. No.	Part No.	DESCRIPTION
14	4452227	Nut
15	4452226	Blade, Fan
16	9755543	Jack, Meat Probe
17	9755547	Lock Washer
18	9755546	Hex Nut

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

TOP VENTING PARTS

For Models: KESS908SPB01, KESS908SPW01, KESS908SPS01
 (Black) (White) (Stainless)

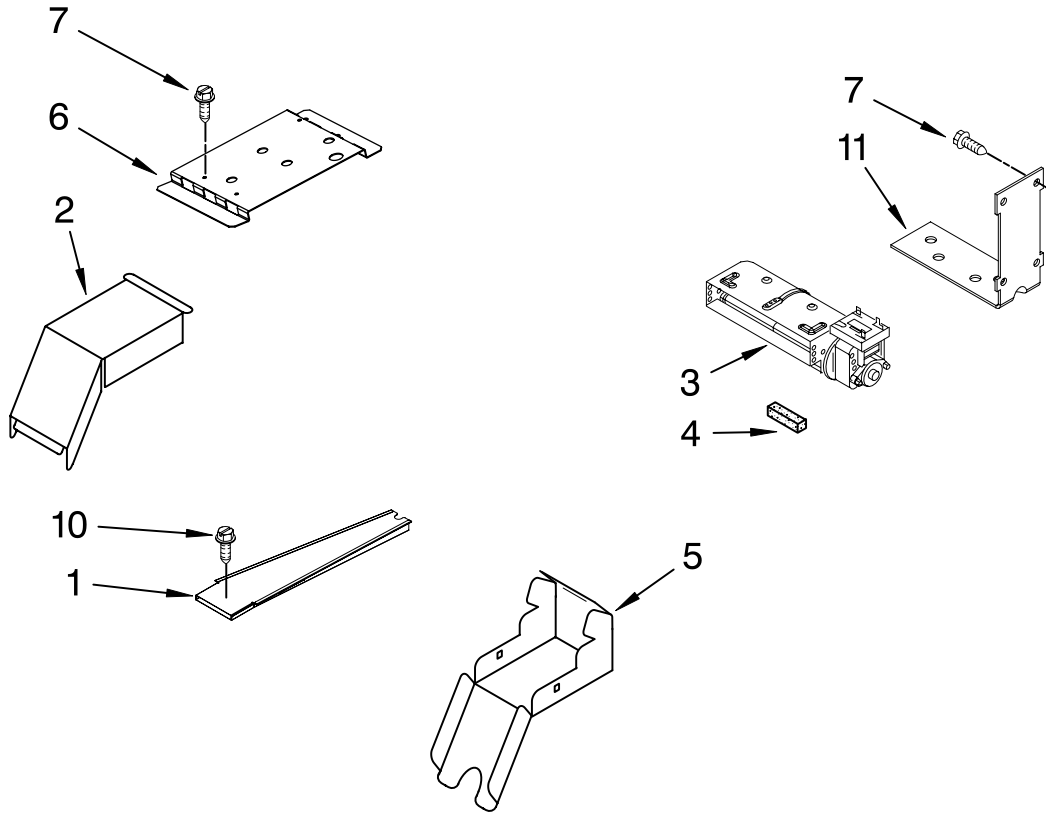

Illus. No.	Part No.	DESCRIPTION
1	4451759	Vent, Exhaust
2	4455178	Elbow, Vent Top
3	9759320	Blower
4	4451758	Block, Foam
5	4455177	Elbow, Vent Bottom
6	9759938	Bracket, Terminal Box
7	4449809	Screw (2)
10	4449040	Screw
11	4455352	Bracket, Blower

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

OPTIONAL PARTS

For Models: KESS908SPB01, KESS908SPW01, KESS908SPS01
 (Black) (White) (Stainless)

Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION
OPTIONAL PARTS NOT INCLUDED			SPLICING WIRES--25FT. LENGTH			WIRING HARNESS PARTS		
PAINT, TOUCH-UP (1/2oz.)			242828	Wire (12 Ga. 150 c Black)	W10118728		Harness, Main	
	72017	White	242820	Wire (14 Ga. 150 c Black)	8285319		Cable, Board Connection	
	261869	Cord Brown	242821	Wire (14 Ga. 150 c Blue)	W10157935		Harness, Switch	
	72032	Black	242822	Wire (14 Ga. 150 c Brown)	9762921		Harness, Communication	
PAINT, SPRAY			242830	Wire (14 Ga. 200 c Brown)	4452222		Spacer, Harness	
	350930	White	242823	Wire (14 Ga. 150 c Green)	9763481		Harness, Ground Strap	
	261900	Citrine White	242824	Wire (14 Ga. 150 c Orange)	W10115168		Cooktop, Tap Touch Switch	
	830864	Black	242825	Wire (14 Ga. 150 c Red)	9759715		Conduit	
ADHESIVE			242831	Wire (14 Ga. 200 c Red)	313660		Clip, Ground Wire	
	591014	Adhesive Loctite (1/3 oz.)	242827	Wire (14 Ga. 150 c Yellow)	4448664		Clamp	
	482338	Sealer, Silastic (3 oz.)			9756675		Grommet, Flexible	
					9757778		Bushing, Snap, Split 1"	
					W10076020		Gasket	
					4449809		Screw	
					112432		Nut	
					4450800		Screw, Ground	
					3400015		Screw, Ground	
					Miscellaneous			
					9782676		Anti-Tip Assembly Filler, Counter Top	
					W10113902A		Black	
					W10113903A		White	
					W10113901A		Stainless	

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>